



Installation Instructions for H66XXX Copper Plated Swivel Rings

1. Assure that you have chosen the correct Swivel Ring for your piping material.
2. Install the ring onto the piping. This can be done by sliding the ring from one end, if the end is not accessible follow the steps below:
 - a. Removing the knurled nut.
 - b. Expanding the ring.
 - c. Passing the ring on either side of the piping
 - d. Insert the knurled nut into its original location.
3. Install threaded rod into the preferred support method.
4. Once the steps 2 and 3 have been completed the plumbing can be raised to its installation location.
5. The threaded rod should be inserted into the knurled nut and tightened to a point to support the intended section of the piping.
6. Adjust the threaded rod until you have met the fall required by the local plumbing code.