



INSTALLATION

Place faucet through 1-3/8" hole. Make sure that the sealing ring (11) on the upper sink/countertop side is in its correct position.

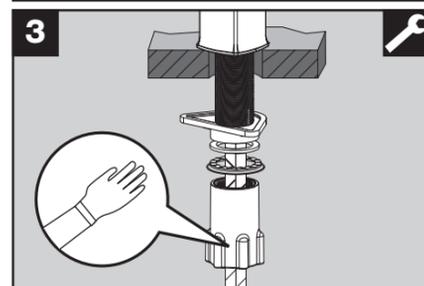


Secure faucet to sink/countertop using mounting hardware (10).


The proper sequence of hardware is:
 - triangular reinforcement base,
 - rubber washer,
 - metal washer,
 - mounting nut.

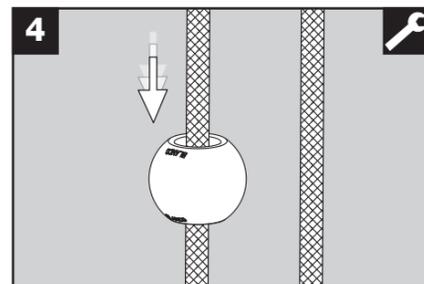


Push the spray hose (8) through the ball weight (9).

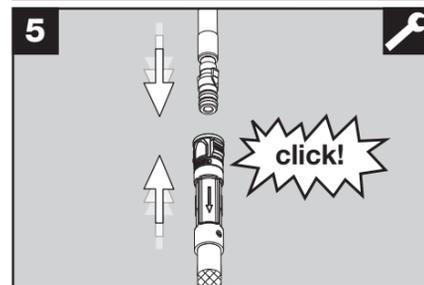

Slide the spray hose (8) over the supply line until it clicks into place.

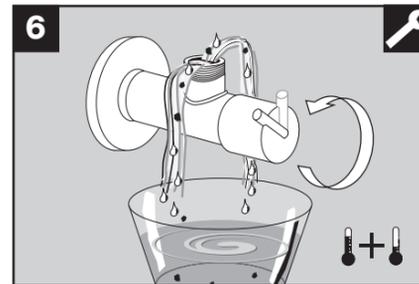


Before connecting supply lines to the water valves, flush each water valve to remove dirt and particles that can affect the functioning of the faucet and void warranty.

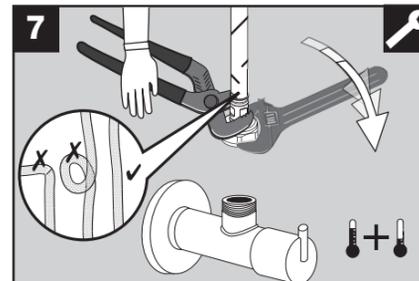


Connect hot supply line (red) and cold supply line (blue) to hot and cold water valves.


Hold line while tightening nut to prevent line from twisting. Do not over tighten.

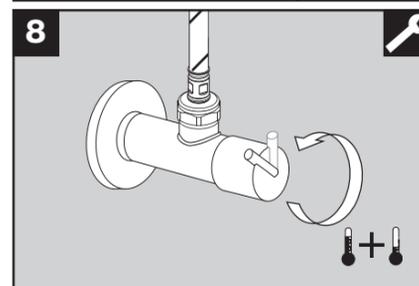


Open water valves slowly.

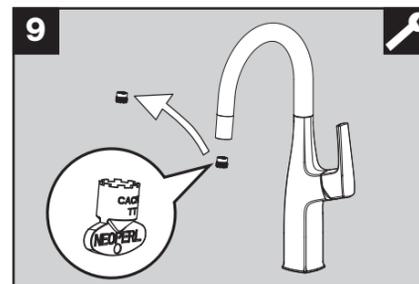

Remove aerator using the aerator key (12).

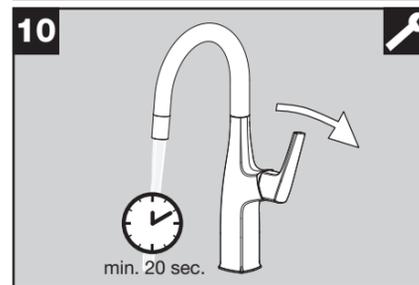


Turn the faucet on and let the water run for at least 20 seconds to ensure the lines and the faucet are flushed.

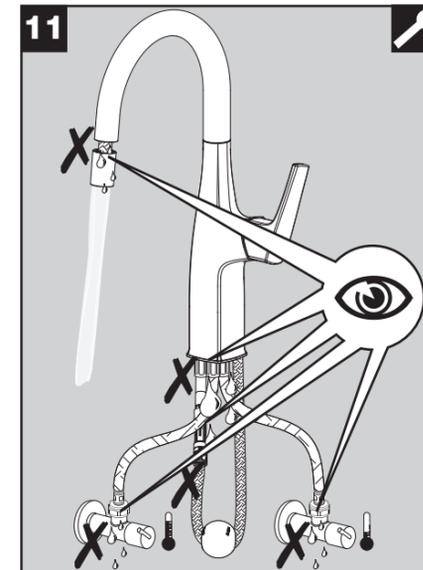

Double check all connections for leaks.



Turn the water off.

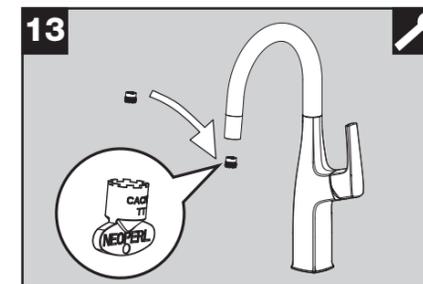

Reinstall the aerator.