

3 AAA batteries required (not included)

BATTERY INFORMATION:

This product includes 1 non-replaceable 3 V CR2032 batteries for the "Try Me" function.

1. Requires (3) AA batteries (not included) for normal operation.
2. Do not mix old and new batteries.
3. Do not mix different brands, sizes or types of batteries, such as alkaline, standard (Carbon-Zinc) or rechargeable (Nickel-Cadmium).
4. Non-rechargeable batteries are not to be recharged.
5. Do not force discharge, recharge, disassemble, heat above 60°C (140°F) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
6. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries and keep them away from children.
7. Exhausted batteries are to be removed from the product. Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate them
8. Do not expose batteries to fire, as batteries may explode or leak. Even used batteries may cause severe injury or death.
9. Never handle damaged or leaking batteries — this may result in burn injuries or cause serious internal injuries. Do not ingest the battery.
10. Misuse can cause battery to overheat, rupture, leak or explode, resulting in property damage, personal injury or death.
11. Keep away from children. Call a local poison control center for treatment information.

BATTERY WARNINGS:

1. The "TRY ME" feature is intended for in-store demonstration only. Please remove the "TRY ME" wire and insert batteries into the battery compartment during normal operation.
2. Product is safe to use in indoor and covered outdoor settings.
3. Replace only with (3) AA batteries.
4. Replace all batteries of a set at the same time.
5. The battery box is located at the end of the garland.
6. Lift up the buckles to open the battery box.
7. Clean the battery contacts and also those of the device with cloth prior to battery installation.
8. Insert (3) AA batteries with the correct polarity (+ and -).
9. Press down on the buckles to close the battery box.
10. The TIMER/ON /OFF switch is located on the battery compartment. Press the switch once to turn on LEDs and 6 hours on/18 hours off timers. Press the switch twice to turn on steady LEDs. Press the switch a third time for turn off the LEDs.