




—
En




Before You Start

- ⚠ Please read all instructions carefully.
- ⚠ Retain instructions for future reference.
- ⚠ Separate and count all parts and hardware.
- ⚠ Read through each step carefully and follow the proper order
- ⚠ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Always place the product on a flat, steady and stable surface.
- ⚠ Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

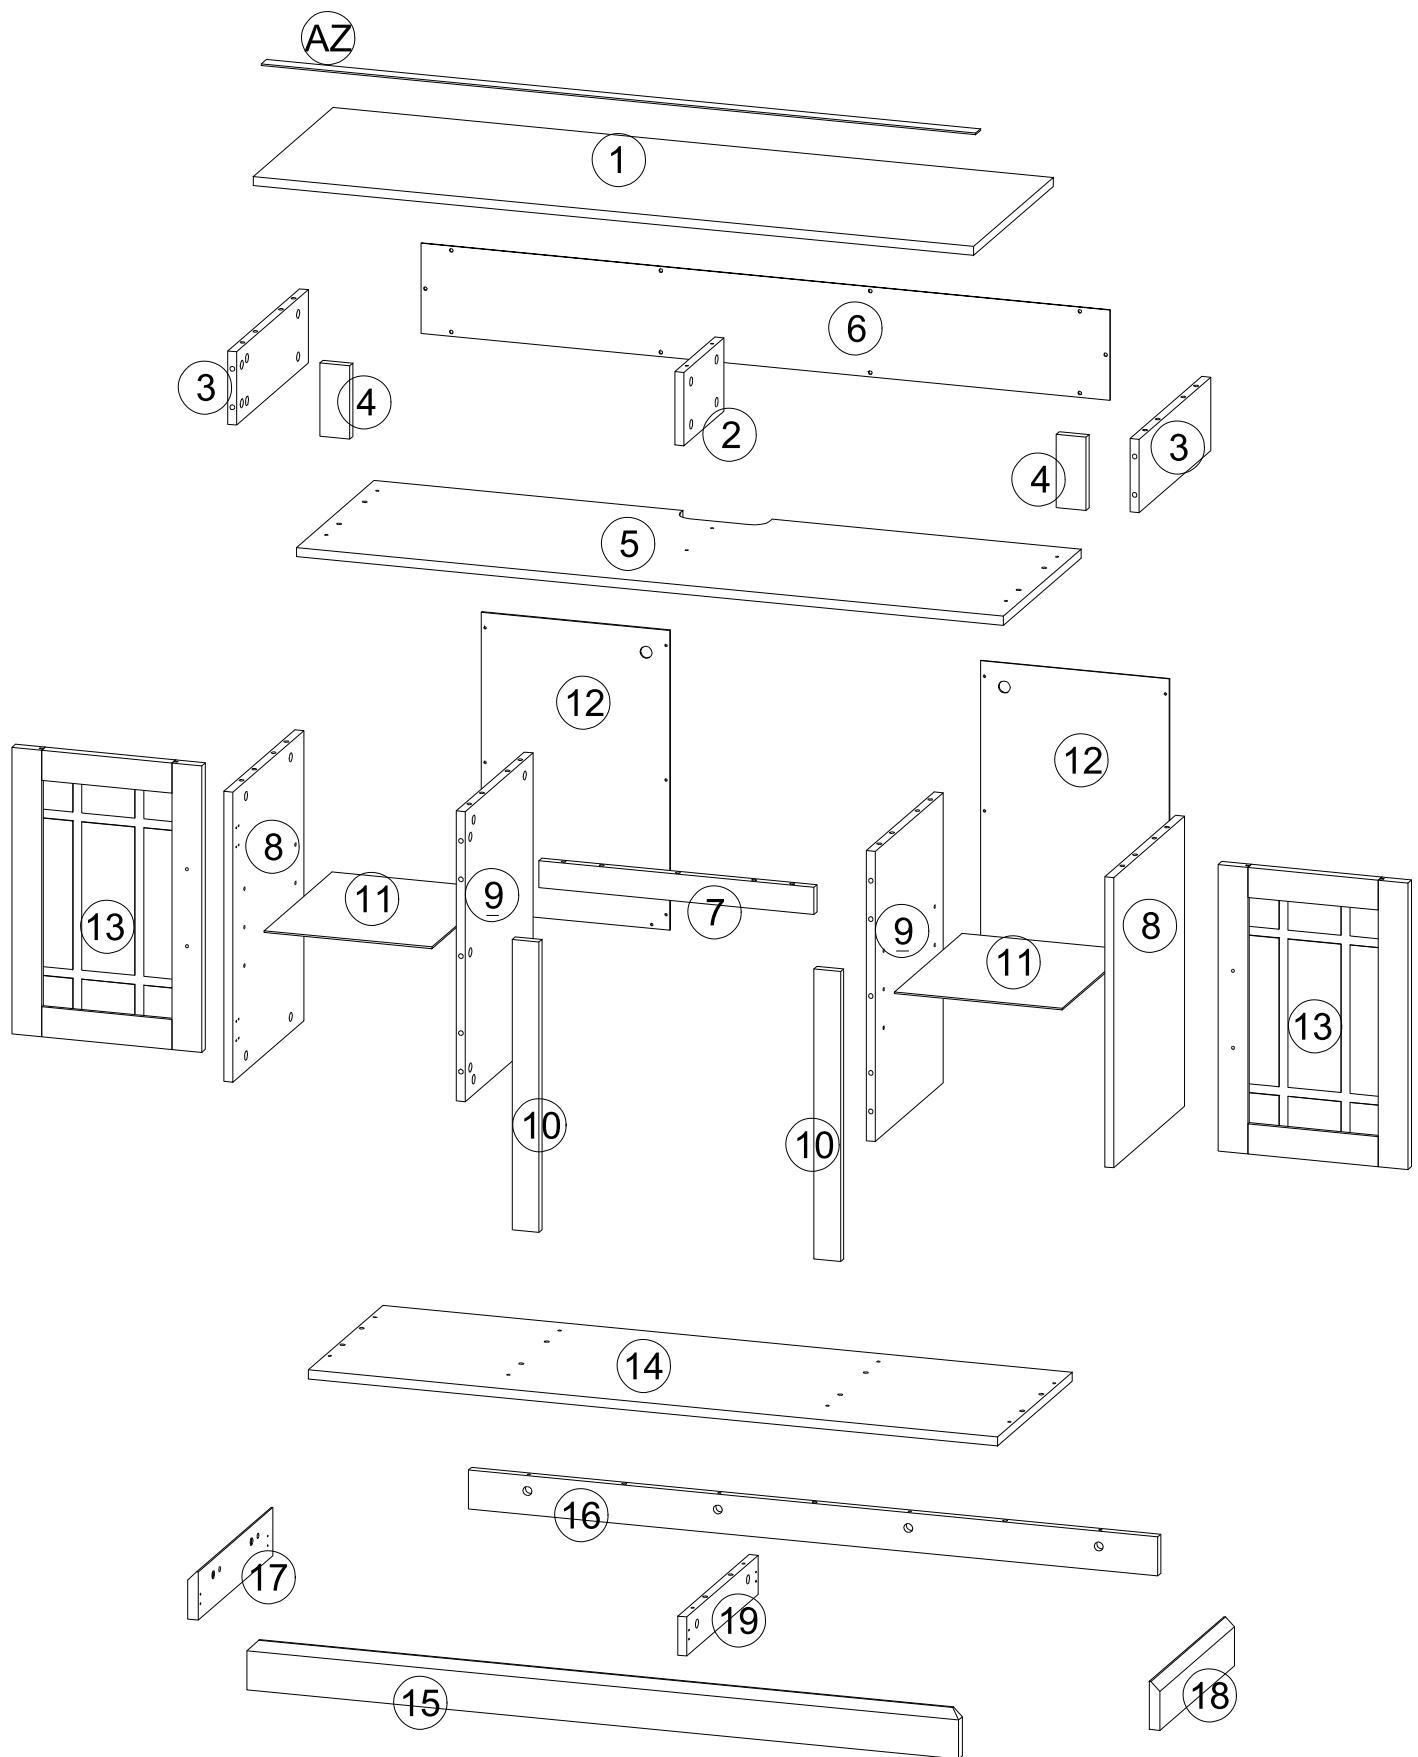


PACKAGE CONTENT		
CODE	DESCRIPTION	QTY
1	Countertop Board	1
2	Middle Partition	1
3	Upper Lateral Plate	2
4	Top Vertical	2
5	Laminate	1
6	Upper Back Panel	1
7	Middle Rung	1
8	Side Plate	2
9	Side Plate	2
10	Middle Front Block	2
11	Movable Shelf	2
12	Side Backplane	2
13	Door Plank	2
14	Bottom Board	1
15	Bottom Front Plank	1
16	Bottom Back Plank	1
17	Bottom Side Plate	1
18	Bottom Right Plate	1
19	Bottom Middle Partition	1

 


(A)

47X+4X

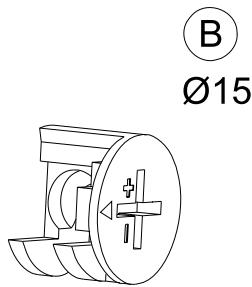


(B)

Ø15

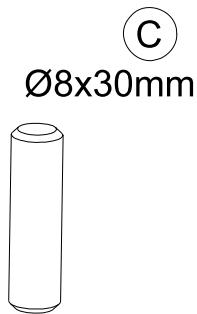


(C)

 Ø8x30mm



(D)

2X

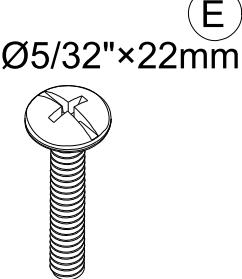


(E)

Ø5/32"×22mm



4X

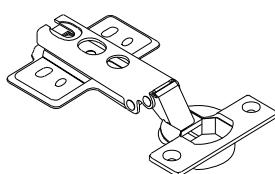


(F)

4X

Ø3.9×15mm
Silvery




24X+1X

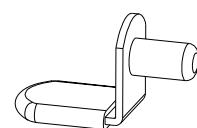


(H)

8X

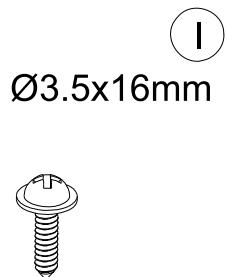


(I)

Ø3.5x16mm

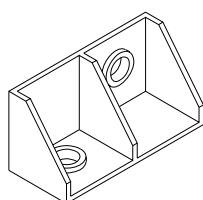


(J)

58*29*29

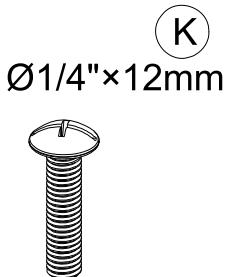

(K)

Ø1/4"×12mm

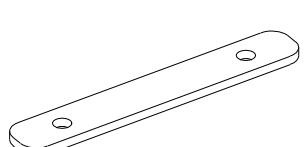


(L)

28X+1X

8X


16X

2X

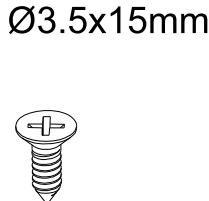


(M)

Ø3.5x15mm

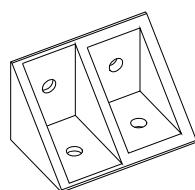


(N)

32*19*19mm

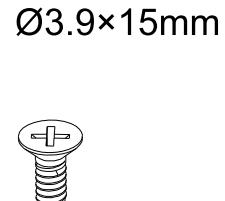

(O)

Ø3.9×15mm

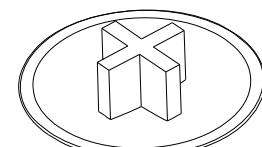


(P)

4X

6X


24X+1X

24X

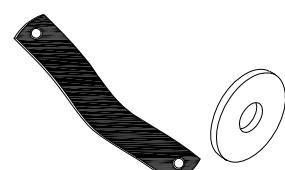


(Q)

2X+4X

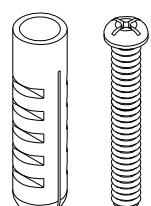

(R)

2X+2X

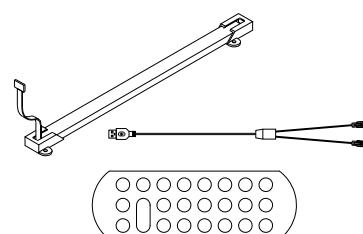

(S)

2X+1X


Ø2.9×12mm
Silvery



(T)


12X

(U)

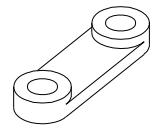

2X


(AZ)

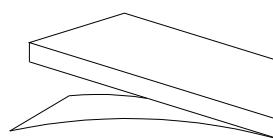

1X


STEP 1

J		8
K		8

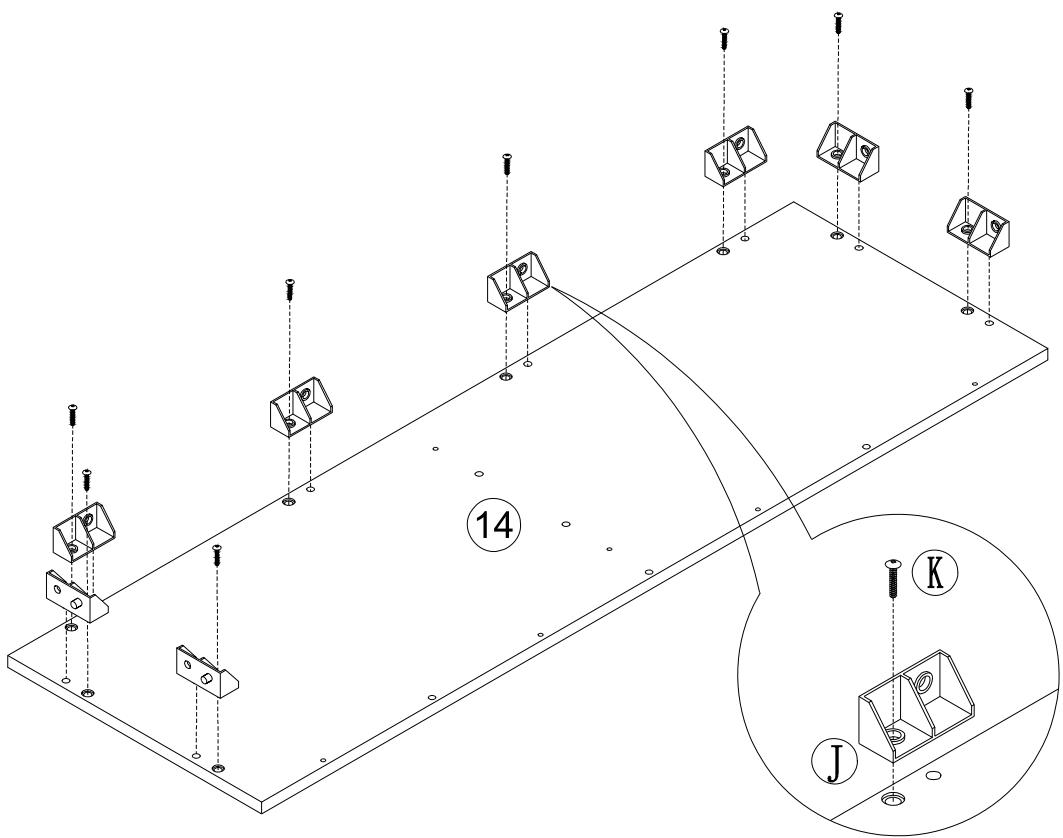


STEP 2

K		8
---	---	---

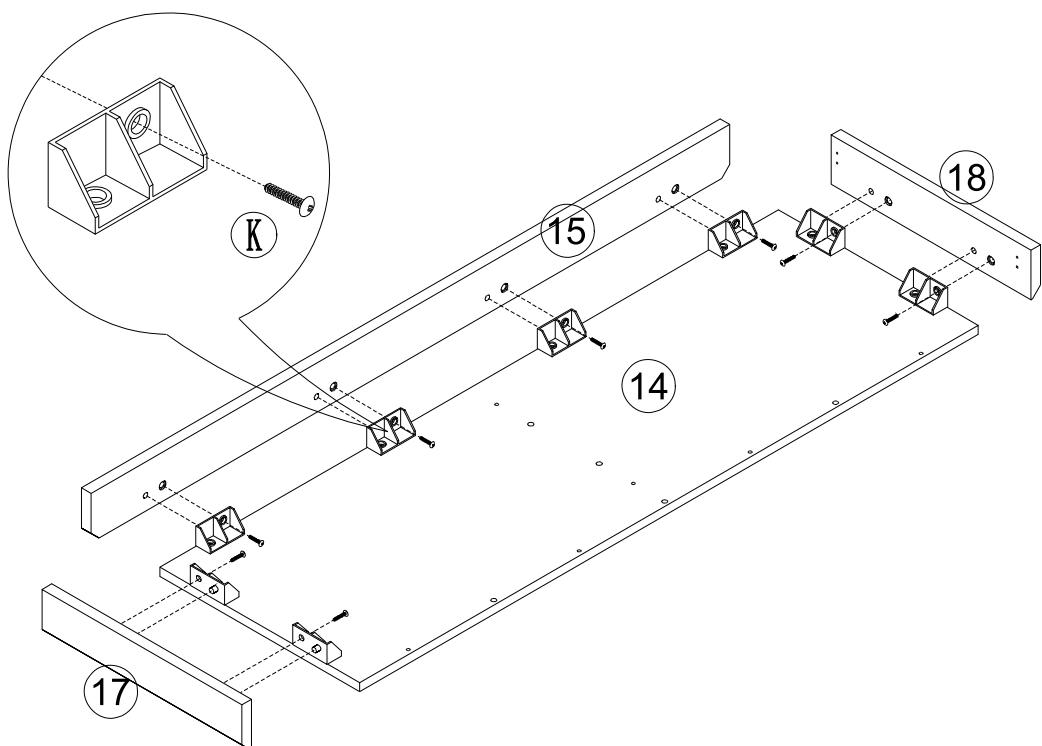


STEP 3

A		6
C		5

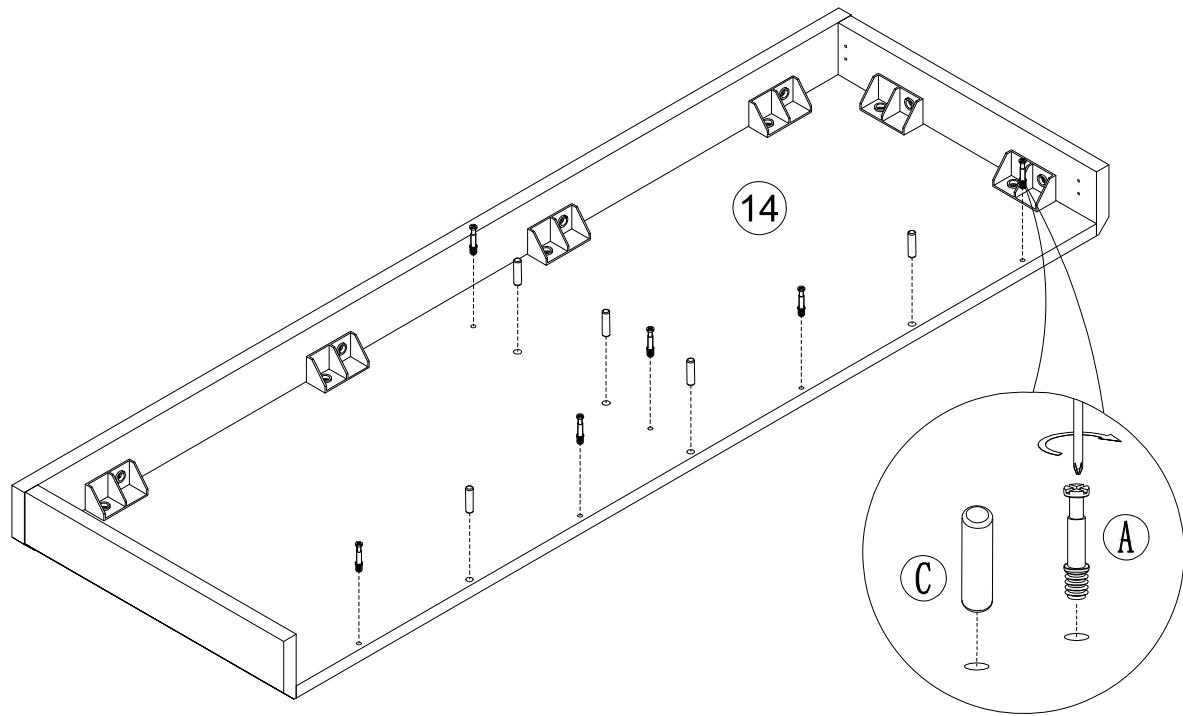


STEP 4

B		6
---	--	---

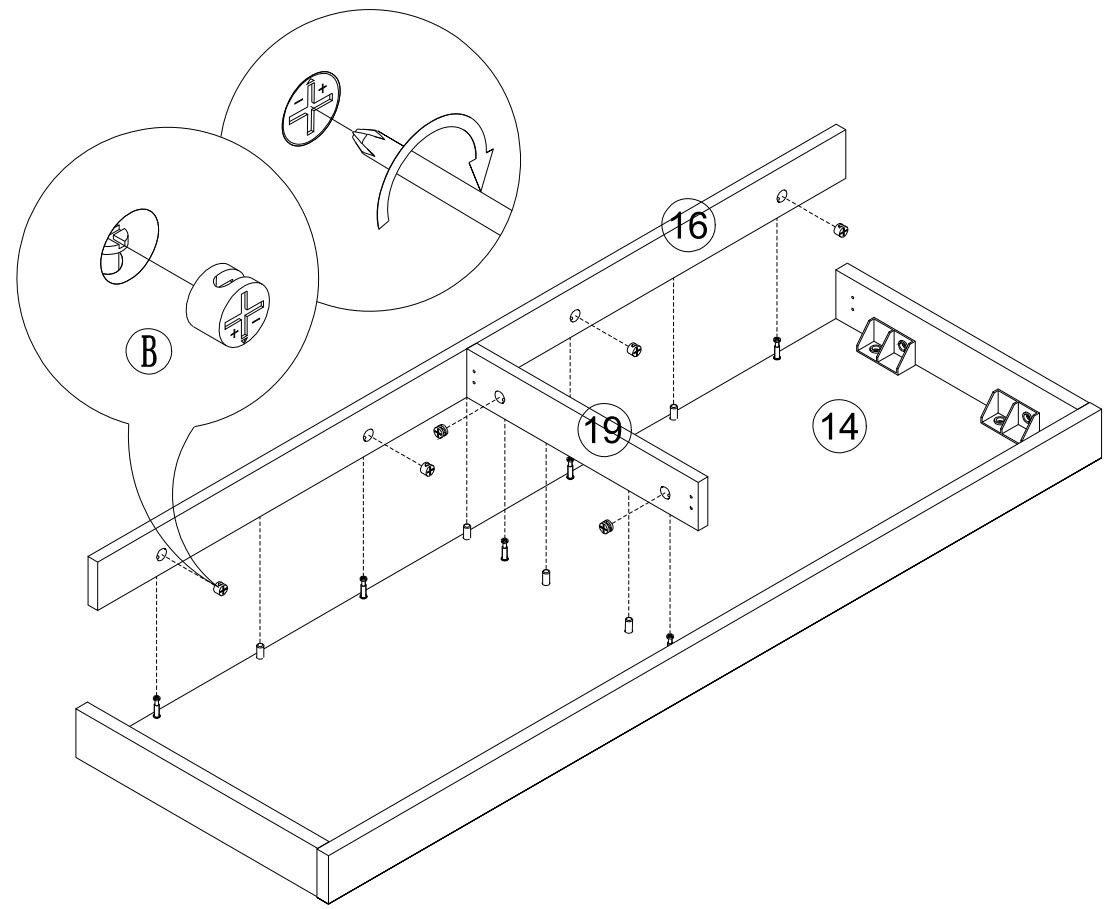


STEP 5

N		6
O		24

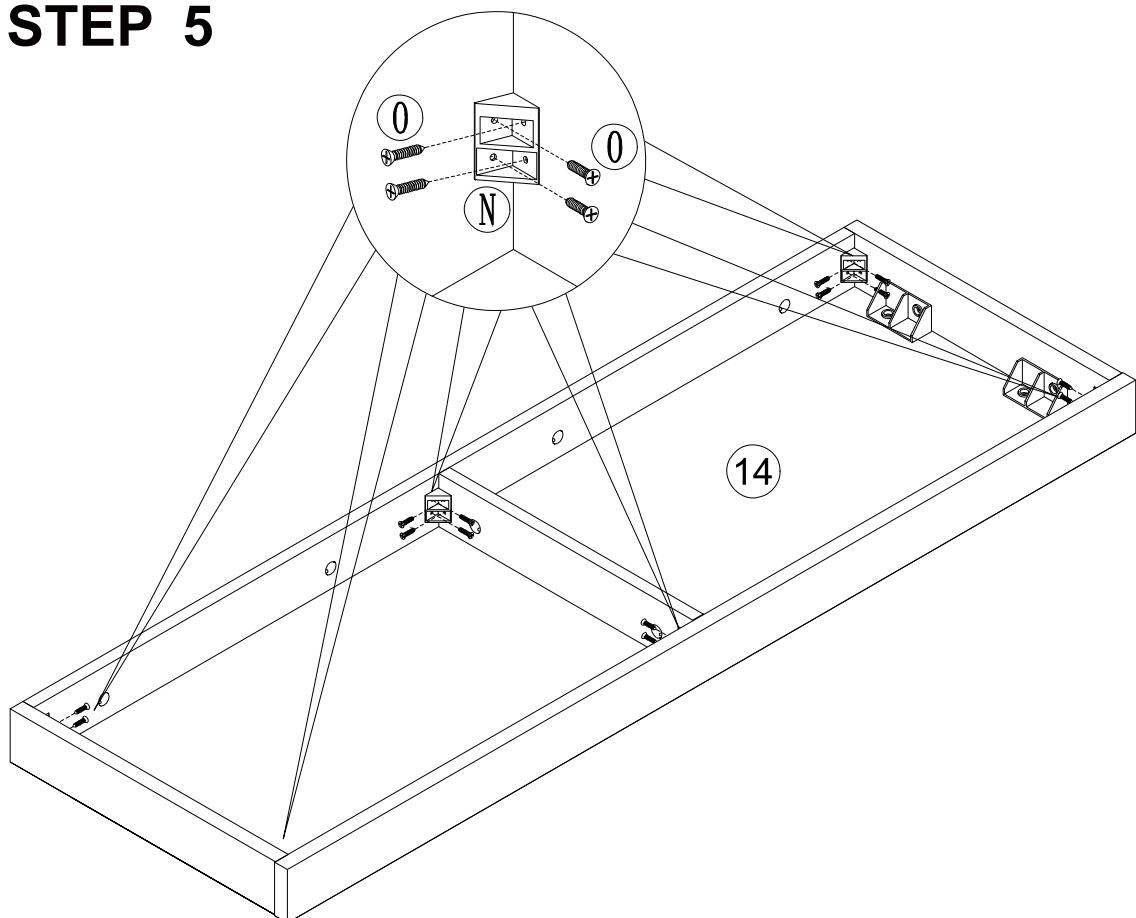


STEP 6

A		8
C		8

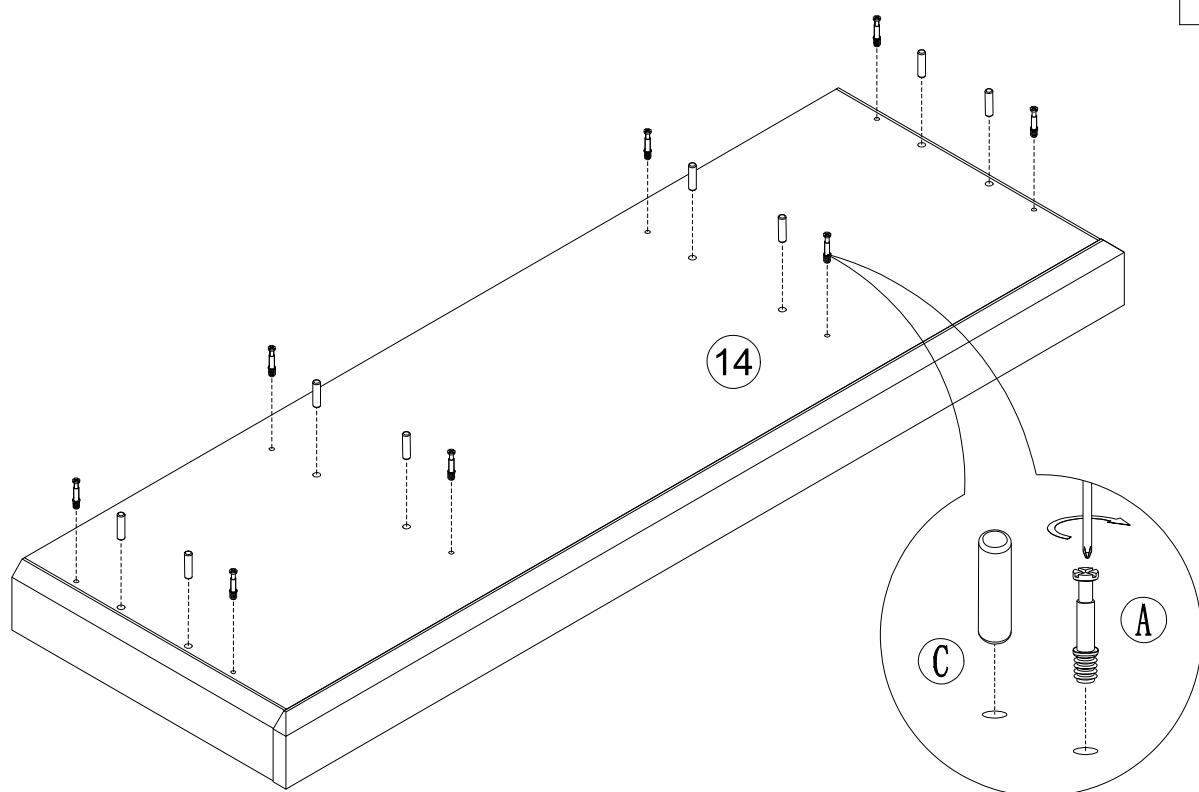


STEP 7



A		6
C		4

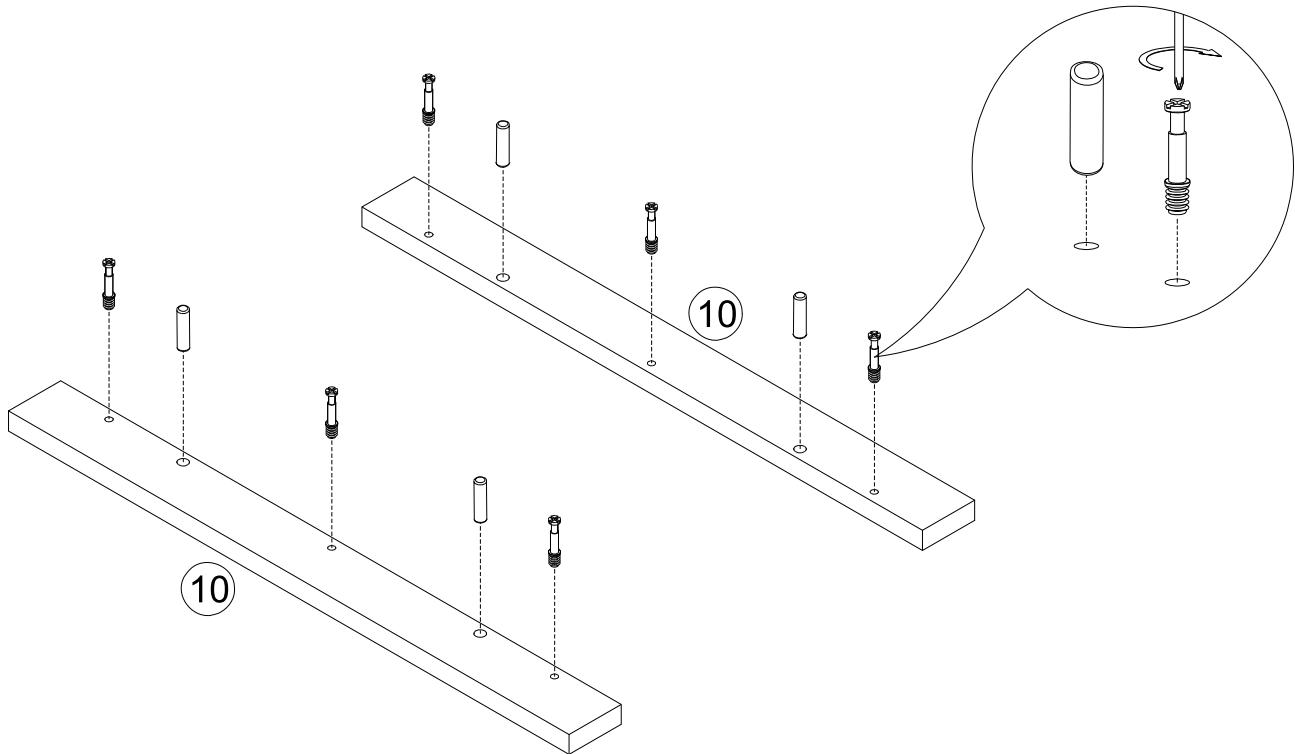

STEP 8


B		6
---	--	---

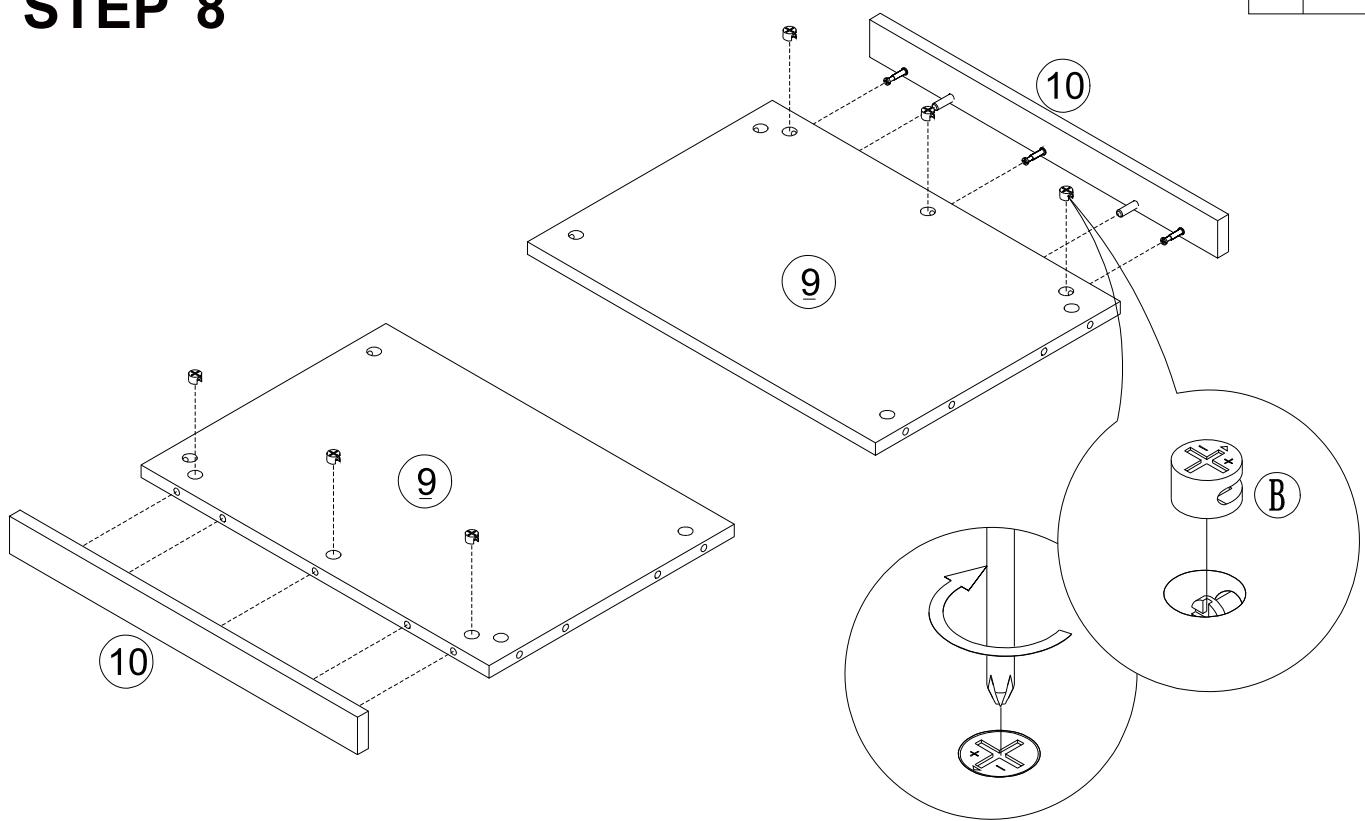

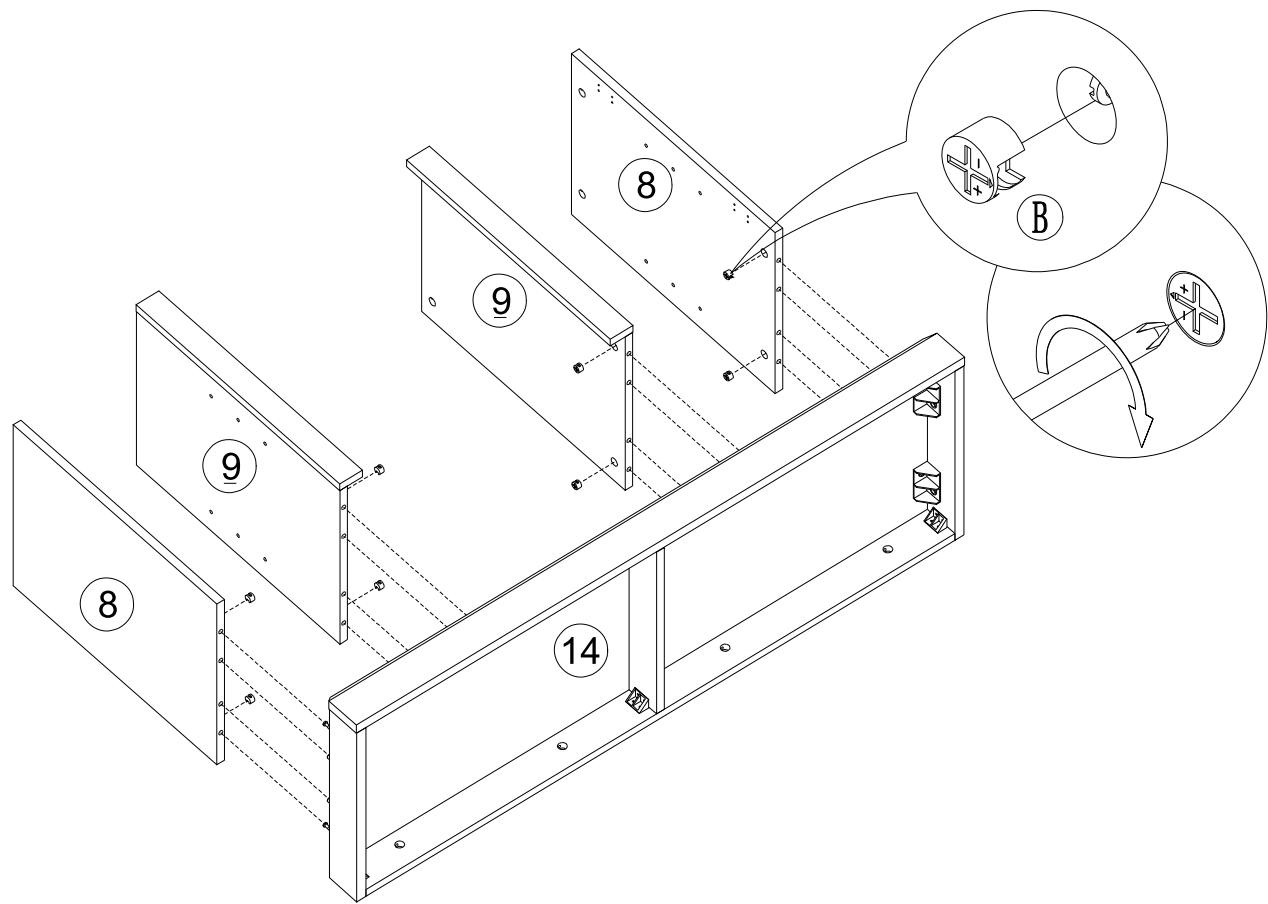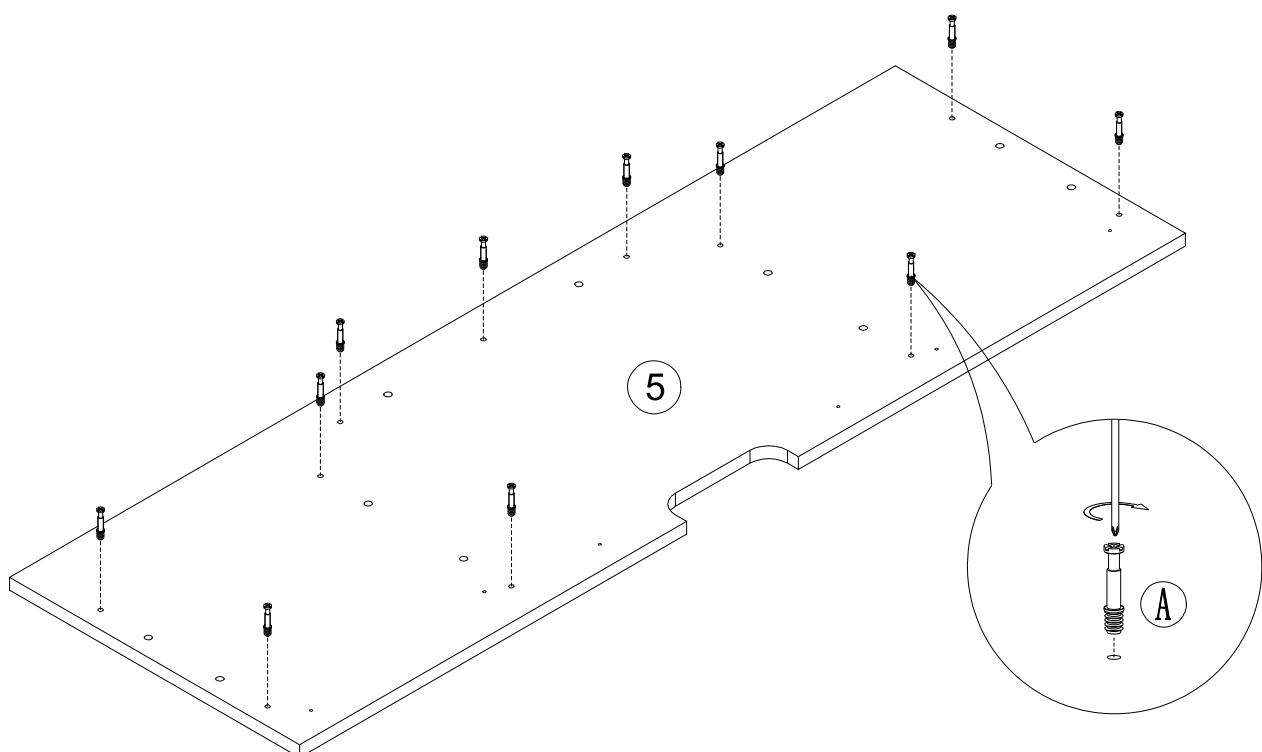STEP 9**STEP 10**


STEP 11

C		2	S		2
B		3	T		8

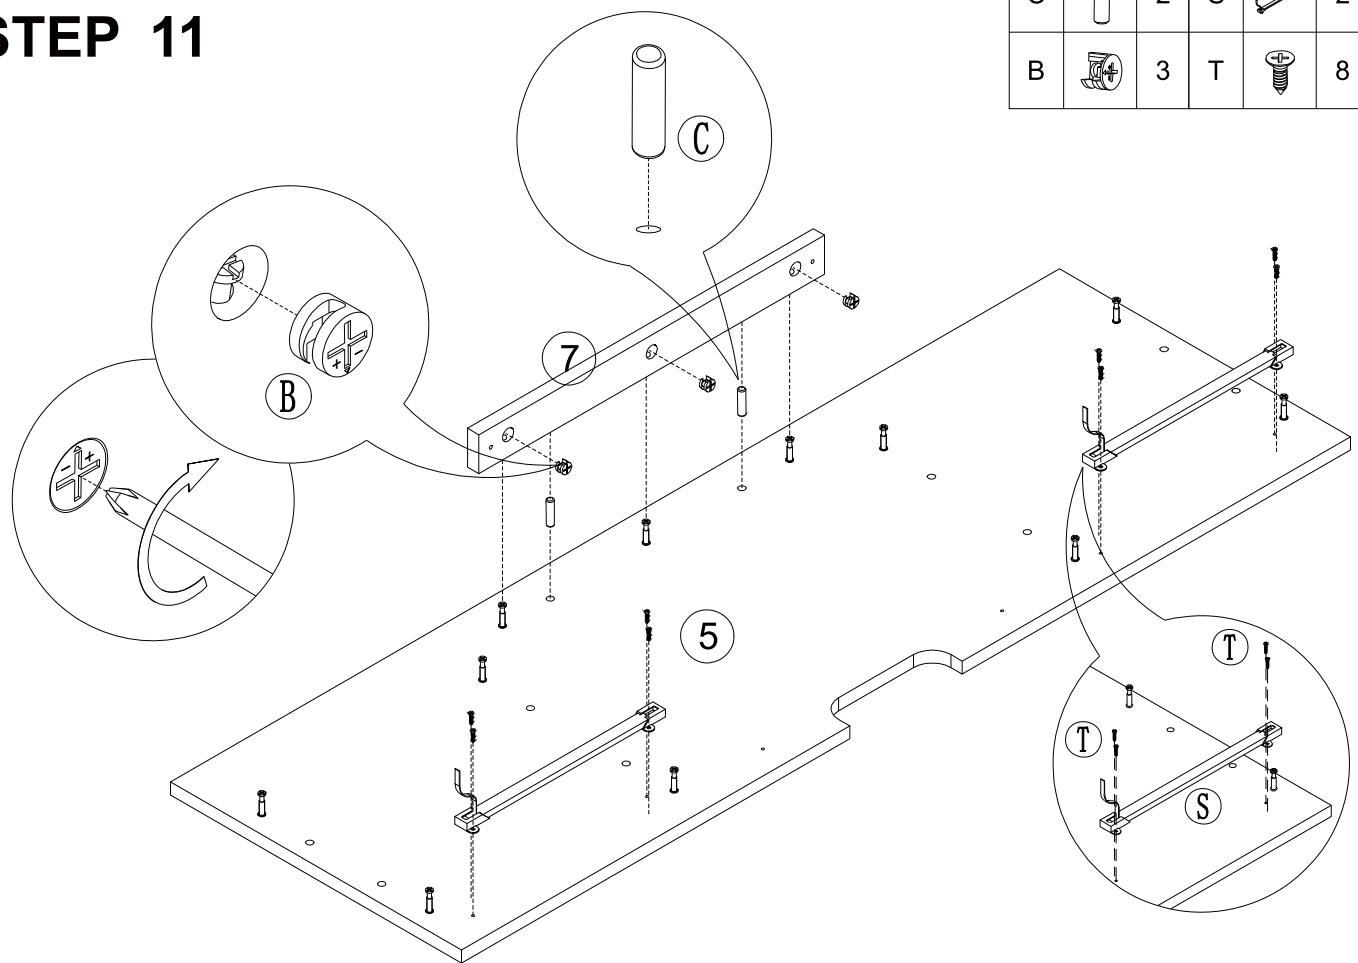


STEP 12

C		8
B		8

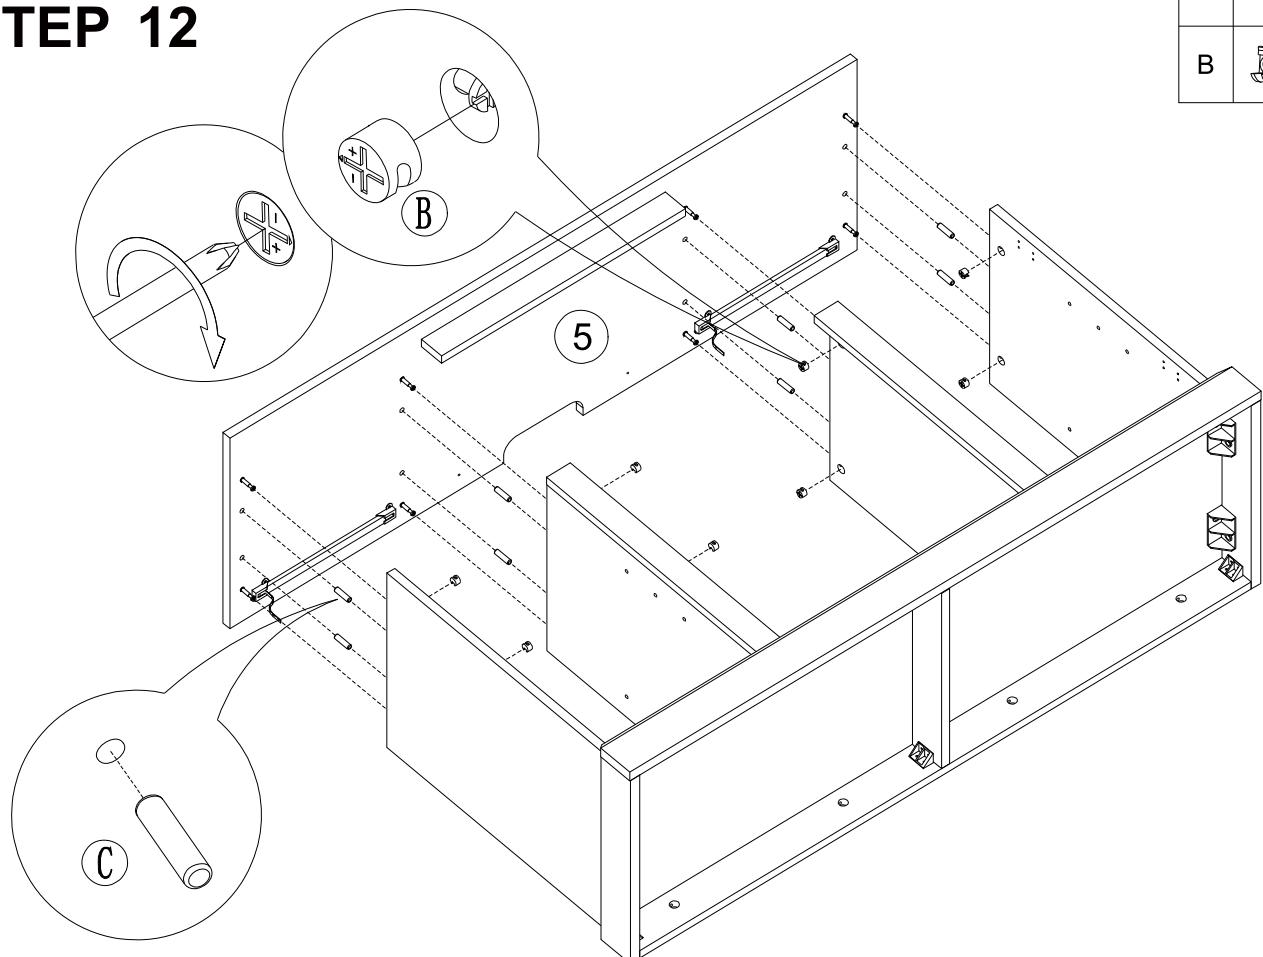


STEP 13

M		4
L		2

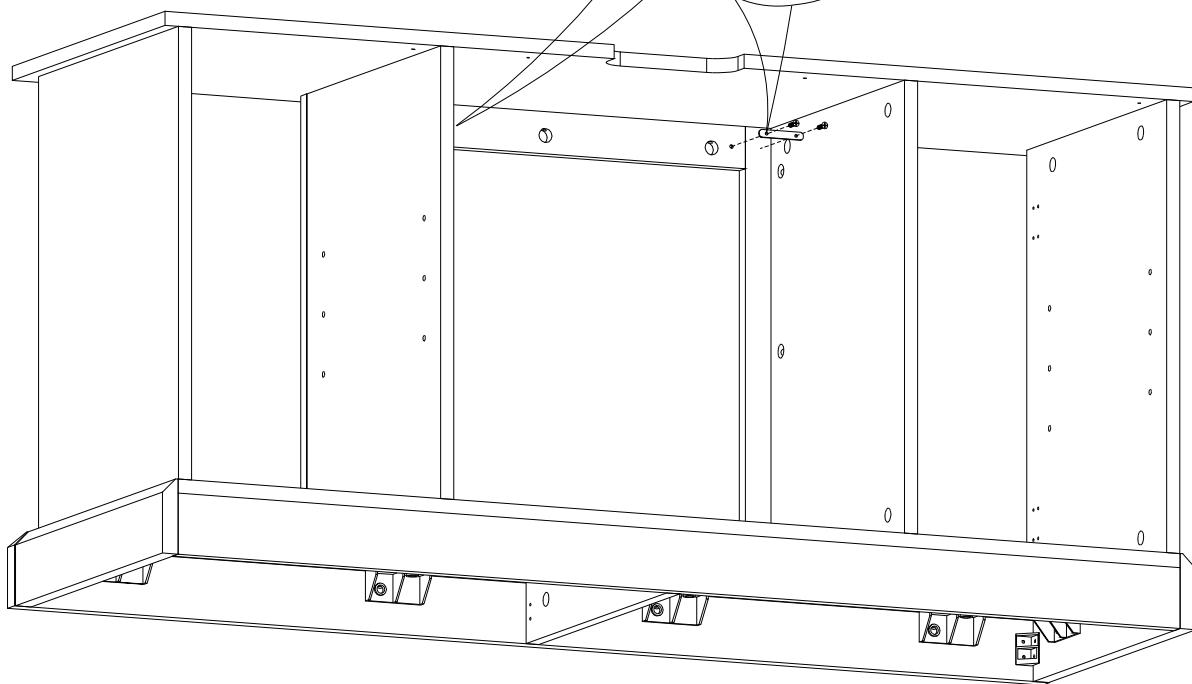


STEP 14


A		4
B		4

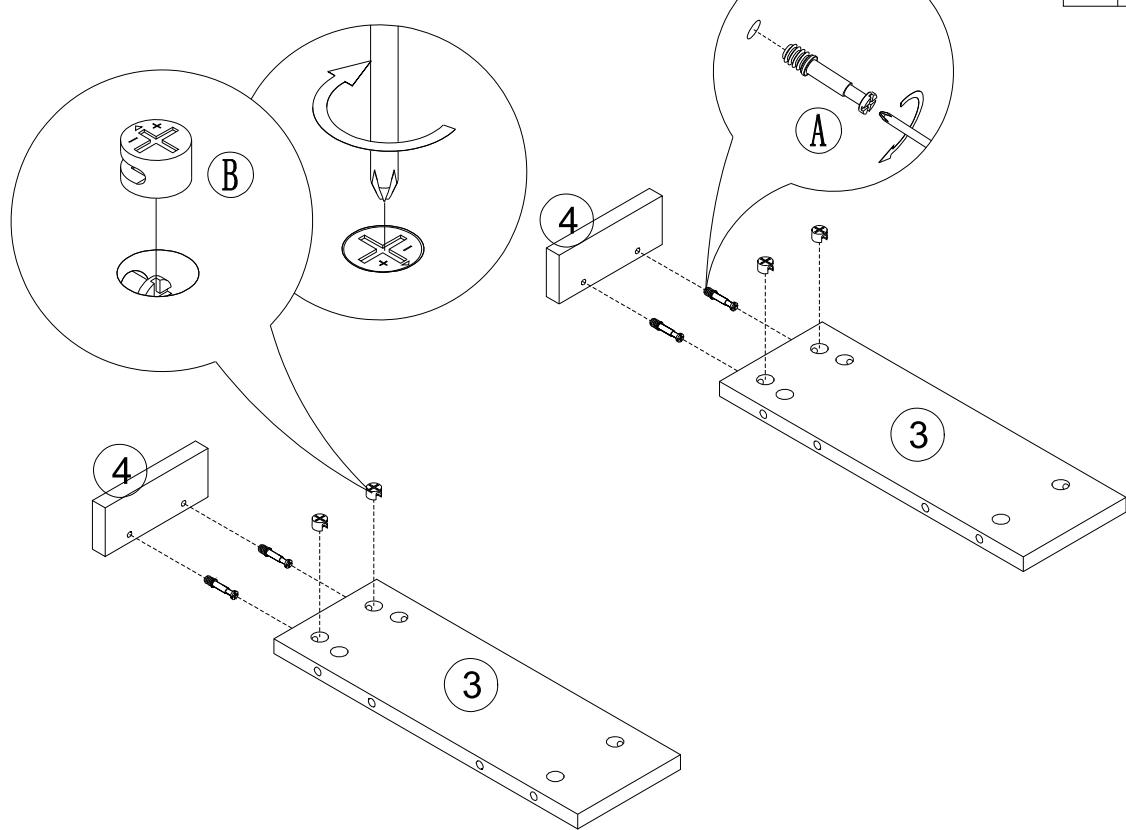

STEP 15

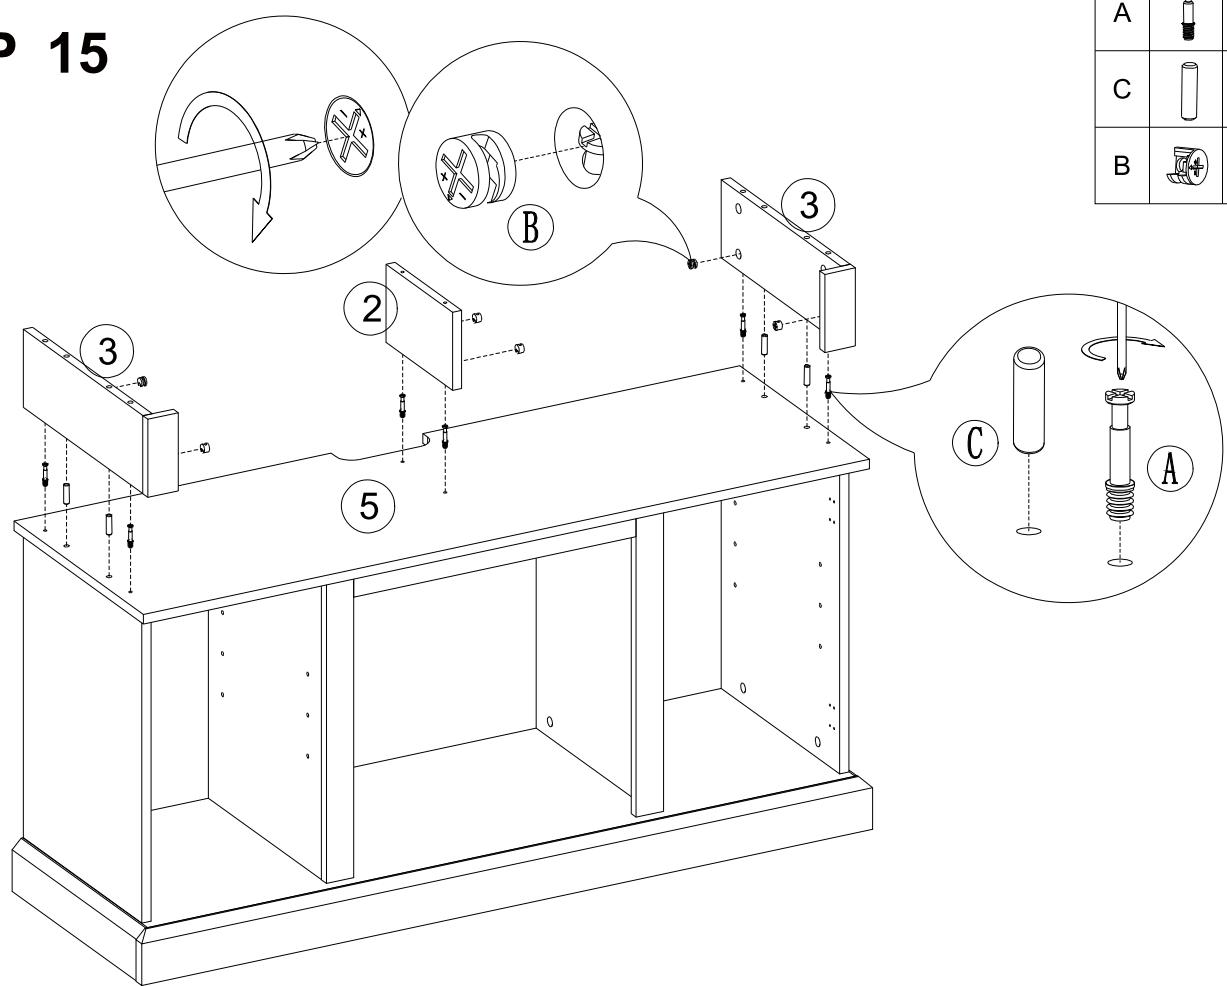


STEP 16

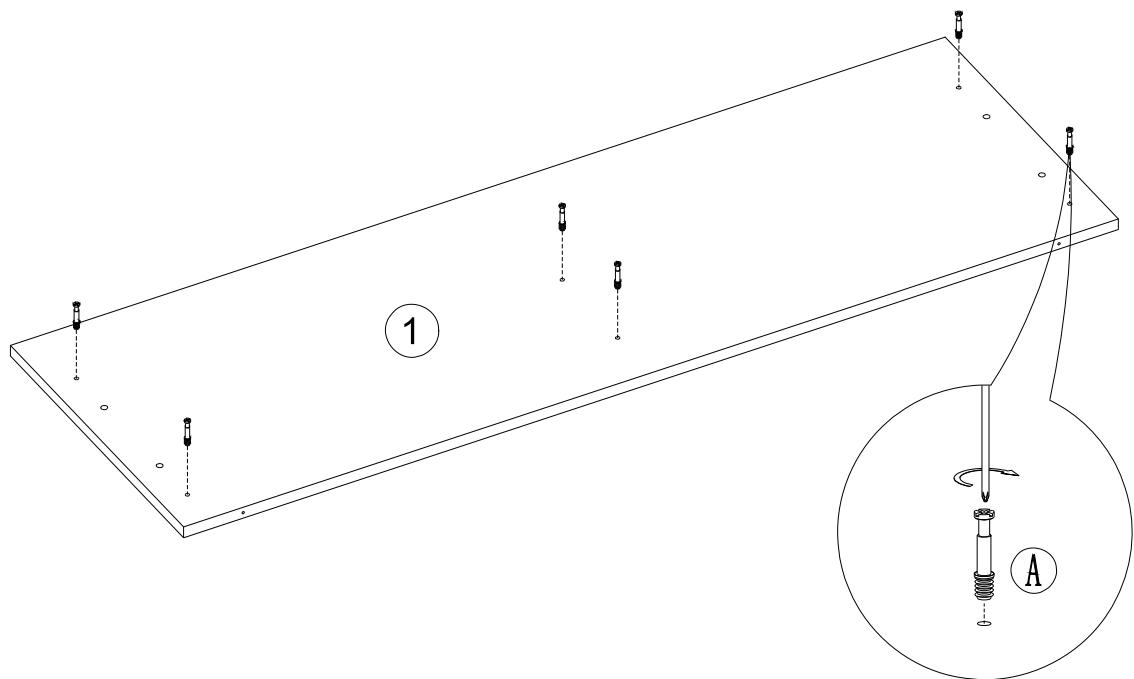


STEP 17

C		4
B		6

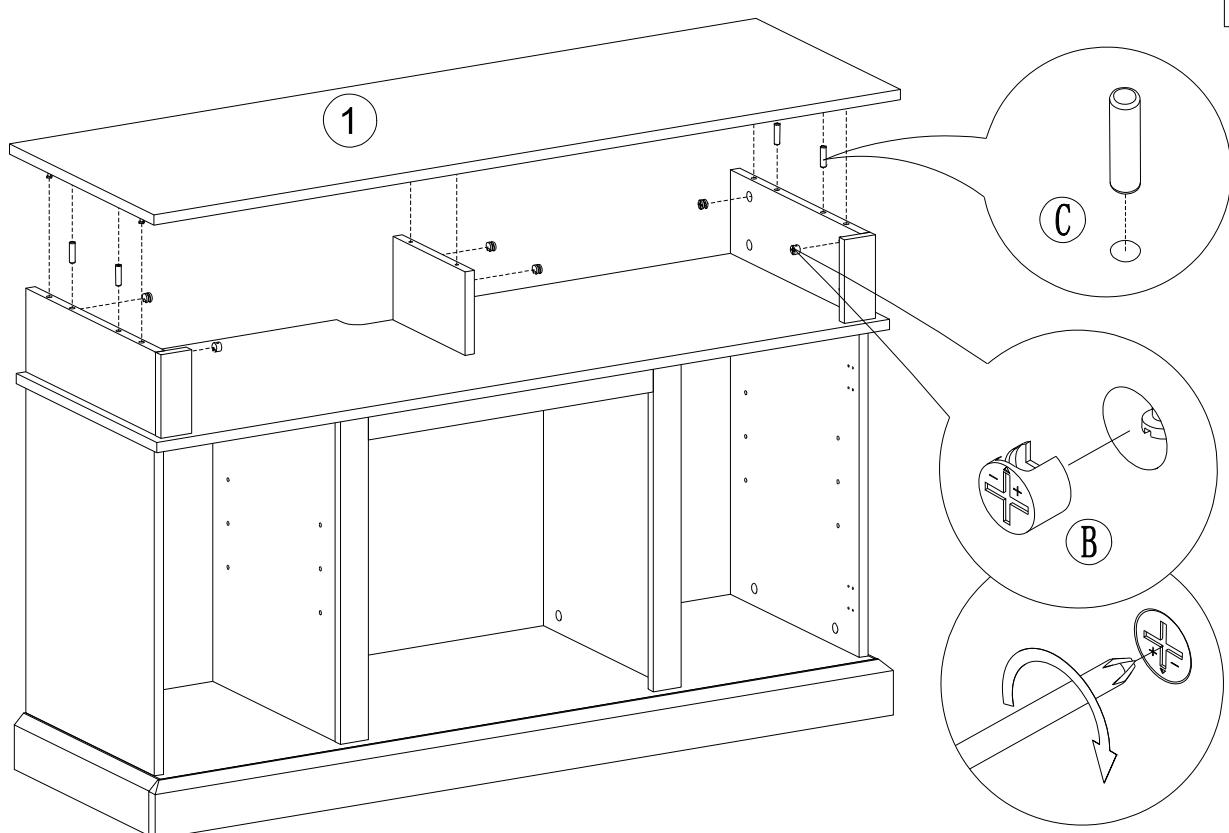


STEP 18

H		8
P		24

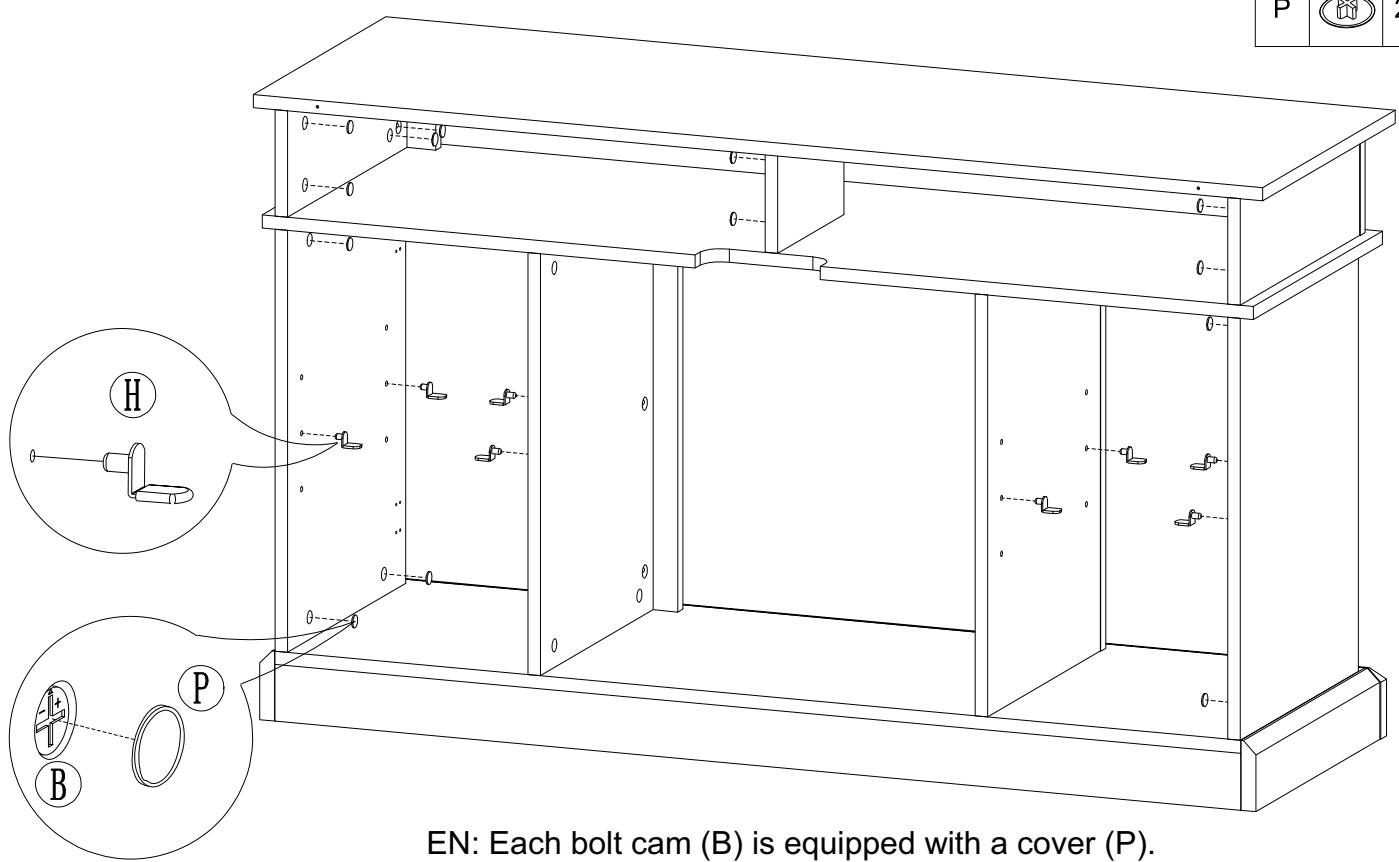


EN: Each bolt cam (B) is equipped with a cover (P).
 FR: Chaque came de boulon (B) est équipée d'un couvercle (P).

STEP 19

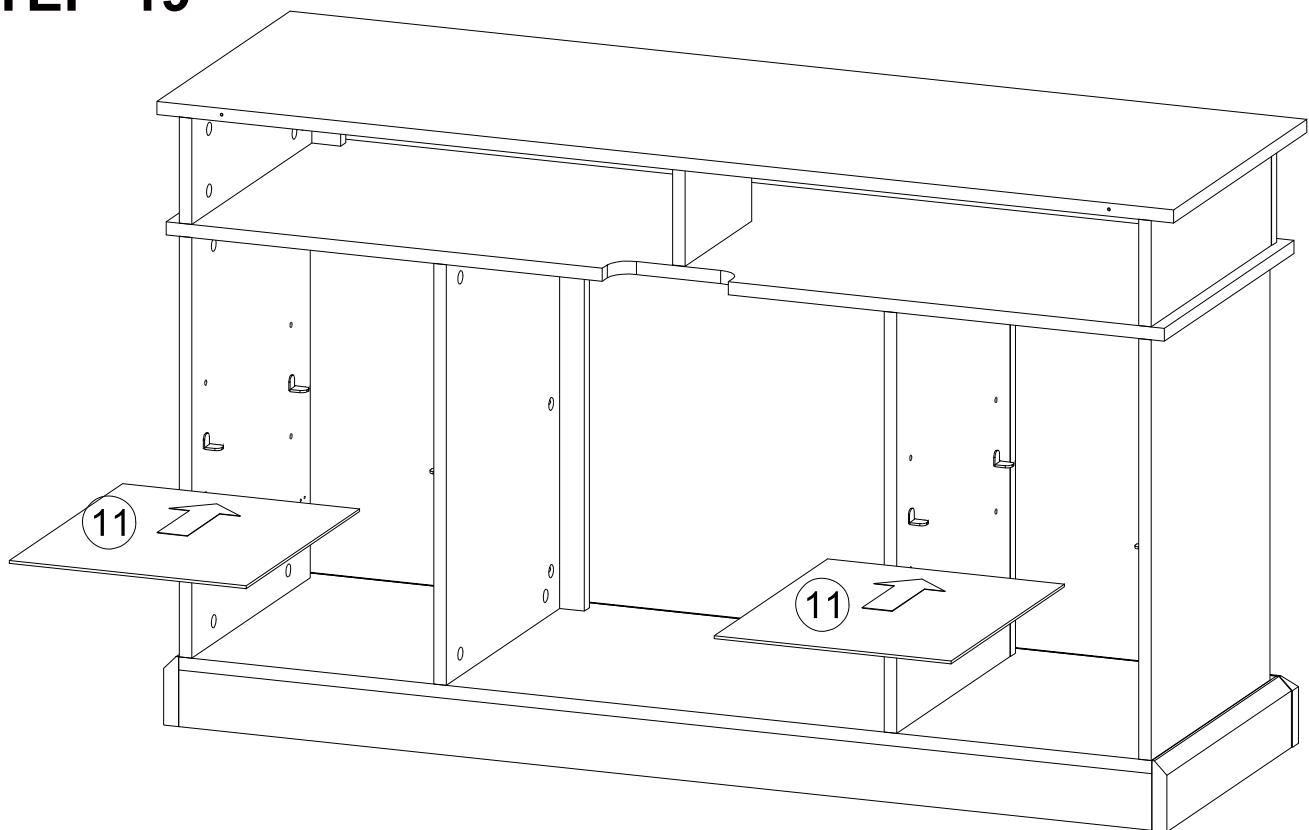


STEP 20

I  26

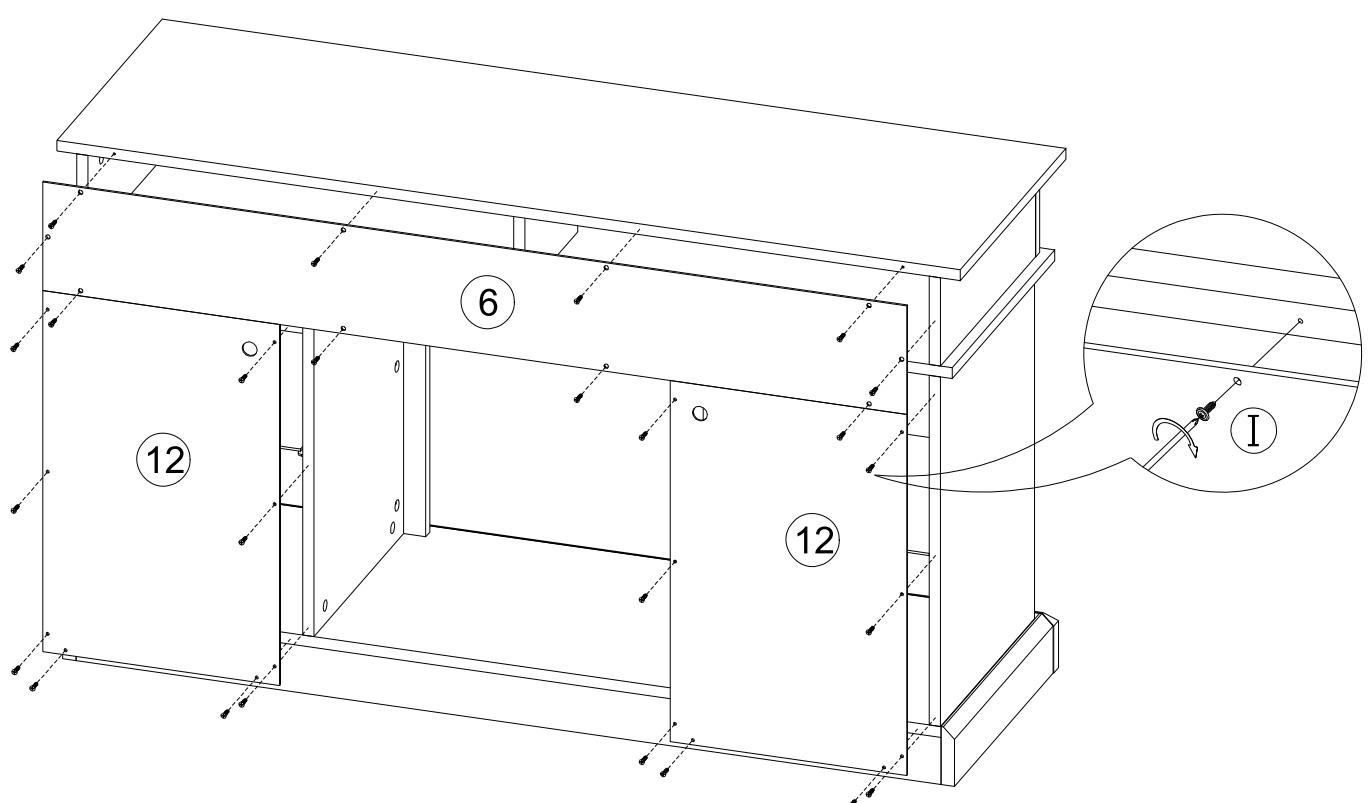

STEP 21

U		2
T		4
S		1

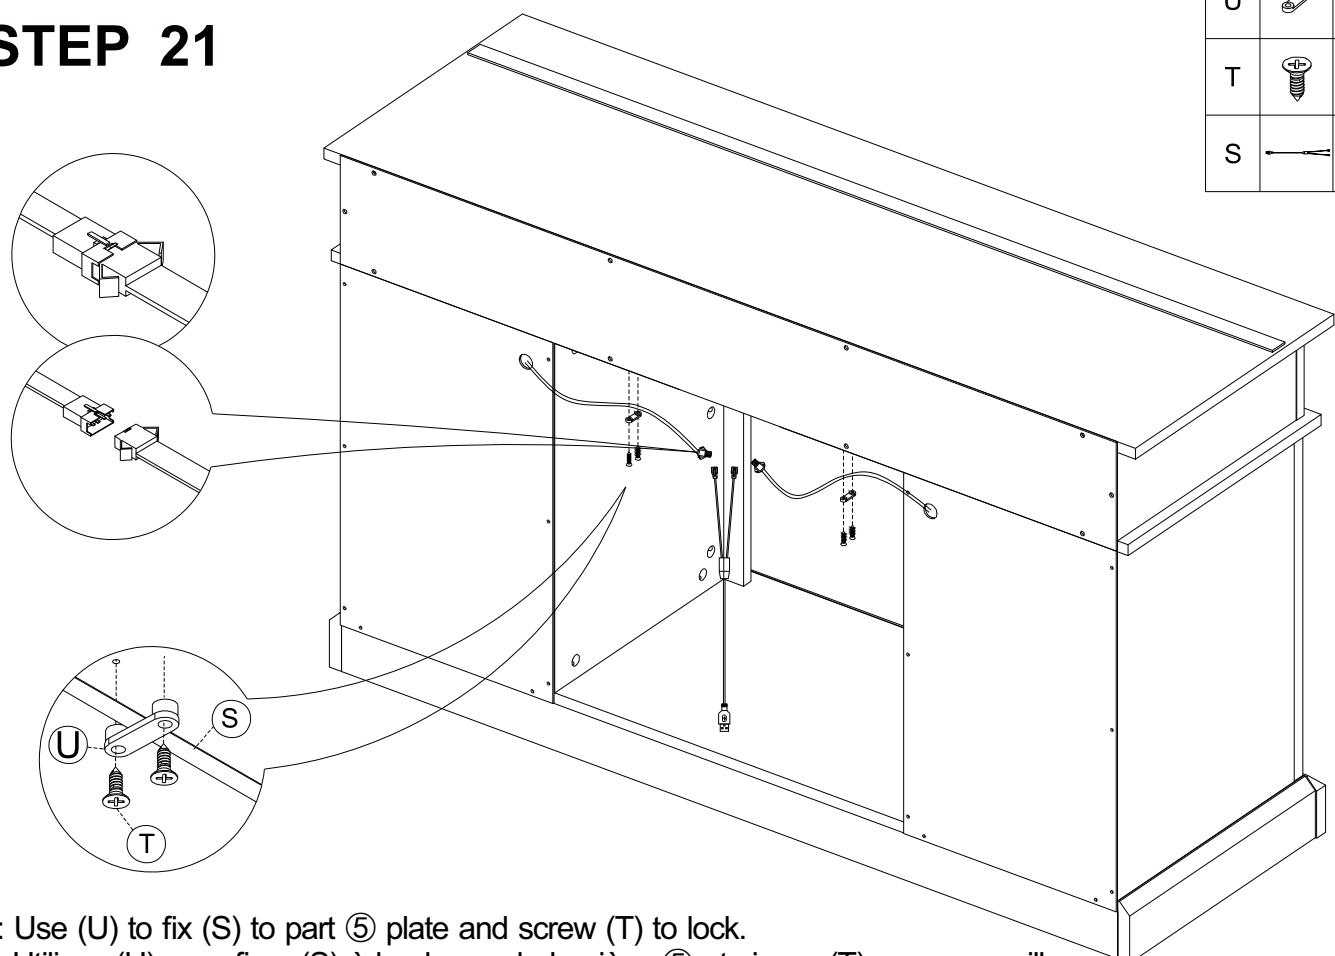


EN: Use (U) to fix (S) to part ⑤ plate and screw (T) to lock.





FR: Utilisez (U) pour fixer (S) à la plaque de la pièce ⑤ et vissez (T) pour verrouiller.

STEP 22

D		2
E		4
G		8
F		4

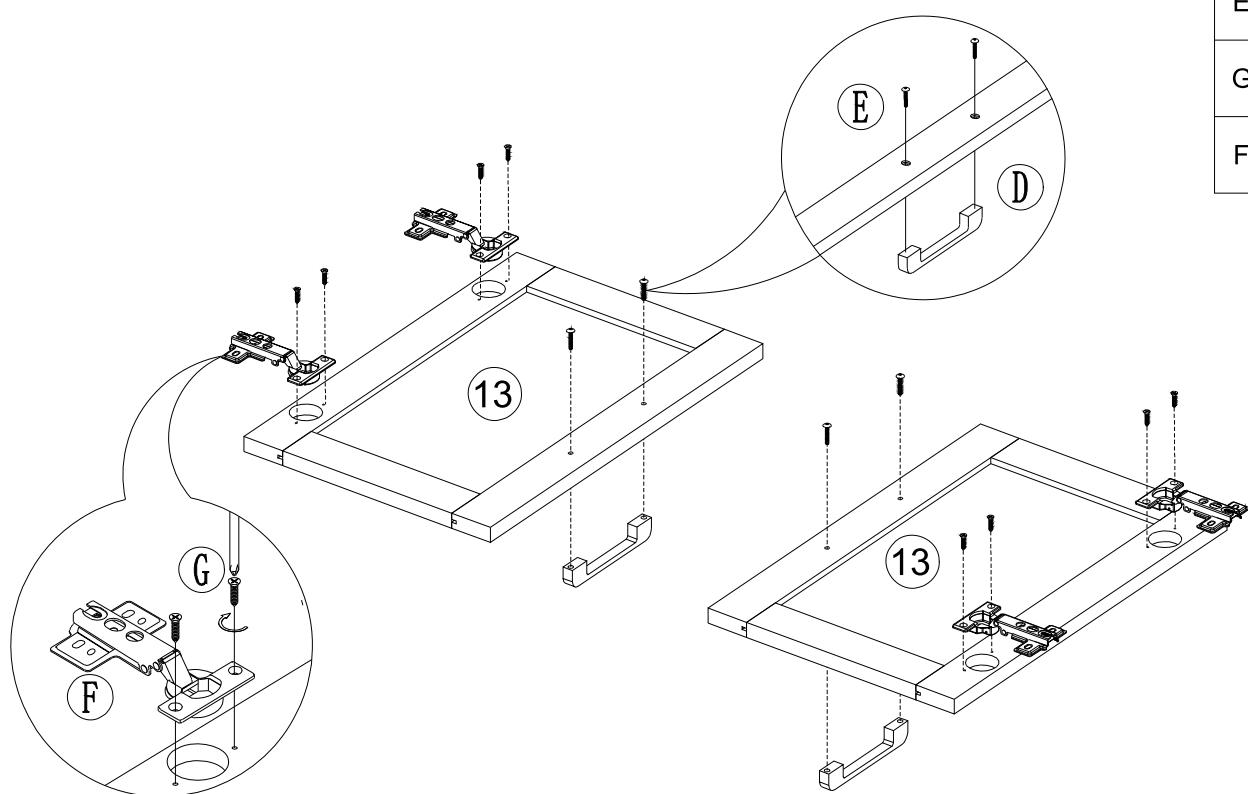

STEP 23

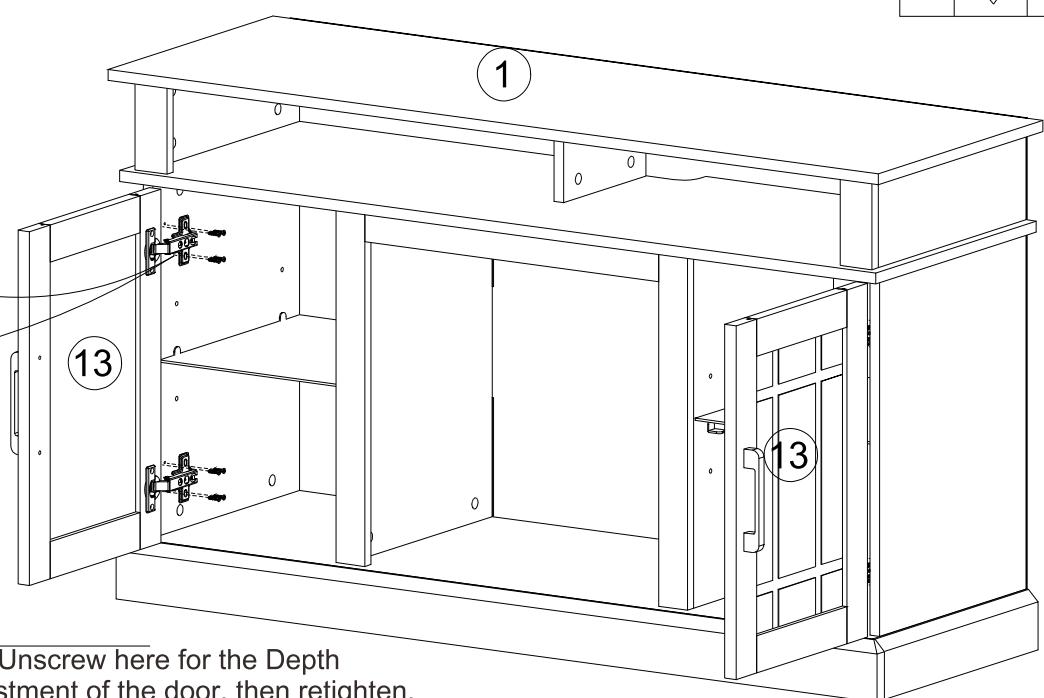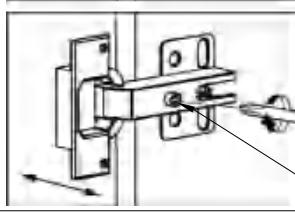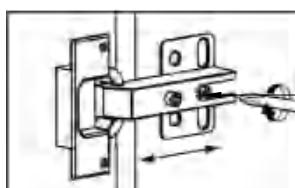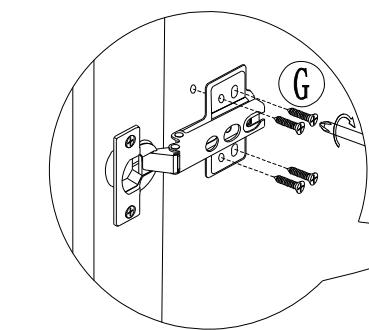

EN: Unscrew here for the Depth adjustment of the door, then retighten.


FR: Dévissez ici pour le réglage de la profondeur de la porte, puis resserrez-le.

EN: Rotate here for the horizontal adjustment of the door.

FR: Tournez ici pour le réglage horizontal de la porte.



Q		2
I		2
Q		2

STEP 24

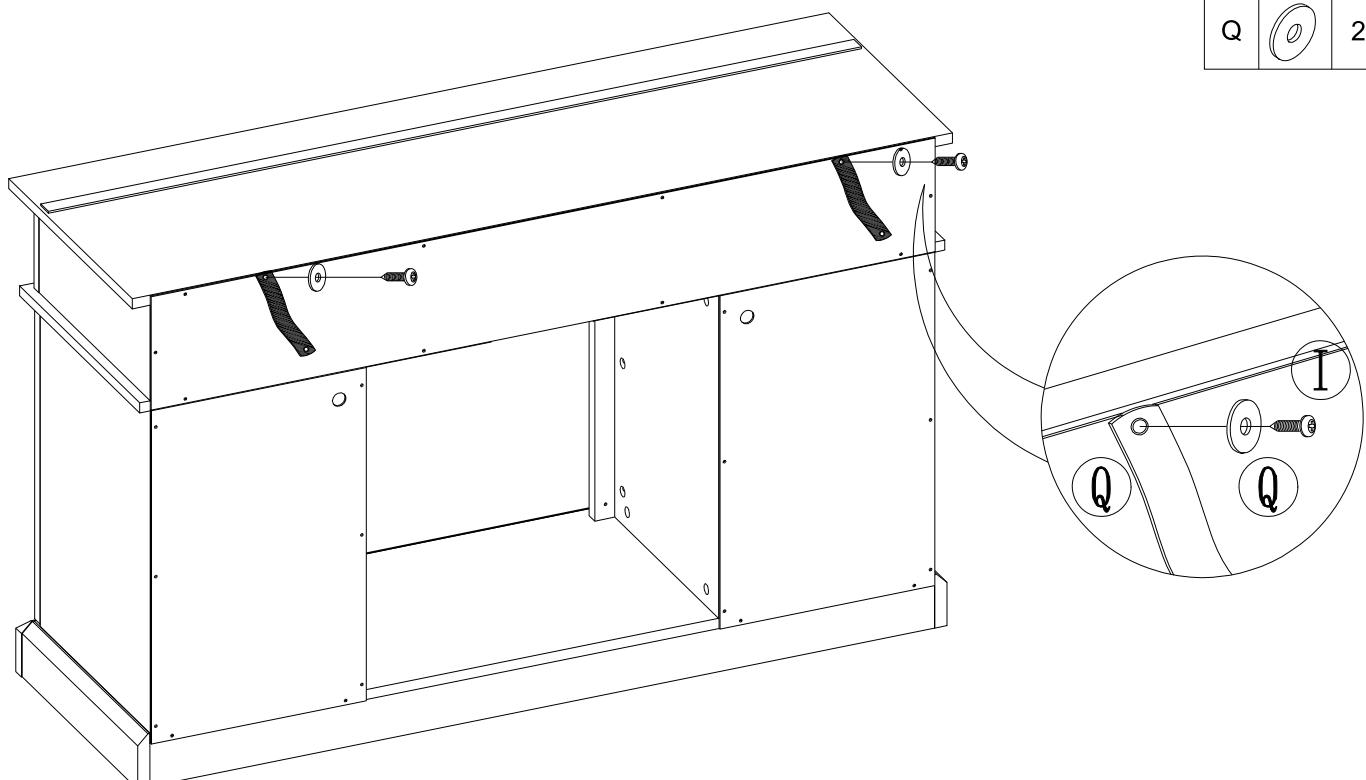


STEP 25

R		2
Q		2

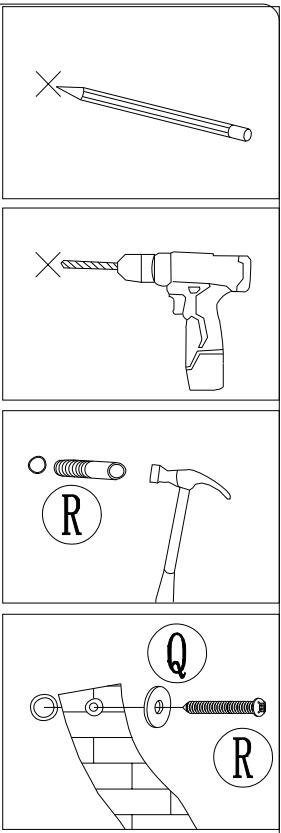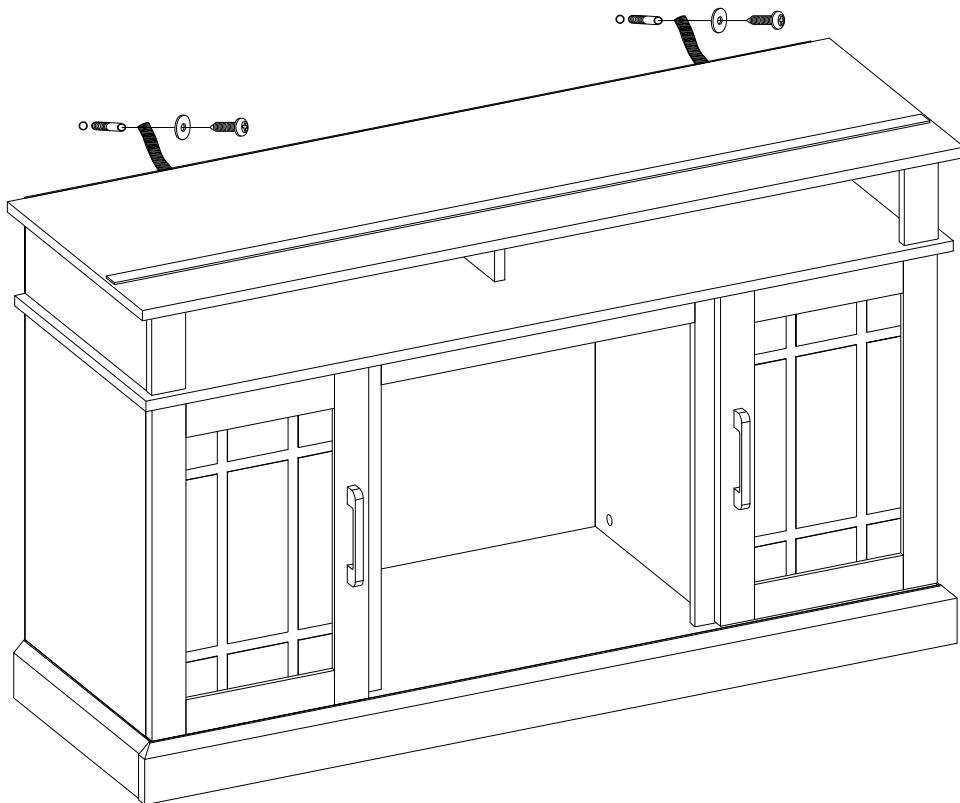


STEP 26

AZ		1
----	--	---

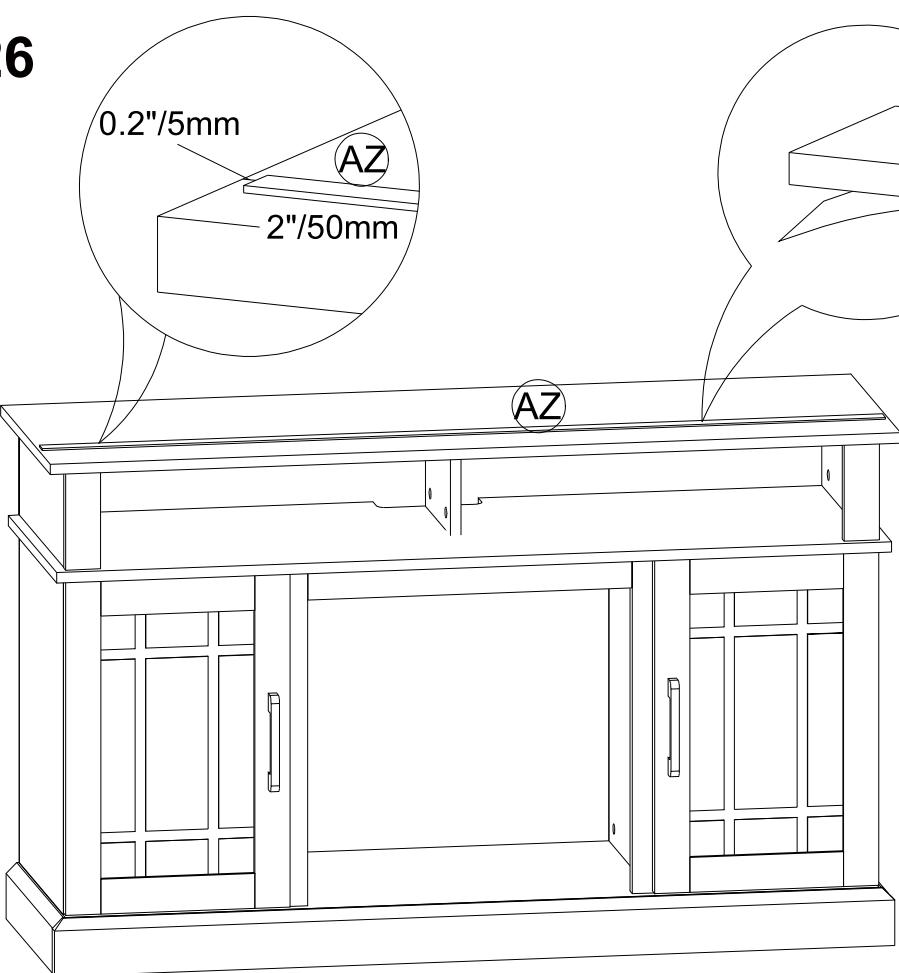

Electric Fireplace

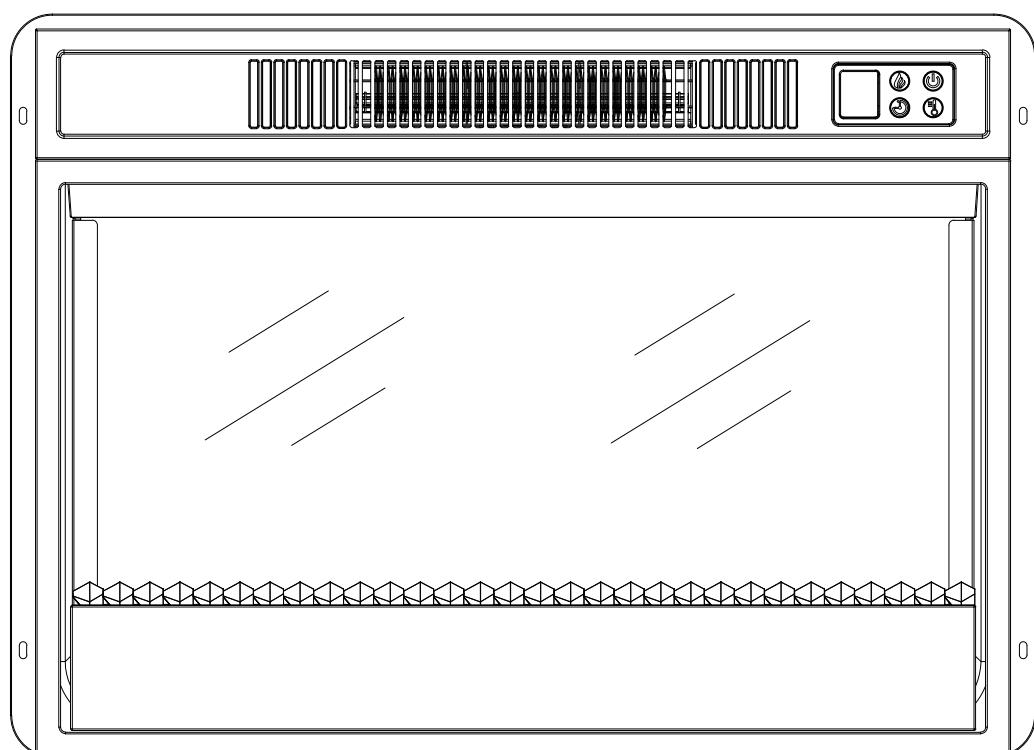

When using electrical appliances, basic safety precautions should always be followed including the followings:

READ ALL INSTRUCTIONS BEFORE USE

1. Read all instructions before using this heater.
2. Do not use this heater outdoors.
3. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate the heater where it may fall into a bathtub or other water container.
4. Do not run the power cord under carpeting. Do not cover the power cord with throw rugs, runners, or the like. Arrange the power cord away from traffic areas and where it will not be tripped over.
5. To disconnect the heater, turn controls to off, then remove the plug from the outlet.
6. Connect to properly grounded outlet only. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or reloadable power tap(outlet/power strip).
7. To prevent possible fires, please do not use fireplace heaters on soft surfaces, such as beds, carpets, which may block the opening.
8. There is a thermostat limiter inside the heater. When the inner temperature overheat or abnormal heating occurs, the thermostat protective device cuts off the power supply to avoid damage to the fireplace or risk of fire.
9. Use the heater only as described in the manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury.

⚠️ WARNING

There is no user serviceable parts inside fireplace/heater. If the unit appears to malfunction, turn the unit off and unplug from the wall immediately and contact qualified technician.

 **WARNING**

This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving the heater. Keep combustible material, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3ft (0.9m) from the front of the heater and keep them away from the side or rear.

 **WARNING**

Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.

 **WARNING**

Always unplug the heater when not in use.

 **WARNING**

Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped, or damaged in any manner. Ask qualified technician for help.

 **WARNING**

Do not insert or allow foreign objects to enter any ventilation or exhaust openings as this may cause an electric shock or fire, or damage to the heater.

 **WARNING**

A heater has hot and arching or sparking parts inside. Do not use in areas where gasoline, paint, or flammable liquids are used or stored.


CAUTION

While the heater is in use, the top center of the fireplace can get hot to the touch, and may cause serious injury or burns. Always supervise small children around the fireplace/heater. Do not place any cloth or decorations over the heater outlet or fireplace, or otherwise obstruct the heater outlet of the fireplace, as this may cause a fire and serious injury.


TECHNICAL SPECIFICATION

Model Number	FP10887US
Power Rating	1400 W
Voltage	120V
Frequency	60 Hz

PACKAGE CONTENT

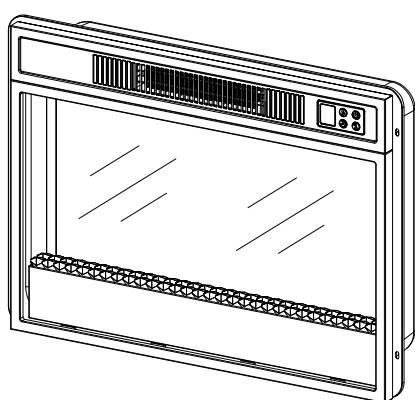


Fireplace Unit

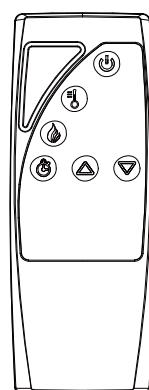

Remote Control



 Crystal stone




Screw x5

ASSEMBLY INSTRUCTION


INSTALLATION-CRYSTAL EMBER BED

Before installing the fireplace into the mantel or stand


1. Use a phillips head screwdriver (not provided) to unscrew 5 screws located at the back side of the fireplace to remove the glass front from the unit.

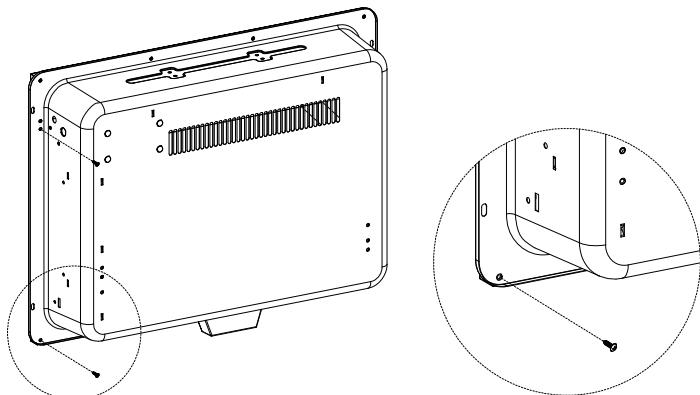


2. Carefully lift the glass front to take it out from the fireplace, and put it on a clean and soft surface to avoid any scratches. Arrange the ember bed (acrylic crystals) along the insert window ledge at the front of the fireplace.

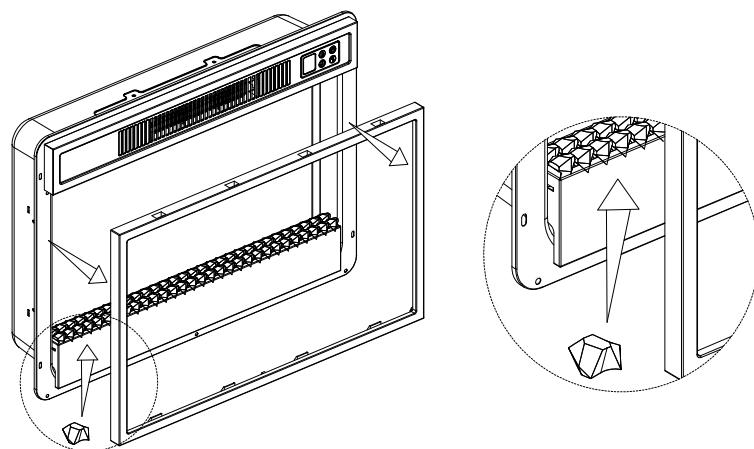



3. Secure the glass front by fastening back 5 screws from the back of fireplace.

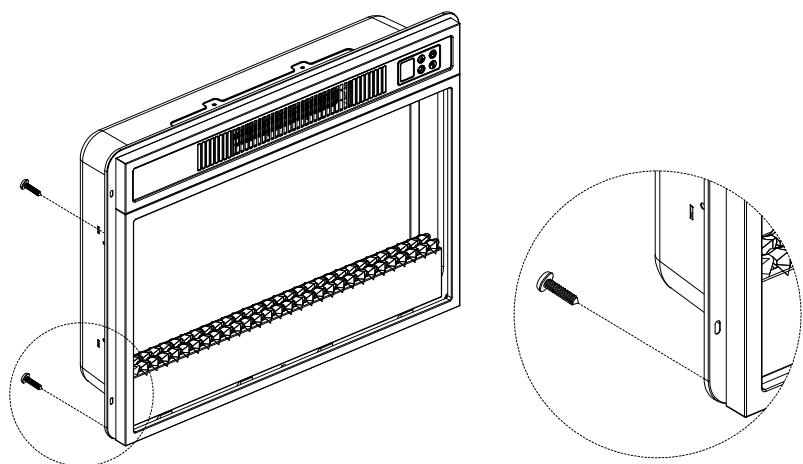

ASSEMBLY INSTRUCTION

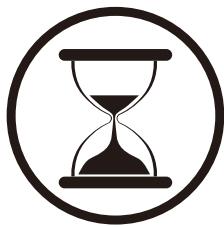

Estimated Time for Assembly
20:00 Mins

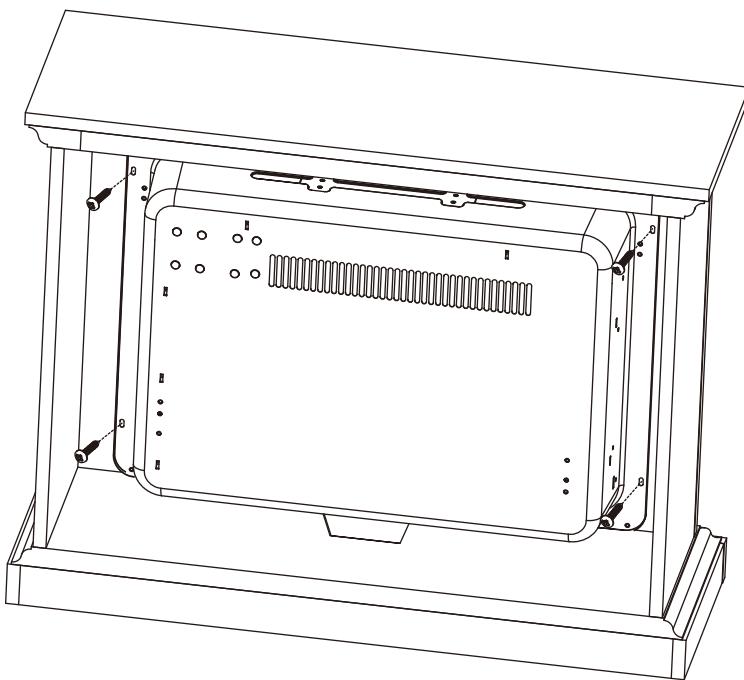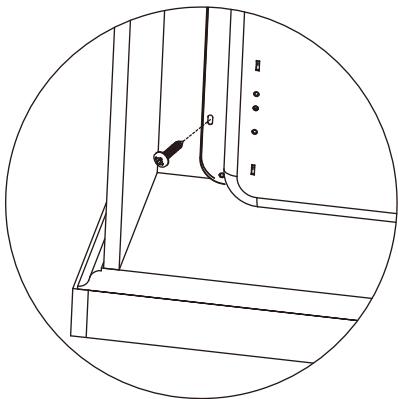

STEP 1

Take out the unit from the box and layout all the spare parts for easy assembly. Make sure all small items are not left in packaging materials.

CAUTION

This unit has a glass front panel. Use extreme caution when handling glass to prevent personal injury or damage.

STEP 2

Carefully set the unit from the back of the mantel and center it in the opening.

Check the alignment and attach the unit of the mantel by inserting screws through the drilled holes on the trim of the mantel.

NOTE: Do not attempt to install the unit from the front of the mantel. It will not fit.

USER INSTRUCTION

Before use

Check that the air intake and exhaust is not covered or obstructed in anyway.

Keep combustible objects at least 3ft(0.9m) away from the unit.

Plug the unit to a grounded power socket.



Grounding

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock.


This unit comes standard with a 6ft (1.8m) long, three wired cord. Always plug the unit into a wall outlet. An extension or relocate tab should never be used.

CAUTION / WARNING

- Improper connection of the equipment grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded.
- DO NOT modify the plug provided with the product nor using any bypass device if the plug does not fit the outlet. Have a proper outlet installed by a qualified electrician.

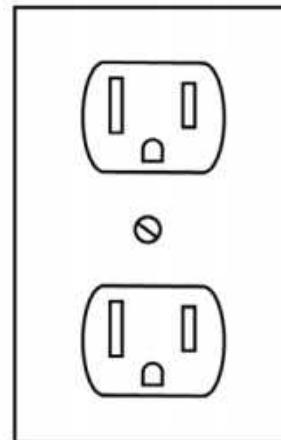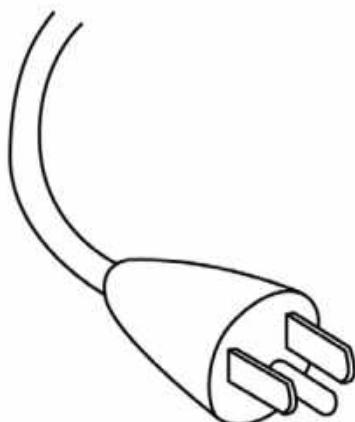

USER INSTRUCTION (CONTROL PANEL)

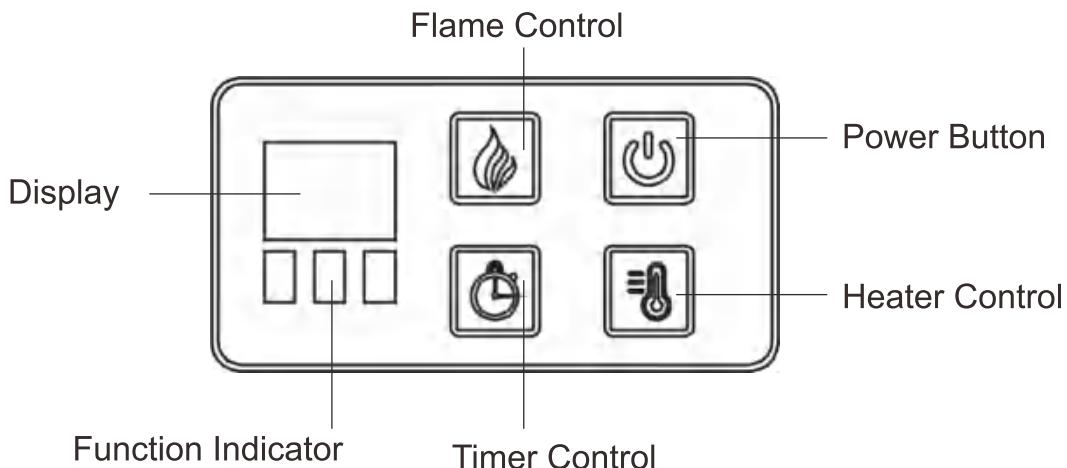

Control Panel

The control panel is located on the top right corner of the unit.

Power ON / OFF

Press the power button to turn on the unit. Press again to turn off the unit.

NOTE: There is a thermostat limiter inside the unit. When the inner temperature is too hot, the unit will automatically turn off to avoid damage to the product or risk of fire.

⚠ CAUTION / WARNING

- DO NOT unplug the unit when it is still “ON”

Flame Control

Press the flame control button manually set flame color. The flame color settings are as follows:

Display	Color
F1	Orange Red
F2	Red
F3	Green
F4	Purple
F5	Cyan
F6	Dodger Blue
F7	Violet
F8	Green Yellow
F9	White
AU	Automatically cycle through all flame colors

NOTE: Flame color is set to F1 (Orange Red) by default.

Brightness Control

Long press the flame button to enter the flame brightness adjustment and control the brightness of the flame display. The brightness Settings are as follows:

Display	Actual Brightness
b1	Brightest
b2	Bright
b3	Medium
b4	Slightly Darker
b5	Darker

NOTE: Flame brightness is set to 100% by default.

Heater Control

Press the heater control to turn on and off the heater.

When the heater is turned on, press and hold the heater control button for 5 seconds to enter temperature adjustment mode. The LED indicator is red. In adjustment mode, the display will flash. There are 22 levels to change Fahrenheit temperature (ON, 62°F - 82°F). After this is set, the display will flash 5 times and exit from setting status.

To switch from degree Fahrenheit to degree Celsius, press and hold the power button for 5 seconds when the heater is turned on. The LED indicator will turn to green. There are 12 levels to change Celsius temperature (ON, 17°C - 27°C). Repeat the same process to convert Celsius to Fahrenheit.

NOTE: Degree Fahrenheit will be displayed in RED and degree Celsius will be displayed in Green.


Timer Control

Press the timer button to turn the timer on.

The timer can set as the table suggested below.

Button Press	Timer Interval	Display
1st press	30 Minutes	30
2nd press	1 Hour	1 h
3rd press	2 Hours	2 h
4th press	3 Hours	3 h
5th press	4 Hours	4 h
6th press	5 Hours	5 h
7th press	6 Hours	6 h
8th press	7 Hours	7 h
9th press	8 Hours	8 h
10th press	OFF	None

USER INSTRUCTION (REMOTE CONTROL)

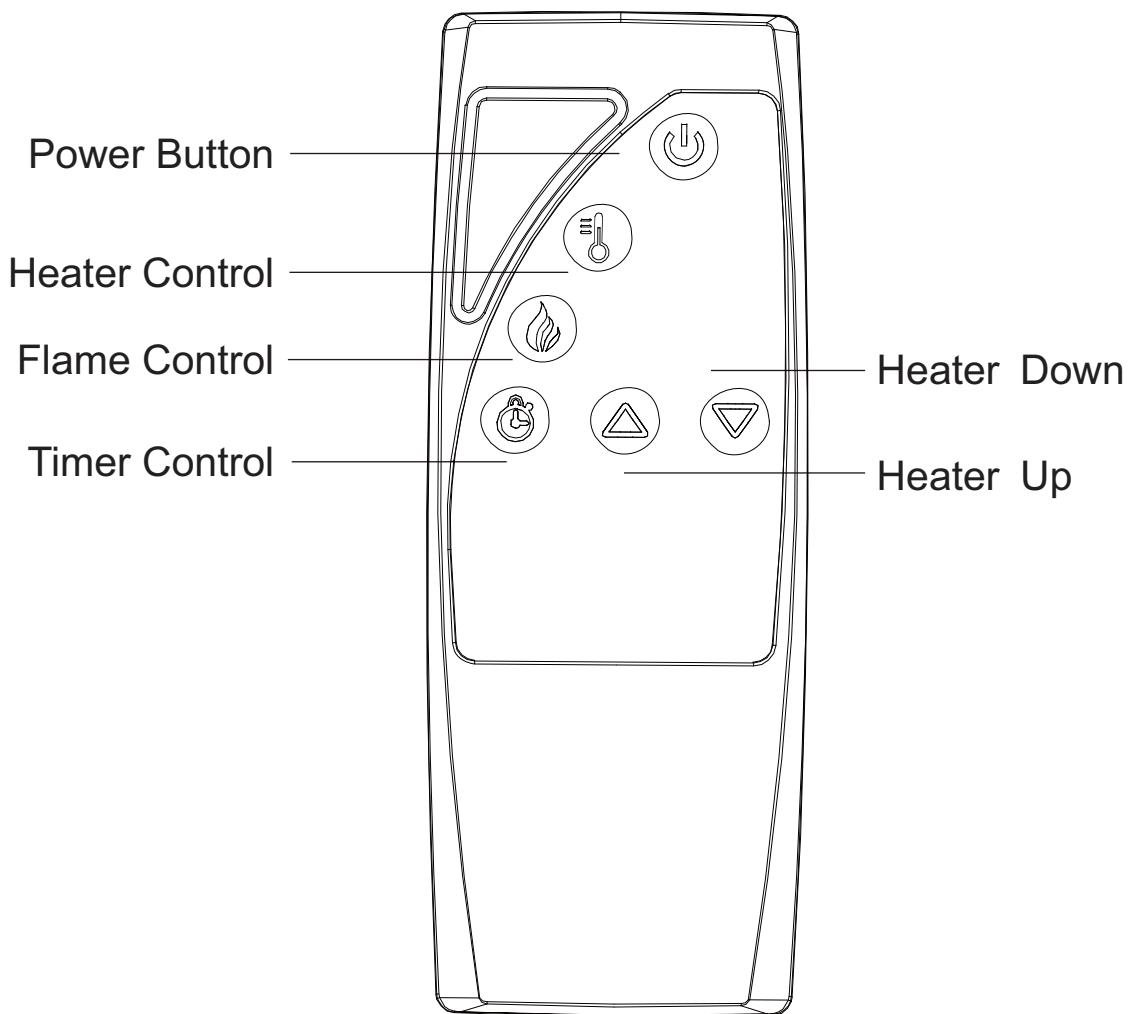

USER INSTRUCTION (REMOTE CONTROL)

Remote Control

The operation of the remote control buttons work the same as the button on the control panel.


NOTE: The remote control cannot be used to switch between degree Fahrenheit and degree Celsius.

Install / Replace Battery

The remote control is provided with a AAA battery. Press down and slide back off the battery compartment. Insert two AAA batteries into the battery compartment making sure that the ends of the batteries with the negative (-) symbols are against the springs in the battery compartment.

To replace the bracket, simply push it into the remote control. Make sure the bracket snaps into position.

NOTE: Remove battery from remote control if not use for an extended period of time. Batteries need to be purchased separately.

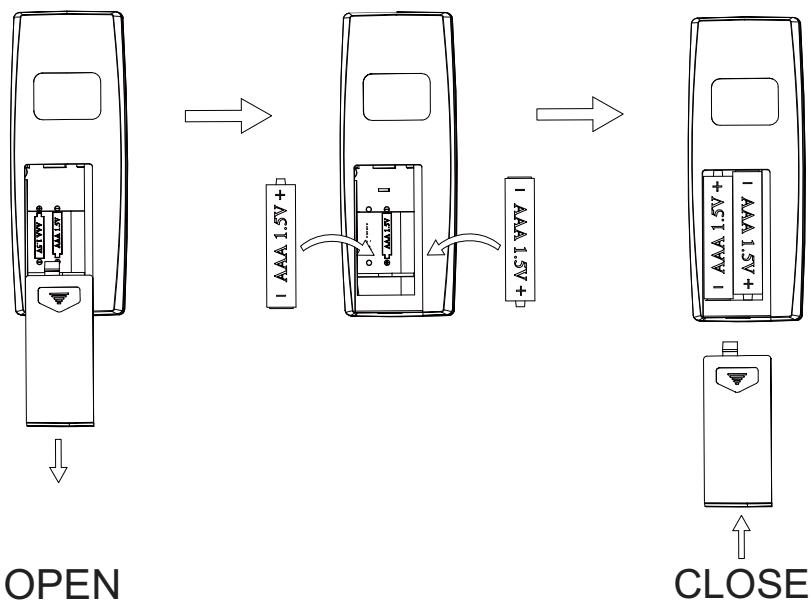

⚠ CAUTION / WARNING

- Dispose old / used battery at a suitable recycling point or according to local regulations.
- DO NOT ingest battery. If accidentally swallowed, seek for medical help immediately.

CARE AND MAINTENANCE

Cleaning the unit:

Always turn off and unplug the unit from power outlet before cleaning. Allow the unit to cool down completely before performing any maintenance or cleaning.

Use a vacuum cleaner or duster to regularly remove any accumulated dust on the unit.

Use a damp soft cloth to clean the surface and buff with a dry cloth. Do not use abrasive cleansers, liquid sprays or any cleaner that could scratch the surface.

TROUBLE SHOOTING

Problem	Solution
The unit does not turn on	Make sure the unit is plugged into a standard 120V grounded power source. Press the power button on the control panel.
Flame effect is on, but there is no flame effect	Open the top and back panel to check if the flame spindle has fallen off from the spindle motor.
The heater does not blow warm air	Make sure the set temperature is higher than the room temperature.
The heater does not work	Turn all switches to OFF and unplug the unit for 5 minutes. Plug the unit back to power and operate as normal.
Error Code E0 shown on the indicator	Press the power button to turn off the machine, then press the power button again to turn it on, then press the heater button again to turn on heating and release the E0 code; If the E0 code still cannot be released. unplug the device from the power supply for 5 minutes and then reinsert it.
Remote control does not work	Use it closer to the unit / change battery.



Return / Damage Claim Instructions

⚠ DO NOT discard the box / original packaging.

In case a return is required, the item must be returned in original box. Without this your return will not be accepted.

⚠ Take a photo of the box markings.

A photo of the markings (text) on the side of the box is required in case a part is needed for replacement. This helps our staff identify your product number to ensure you receive the correct parts.

⚠ Take a photo of the damaged part (if applicable).

A photo of the damage is always required to file a claim and get your replacement or refund processed quickly. Please make sure you have the box even if it is damaged.

⚠ Send us an email with the images requested.

Email us directly from marketplace where your item was purchased with the attached images and a description of your claim.