

CARE AND MAINTENANCE

Cleaning and Care

Caution:

1. All cleaning and maintenance should be done when appliance is cool and with the fuel supply removed.
 2. **DO NOT** clean any part of this appliance in a self-cleaning oven. The extreme heat will damage the finish.
-

Inspecting

This outdoor fire pit should be inspected on a regular basis to ensure product safety and longer product life.

CAUTION: Do NOT attempt to inspect this outdoor fire pit until the fire is COMPLETELY out and the fire pit has cooled.

1. Check handles to make sure they are secure.
 2. Check components for any signs of damage or rust.
 3. If damage to any component is detected, do NOT operate until repairs are completed.
-

Cleaning

This outdoor fire pit should be cleaned on a regular basis to ensure product safety and longer product life.

Note: After repeated use, a slight discoloration of the finish may occur.

CAUTION: Do NOT attempt to clean this outdoor fire pit until the fire is COMPLETELY out and the fire pit has cooled.

CAUTION: Do NOT use oven cleaner or abrasive cleaners as they will damage this product.

CAUTION: Do NOT clean any part of this outdoor fire pit in a self-cleaning oven as it may damage the finish.

1. Wipe exterior surfaces with a mild dishwashing detergent or baking soda.
2. For stubborn stains, use a citrus-based degreaser and a nylon scrubbing brush.
3. Rinse clean with water.
4. Remove built-up creosote from components with a chimney cleaning product.

Tip: Keeping the outdoor fire pit covered when cooled and not in use will help protect it from the elements.

Storage

CAUTION: Do NOT move or store this outdoor fire pit until the fire is COMPLETELY out and the fire pit has cooled.

1. Once the fire is out, embers are cold and outdoor fire pit is cool to the touch, remove and properly dispose of the ashes.
2. Store the outdoor fire pit assembled in a cool, dry location away from children and pets.