



LIMITED LIFETIME WARRANTY

Compass Manufacturing International warrants to the original consumer purchaser that the faucet be free from defects in material and workmanship for as long as the original consumer purchaser owns the home in which the faucet was first installed.

In the event that Freendo Faucets are used in a Commercial Application, this warranty is limited for a period of 5 years, unless otherwise specifically stated in the catalog and/or price book.

Compass Manufacturing International will replace, free of charge, during the applicable warranty period, any part or finish that proves defective in material and/or workmanship under normal installation, use and service. This warranty shall not apply to goods which have been subject to accidents, negligence or improper installation. Compass Manufacturing International will not be liable for other damages or losses, including, but not limited to: labor charges and/or damages incurred in installation, repair or replacement as well as any other kind of loss or damage. Proof of purchase from the original consumer purchaser must be made available for all warranty claims.

Compass Manufacturing International recommends using a professional plumber for all installation and repair. Compass Manufacturing International will, at its discretion, provide new or equivalent replacement parts for any product that proves to be defective under normal usage and service. Replacement parts may be obtained by emailing the address below, calling the number below or by writing to:

Compass Manufacturing International

Freendo Product Service

6702 Enterprise Drive

Louisville, KY 40214

800.626.3525

warranty@cmipproduct.com

Revised 11/11/19

warranty@cmipproduct.com

© Compass Manufacturing International

800.626.3525



Model No. : 192-5889 Polished Chrome
192-5890 Brushed Nickel *Spotless PVD*
192-5891 Oil-Rubbed Bronze



Majestic Single Handle Bathroom Faucet with Pop-Up

Single or 3 Hole Installation



Helpful Information

Helpful Tools

Tools:

Gather the necessary tools as shown below to complete the installation of this faucet. Some may not be needed depending on the model of faucet you are installing.



Plumber's Putty
and/or Silicone



 
Flashlight



Basin Wrench



Safety Glasses

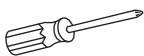

Screwdriver



Pliers



Channel Locks



Adjustable Wrench

Maintenance

Your new faucet is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with a soft, damp cloth. Avoid abrasive cleaners, steel wool and harsh chemicals as these will dull the finish and void your warranty.

Safety Tips

- If you use solder for the installation of this faucet, please remove the seats, cartridges and washers before soldering. Otherwise the warranty will be voided on these parts.
- Protect your eyes with safety glasses when cutting or soldering water supply line.
- Cover your drain to avoid losing parts.

Important Points

Prior to beginning installation, turn off the cold and hot water lines and turn on the old faucet to release built-up pressure. When installing your new faucet, turn the connector nuts finger tight, then use a wrench to anchor the fitting and a second wrench to tighten the nut one additional turn. Connections that are too tight can compromise the integrity of the system. Wrap all threaded connections with teflon tape. Always wrap in a clockwise direction.

5

Troubleshooting


If the instructions were followed carefully and the faucet does not work properly, try these corrective steps.

Problem	Cause	Action
Leaks underneath handle (#3).	Lock nut (#5) has come loose.	Turn off the water supplies. Remove the handle (#3) and trim cap (#4). If the lock nut (#5) is loose tighten it. If the lock nut is tight, remove the lock nut (#5) and cartridge (#6). Verify the O-ring is clean and in proper alignment on the cartridge (#6). If the O-ring is dirty rinse with warm water. Reinstall the O-ring onto the cartridge (#6). Reinstall the cartridge (#6), lock nut (#5), trim cap (#4), and handle (#3).
Water will not shut off completely.	Dirty or damaged cartridge (#6).	Turn off the water supplies. Remove the handle (#3), trim cap (#5), lock nut (#5), and cartridge (#6). Check the ceramic disk for dirt and damage. If the cartridge (#6) is dirty, soak it in warm white vinegar for 4 hours. Every 30 minutes, while the cartridge (#6) is completely submerged, turn the stem on and off 10 times. Replace the cartridge (#6), if damaged. Reinstall the cartridge (#6), lock nut (#5), trim cap (#4), and handle (#3).
The aerator assembly (#8) leaks or has an inconsistent water flow pattern.	The aerator assembly (#8) is dirty or misaligned.	Remove the aerator assembly (#8) and check the rubber packing. If the rubber packing is misaligned, realign the rubber packing and reinstall. If the aerator assembly (#8) is dirty, soak it in warm white vinegar for 30 minutes. Reinstall or replace the aerator assembly (#8).

Have a question? DON'T GO BACK TO THE STORE, WE CAN HELP, just call 1-800-626-3525 ,8 a.m. to 5 p.m. EST Monday-Friday, or send an email to Help@cmiproduct.com.

4


Configuration

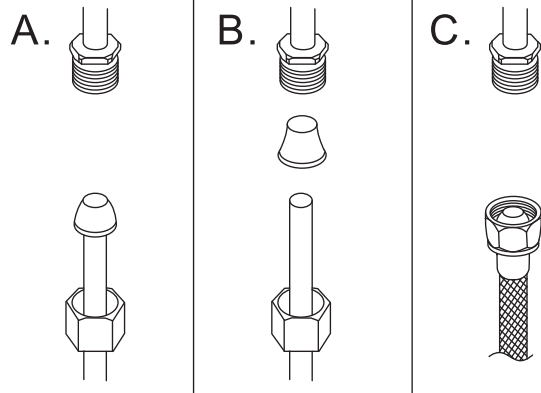

Warning:
The supply valves and
supply lines are not
included.


Connect to water supply lines with either:

- (A) 3/8" O.D. Copper tubing (ball nose risers with the coupling nuts or;
- (B) 3/8" Copper tubing (no ball) with supplied tube head interior connector or;
- (C) IPS faucet connectors (1/2")

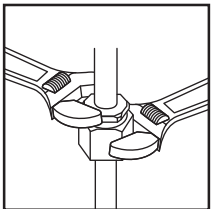

Important:

Tighten connection with two wrenches to prevent damage to tube body. Be careful not to bend the stem as this will void the product warranty.

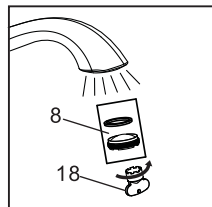


Important:

Remove the aerator assembly (#8), using the aerator wrench (#18). Turn on the hot and cold water for one minute. This will flush any debris from the lines that might clog the system. Turn off the water and reinstall the aerator (#8), using the aerator wrench (#18).

Test system for leaks.

1

Parts Diagram / List

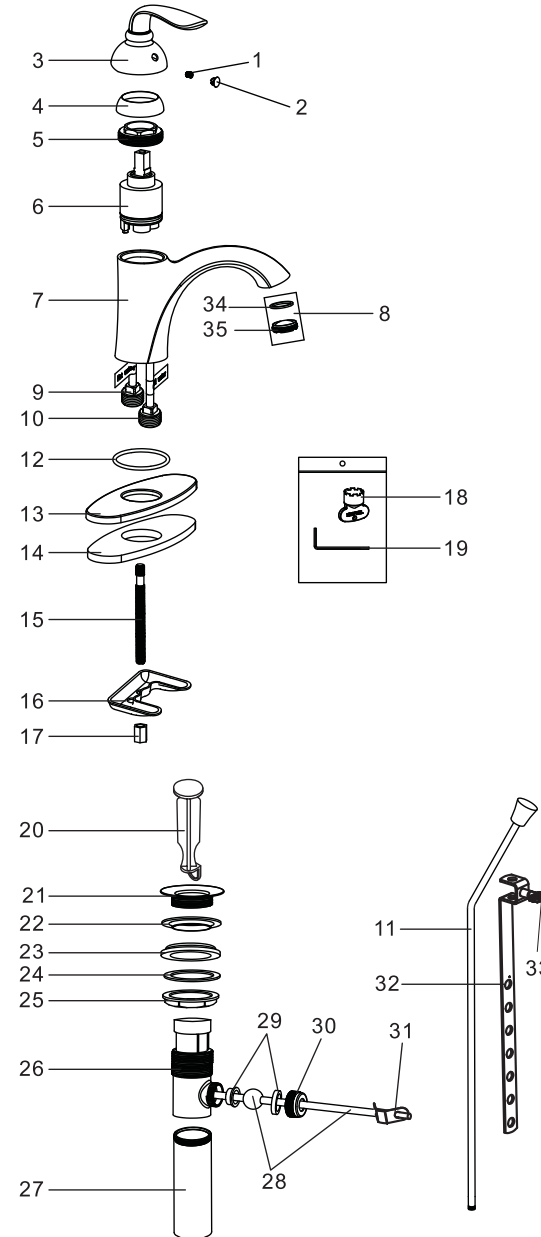


No.	Part Name
1	Screw
2	Index
3	Handle
4	Trim Cap
5	Cartridge Lock Nut
6	Cartridge
7	Body
8	Aerator Assembly
9	Copper tube (Hot)
10	Copper tube (Cold)
11	Lift Rod
12	O-ring
13	Deck Plate
14	Gasket
15	Mounting Bolt
16	Clamp
17	Lock Nut
18	Aerator Wrench
19	Allen Wrench
20	Drain Stopper
21	Flange
22	Top Rubber Washer
23	Bottom Rubber Washer
24	Washer
25	Lock Nut
26	Drain Body
27	Tailpiece
28	Ball Rod
29	Ball Rod Gasket
30	Ball Nut
31	Spring Clip
32	Lift Rod Strap
33	Lift Rod Strap Screw
34	Washer
35	Aerator

2

Installation Instructions

Deck Plate Installation

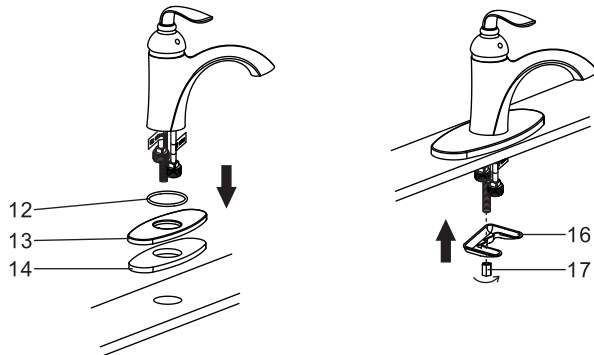


1. Position the faucet, O-ring (#12), deck plate (#13), and gasket (#14) on the countertop in the order shown.
2. Attach the faucet to the countertop using the clamp (#16) and lock nut (#17) with a basin wrench.

DO NOT OVER TIGHTEN.

Add silicone under the gasket (#14) to prevent leaks. (Optional)

Single Hole Installation

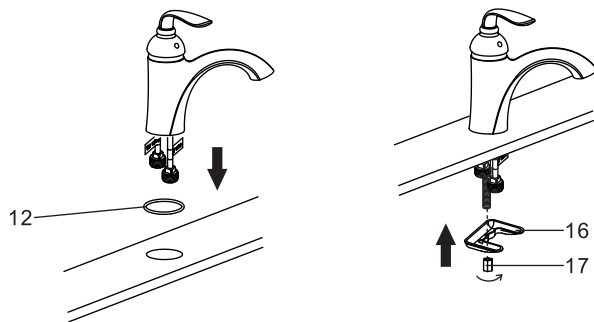


1. Position the faucet and O-ring (#12) on the countertop in the order shown.
2. Attach the faucet to the countertop using the clamp (#16) and lock nut (#17). Tighten the lock nut (#17) with a basin wrench.


DO NOT OVER TIGHTEN.

3

Installation Instructions

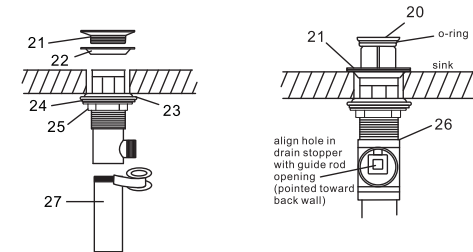

3. Disassemble the drain stopper (#20), flange (#21), and top rubber washer (#22).
4. Insert the drain body (#26) into the drain hole from under the sink. Reinstall the flange (#21) and top rubber washer (#22) to the drain body (#26) and hand tighten.
5. From under the sink, install the bottom rubber washer (#23), washer (#24) and tighten the lock nut (#25) until firmly against the sink base.
6. Disassemble the tailpiece (#27) from the drain body (#26) and apply teflon tape clockwise. Reinstall the tailpiece (#27) to the drain body (#26).
7. Reinstall the drain stopper (#20) into the drain body (#26). Ensure o-ring is in place and align the stopper hole with the guide rod opening, as shown.

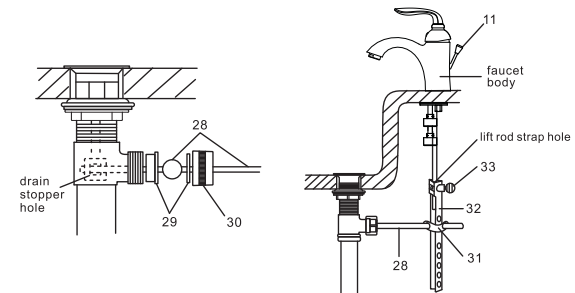

8. Remove ball nut (#30) and ball rod gasket (#29) from the ball rod (#30). Insert ball rod (#30) into the drain body (#26) and the hole in the drain stopper (#20). Reinstall the ball rod gasket (#29) and ball nut (#30).
9. Insert lift rod (#11) through hole on faucet body. Connect ball rod (#28) to lift rod strap (#32) using spring clip (#31) to hold and adjust.
10. Attach lift rod strap (#32) to the lift rod (#11) by inserting the lift rod (#11) through the lift rod strap (#32) hole. Adjust the lift rod (#11) to the correct height and hand tighten the lift rod strap screw (#33).