
MODEL #SF104BK

OUTDOOR BARN LIGHT

Español p. 12

ATTACH YOUR RECEIPT HERE
ADJUNTE SU RECIBO AQUÍ

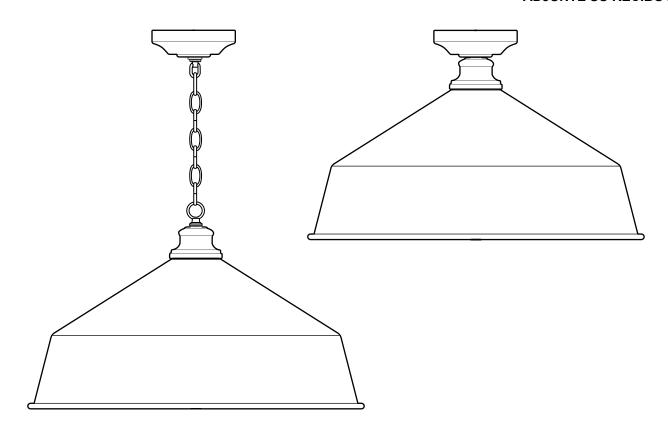



Purchase Date _____


Questions, problems, missing parts? Before returning to your retailer, call our customer service department at **800-527-1292**, 8:30 a.m. - 5 p.m., CST, Monday - Friday.

TABLE OF CONTENTS


Package Contents	2
Hardware Contents	3
Safety Information	3
Preparation	4
Assembly Instructions	
Semi Flush-Style Mounting	6
Pendant-Style Mounting	
Care and Maintenance	11
Troubleshooting	12
Warranty	

PACKAGE CONTENTS

PART	DESCRIPTION Q	UANTITY
Α	Canopy	1
В	Chain	1
С	Mounting Strap	1
D	Threaded Rod (preassembled to mounting strap (C))	1
E	Threaded Ring (preassembled to threaded rod (D))	1
F	Screw Collar Loop (preassembled to threaded rod (D))	1
G	Hex Nut (preassembled to threaded rod (D))	2
Н	Fixture	1
1	Shade	1
J	Connecting Chain Link (preassembled to chain (B))	2
K	Fixture Loop (preassembled to chain (B))	1
L	Fixture Ring (preassembled to fixture (H))	1
М	Mounting Plate (preassembled to mounting plate canopy (O))	1
N	Mounting Plate Screws (preassembled to mounting plate canopy (O))	2
0	Mounting Plate Canopy	1

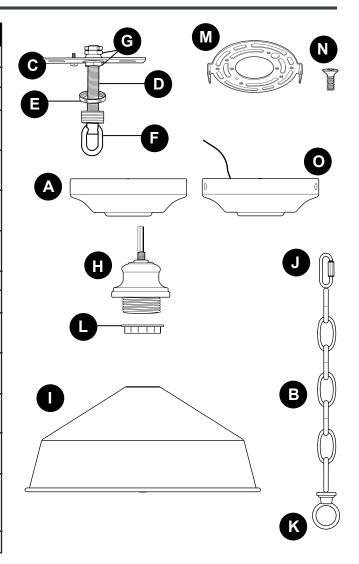

HARDWARE CONTENTS (shown actual size)

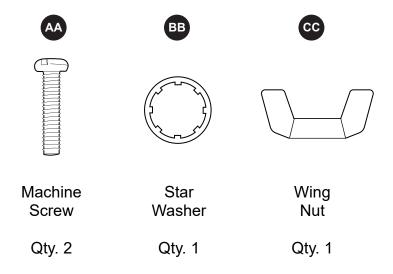



SAFETY INFORMATION

READ AND SAVE THESE INSTRUCTIONS.



DANGER

- For your protection and safety, carefully read and understand the information provided in this manual completely before attempting to assemble, install or operate this product. Failure to do so could lead to electrical shock, fire or other injuries that could be hazardous or even fatal.
- DO NOT connect this fixture to an electrical system that does not provide a means for equipment grounding. Never use a fixture in a two-wire system that is not grounded. Installing a fixture into an electrical system not having a proper grounding means could cause metal parts of the fixture to carry electrical currents if any of the fixture wires, wire connections or splices were to become broken, cut or loose during the mounting or normal operation of the fixture. Under this condition, anyone coming in contact with the fixture would be subject to electrical shock, which could cause serious injury or death.
- DO NOT connect the bare or green insulation fixture ground wire to the black (HOT) current-carrying wire or the white (NEUTRAL) house wire. Connection of the bare or green fixture ground wire to the black or white house wires may cause metal parts of the fixture to carry electrical currents. Under this condition anyone coming in contact with the fixture will receive electrical shock, which could cause serious injury or death.
- DO NOT damage or cut the wire insulation (covering) during installation of fixture. DO NOT permit wires to contact any surface having a sharp edge. To do so may damage or cut the wire insulation, which could cause serious injury or death from electrical shock.



WARNING

- All electrical connections must be in agreement with local codes and ordinances, the National Electric Code (NEC) and ANSI/NFPA 70-1999. Contact your municipal building department to learn about your local codes, permits and/or inspections. Risk of fire - most dwellings built before 1985 have supply wire rated for 140 °F. Consult a qualified electrician before installation.
- To avoid personal injury, the use of gloves may be necessary while handling fixture parts with sharp edges.



WARNING

- DO NOT suspend any fixture by the house wires. A fixture must always be mounted directly to an outlet box or to a mounting strap which is first attached to the outlet box. All fixtures must be mounted to an outlet box that is supported by the building structure. Wire connectors will not support the weight of a fixture. Suspending a fixture by the house wires and wire connectors will result in the fixture falling, with the possibility of personal injury and the danger of electrical shock or fire.
- To reduce the risk of fire, electrical shock, or personal injury, wire connectors provided with this light fixture are designed to accept only one 12-gauge house wire and two lead wires from the light fixture. If your house wire is larger than 12-gauge or there is more than one house wire to connect to the corresponding fixture lead wires, consult an electrician for the proper size wire connectors to use.

A CAUTION

- TURN OFF ELECTRICITY at main fuse box (or circuit breaker box) before beginning installation by removing the fuse (or switching the circuit breaker off).
- If you are not sure the lighting system has a grounding means, DO NOT attempt to install this fixture. Contact a qualified, licensed electrician for information regarding the proper grounding methods as required by the local electrical code in your area.
- DO NOT use a bulb having a wattage greater than the maximum value stated on the fixture. The use of a bulb with higher wattage than specified will increase temperatures and risk of fire.
- If a dimmer control switch is used with this fixture, obtain professional advice to determine the correct type to use as well as the electrical rating required.
- All fixtures must be mounted to an outlet box that is supported by the building structure.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 30-45 minutes

Tools Required for Assembly (not included): Flathead screwdriver, Phillips screwdriver, wire strippers, pliers, wire cutters, safety glasses, stepladder, electrical tape


Helpful Tools (not included): A/C tester light, do-it-yourself guide, soft cloth


ASSEMBLY INSTRUCTIONS

1. Turn off circuit breakers and wall switch to the fixture supply line leads.

DANGER: Failure to disconnect power supply prior to installation may result in serious injury or death.

Remove existing fixture and disconnect all electrical wiring.

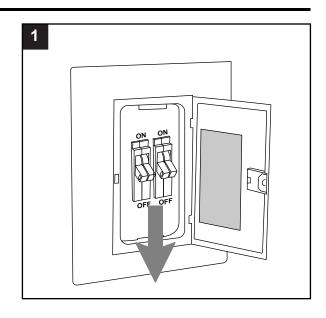

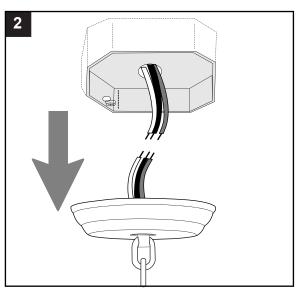


3. Determine if you wish to use the fixture as a semi-flush or as a pendant.

If you wish to use the fixture as a pendant, skip to page 8.

If you wish to use the fixture as a semi flush, continue the installation with the mounting plate canopy (O).


NOTE: Identify mounting plate canopy (O) by the drawing shown on the right.

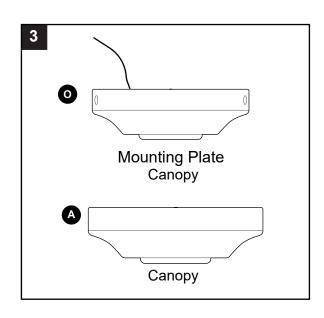

SEMI FLUSH-STYLE MOUNTING

4. Remove mounting plate (M) from mounting plate canopy (O) by removing mounting plate screws (N) from the edges of the mounting plate canopy (O).

Save mounting plate screws (N) for later use.

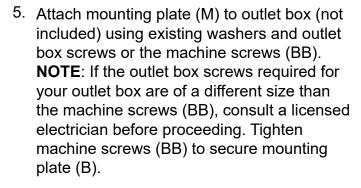

CAUTION: The fixture must be mounted to an outlet box that is supported by the building structure. Plastic outlet boxes are not recommended.

Hardware Used





Machine Screw




x 2

 Take the lead wires and start at the TOP of the fixture (H) and measure 8 in. of lead wire, and then cut the excess wire off with wire cutters (not included).

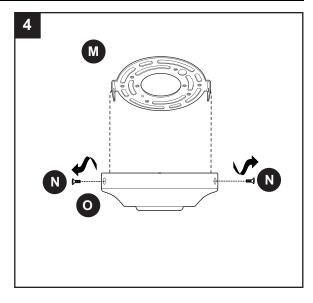

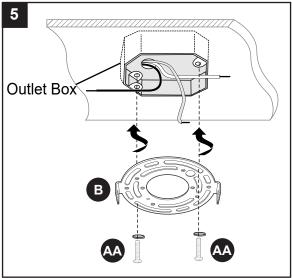

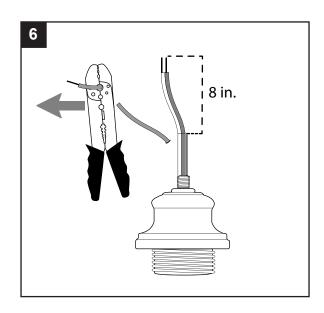


7. Remove fixture ring (L) from fixture (H).

Insert fixture (H) through hole on shade (I). Place fixture ring (L) on bottom of fixture (H) and twist until secure.

8. Feed wiring up through hole at bottom of mounting plate canopy (O),star washer (CC) and wing nut (DD). Twist wing nut (DD) to secure.


Continue to the wiring instructions on page 10, step 7.


Hardware Used

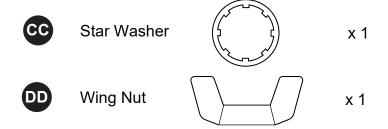


9. Attach fixture (H) to mounting plate (M) and mounting plate canopy (O) using the mounting plate screws (C) previously removed (Step 3, Page 6).

NOTE: Before tightening mounting plate screws (N) completely, use level (not included) to check fixture (H) -- adjust if necessary.

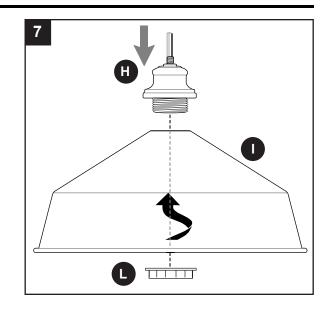

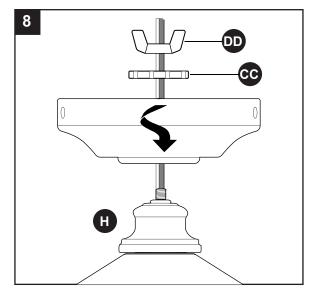

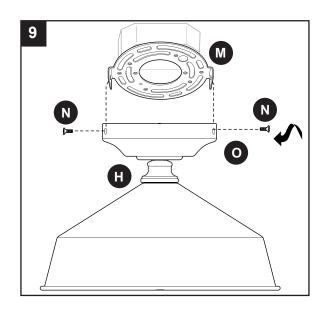

Attach mounting strap (C) to outlet box (not included) using the existing washers and outlet box screws or the machine screws (BB).
 NOTE: If the outlet box screws required for your outlet box are of a different size than the machine screws (BB), consult with a licensed electrician before proceeding. Tighten machine screws (BB) completely to secure mounting strap (C).

CAUTION: The fixture must be mounted to an outlet box that is supported by the building structure. Plastic outlet boxes are not recommended.


Hardware Used



Machine Screw



x 2

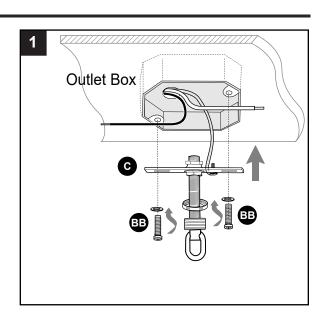


Remove threaded ring (E) from screw collar loop (F) and save for later use.


Temporarily place canopy (A) over mounting strap (C) to determine amount of adjustment necessary for threaded rod (D).


NOTE: Canopy (A) should fit flush against ceiling when mounted. Once threaded rod (D) is adjusted, tighten hex nuts (G) securely against mounting strap (C).

 Set canopy (A) aside.




Hook the other connecting chain link (J) to the screw collar loop (F) at the bottom of threaded rod (D) on mounting strap (C)--leave this connecting chain link (J) open for now.

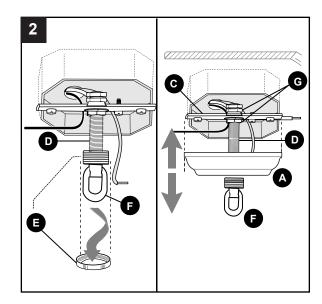

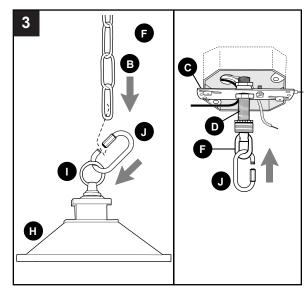


4. Determine the hanging length for fixture (H). Use pliers, a flathead screwdriver and a soft cloth (all not included) to open the link of chain (B) at length chosen. Remove any extra chain (B) at this time.

 
Feed wiring from fixture (H) up through chain (B) to pre-determined length.




 
Lift chain (B) toward screw collar loop (F) and hang chain (B) on connecting chain link (J). Close connecting chain link (J).



Prepare wire by stripping 3/4 in. of insulation from wire ends using wire strippers (not included).

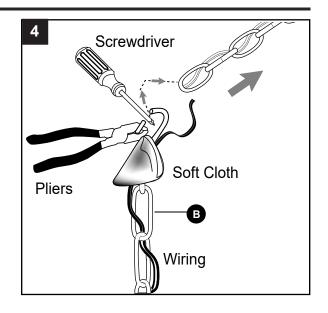

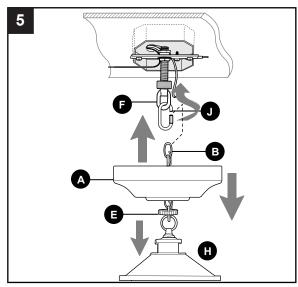

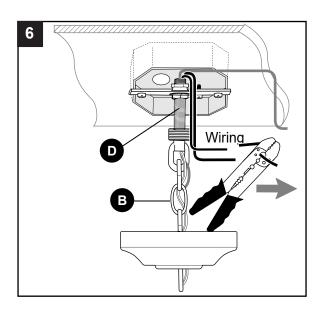

7. Connect BARE/GREEN ground wire from outlet box to BARE ground wire from fixture (H) or mounting plate canopy (O) with lever wire connector by lifting the lever of the connector up, inserting the wire into the connector and dropping the lever back down to lock the connection. Connect one of the wires from fixture (H) to the BLACK wire from outlet box using existing wire connector or preassembled lever wire connector. Connect the other wire from fixture (H) to the WHITE wire from outlet box using existing wire connector or preassembled lever wire connector.

NOTE: GENTLY pull on wires to confirm the lock is engaged.

NOTE: If outlet box does not have a BARE/GREEN wire, the BARE ground wire from fixture (H) should be attached to the GREEN SCREW (labeled GND) on mounting strap (C).


WARNING: Never connect ground wire to WHITE or BLACK power supply wires.


▲ WARNING: To reduce the risk of fire, electrical shock or personal injury, preassembled lever wire connectors are designed to accept only one 12-gauge house wire and two lead wires from the light fixture. If your house wire is larger than 12-gauge or there is more than one house wire to connect to the corresponding fixture lead wires, consult an electrician for the proper size wire connectors to use.

8. Wrap electrical tape (not included) around each individual preassembled wire connector down to the wire.

A WARNING: Make sure no bare wire or wire strands are visible after making connections.


Push preassembled lever wire connectors gently back into outlet box. Carefully push excess wiring into outlet box.

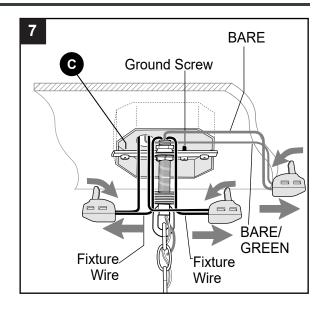

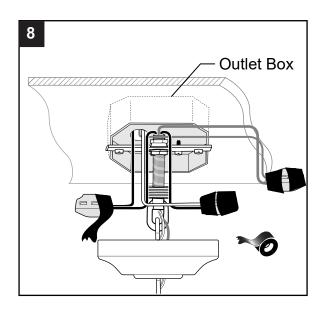

9. Carefully arrange excess wiring and wire connectors (AA) within outlet box.

Slide canopy (A) and threaded ring (E) up the chain (B). Secure canopy (A) to mounting strap (C) by tightening the threaded ring (E).

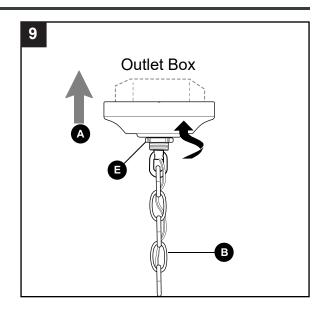


 Install one 60-watt max. standard-base incandescent bulb (not included) or CFL/LED equivalent.

A CAUTION: When replacing bulb, please allow bulb and shade to cool down before touching.

Restore power and test fixture (H).

If light does not function, please refer to TROUBLESHOOTING below.

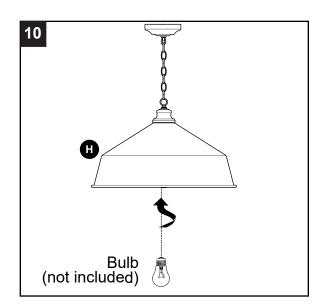

CARE AND MAINTENANCE

• Shut off main power supply. Wipe fixture with a soft, damp cloth. Do not use an abrasive cleaner on fixture.

TROUBLESHOOTING



WARNING: Before beginning work, shut off the power supply to avoid electrical shock.

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Bulb will not light.	 Power is OFF. Faulty connection. Bulb is burned out. 	 Make sure power supply is ON. Check wiring and all connections. Replace bulb.
Fuse blows out or circuit breaker trips.	Crossed wires. Power wire is grounding out.	Check wiring. Check all connections.

WARRANTY

The distributor warrants all of its lighting fixtures against defects in materials and workmanship for five (5) years from the date of purchase. If within this period the product is found to be defective, take a copy of the bill of sale as a proof of purchase and the product in its original carton to the place of purchase. The distributor will, at its option, repair, replace or refund the purchase price to the consumer. All costs of installation and removal of the fixture is the responsibility of the consumer. This warranty does not cover fixtures becoming defective due to misuse, accidental damage or improper handling and/or installation and specifically excludes liability for direct, incidental or consequential damages, improper packaging of returned products and acts of God. As some states do not allow exclusions of limitations on an implied warranty, the above exclusion and limitation may not apply. This warranty gives you specific rights and you may also have other rights which may vary from state to state.