

Operating Instructions and Manual




SAVE THESE INSTRUCTIONS: Read this instruction manual carefully before installation and use. Keep this manual for future use in case it is needed.

Model H1016

Wall Mount Patio Heater



WARNING: Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.

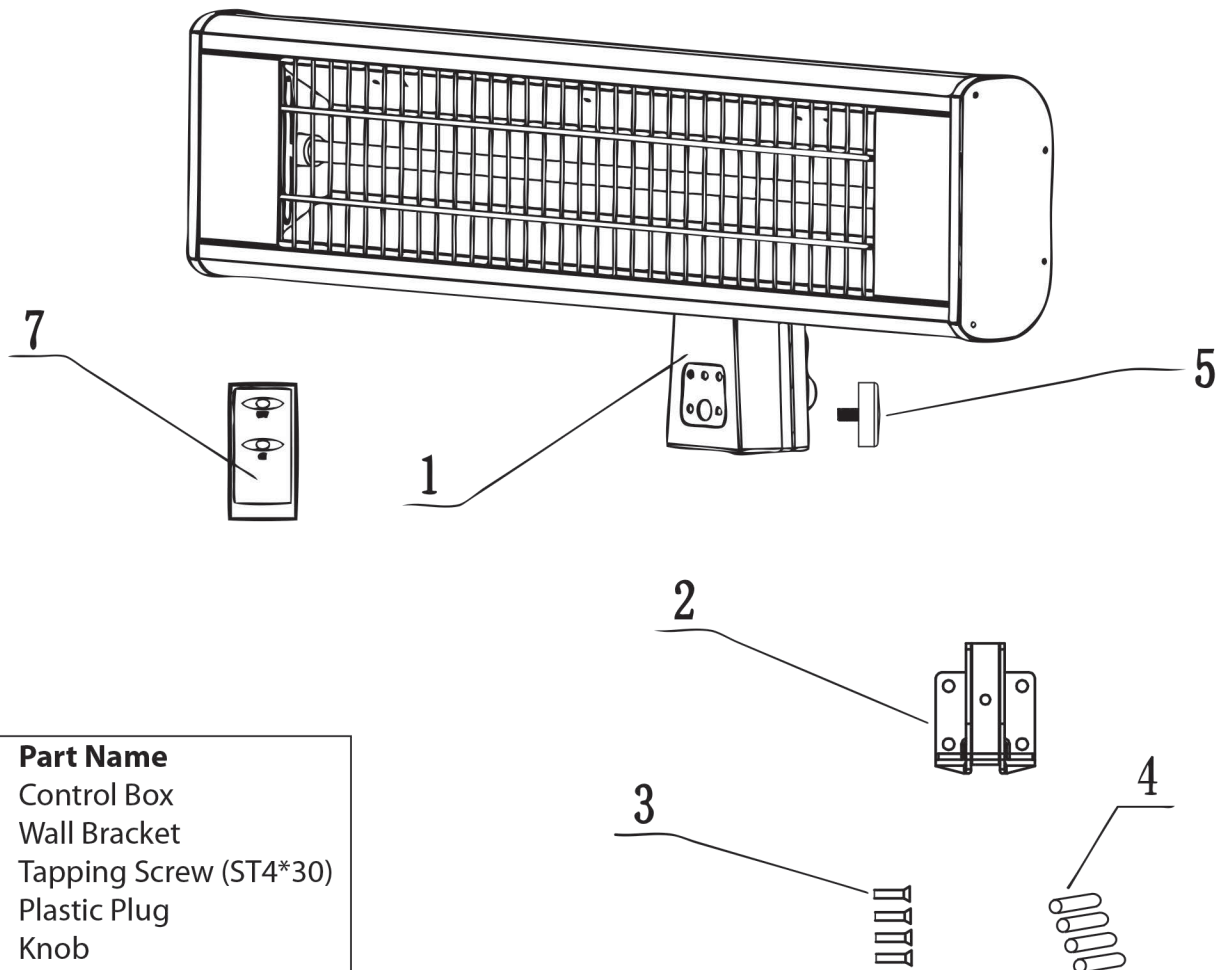

PARTS LIST

No.	Part Name
1	Control Box
2	Wall Bracket
3	Tapping Screw (ST4*30)
4	Plastic Plug
5	Knob
6	Power Supply Cord ■
7	Remote Control•


- Not pictured
- Remote requires (2) AAA batteries, not included.

PREPARATION

1. Unpack the carton. Ensure all parts outlined in the Parts List are included. If anything is missing, please contact Customer Service at (800) 433-1626.
2. You will need a Phillips head screw driver, a drill, and a 7/32" drill bit for the assembly of the product.
3. Read this instruction manual carefully before installation and use. Keep this instruction manual for future use in case it is needed.

INSTALLATION

1. Drill four (4) holes positioned as shown in the figure. Insert Plastic Plugs (#4) into the holes respectively. Align Wall Bracket (#2) with the holes and then attach using Tapping Screw (#3).
2. Insert Wall Bracket (Section A) into the hole (Section C) of Control Box (#1).
3. Insert knob (#5) through hole at rear of Control Box (#1) and Wall Bracket (#2), then tighten securely to fasten Control Box and Wall Bracket together.
5. To reduce the risk of fire, do not store or use gasoline or other flammable vapors and liquids in the vicinity of the heater.


6.  **CAUTION - High temperature, risk of fire.** Keep electrical cords, drapery, furnishings, and other combustibles at least 3 feet (0.9m) from the front of the heater and away from the side and rear.

OPERATION

1. The heater must be properly installed before it is used. Plug the unit into a GFCI-protected wall socket. Ensure the power being used is 120VAC.
2. Press the "On" button on the remote control or on the control panel to turn on the heater. When on, the blue indicator light will stay solid.
3. To switch off the heater, press the "Off" button on the control panel or on the remote control. This will shift the appliance into Standby status and the blue indicator light will start flashing.


MAINTENANCE AND CLEANING

1. Before cleaning, make sure the power has been turned off at the circuit breaker panel and that the heating element of the heater is cool.
2. To maintain the external appearance of the heater, wipe it occasionally with a dry duster. During the summer months, or at other times when the appliance is not in use and is completely cold, wipe the unit with a damp cloth. Store the cord, total heater, and the like in a cool place when not in use.
3. Do not use abraasive cleaning powders or furniture polish. Do not use chemical or abraasive products such as metallic scourers, which may deteriorate the surface, to clean the appliance.
4. All other servicing should be performed by qualified service personnel.
5. Do not disassemble when cleaning.

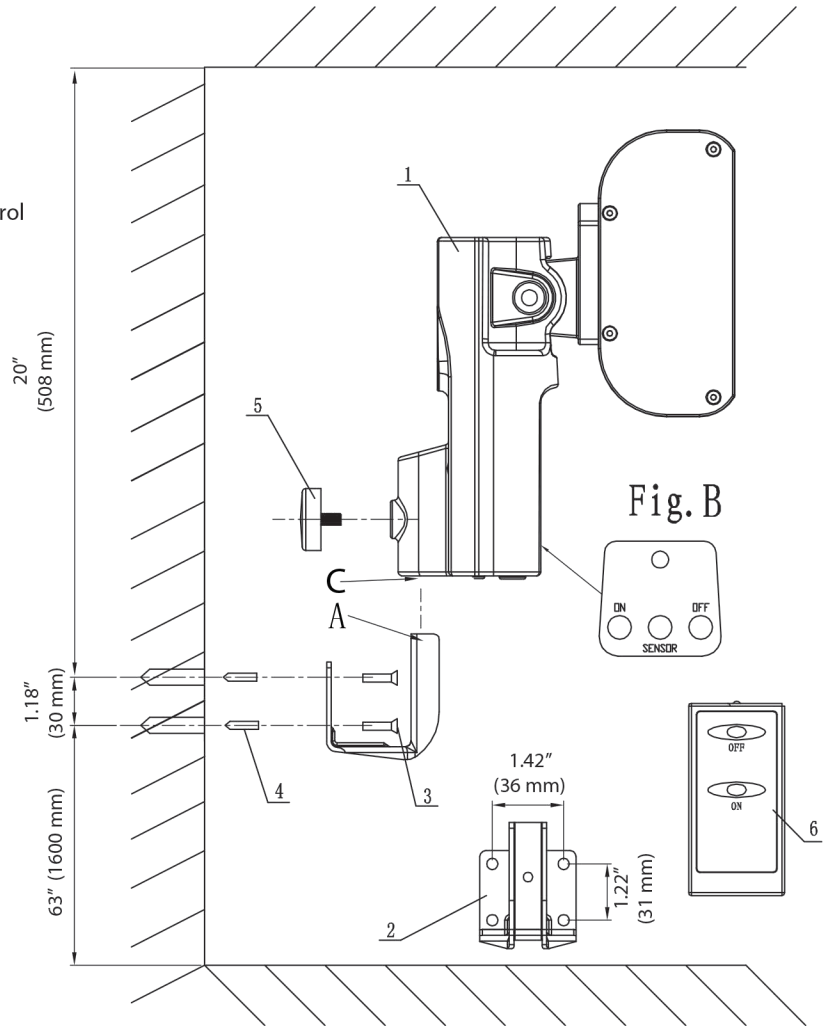

IMPORTANT INSTRUCTIONS


When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before installing or using this heater.
2. Extreme caution is necessary when any heater is used by or near children or mentally impaired and whenever the heater is left operating and unattended.
3. Do not operate any heater after it malfunctions. Disconnect power at service panel and have heater inspected by a reputable electrician before reusing.
4. Do not insert or allow foreign objects to enter any ventilation or exhaust openings as this may cause an electric shock or fire, or damage the heater.
5. To prevent a possible fire, do not block air intakes or exhaust in any manner.
6. A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable vapors or liquids are used or stored.
7. The unit must be placed with a clearance of 40in to the sidewalls and 12in to the ceiling.
8. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. High temperature, keep combustible material such as furniture, pillows, bedding, paper, clothes, curtains at least 3 feet (0.9m) from the front of the heater and away from the side and rear.
9. The unit is at high temperature during operation. It stays hot for a period after shut down. Potential danger would occur when touching it during this period.
10. Do not place the unit close to curtains and/or other flammable objects. Otherwise there will be a danger of catching fire.
11. Do not cover the unit with anything during operation or a short time after shut down.
12. Do not wrap the power supply cord on the unit.
13. The unit must be handled with care. Avoid vibration or hitting the unit.
14. The unit must be securely grounded during operation.
15. When damaged, the unit must be repaired by a professional repairing team.
16. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
17. The heater must not be located immediately below a socket-outlet.
18. When assembling, keep clear from any board or flammable material.
19. Do not use this heater with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
20. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
21. Children should be supervised to ensure that they do not play with the appliance.
22. The unit is for household use only. Do not use outdoors. It is not for use in building sites, greenhouses, barns or stables where there is flammable dust.
23. The head of the unit is at high temperature during operation. Unplug the unit and wait until it is cool before cleaning.
24. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
25. Do not use this unit in a place where causticity or volatile air exists, i.e. dust, steam, gas, etc.
26. Do not use this unit as a cloth dryer or towel dryer.
27. Do not use this unit as a sauna heater.
28. Do not use this unit as a room heater of heat storing.
29. Do not use this unit in a place of animal propagating and raising.
30. Do not use this unit in the heating system of a hot air centre.
31. Do not immerse this unit into water for cleaning.
32. The unit should be plugged in a socket which is easily visible and reachable.
33. Two dark points may exist on the surface of the heating element and may turn white during the first few minutes after it's turned on. This is normal, and may not affect the performance of the unit.
34. To avoid potential fire hazards, never place your heater or its electrical cord under rugs or carpeting. Place the electrical cord away from busy areas to avoid accidental tripping and contact.
35. To disconnect heater, turn controls to off, and turn off power to heater circuit at main disconnect panel, then remove plug from outlet.
36. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
37. Surface temperatures become very hot when operating heater. Children and adults should stay away to avoid burns or clothing ignition.
38. Young children should be carefully supervised when they are in the area of the heater.
39.  **CAUTION: MOUNT WITH BOTTOM OF HEATER AT LEAST 95IN ABOVE THE FLOOR OR GRADE.**

SAVE THESE INSTRUCTIONS.

GROUNDING

This heater is for use with 120 VAC only. The cord has a plug as shown in Figure A below. An adapter, shown in Figure C below, must be used for connecting the three-blade plug to a two-slot receptacle. The green grounding lug extending from the adapter must be connected to a permanent ground, such as a properly grounded outlet box. The adapter should not be used if a three-slot grounded receptacle is available.

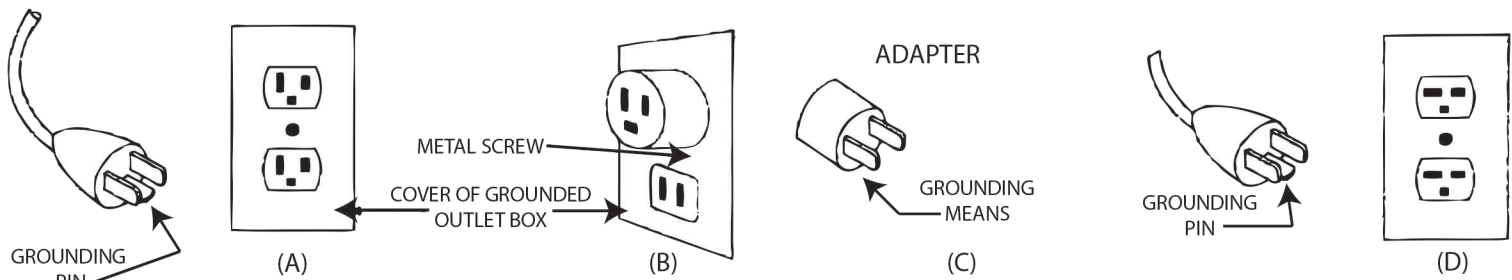

VENTAMATIC, LTD. LIMITED WARRANTY

Ventamatic, Ltd. extends this warranty to the original retail purchaser of this heater.

The heater is warranted against defects in materials and workmanship for a period of one (1) year from the date of original retail purchase. No other parts or components are warranted. There is no warranty for defects caused by abuse. Repairs or replacement parts supplied under this warranty are warranted only for the period of this warranty; that is, one (1) year from the date of the original retail purchase of the unit. In the event of a defect or malfunction, we will replace or repair the defective part or component only and return the new or repaired part to you freight prepaid. You must bear all other expenses incurred in obtaining repairs, including labor required for field repair or replacement, and the cost of shipping the defective part to us. You must also bear the cost of repair to or replacement of any part or component and the shipping charges incurred for the repair or replacement and return to you of any part or component not covered by this warranty, including parts or components damaged by you.

The company reserves the right to demand and receive written evidence of the date of purchase before undertaking to perform its obligations under this warranty. You should, therefore, retain your sales slip and attach a copy of it to the warranty claim.

In order to obtain the repair or replacement of this unit, you must select one of the following methods:

A. Return to factory.

Return postage prepaid only the part or component which you believe to be defective to the following address:

Ventamatic, Ltd
100 Washington Street
Mineral Wells, TX 76067

Complete and enclose a written claim and attach a copy of your sales slip or other proof of purchase.

B. Return to retail dealer.

There is no informal dispute settling mechanism available in the event of a controversy involving this warranty.

Any and all implied warranties which may exist terminate upon the expiration of this warranty one (1) year from the date of the original retail purchase. Some states do not allow limitations on how long an implied warranty lasts, so this limitation may not apply to you.

Ventamatic, Ltd. is not liable to you for incidental or consequential damages arising out of a defect or malfunction of a unit or its installation or out of any alleged breach of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.