


# INSTALLATION & USER MANUAL

## CEILING FAN WITH LIGHT

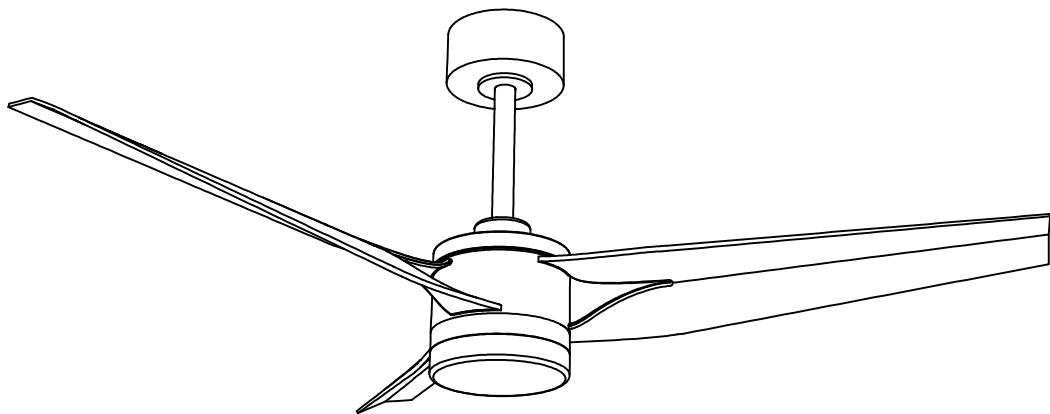

Customer Service: [support@breezary.com](mailto:support@breezary.com)

ITEM#23047

# Table of Contents

Table Of Contents.....	2	Exploded View.....	4
Safety Information.....	2	Installation Instructions.....	5-12
Dimension Reference.....	3	Troubleshooting Guide.....	13
Hardware Included.....	3	Balancing Kit.....	14
Fan Parts Included.....	3		

## Safety Information

### READ AND SAVE THESE INSTRUCTIONS.

1. To reduce the risk of electric shock, ensure electricity has been turned off at the circuit breaker or fuse box before you begin.
2. All wiring must be in accordance with the National Electrical Code "ANSI/NFPA 70" and local electrical codes. Electrical installation should be operated by a qualified licensed electrician.
3. The outlet box and support structure must be securely mounted and capable of reliably supporting a minimum of 35 lbs (15.9 kg). Use only UL Listed outlet boxes marked "Acceptable for Fan Support of 35 lbs. (15.9 kg) or less."
4. Do not place objects in the path of the blades.
5. To clean the fixture, turn off the power, wait for it to cool, and wipe the fixture with a clean, soft cloth.
6. After making electrical connections, spliced conductors should be turned upward and pushed carefully up into the outlet box. The wires should be spread apart with the grounded conductor and the equipment grounding conductor on one side of the outlet box and ungrounded conductor on the other side of the outlet box.
7. All set screws must be checked and tightened where necessary before installation.



**WARNING:** To reduce the risk of electrical shock or fire, not use this fan with any solid-state fan speed control device. It will permanently damage the electronic circuitry.



**WARNING:** To reduce the risk of personal injury, do not bend the blade brackets when installing the rackets balancing the blades, or cleaning the fan.



**WARNING:** To reduce the risk of fire, electric shock or personal injury, mount to outlet box marked "acceptable for fan support of 35 lbs. (15.9 Kg) or less" and use screws provided with the outlet box.



**WARNING:** To avoid possible electrical shock, turn the electricity off at the main fuse box before wiring.



**WARNING:** To reduce the risk of electrical shock, this must be installed with an isolating wall control / switch.



**CAUTION:** To reduce the risk of personal injury, use only the screws provided with the outlet box.




**CAUTION:** Please use carefully when working around or cleaning the fan to avoid injury or damage of fan.



**CAUTION:** The fan must be mounted with a minimum of 7 ft (2.1 m) clearance from the trailing edge of the blades to the floor.




**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

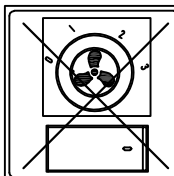

**CAUTION:** It is recommended that when installing a fan light, there is already a regulator at home, and the controller cannot be connected together.





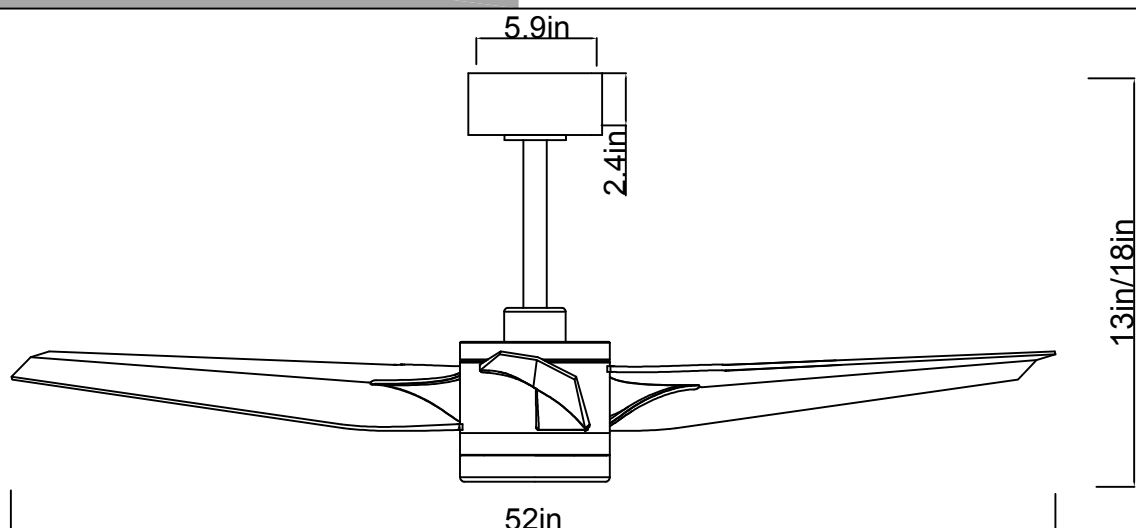







## Dimension Reference

   


## Hardware Included

			Hardware Package	Quantity
	S1		S6	
	S2		S7	
	S3		S8	
	S4		S9	
	S5		S10	
			S1. Wire Connector	5
			S2. Wood Screw	4
			S3. Expansion Screw	2
			S4. Sponge Pad	2
			S5. Balanced Patch	1
			S6. Spring Washer	2
			S7. Threaded Screw	2
			S8. Fan Blade Screw	10
			S9. Balance Clip	1
			S10. Gloves	1

## Fan Parts Included

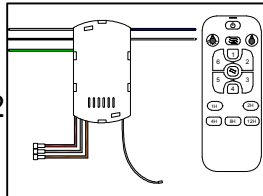			Name	Quantity
1		6		
2		7		
3		8		
4		9		
5		10		
		11		
		12		
			(Batteries Not Included)	
			1. Hanger Bracket	1
			2. Short Down Rod	1
			3. Long Down Rod	1
			4. Canopy	1
			5. Decorative Cover	1
			6. Motor And Housing	1
			7. Motor Cover	1
			8. Lamp Housing	1
			9. LED	1
			10. Lampshade	1
			11. Fan Blades	3
			12. Remote Control	1
			(Batteries Not Included)	


# Exploded View

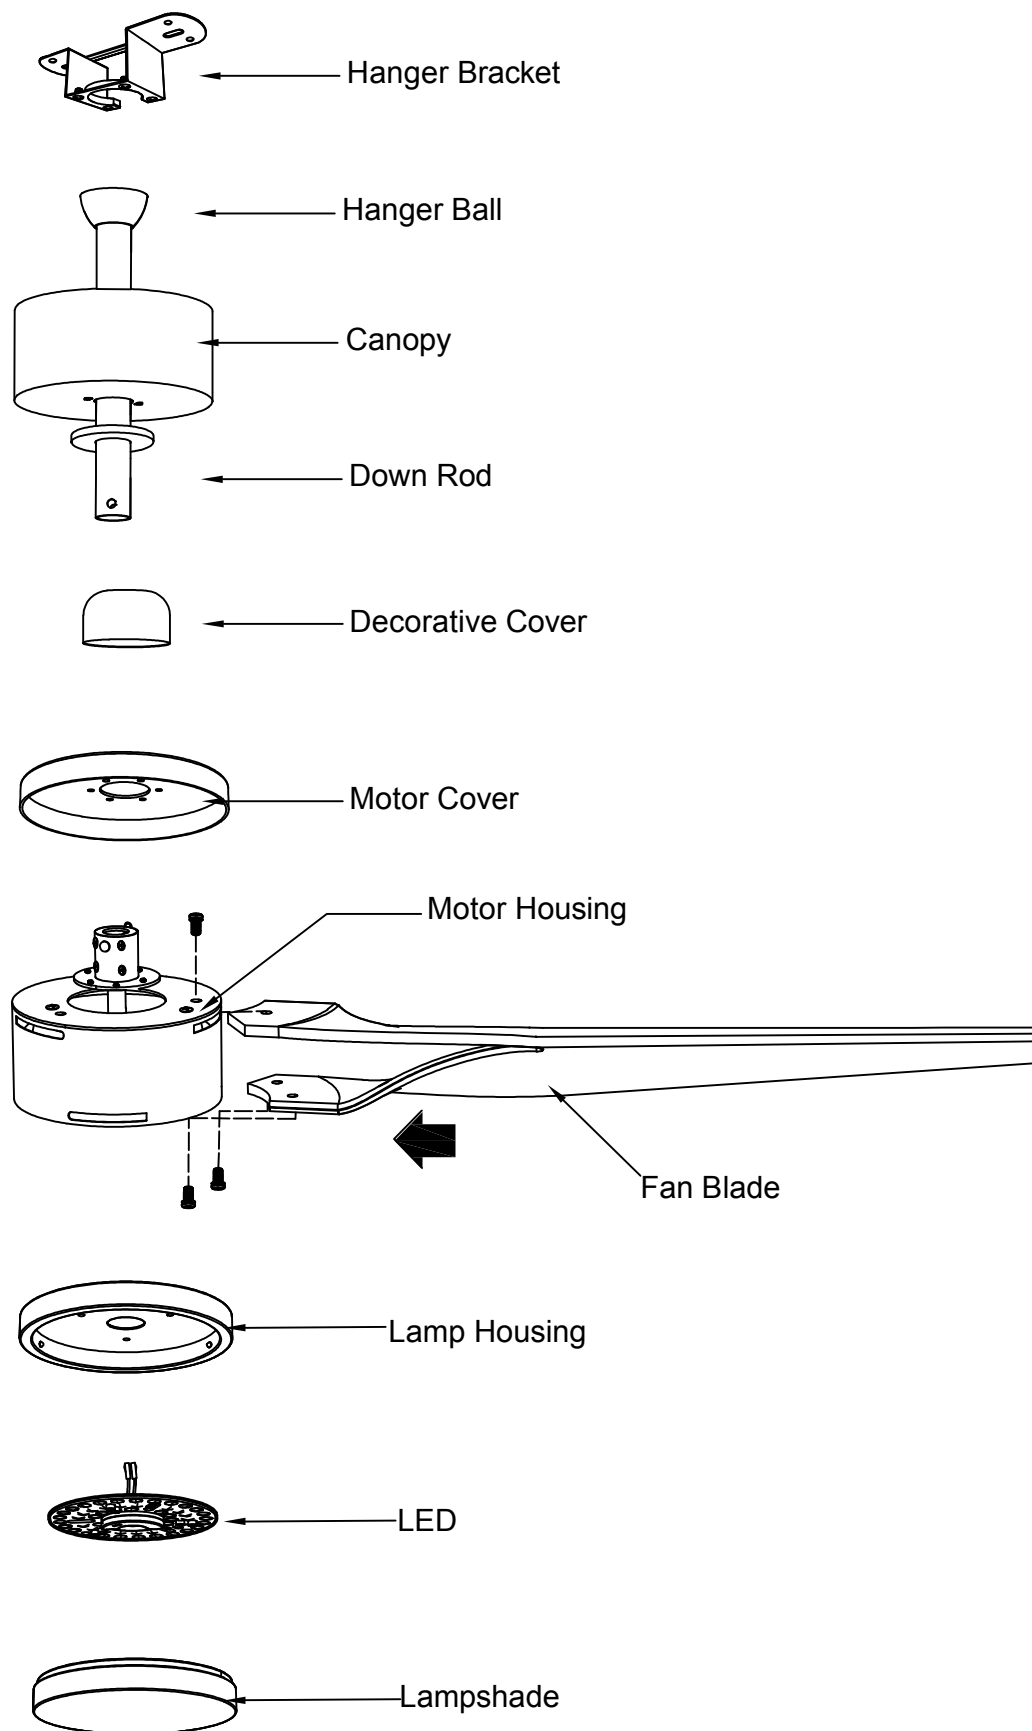

# Installation Instructions

## Step1 MOUNTING BLADES TO MOTOR

- Align the fan blade with the motor hole and tighten the screw.(Figure 1)

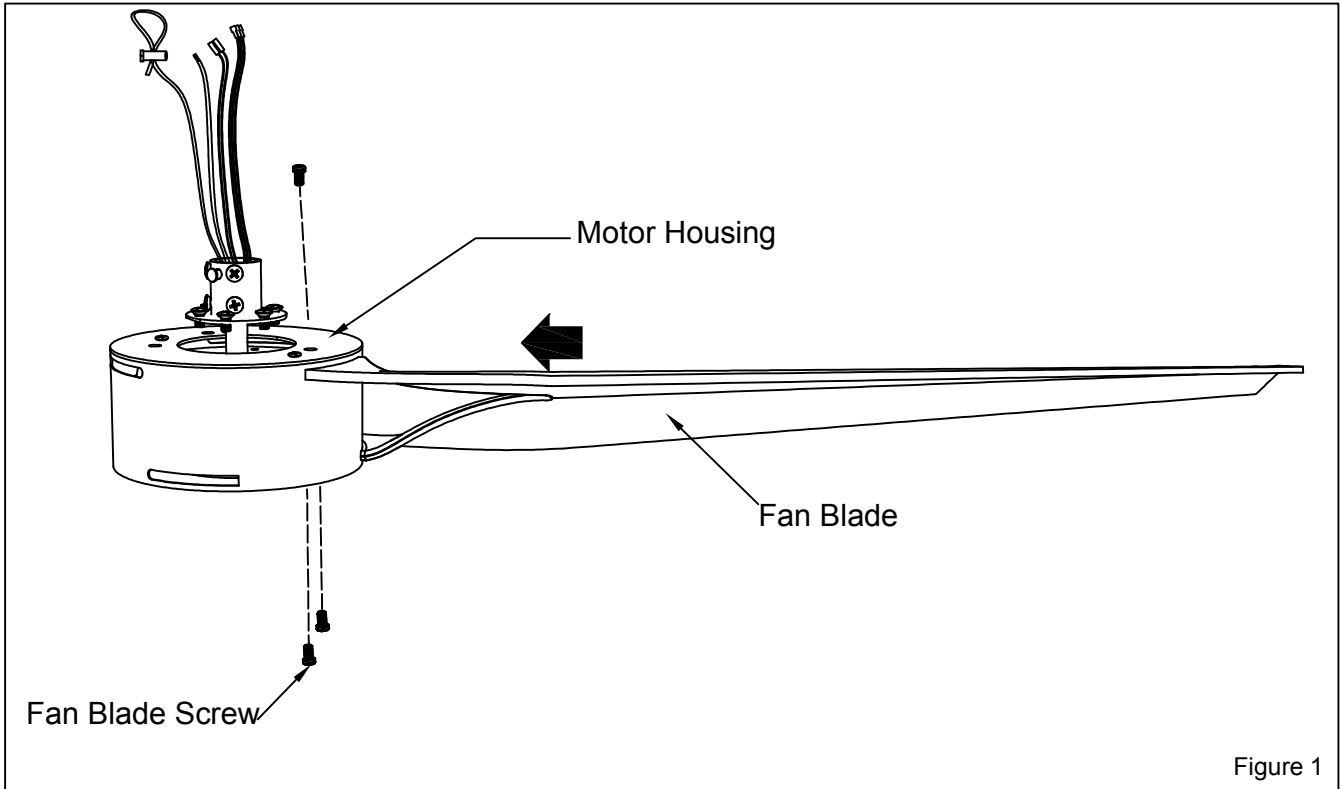

## Step2 INSTALL MOTOR COVER

- Remove the six screws, bolt and cotter pin from the motor.(Figure 2.1)
- Place the motor cover on top and align it with the hole position, and tighten the six screws.(Figure 2.2)

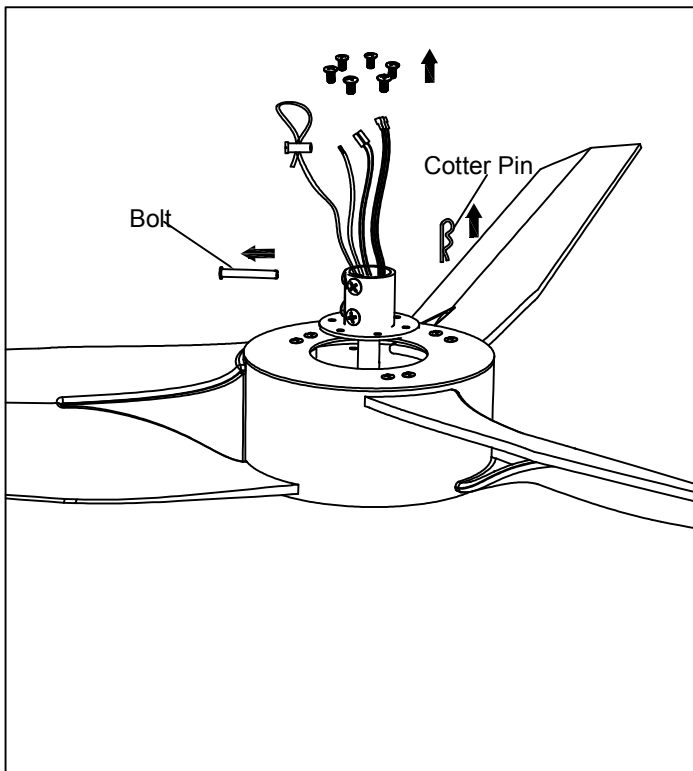


Figure 2.1


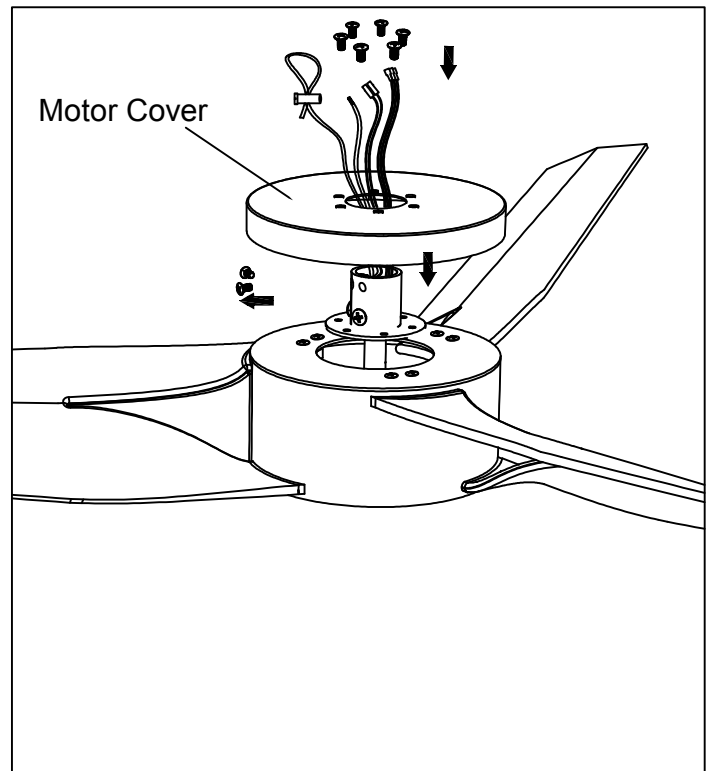


Figure 2.2

# Installation Instructions

## Step3 INSTALL THE DOWN ROD, CANOPY AND DECORATIVE COVER

- Take out the canopy, magnetic cover, and decorative cover and pass them through the Down Rod.(Figure 3.1)
- Thread the electric wire from the motor through the down rod.(Figure 3.2)
- Insert the bolt into the hole in the rod, being careful not to damage or cut the fan wire, and secure it with a cotter pin through the hole at the end of the bolt.(Figure 3.3)
- Secure the down rod in place by tightening the jam Screw. Decorative cover down, it will be flush with the motor housing.(Figure 3.4)

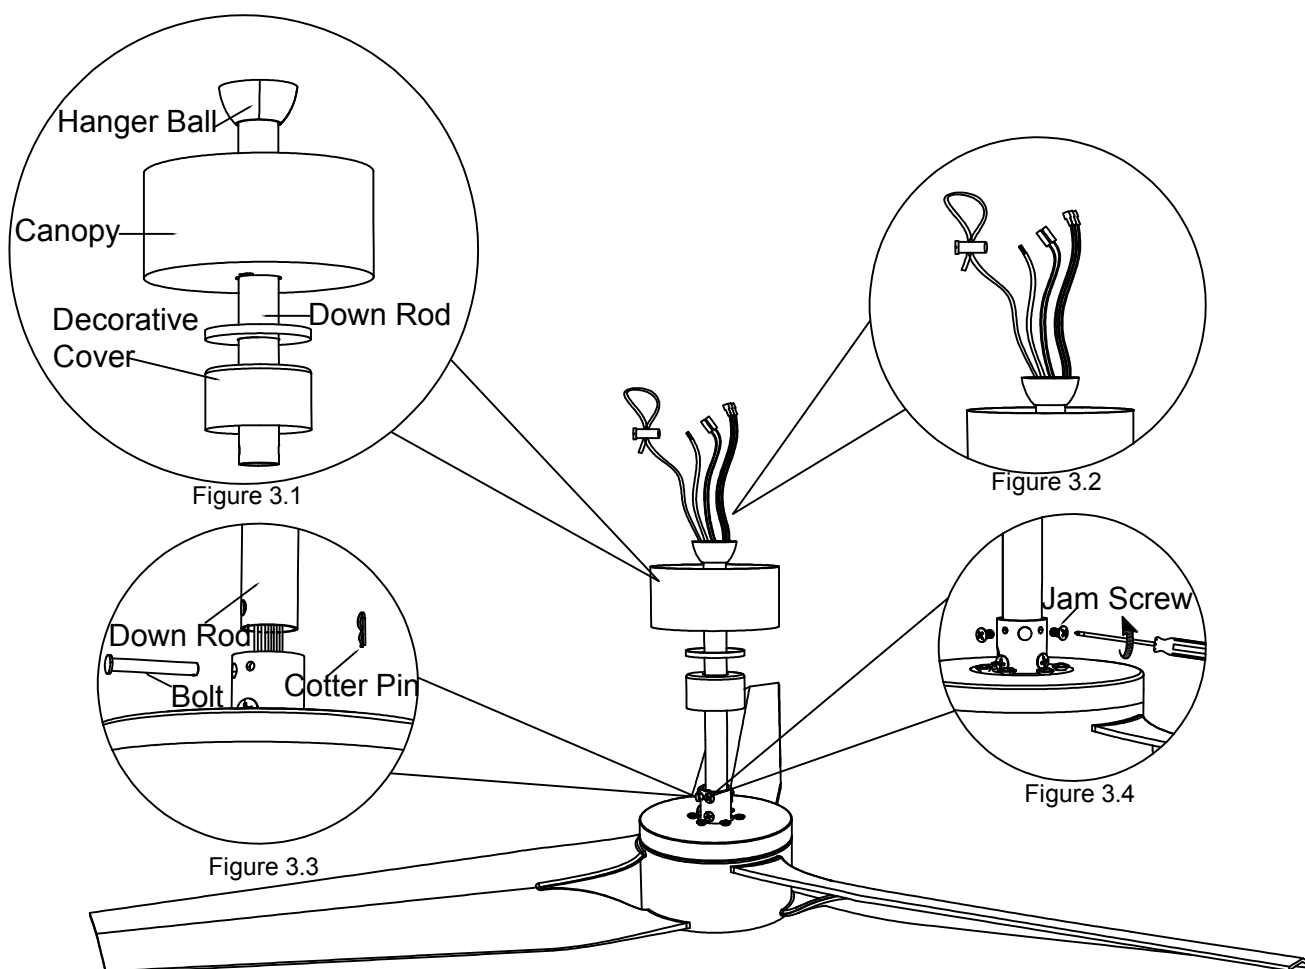


**CAUTION:** To ensure wobble-free operation and to avoid damage to the fan, the down rod and the set screws must be completely tightened.


# Installation Instructions

## Step4 INSTALL THE BRACKET


- For Wooden Ceiling: Drilling a pilot hole in your ceiling with the power drills first, then secure the bracket with wood screws. (Figure 4.1)

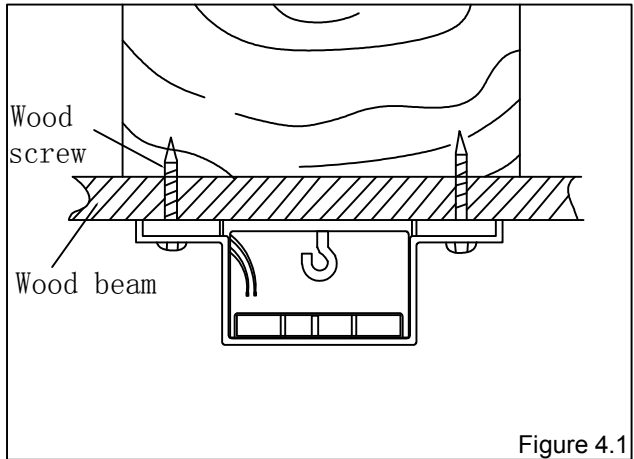

- For Concrete Ceiling: Drilling a pilot hole in the base material with a hammer drill and a correctly sized carbide drill bit for the anchor and clean out the hole of all debris. Knock the expansion screw into the hole and then tighten it with a wrench. (Figure 4.2)

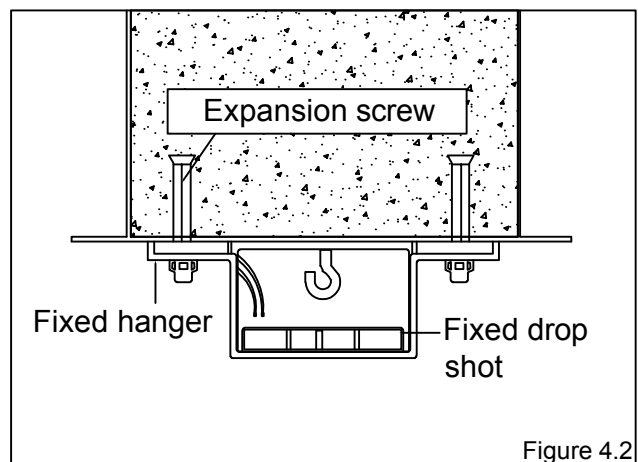

- Hang the ball joint and fan on the hanger, turn the pipe gently, make sure the hanger lugs are installed in the ball groove, and hang the wire rope on the J-hook. (Figure 4.3)

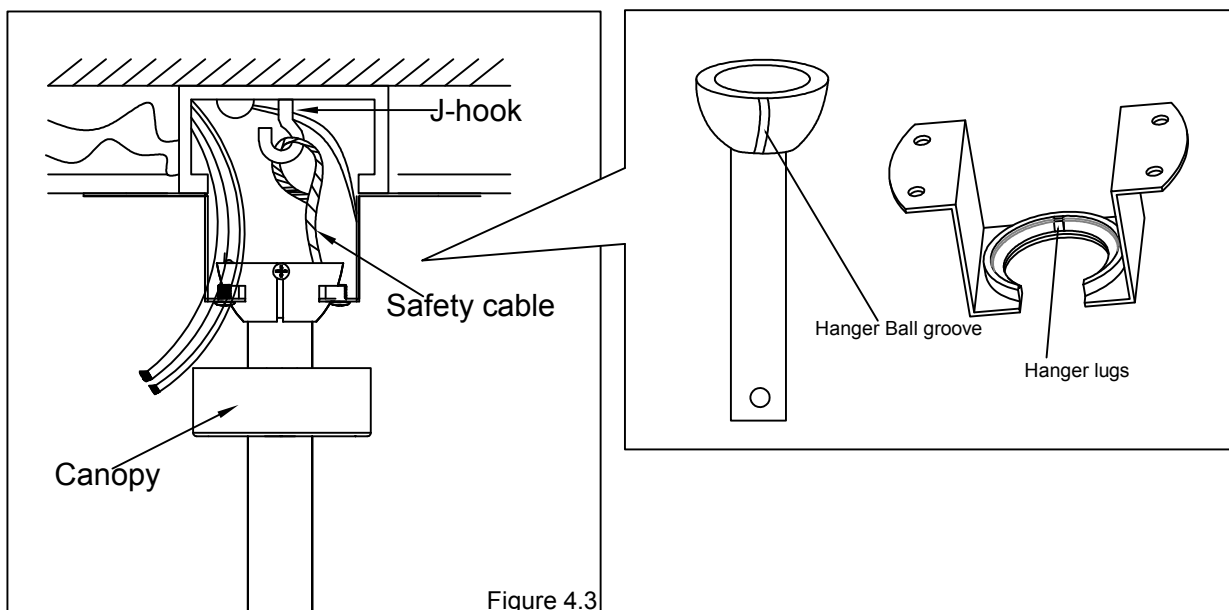


# Installation Instructions

## Step5 LIGHT KIT

**WARNING:** BE SURE TO TURN OFF POWER BEFORE INSTALLING

- Remove the screw on the round slice at the bottom of the motor, align the lamp housing upwards to the hole, and tighten with the screw.
- Connect the terminal under the motor to the LED aluminum substrate, Secure the aluminum substrate with magnets.
- Finally install the lampshade, rotate the lampshade to the lamp housing to complete the installation.

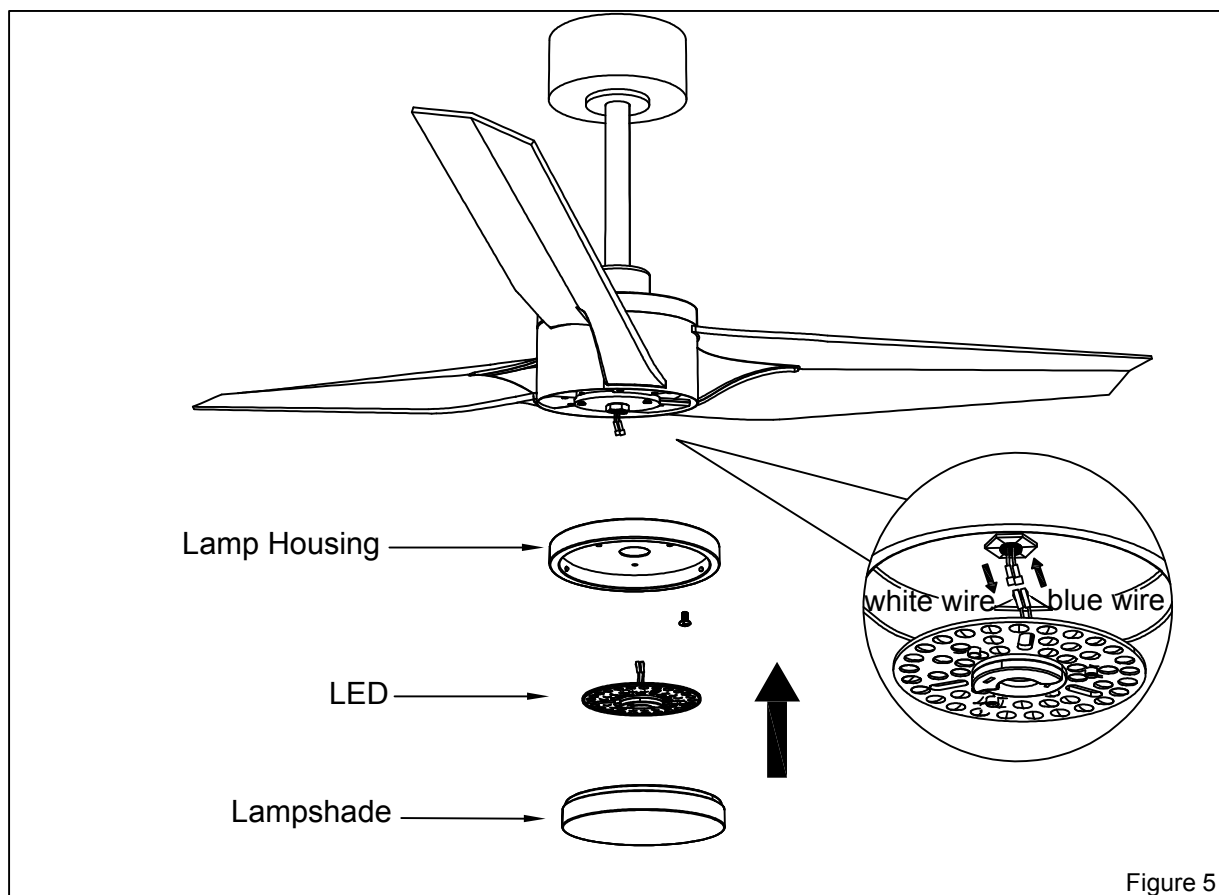

**WARNING:** Check all connections, set screws and screws are securely tightened before the next step.



# Installation Instructions

## Step6 ELECTRICAL CONNECTION

**WARNING:** BE SURE TO TURN OFF POWER BEFORE INSTALLING

-Make the following wire connections to the receiver unit using the wire nuts supplied, Connect GREEN fan wire to BARE (ground) wire, Connect BLACK receiver unit wire to BLACK supply wire, Connect WHITE receiver unit wire to WHITE supply wire. Light source terminal wiring and Motor wire wiring connected according to labels. After making the wire connections, ensure the wires should be spread apart with the grounded conductor and the equipment-grounding conductor on one side of the outlet box and the ungrounded conductor on the other side of the outlet box. Ensure the splices after being made should be turned upward and pushed carefully up into the outlet box. (Figure 6)


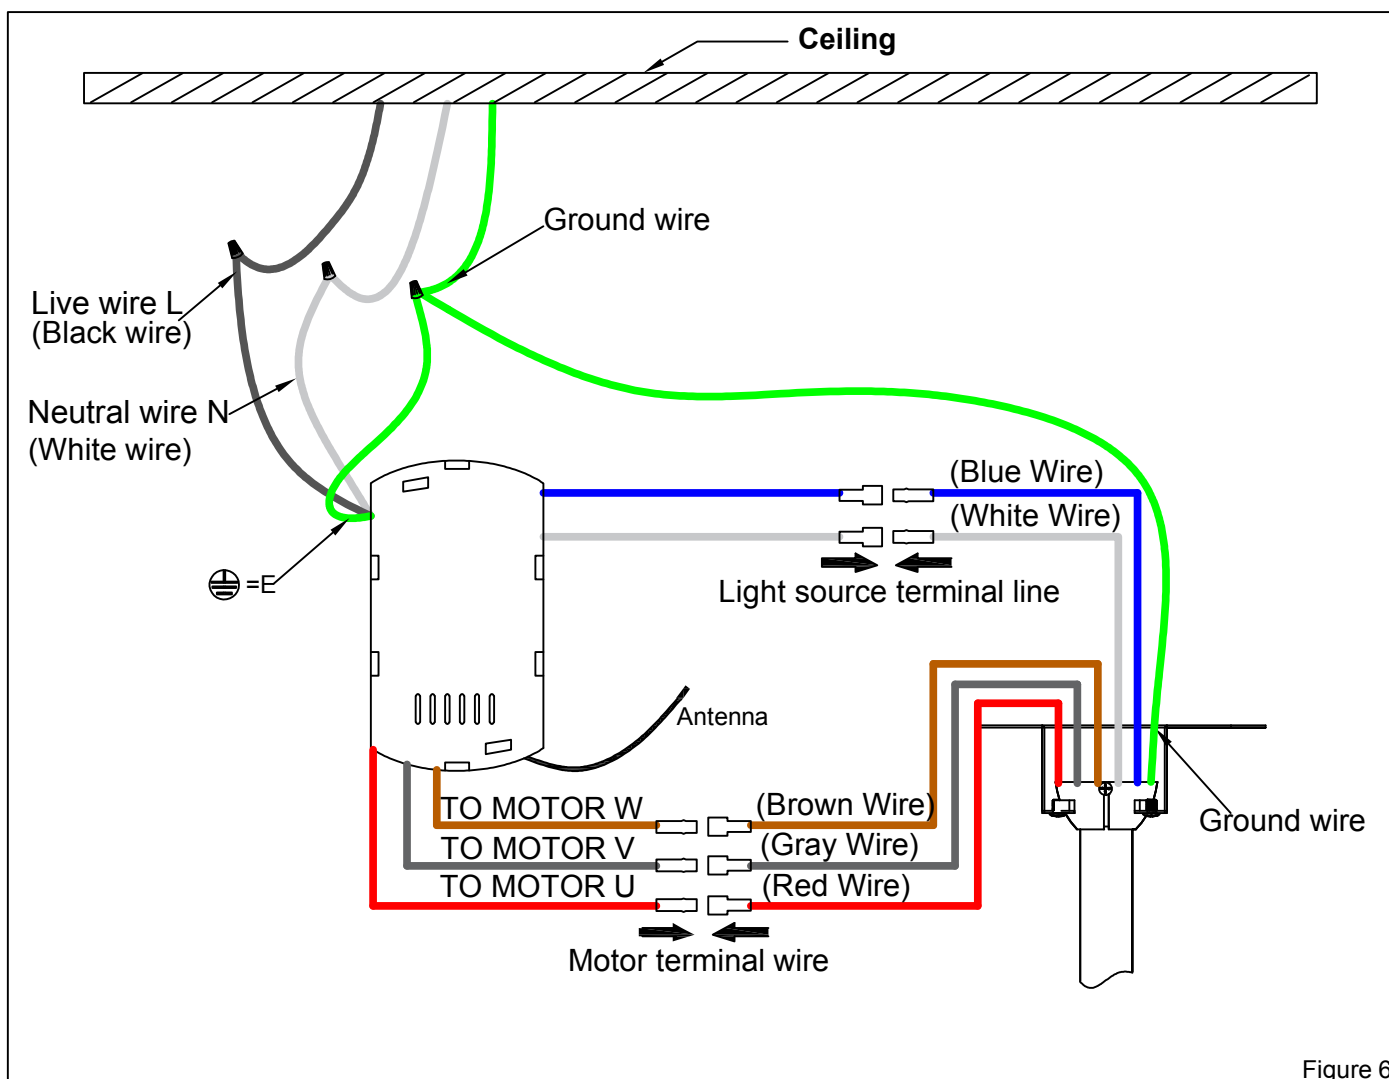


Figure 6


**NOTE:** Once ground wires are connected, carefully tuck all wires and receiver into the metal box making sure that the wires are clear of the hemisphere and down rod when positioned in hemisphere and down rod when positioned in mounting bracket.

# Installation Instructions


## Controller line name

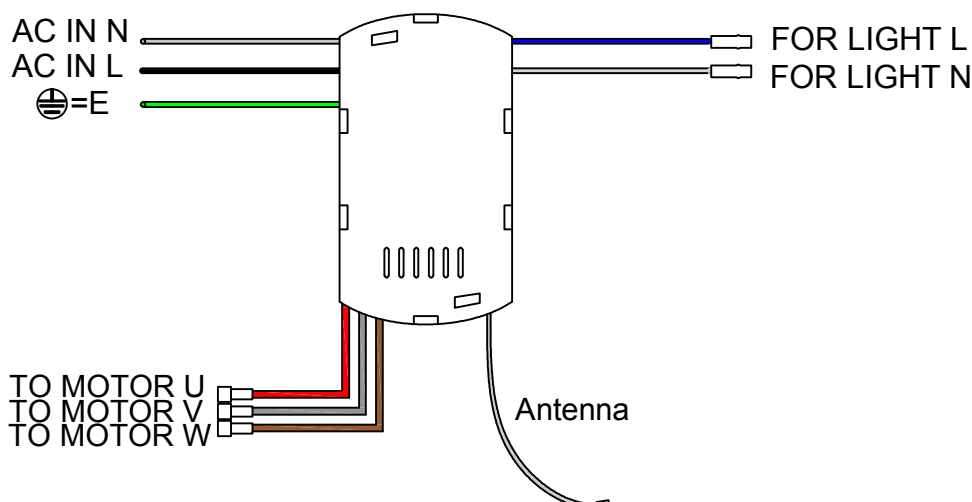

## Instructions for remote control

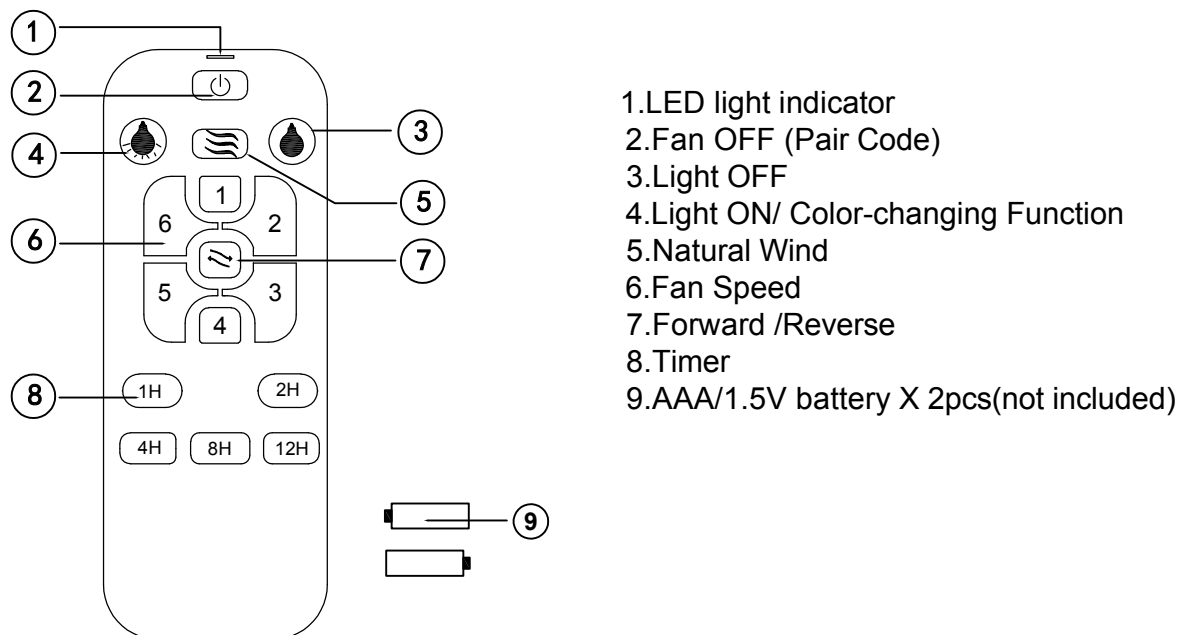

### Tips:

 - 1.If the emitter can not control the fan, please pair the code before using. Turn on the power switch, and press the "  " button within 3 seconds, the receiver issues "tick" tow sound, and the code pairing is successful . If not successful ,turn off the power for a minute and repeat the above.
- 2.When the transmitter can't remotely control the receiver,please check if switch battery contact is normal,whether the positive and negative poles are placed correctly and the power is sufficient (the signal light can be seen as light or dark or flashing three times, please replace the battery, the two batteries must be the same brand).
- 3.When the transmitter cannot remotely control the receiver,please check if there are any remote control products in the vicinity, and check if their transmitter buttons are pressed, because the simultaneous transmission of the same frequency remote control products will cause interference and affect the reception.The effect of the wrong command will be normal if the remote control function is excluded.
- 4.Please do not use the product where children can play when using this product.
- 5.Please remove the battery from the remote control when not in use for a long time.

# Installation Instructions

## Step7 HOW TO INSTALL YOUR CANOPY HOUSING

Push all connected wires up into ceiling box.

- Position the receiver into the mounting bracket as shown direction. When installing the canopy, ensure the antenna is not pressed by the canopy. Ensure to connect all ground wires accordingly. (Figure 7.1)
- Rotate the canopy upwards towards the screws on the hanger and tighten the screws. (Figure 7.2)

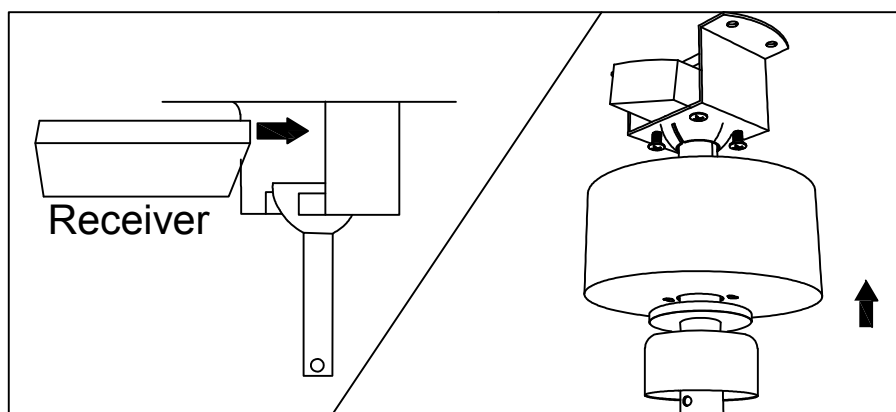


Figure 7.1

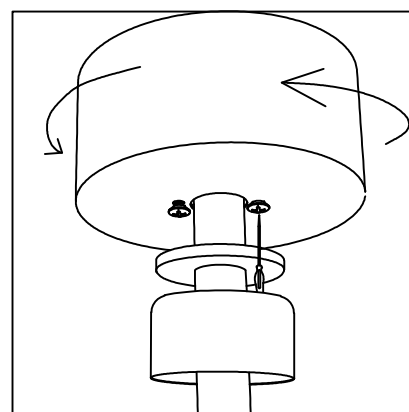


Figure 7.2

**CAUTION:** When installing the fan, the fan ceiling cover don't press the antenna (or other wire), it is easy to breakdown the wire and short-circuited.

# Installation Instructions

## Down rod replacement installation method:

-In order to better experience the ceiling fan lighting effect and prevent the danger of contact, choose the down rod according to the height of the house.




### WARNING



#### FAN FALL HAZARD

To prevent SERIOUS INJURY or DEATH:

- ALWAYS follow the down rod assembly instructions exactly.
- VERIFY the down rod is assembled correctly by firmly pulling on the hanger ball.
- Pin must be reinserted secure down rod assembly.

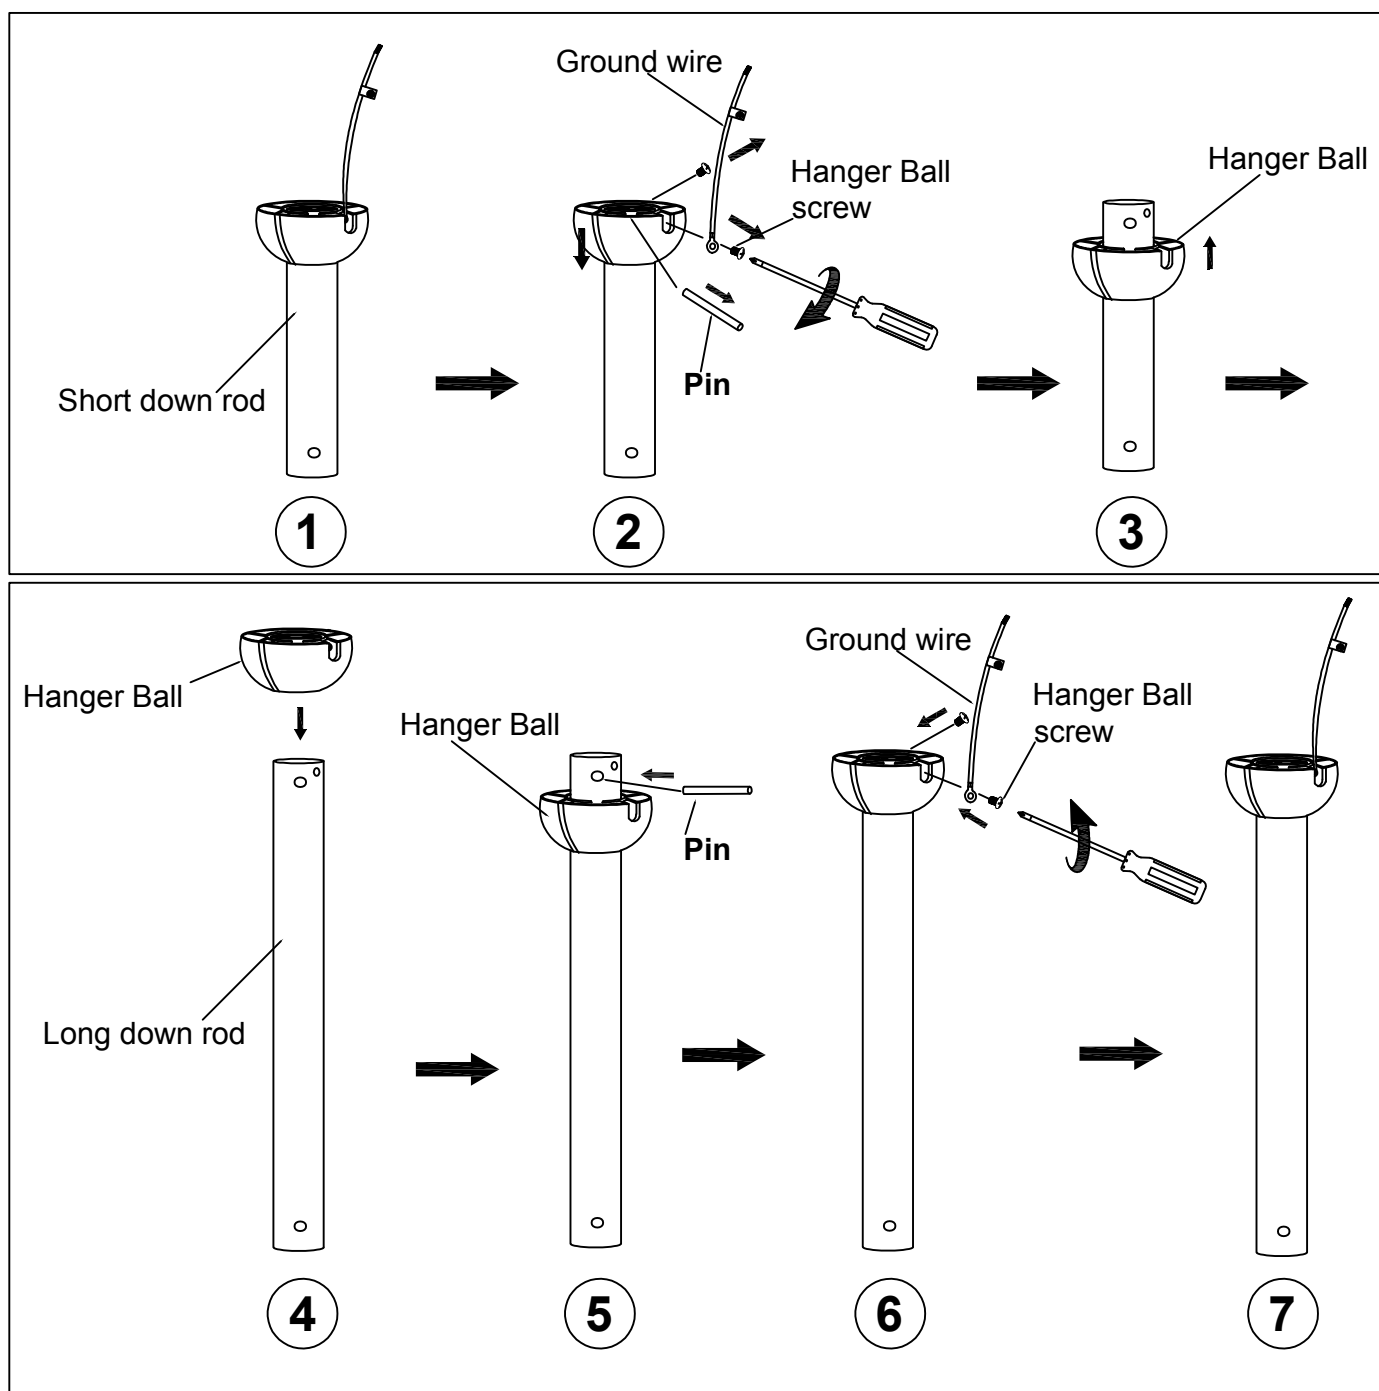

# Troubleshooting Guide


If you have difficulty operating your new ceiling fan it may be the result of incorrect assembly, installation, or wiring. In some cases these installation errors may be mistaken for defects. If you experience any faults please check this troubleshooting guide.

	Problem	Suggested Remedy
1	If fan does not work.	<input type="checkbox"/> Check the fuses or circuit breakers of the main and branch circuits. <input type="checkbox"/> Check the wiring connections to the fan and the switch wiring connections in the switch housing. <input type="checkbox"/> Check the battery in the remote control.
2	If fan sounds noisy.	<input type="checkbox"/> Ensure all motor housing screws are snug. <input type="checkbox"/> Ensure the screws that attach the fan blade bracket to the motor hub are tight. <input type="checkbox"/> Ensure the wire nut connections are not rattling against each other or the interior wall of the switch housing. <input type="checkbox"/> Allow a 24-hour "breaking in" period. Most noises associated with a new fan disappear during this time. <input type="checkbox"/> If you are using the Ceiling Fan light kit, ensure the screws securing the glassware are tight. Check that the light bulbs are also secure. <input type="checkbox"/> Ensure the canopy is a short distance from the ceiling. It should not touch the ceiling. <input type="checkbox"/> Ensure your outlet box is secure and rubber isolate pads were used between the mounting plate and outlet box.
3	If fan wobbles.	<input type="checkbox"/> Check that all blades are screwed firmly into blade holders. <input type="checkbox"/> Check that all blade holders are tightened securely to motor. <input type="checkbox"/> Make sure that canopy and mounting bracket are tightened securely to ceiling junction box and junction box is mounted firmly to ceiling joist. <input type="checkbox"/> Most fan wobble problems are caused when blade levels are unequal. Check this level by selecting a point on the ceiling above the tip of one of the blades keeping measure within 1/8 in. Rotate the fan until the next blade is positioned for measurement. Repeat for each blade. If all blade levels are not equal you can adjust blade levels by the following procedure. To adjust a blade tip down insert a washer (not supplied) between the blade and blade holder at the screw closest to the motor. To adjust a blade tip up insert washer (not supplied) between the blade and blade holder at the two screws farthest the motor. <input type="checkbox"/> If blade wobble is still noticeable, interchanging two adjacent(side by side) blades can re-distribute the weight and possibly result in smoother operation.
4	If light does not work.	<input type="checkbox"/> Check blue wire from fan to make sure it is connected to hot wire from the house. <input type="checkbox"/> Check for loose or disconnected wires in fan switch housing. <input type="checkbox"/> Check for loose or disconnected wires in light kit. <input type="checkbox"/> Check for faulty light bulbs. CAUTION: Make sure main power is turned off before entering switch housing. <input type="checkbox"/> If the fan light shuts off shortly after being switched on it may be due to excessive current demand. Turn off power to the fan and replace the light bulbs with lower wattage bulbs. Turn on power to the fan using the pull chain, wall switch, or remote control (whichever is installed on the particular fan).

# Balancing Kit

**The balancing kit should only be used if there is an unacceptable amount of fan wobble after completing all the steps in your Owners Manual under "Attaching The Fan Blades."**

1. Turn the fan on and set the speed control setting to a speed at which the wobbles is the greatest.
2. Turn off the fan and allow it to come to a complete stop. Select one blade and place the balance clip on it, halfway between the blade holder and the blade tip on the trailing edge of blade.
3. Turn the fan on. Note whether the wobble has increased or decreased. Turn the fan off, move the clip to another blade, and retest. Repeat this procedure on all blades noting the blade on which the greatest improvement is achieved.
4. Move the clip back to the blade that showed the greatest improvement. Move the clip inward and outward on this blade and operate the fan to find the position where the clip gives the greatest improvement.
5. Remove the clip and install a balancing weight to the top of blade along the center line near the point where the clip was positioned.
6. If the fan wobble problem has not been corrected you may wish to try to improve the balancing further by using the balancing clip and additional weights.

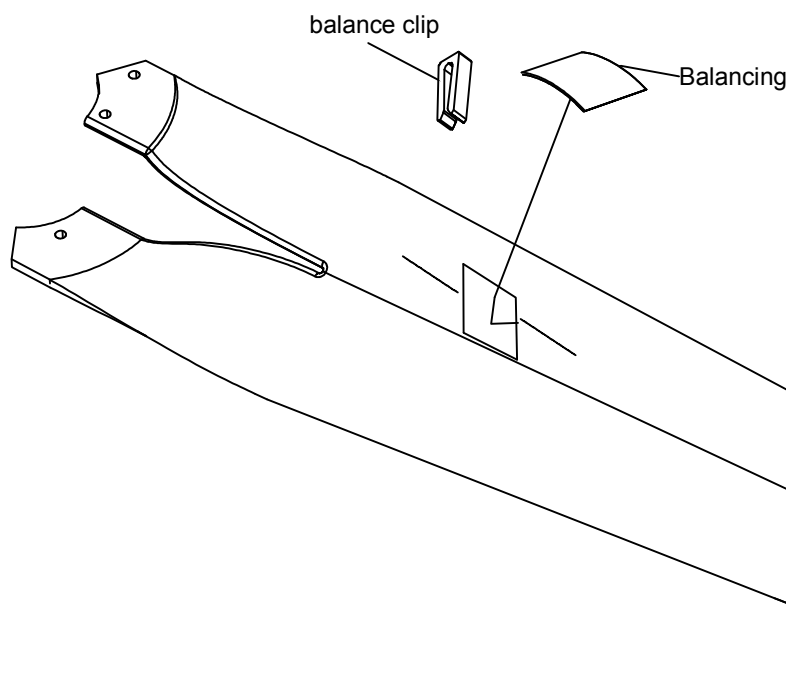

## Warm Tips: the Maintenance of Ceiling Fans

1. Because the ceiling fan always runs, please check regularly whether the hanger, fan blade, leaf rack and other parts are loose, if not, please fasten it in time to ensure it run with safety.
2. Keep ceiling fans clean regularly. Only use a soft brush or a lint-free cloth to clean it gently. Do not use a damp cloth or other destructive cleaner.
3. Don't add lubricating oil or lubricant to any part of this product.