
 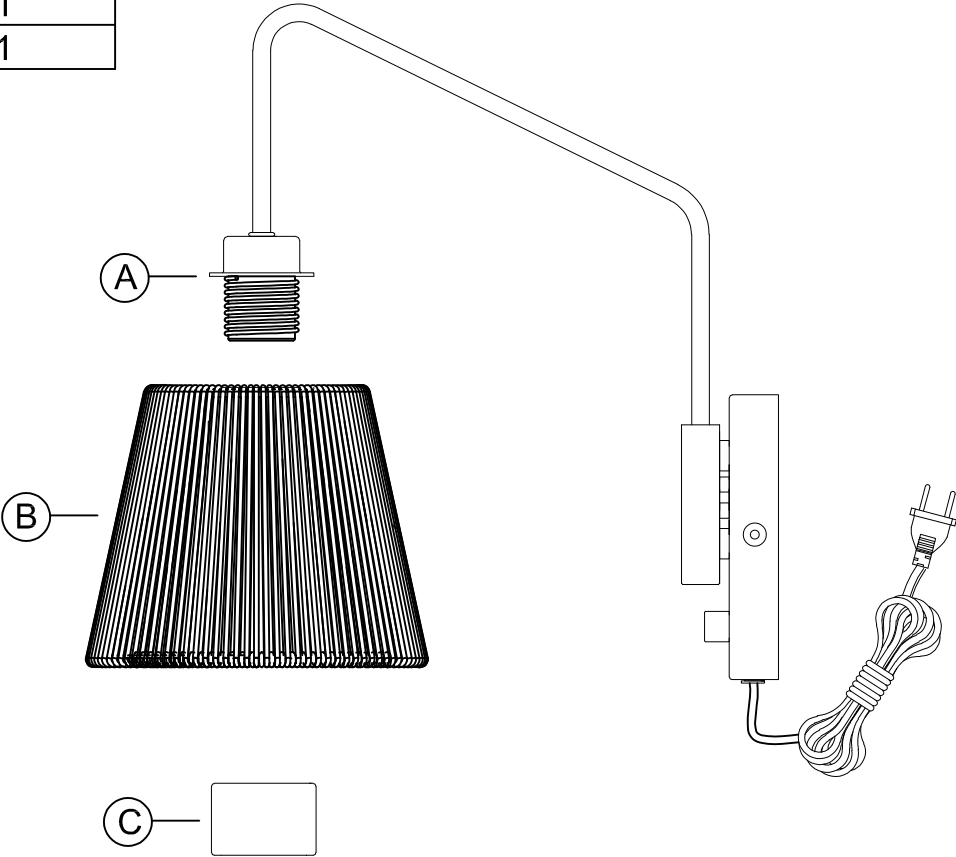

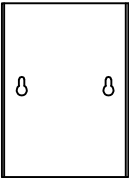
 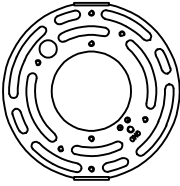



 


PACKAGE CONTENTS

PART	DESCRIPTION	QUANTITY
A	Fixture	1
B	Twine Shade	1
C	Socket Ring	1



HARDWARE CONTENTS (not actual size)

AA	BB	CC	DD	EE	FF	GG	HH
							
Wire Connector	Back Plate	Round Back Plate	Wall Anchor Screw (ST4)	Flat Washer (#8-32)	Wall Anchor	Flat Screw (#8-32)	Black Plug
Qty:3	Qty:1	Qty:1	Qty:2	Qty:2	Qty:3	Qty:2	Qty:1

For more product information, assembly assistance or help with missing parts:
Please visit www.avechome.com/help



Safety Information

Please read and understand this entire manual before attempting to assemble, operate or install the product.

CAUTION: Read instructions carefully and turn electricity off at main circuit breaker panel before beginning installation.

CAUTION: Risk of fire. Min. 90°C supply conductors. Consult a qualified electrician to ensure correct branch circuit conductor.

WARNING: If any Special Control Devices are used with this fixture, follow instructions carefully to assure full compliance with N.E.C. requirements. If there are any questions, contact a qualified electrical contractor.

CAUTION: All glass is fragile. Use care when handling glass shades and bulbs.

Preparation

1. Before beginning installation, make sure all parts are included using the contents diagrams from page 1. If any part is missing or damaged, do not attempt to assemble, install or operate the product.
2. Estimated assembly time: 30 minutes.
3. Tools required for assembly (not included): Phillips screwdriver, pliers, wire stripper, safety glasses, electrical tape, ladder.


Care and Maintenance

Shut off main power supply before cleaning product or changing light bulbs. To clean, wipe with damp cloth. Do not use abrasive cleaners or cleaners that contain alcohol.


Assembly Instructions

FOR PORTABLE WALL MOUNTING

1. Place the Back Plate (BB) against the wall, ensuring the position is level, mark the two mounting holes. Using a 15/64" drill bit, drill the pilot holes at the marked positions. Insert the Wall Anchors (FF). Slide the Flat Washers (EE) onto the Wall Anchor Screws (DD). Screw the Wall Anchor Screws (DD) through the Back Plate (BB) key hole slots into the Wall Anchors (FF) and tighten to secure the Back Plate (BB).

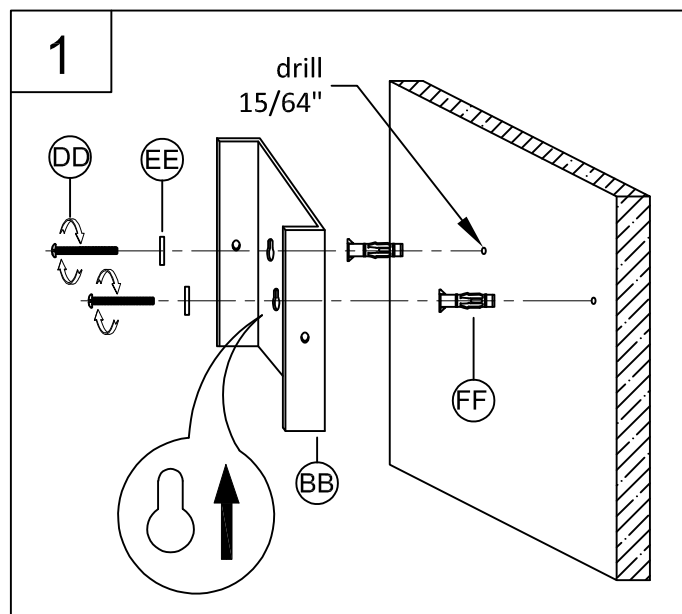


2. Attach Fixture (A) to the Back Plate (BB) by using Screws (GG).

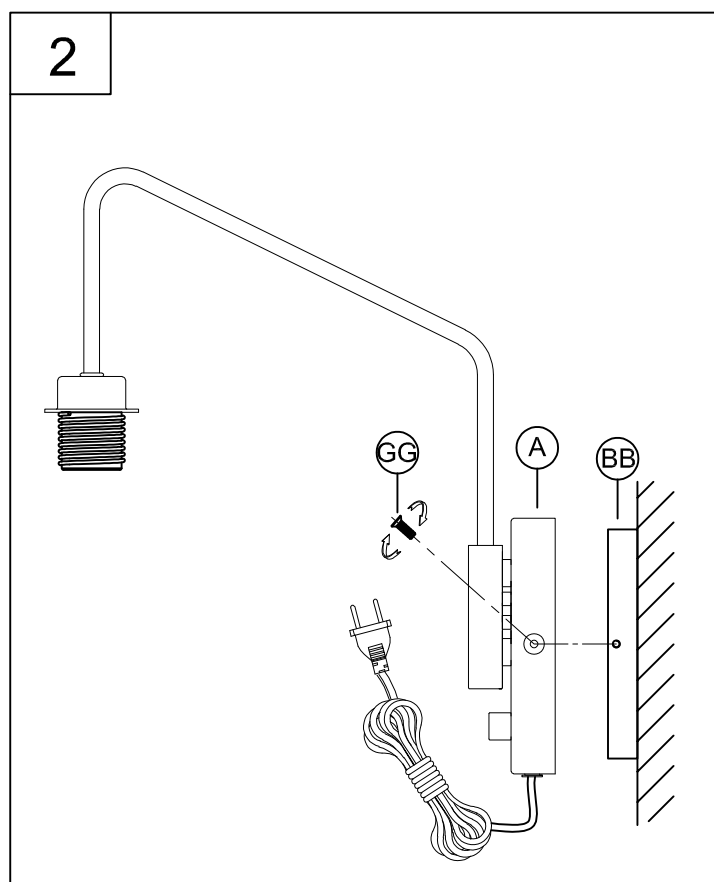


FOR OUTLET BOX MOUNTING

1. Attach Round Back Plate (CC) to the Outlet Box using the Mounting Screws supplied with the Outlet Box (not included).

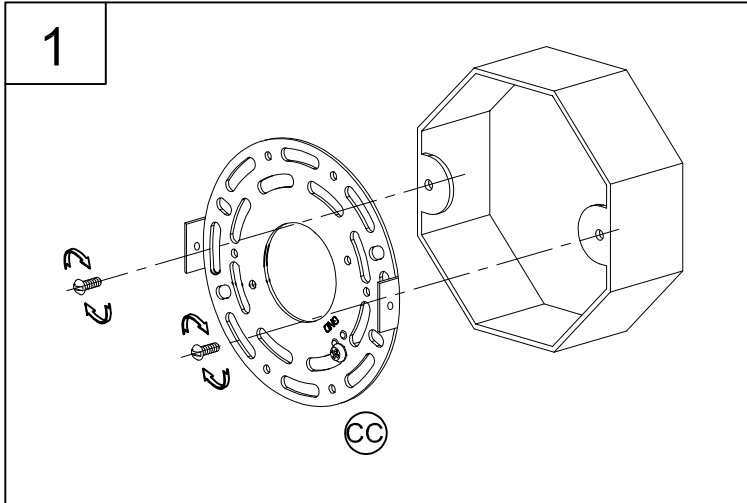

3. Attach Fixture (A) to the Round Back Plate (CC) by using Screws (GG).

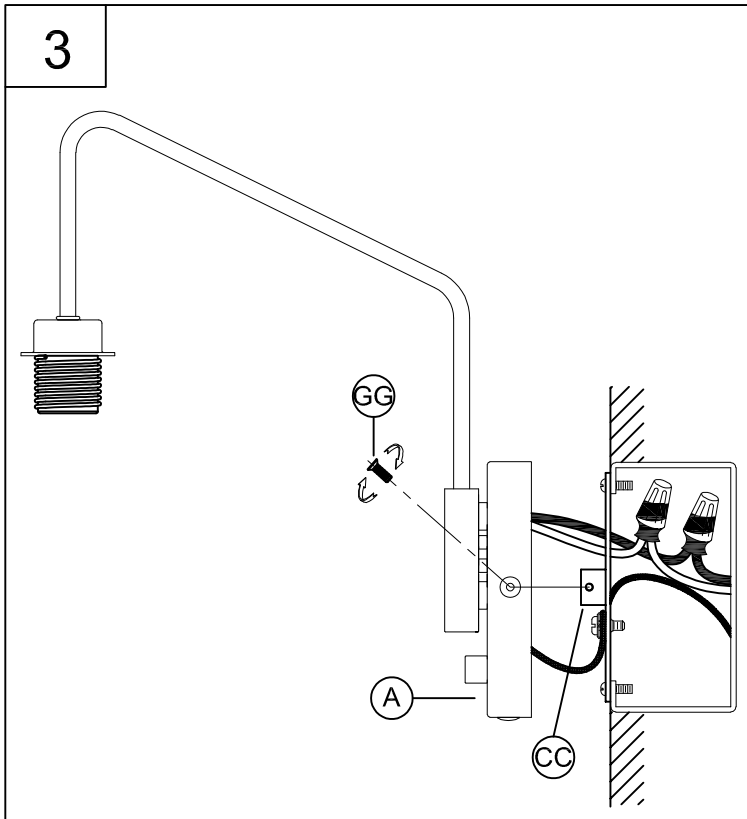


2. Remove lamp cord and plastic bushing by cutting wires near the wire connector, leaving 6" MINIMUM wire length for wire connections.


Install the Plug (HH) provided into the hole in the Fixture (A) Canopy.

Strip 3/8" of insulation from the electrical wire ends, connect the WHITE fixture wire to the WHITE supply wire using a Wire Connector (AA). Connect the BLACK fixture wire to the BLACK supply wire using a Wire Connector.


Connect the supply ground wire by fastening it to the ground screw on the Round Mounting Plate, wrap Wire Connections With Electrical Tape. Push all of the wire connections carefully into the Outlet Box.

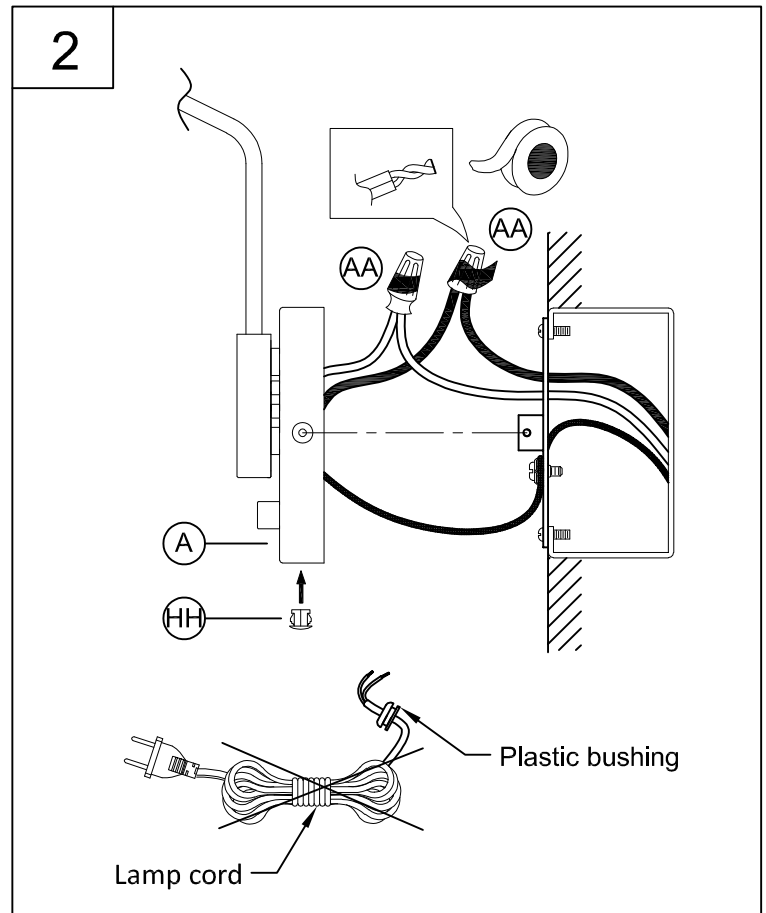

Assembly Instructions

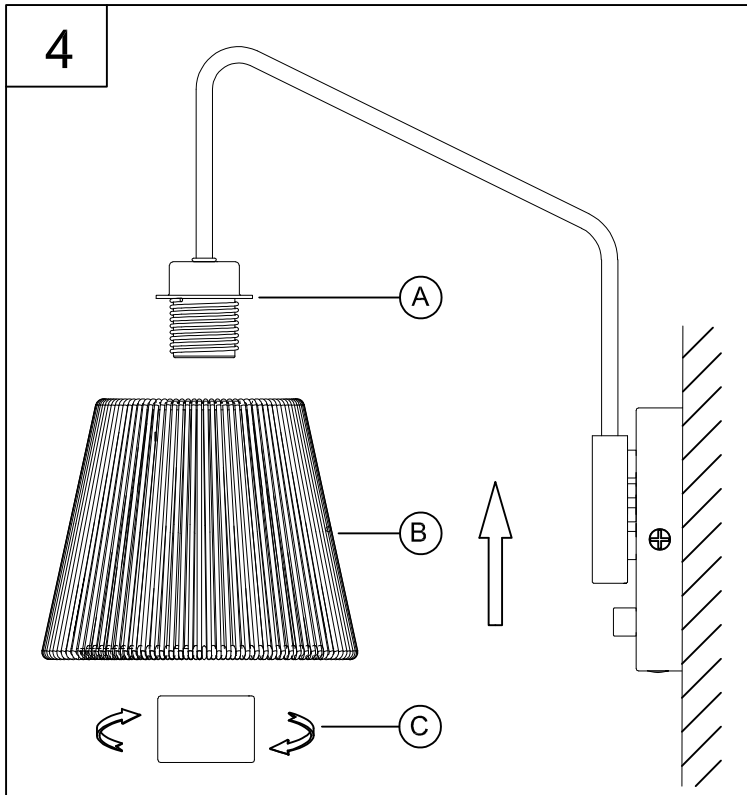

4. Attach twine shade (B) to the fixture (A) using the socket ring (C) to secure tightly.

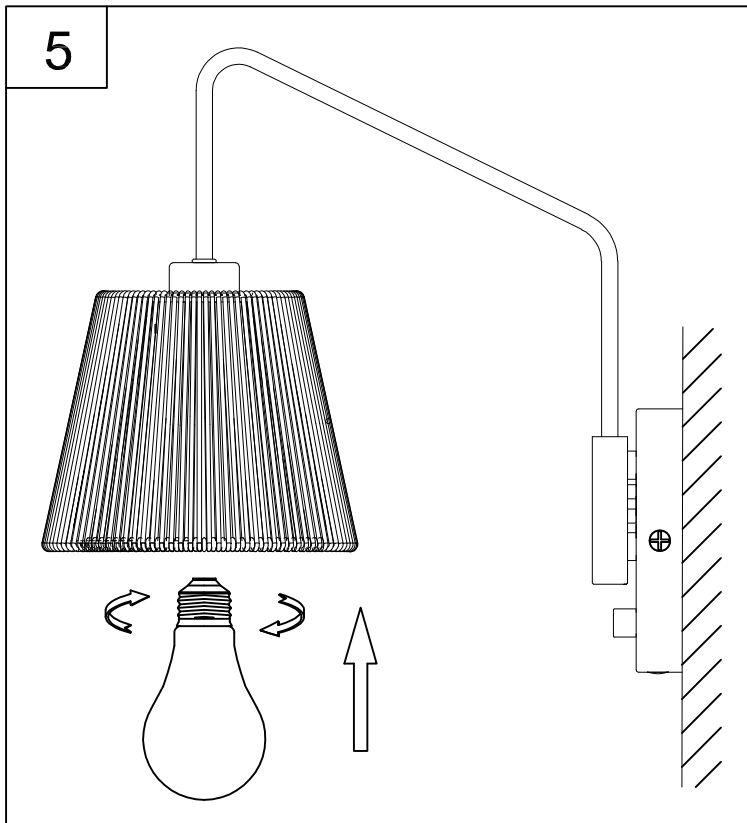

5. Screw lamp (not included) into fixture socket. Use 60-watt MAX incandescent medium base lamp, SBCFL or SBLED.

WARRANTY AND EXCLUSIVE REMEDY: Progress products, when properly installed and under normal conditions of use, are warranted to our customers only to be free from defects in material and workmanship at time of shipment. All warranty claims must be asserted within one year from date of purchase of the subject items; thereafter, warranty claims will not be honored. Customers' sole remedy for a warranty claim or otherwise shall be limited to repair or replacement of the subject product if it is shown to have been defective in material or workmanship at time of shipment. Progress's sole and maximum liability for a defective product shall never exceed the cost of the subject product. **EXCEPT FOR SUCH A WARRANTY AND EXCLUSIVE REMEDY AS STATED (AND THE EXPRESS WARRANTY OF TITLE), WE DISCLAIM ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED, AND SPECIFICALLY DISCLAIM THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL WE BE LIABLE TO CUSTOMER IN WARRANTY, CONTRACT, NEGLIGENCE, STRICT LIABILITY OR OTHERWISE, FOR ANY DAMAGES, WHETHER INCIDENTAL OR CONSEQUENTIAL, WHICH ARE ALLEGED TO BE CAUSED BY ONE OR MORE OF OUR PRODUCTS, BEYOND THE COST TO THE CUSTOMER OF THE SUBJECT PRODUCT OR PRODUCTS.** Therefore, the customer's sole and exclusive remedy against us for breach of the warranty, breach of contract or negligence or strict liability or otherwise shall be limited to repair or replacement of the subject product at our option (excluding installation and removal charges which shall not be our liability) or, if we choose, refund of the purchase price. In no case does our warranty and exclusive remedy extend to anybody other than our customers. Our customers are not authorized to extend warranties or remedies on our behalf to anyone. Such unauthorized extensions of warranties or remedies by the customer shall remain customer's responsibility. Customer is responsible for determining the suitability of our products for customer's use or resale, or for incorporating them into objects or for applications which customer designs, assembles, constructs or manufactures.