 


WARM SHAKER / NORFOLK / LEXINGTON

72 INCH TV WIDE MEDIA STAND

MODEL # AXWSH003-72RNAB

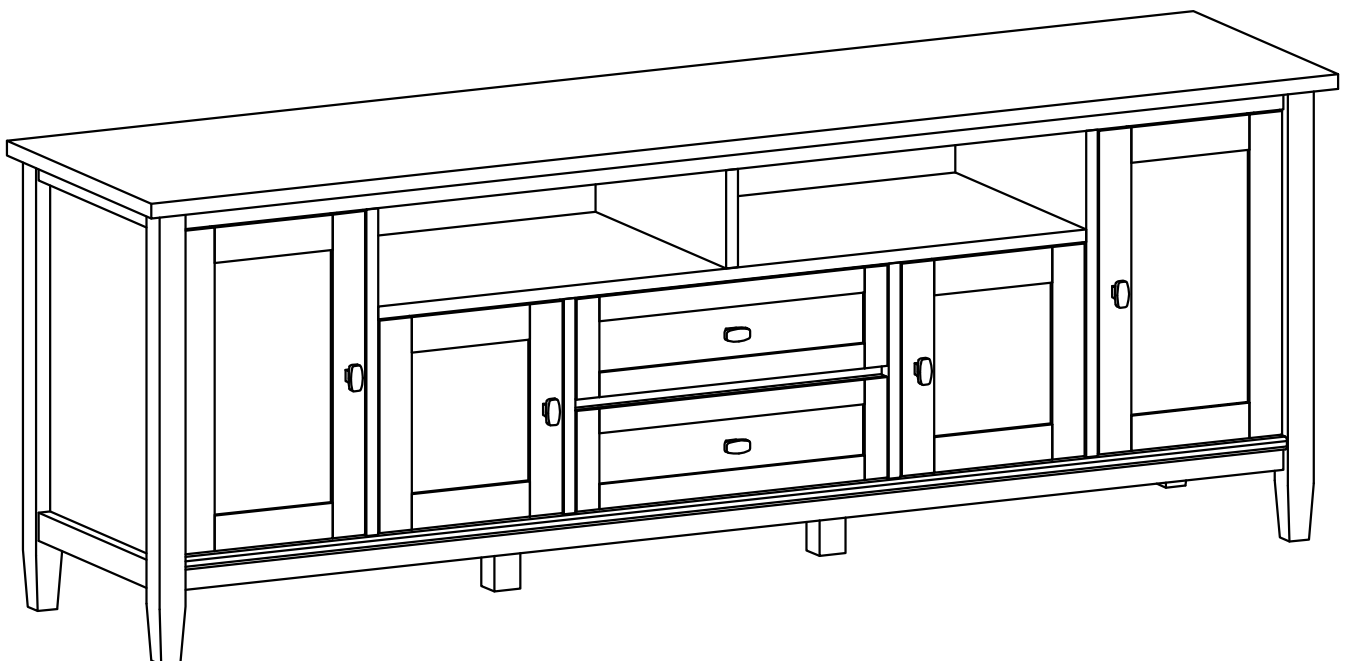



Questions, problems, assembly help, missing parts?

No need to return the product, we will gladly help and ship your
replacement parts free of charge

Please call Customer Service at 1-866-518-0120 ext. 262

Monday to Friday between 9 am –4 pm EST

or go to

www.simpli-home.com/parts request

In order to assist you in a timely manner, please have the following
information ready:

Model # _____ Part Number or Letter _____

Purchased at _____ Date of Purchase _____

**If you wish to return the product, please contact the retailer where the
product was purchased.**

IMPORTANT : Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

SAFETY INFORMATION

CAUTION: Injuries and damage can occur from furniture tip over if product is not properly anchored to the wall. Use the Furniture Anti-Tipping Restraint provided with the product. Consult our assembly instructions for help. If the Furniture Anti-Tipping Restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

May require 2 people for ease of assembly.

IMPORTANT : Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

CARE and MAINTENANCE

Perhaps the greatest environmental damage to wood furniture comes from wide swings in relative humidity (RH) in our homes. Wood absorbs and desorbs water as relative humidity rises and falls, and in doing so it swells and shrinks. Making matters worse, it expands and contracts unequally along different grain directions. As humidity changes, the components of wooden objects are continually pushing and pulling against each other. This pressure often results in parts of furniture no longer fitting together closely or becoming distorted or breaking from their own internal stresses.

The response to relative humidity changes begins with determining the annual average RH for your particular space. Then try to keep the RH in the space where your furniture is as close to that average as possible, generally within about 10% up or down. De-humidify in the summer and humidify in the winter.

Be aware that raising the temperature lowers the humidity and vice versa. Thus, modern heating systems, which can drive down interior RH in the winter, almost invariably cause problems for furniture. To counteract their effect, you can either modify the RH by keeping furniture containing spaces cooler in the winter or most importantly, have a good working humidifier for your home. A humidistat automatically works to balance the humidity in your home so it is constant. Dry indoor air can suck enough moisture from its surroundings to do permanent damage to wood, causing it to crack or split.

Remember, that not all woods are created equal. Two factors that help determine how rapidly a wood will lose moisture are pore size and surface hardness. A piece made from a dense and hard wood will dry less rapidly than pieces made from softer woods.

 
Furniture that is sealed and lacquered will lose moisture more slowly than an unfinished piece while pieces with veneer finishes are not only stronger, but lose moisture more slowly than other finishes.

To help protect your wood furniture, take these steps:

- Use a humidifier, preferably one with an automatic control system that can sense the humidity level and adjust itself accordingly. Don't over-humidify; that can damage wood by causing it to expand and contract.
- Keep furniture out of direct sunlight, which can cause it to dry out, crack and warp.
- If you can avoid it, don't put furniture near heating vents. If you must, keep the piece 3 to 4 inches away from the wall, giving the heat and air space to circulate.
- Dust with soft dry cloth.
- Do not use liquid or aerosol products.
- To avoid marking, do not place rubber on surface (foot pads, etc.)
- For soil build-up, wipe with damp cloth & dry.
- Do not use abrasive cleaners.


PART DESCRIPTION

A

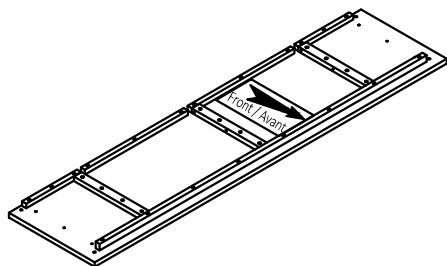


TOP
QTY 1

 BL

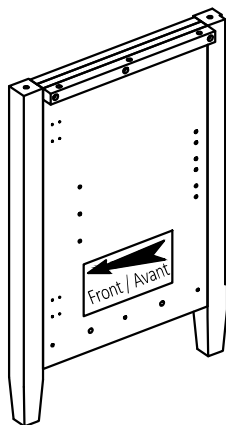


LEFT SIDE
QTY 1

 BR

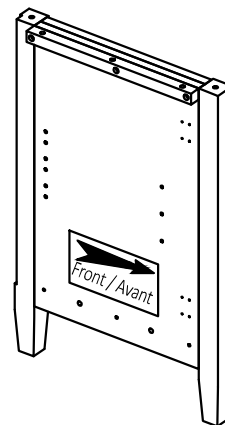


RIGHT SIDE
QTY 1

 CL

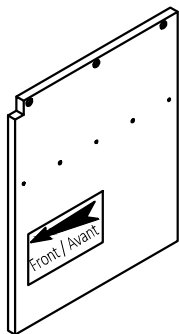


LEFT DIVIDER
QTY 1

 CR

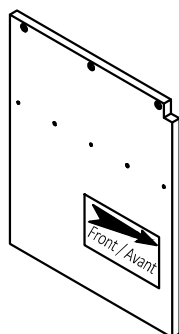


RIGHT DIVIDER
QTY 1

 DL

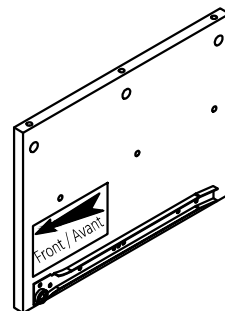


LEFT MIDDLE DIVIDER
QTY 1

 DR

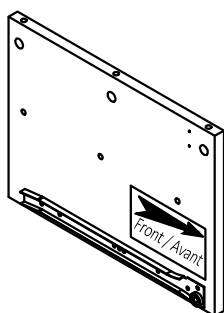


RIGHT MIDDLE DIVIDER
QTY 1

 E

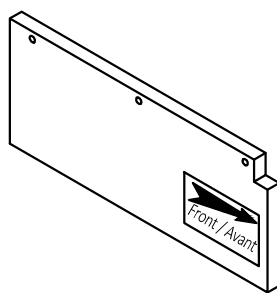

TOP DIVIDER
QTY 1

 F

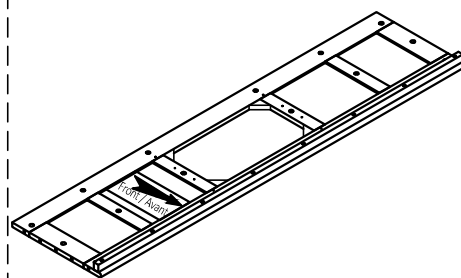


BOTTOM SHELF
QTY 1


NEED HELP? For help with assembly or if you are missing a part,
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)

PART DESCRIPTION

 
G

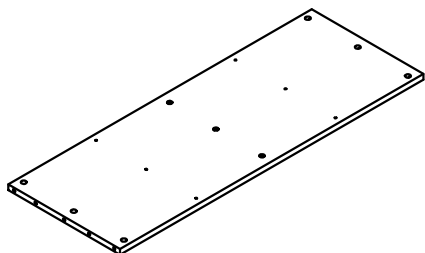TOP SHELF
QTY 1

 
H

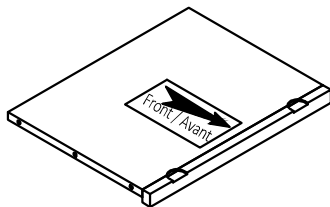CENTRE SHELF
QTY 1

 
I

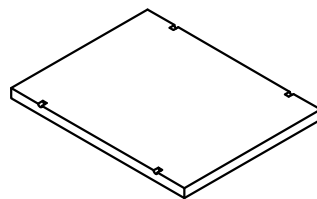SHELF
QTY 2

 
J

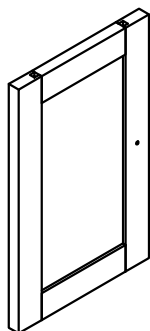LARGE DOOR (L&R Same)
QTY 2

 
K

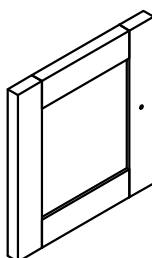SMALL DOOR (L&R Same)
QTY 2

 
LL

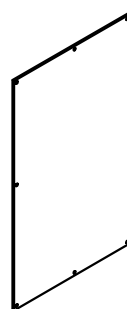LEFT BACK PANEL
QTY 1

 
LR

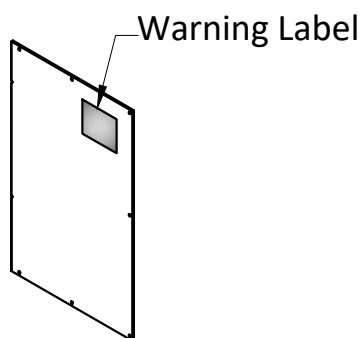RIGHT BACK PANEL
QTY 1

 L1

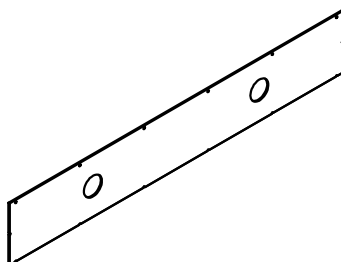TOP BACK PANEL
QTY 1

 
L2

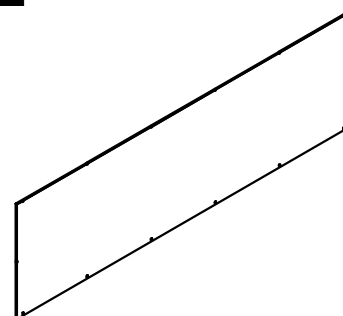BOTTOM BACK PANEL
QTY 1


NEED HELP? For help with assembly or if you are missing a part,
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)

PART DESCRIPTION

 
M

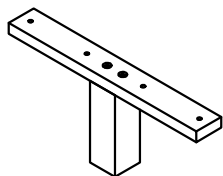BOTTOM SUPPORT LEG
QTY 2

 
N

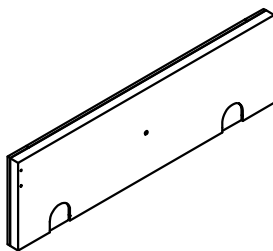FLIP DOWN DOOR
QTY 1

 
O

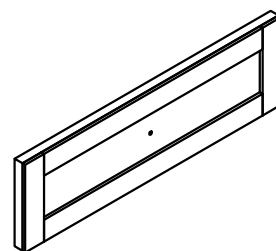DRAWER FRONT
QTY 1

 
PL

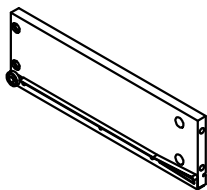LEFT DRAWER SIDE
QTY 1

 
PR

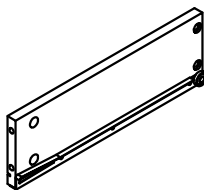RIGHT DRAWER SIDE
QTY 1

  Q

 
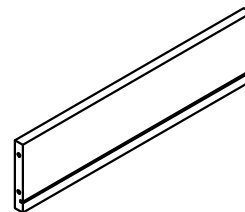 

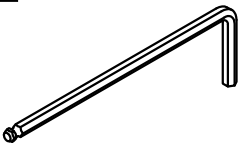 
 
 
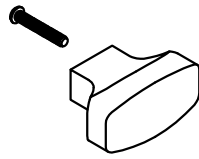 

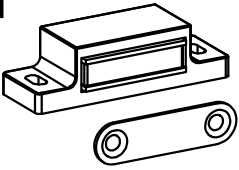 

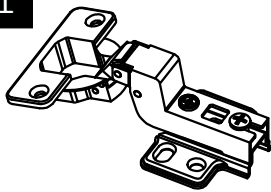 

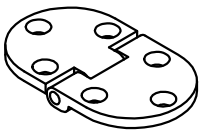 

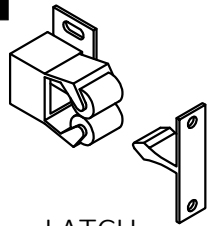 
 
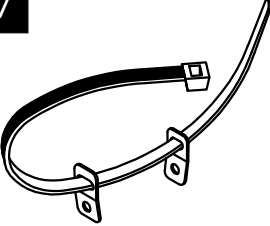 



 
 

DRAWER BACK
QTY 1

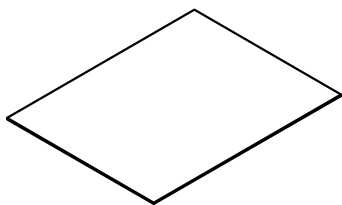R


DRAWER BOTTOM
QTY 1

NEED HELP? For help with assembly or if you are missing a part,
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)


HARDWARE DESCRIPTION

<p>1</p>  <p>ALLEN KEY SCREW M6 X 30mm QTY 34</p>	<p>2</p>  <p>CAM LOCK PIN CAM LOCK QTY 22 SETS</p>	<p>3</p>  <p>WOOD DOWEL Ø8 X 30mm QTY 28</p>	<p>4</p>  <p>ALLEN KEY QTY 1</p>
<p>5</p>  <p>PHILLIPS SCREW ROUND HEAD M4 X 15mm QTY 36</p>	<p>6</p>  <p>SHELF SUPPORT QTY 12</p>	<p>7</p>  <p>HANDLE M4 X 25 mm QTY 6 SETS</p>	<p>8</p>  <p>PHILLIPS SCREW M3 X 15mm QTY 16</p>
<p>9</p>  <p>MAGNET AND PLATE QTY 4 SETS</p>	<p>10</p>  <p>PHILLIPS SCREW M4 X 15mm QTY 48</p>	<p>11</p>  <p>ADJUSTABLE HINGE QTY 8</p>	<p>12</p>  <p>PHILLIPS SCREW M3.5 X 15mm QTY 12</p>
<p>13</p>  <p>HINGE QTY 2</p>	<p>14</p>  <p>PHILLIPS SCREW M3 X 12mm QTY 4</p>	<p>15</p>  <p>LATCH QTY 1</p>	<p>16</p>  <p>PHILLIPS SCREW M4 X 25mm QTY 8</p>
<p>17</p>  <p>a.  M4 X 25mm - QTY 2 (1 is extra)</p> <p>b.  M4 X 15mm - QTY 1</p> <p>c.  M4 X 25mm - QTY 1</p> <p>FURNITURE TIP OVER RESTRAINT QTY 1 SET</p> <div data-bbox="869 1657 1141 1904">    </div> <p>Required - Flathead screwdriver Phillips screwdriver Rubber mallet Not Included</p>			

 NEED HELP? For help with assembly or if you are missing a part,
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)

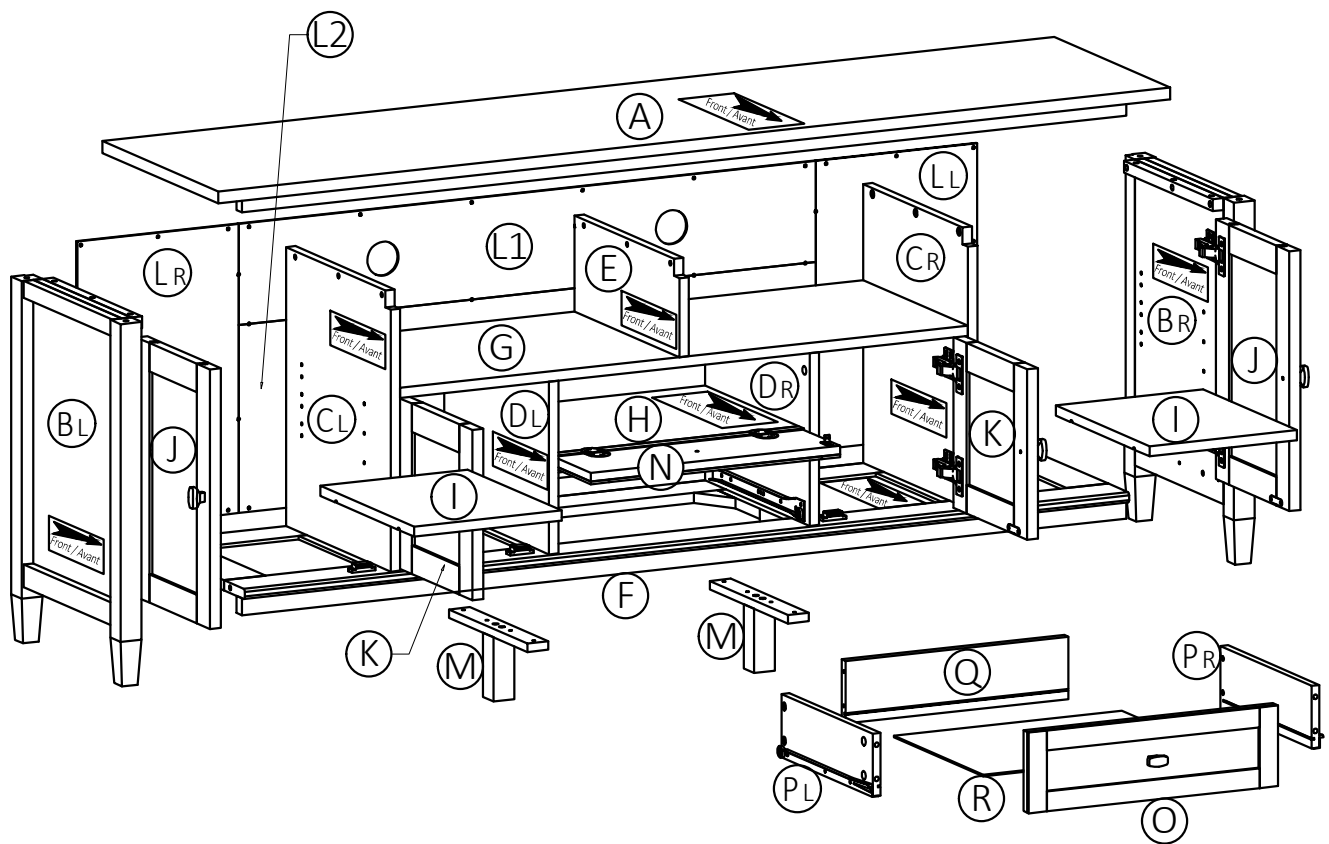


STEP-1

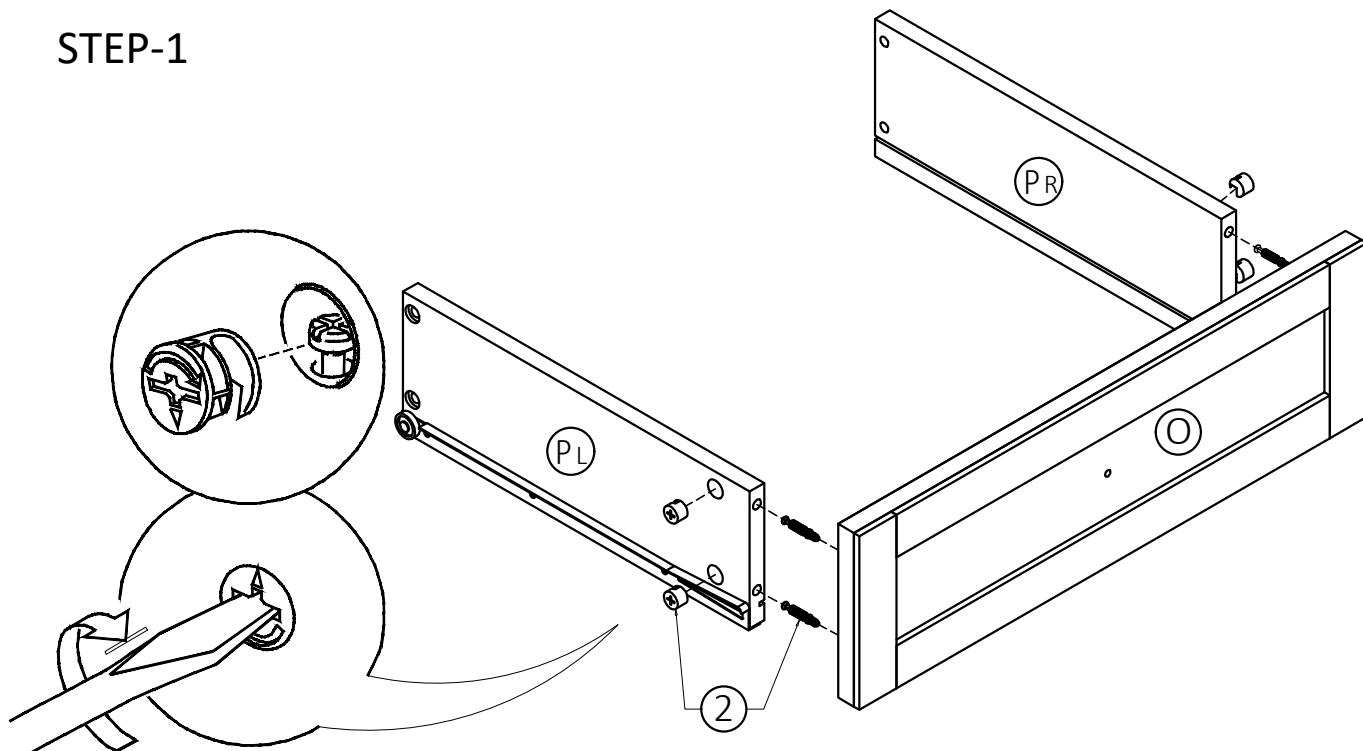 


1. Attach 4 Cam Lock Pins (2) to pre-drilled holes at back of Drawer Front (O).
2. Align Cam Lock Pins with guide holes and attach Drawer Sides (PL, PR).
3. Insert 2 Cam Locks (2) into guide holes on each Drawer Side (PL, PR).
4. Use flathead screwdriver to secure Cam Locks.

 STEP-2

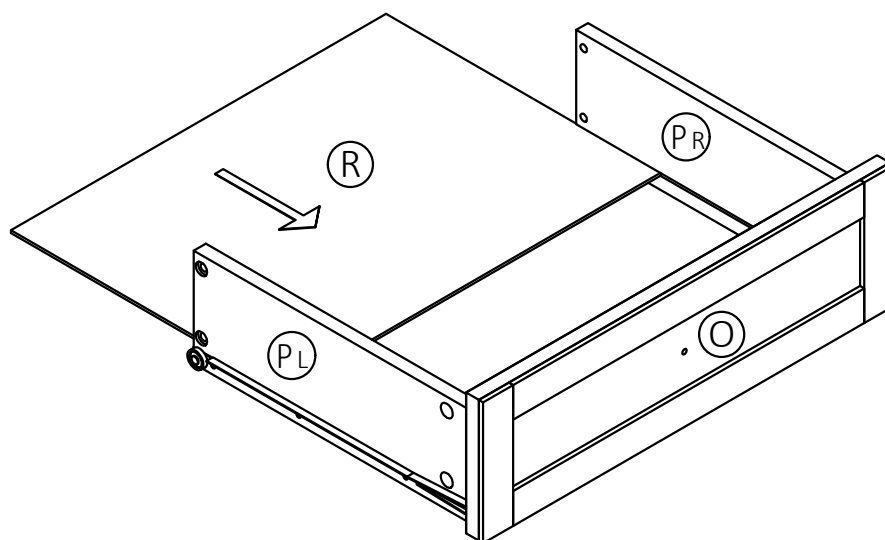



1. Slide Drawer Bottom (R) firmly into slots on Drawer Sides (PL, PR) and Drawer Front (O).

 STEP-3

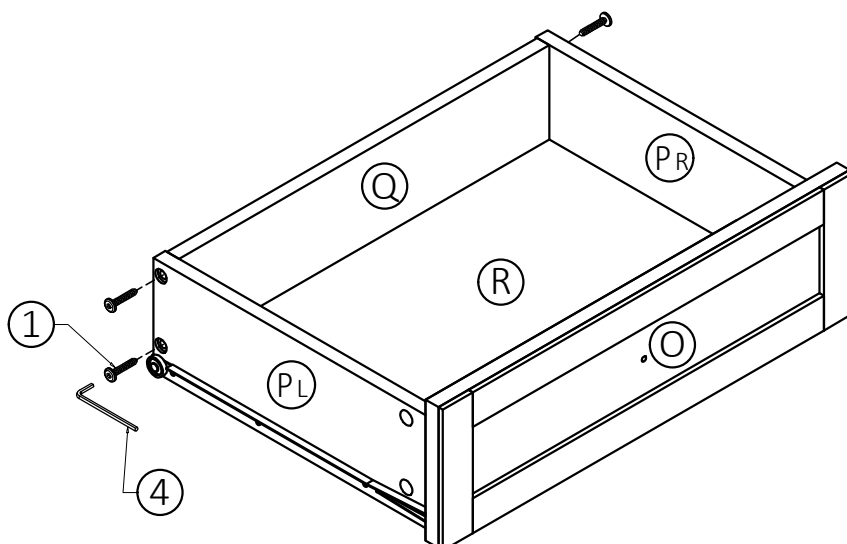


1. Align Drawer Back (Q) with Drawer Bottom (R) and press firmly into slot.
2. Attach Drawer Back (Q) using 2 Allen Key Screws (1) through guide holes on each Side (PL, PR).
3. Use Allen Key (4) to tighten screws. Do not over-tighten.

  STEP-4

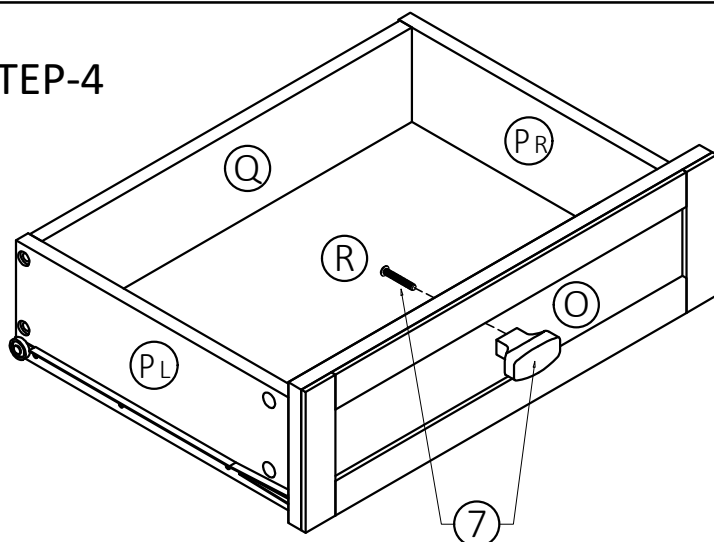


NOTE: The screwdriver is not included in the hardware pack.

 1. Use Phillips screwdriver to attach Handle (7) to Drawer Front (O).

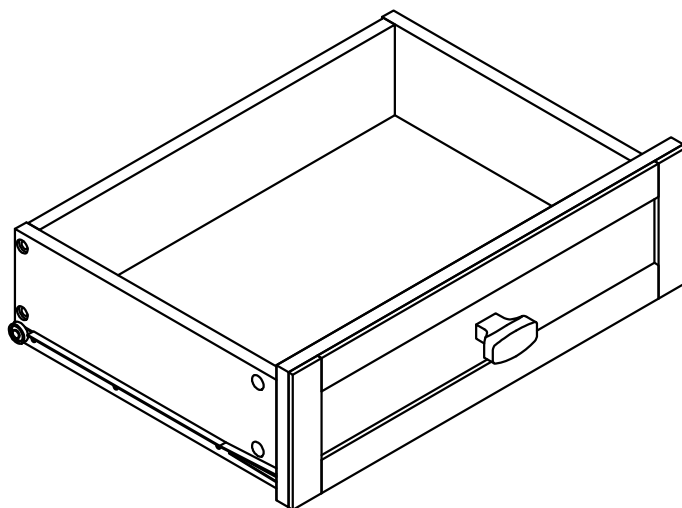


STEP-5

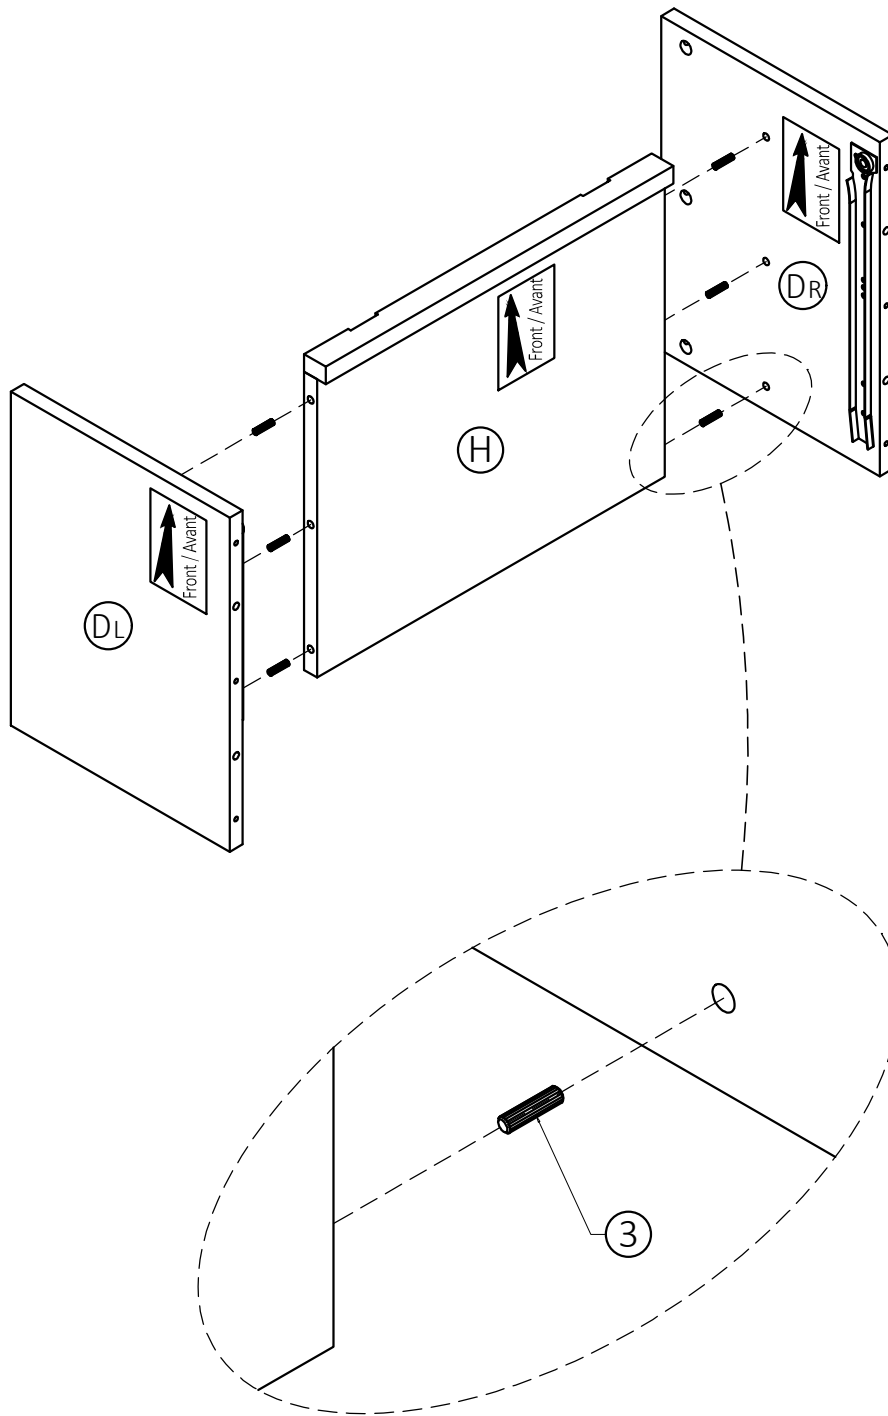 


1. Insert 6 Dowels (3) into guide holes on Centre Shelf (H).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Attach Centre Shelf (H) to Middle Dividers (DL, DR).
4. Use rubber mallet to tap Middle Dividers (DL, DR) into Centre Shelf (H).

 STEP-6

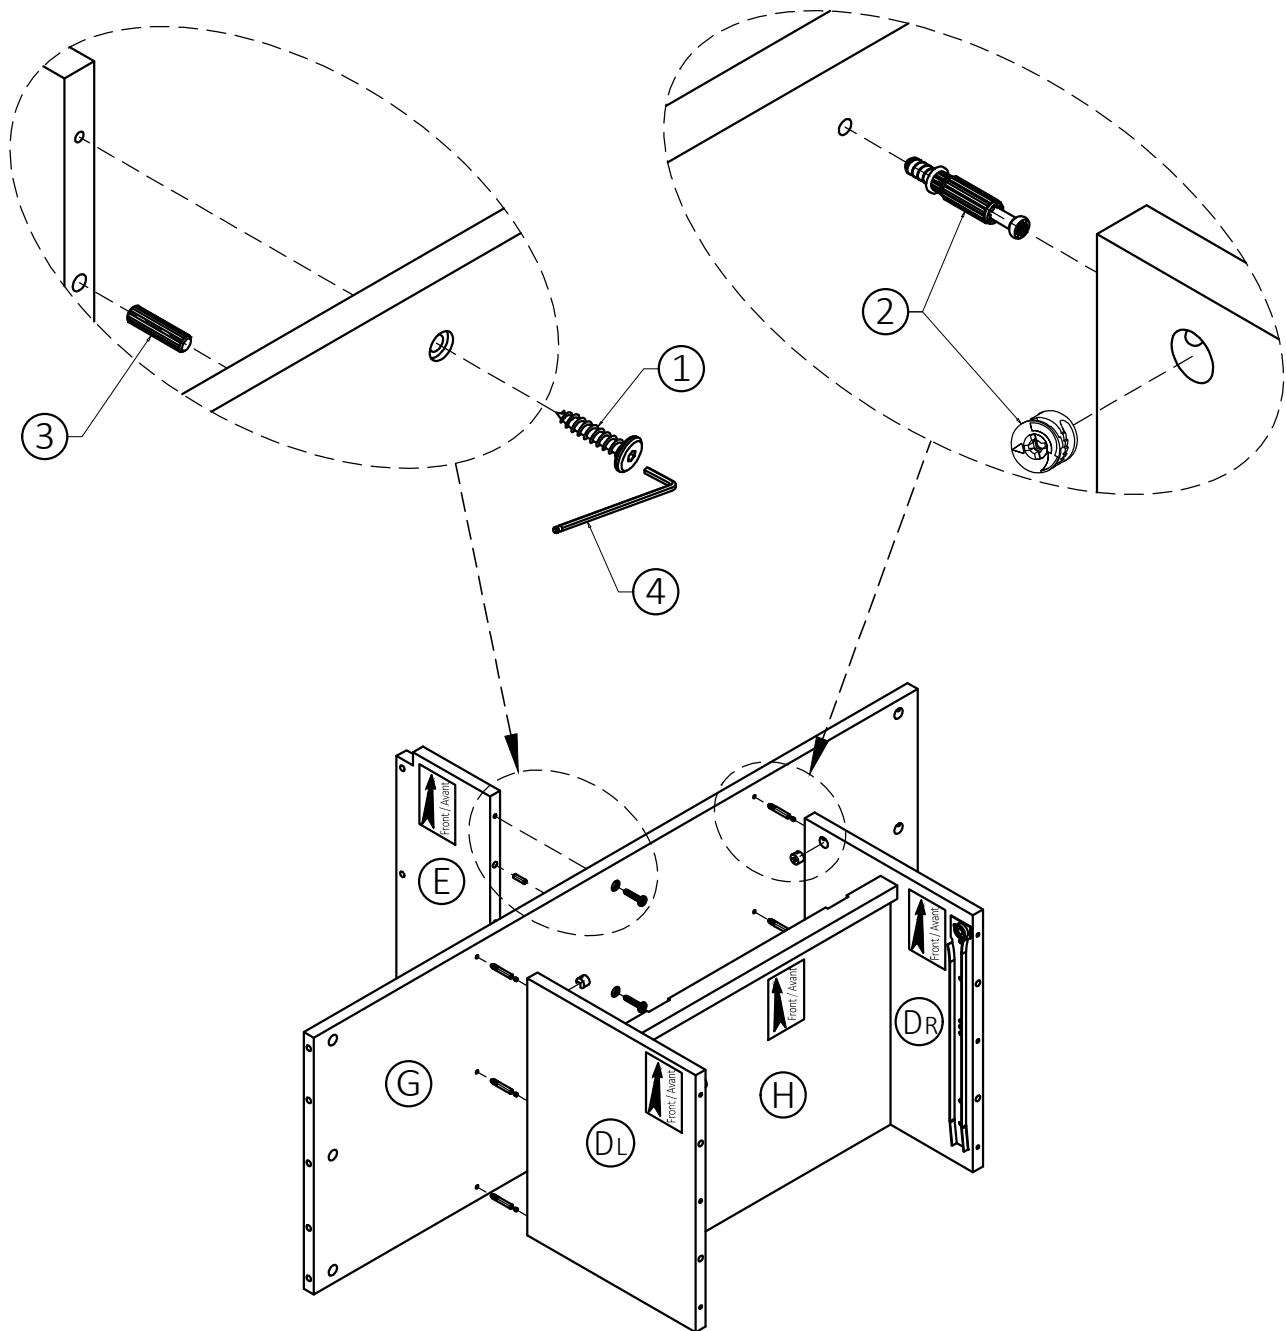


1. Insert 2 Dowels (3) into guide holes on bottom of Top Divider (E).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Attach Top Shelf (G) to Top Divider (E) using 3 Allen Key Screws (1).
4. Use Allen Key (4) to tighten Screws. Do not over-tighten.
3. Attach 6 Cam Lock Pins (2) to Top Shelf (G) using pre-drilled holes.
4. Align Cam Lock Pins with guide holes on Middle Dividers (DL, DR).
5. Insert 6 Cam Locks (2) into guide holes on Middle Dividers (DL, DR) (3 Cam Locks on each Middle Divider).
6. Use flathead screwdriver to secure Cam Locks.

 STEP-7

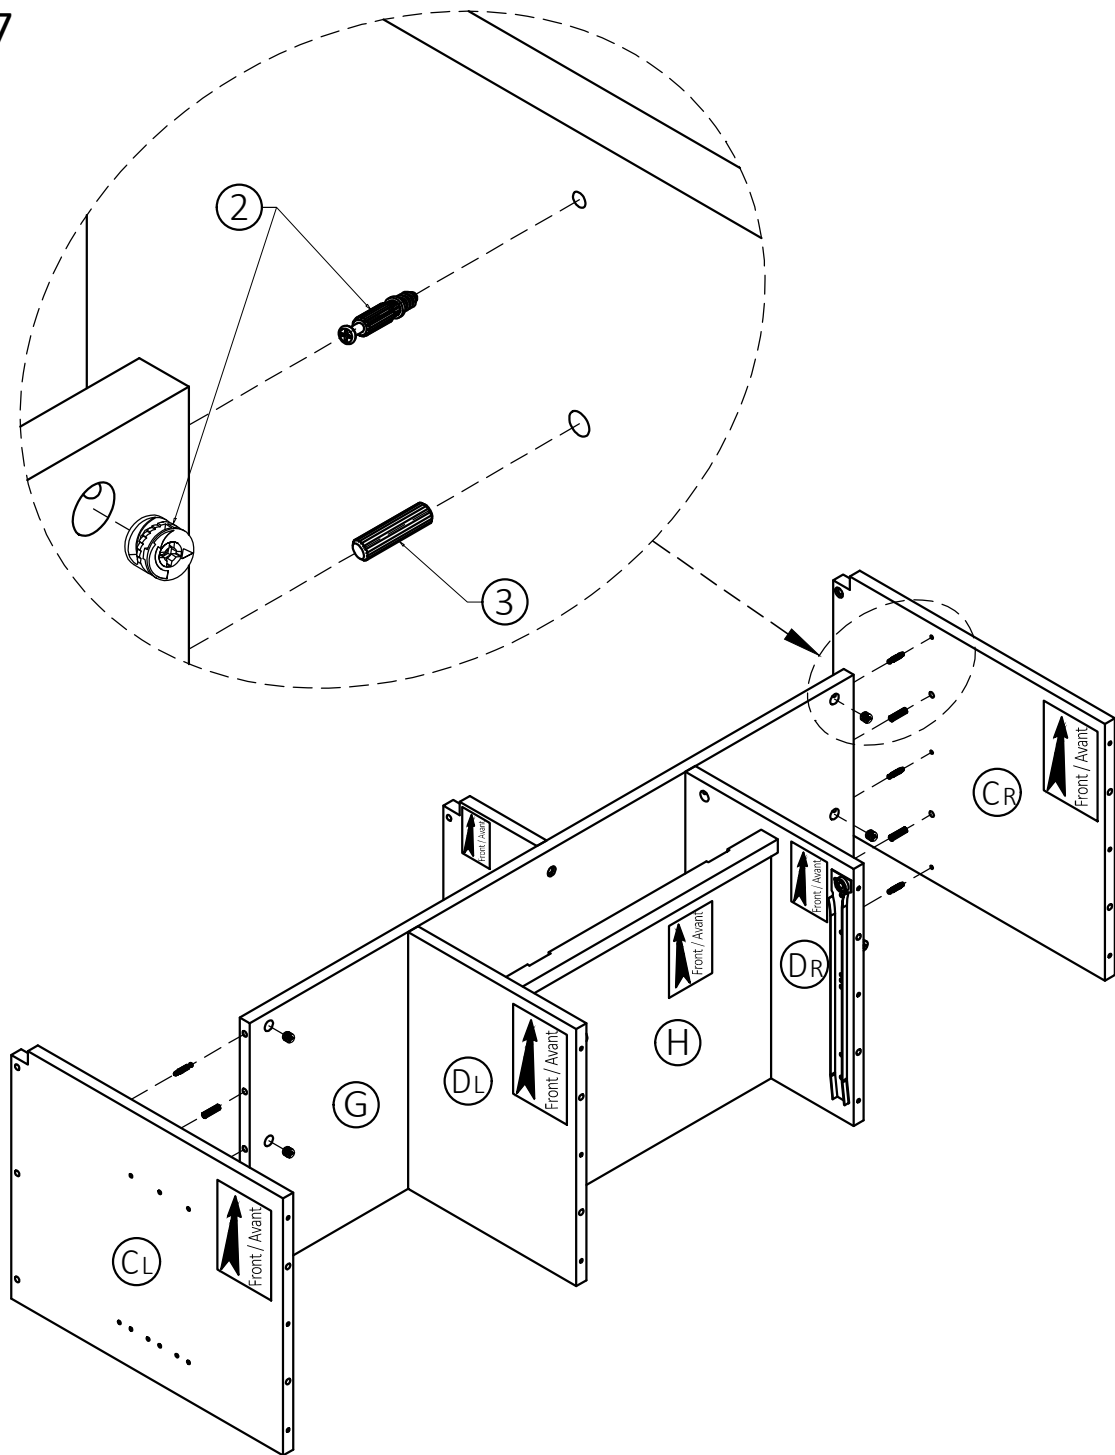


1. Insert 4 Dowels (3) into guide holes on Top Shelf (G) (2 dowels on each side).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Attach 6 Cam Lock Pins (2) to Dividers (CL, CR) using pre-drilled holes (3 pins on each Divider).
4. Align Cam Lock Pins with guide holes on Top Shelf (G).
5. Insert 6 Cam Locks (2) into guide holes on Top Shelf (G) (3 Cam Locks on each side).
6. Use flathead screwdriver to secure Cam Locks.

 STEP-8

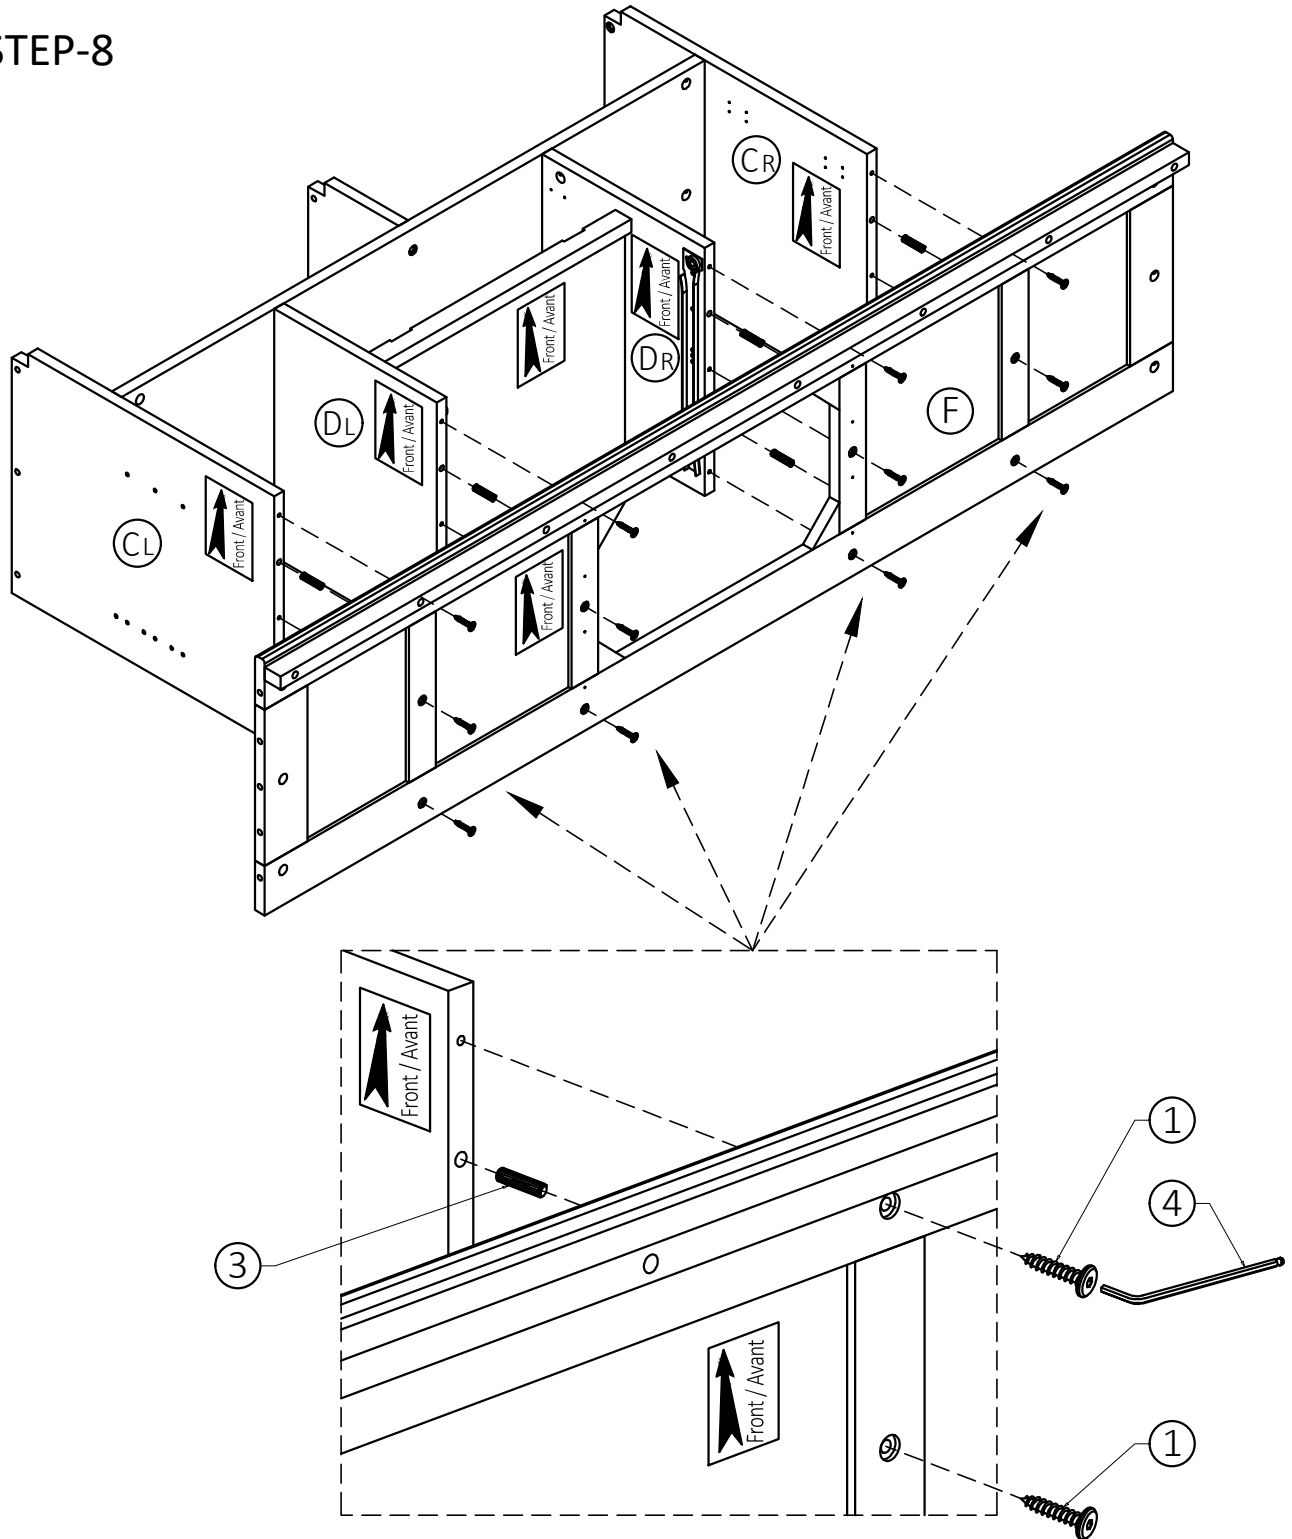


1. Insert 2 Dowels (3) into guide holes on bottom of each Divider (CL), (CR) and Middle Divider (DL), (DR).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Attach Bottom Shelf (F) to Dividers (CL), (CR) and Middle Dividers (DL), (DR) using 12 Allen Key Screws (1).
4. Use Allen Key (4) to tighten Screws. Do not over-tighten.

 STEP-9

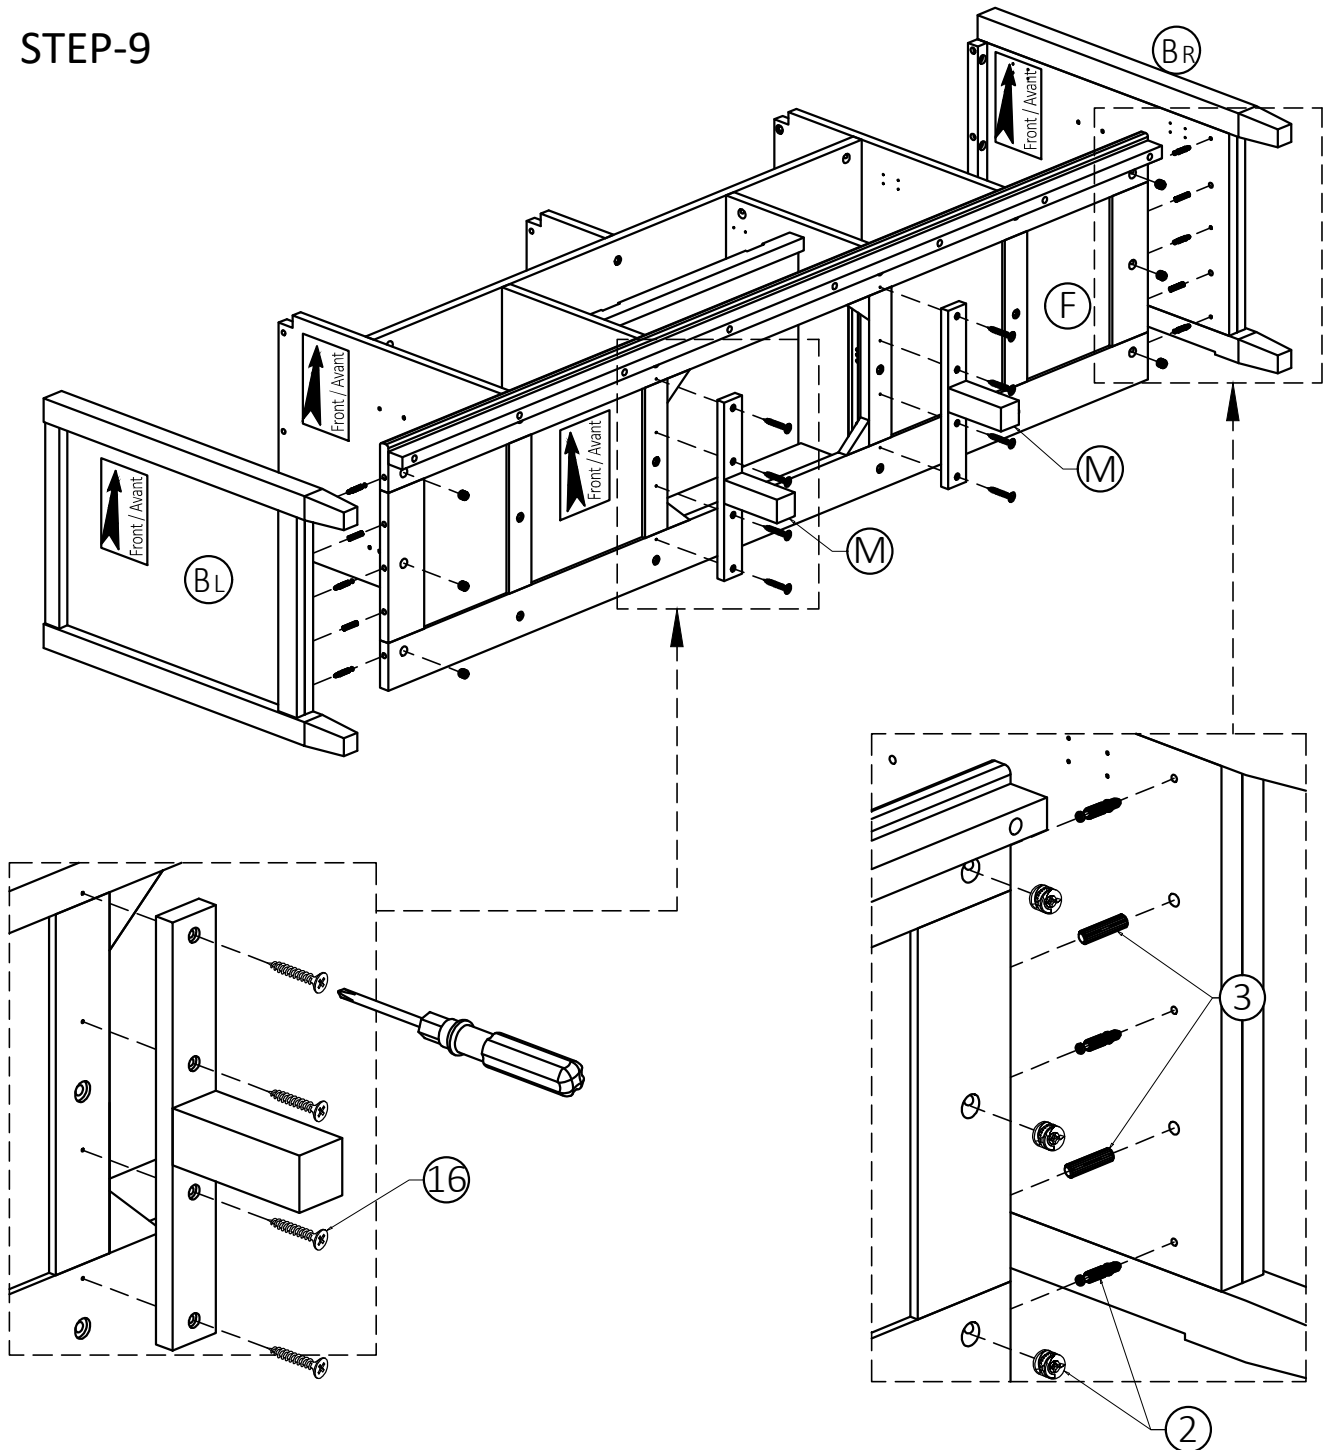


1. Insert 4 Dowels (3) into guide holes on Bottom Shelf (F).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Attach 3 Cam Lock Pins (2) to each Side (BL, BR) using pre-drilled holes.
4. Align Cam Lock Pins with guide holes on Bottom Shelf (F).
5. Insert 6 Cam Locks (2) into guide holes on Bottom Shelf (F).
6. Use flathead screwdriver to secure Cam Locks.
7. Attach Bottom Support Legs (M) to Bottom Shelf (F) using 8 Phillips Screws (16) (4 Phillips Screws on each Bottom Support Leg).
8. Use Phillips screwdriver to snugly tighten screw.

 STEP-10

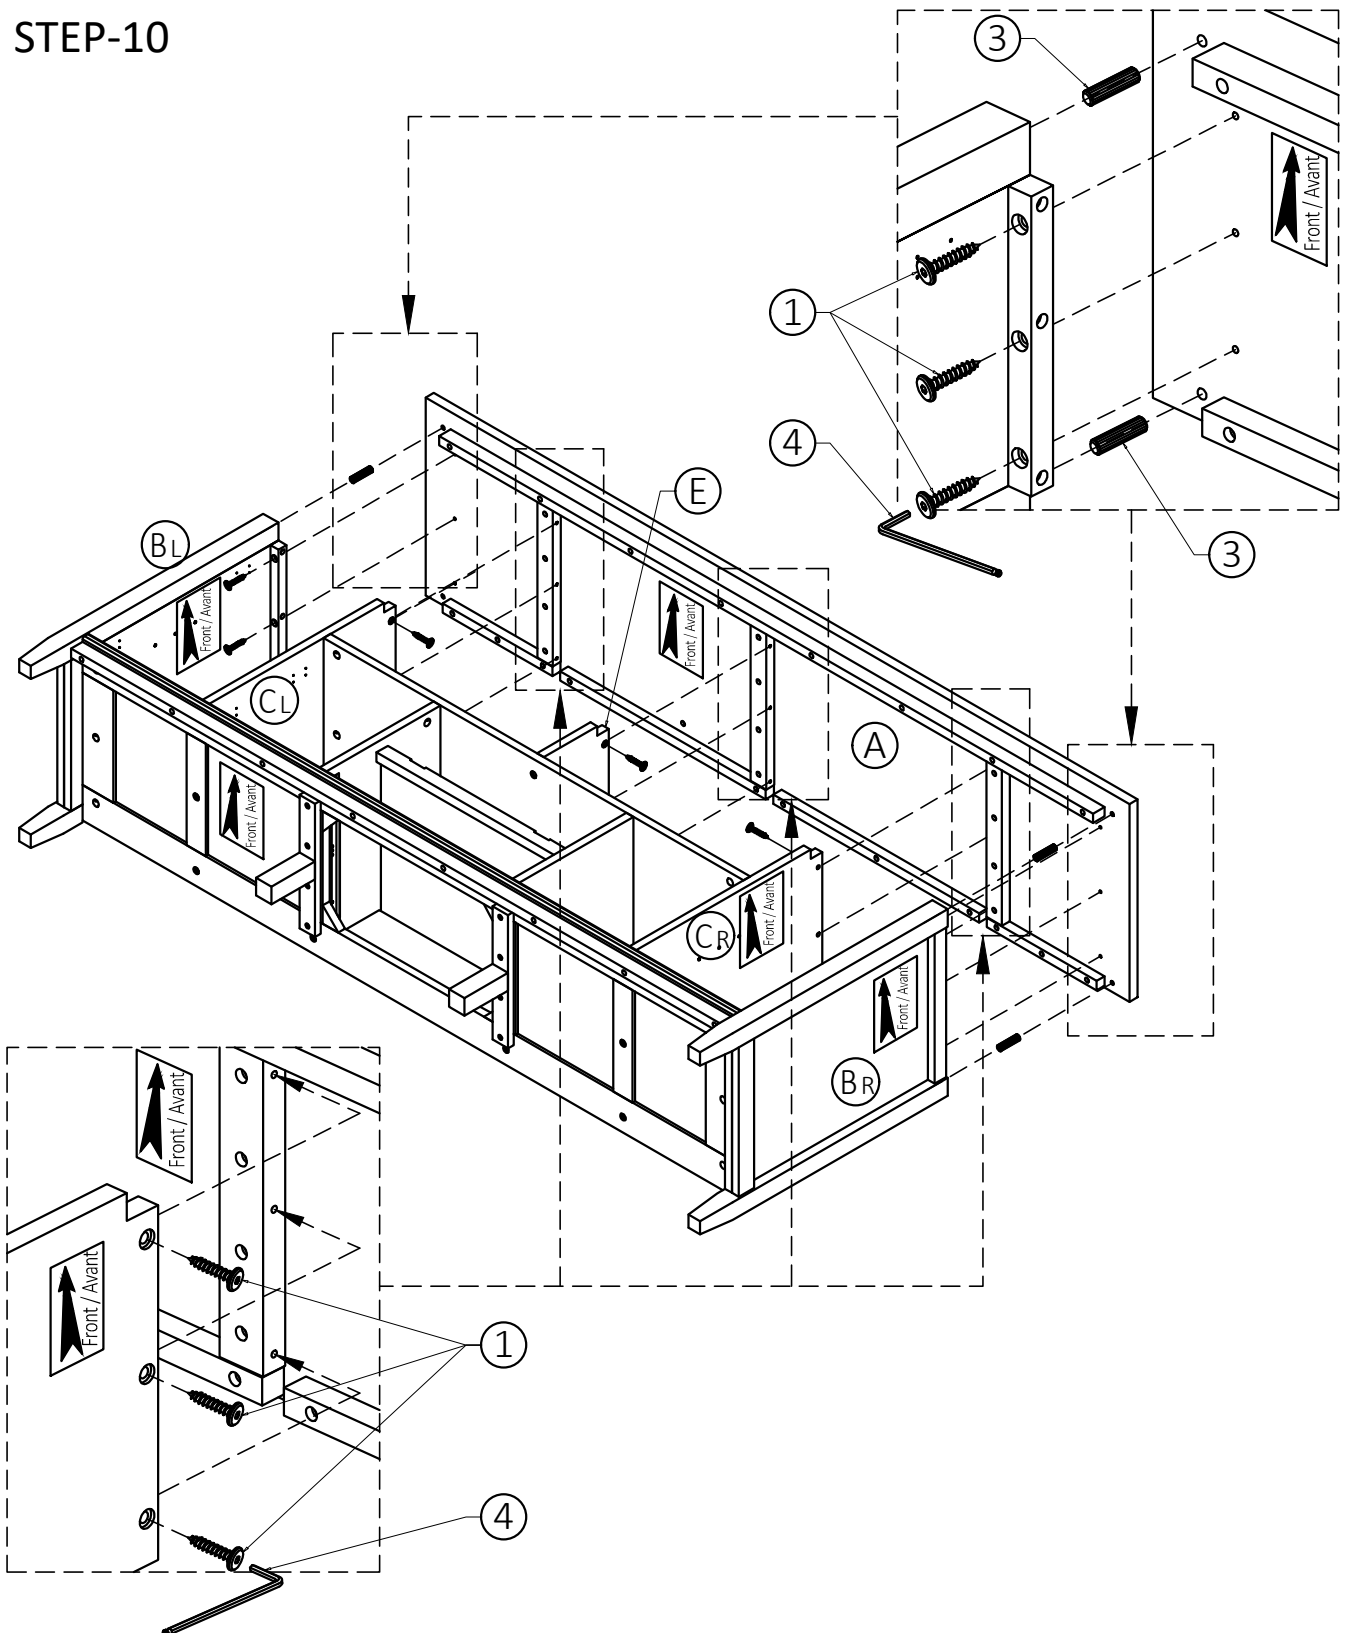


1. Insert 2 Dowels (3) into guide holes on each Side (BL, BR).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Attach Top (A) to Sides (BL, BR), Dividers (CL, CR) and Top Divider (E) using 15 Allen Key Screws (1) (3 screws on each Side and Divider).
4. Use Allen Key (4) to tighten Screws. Do not over-tighten.

 STEP-11

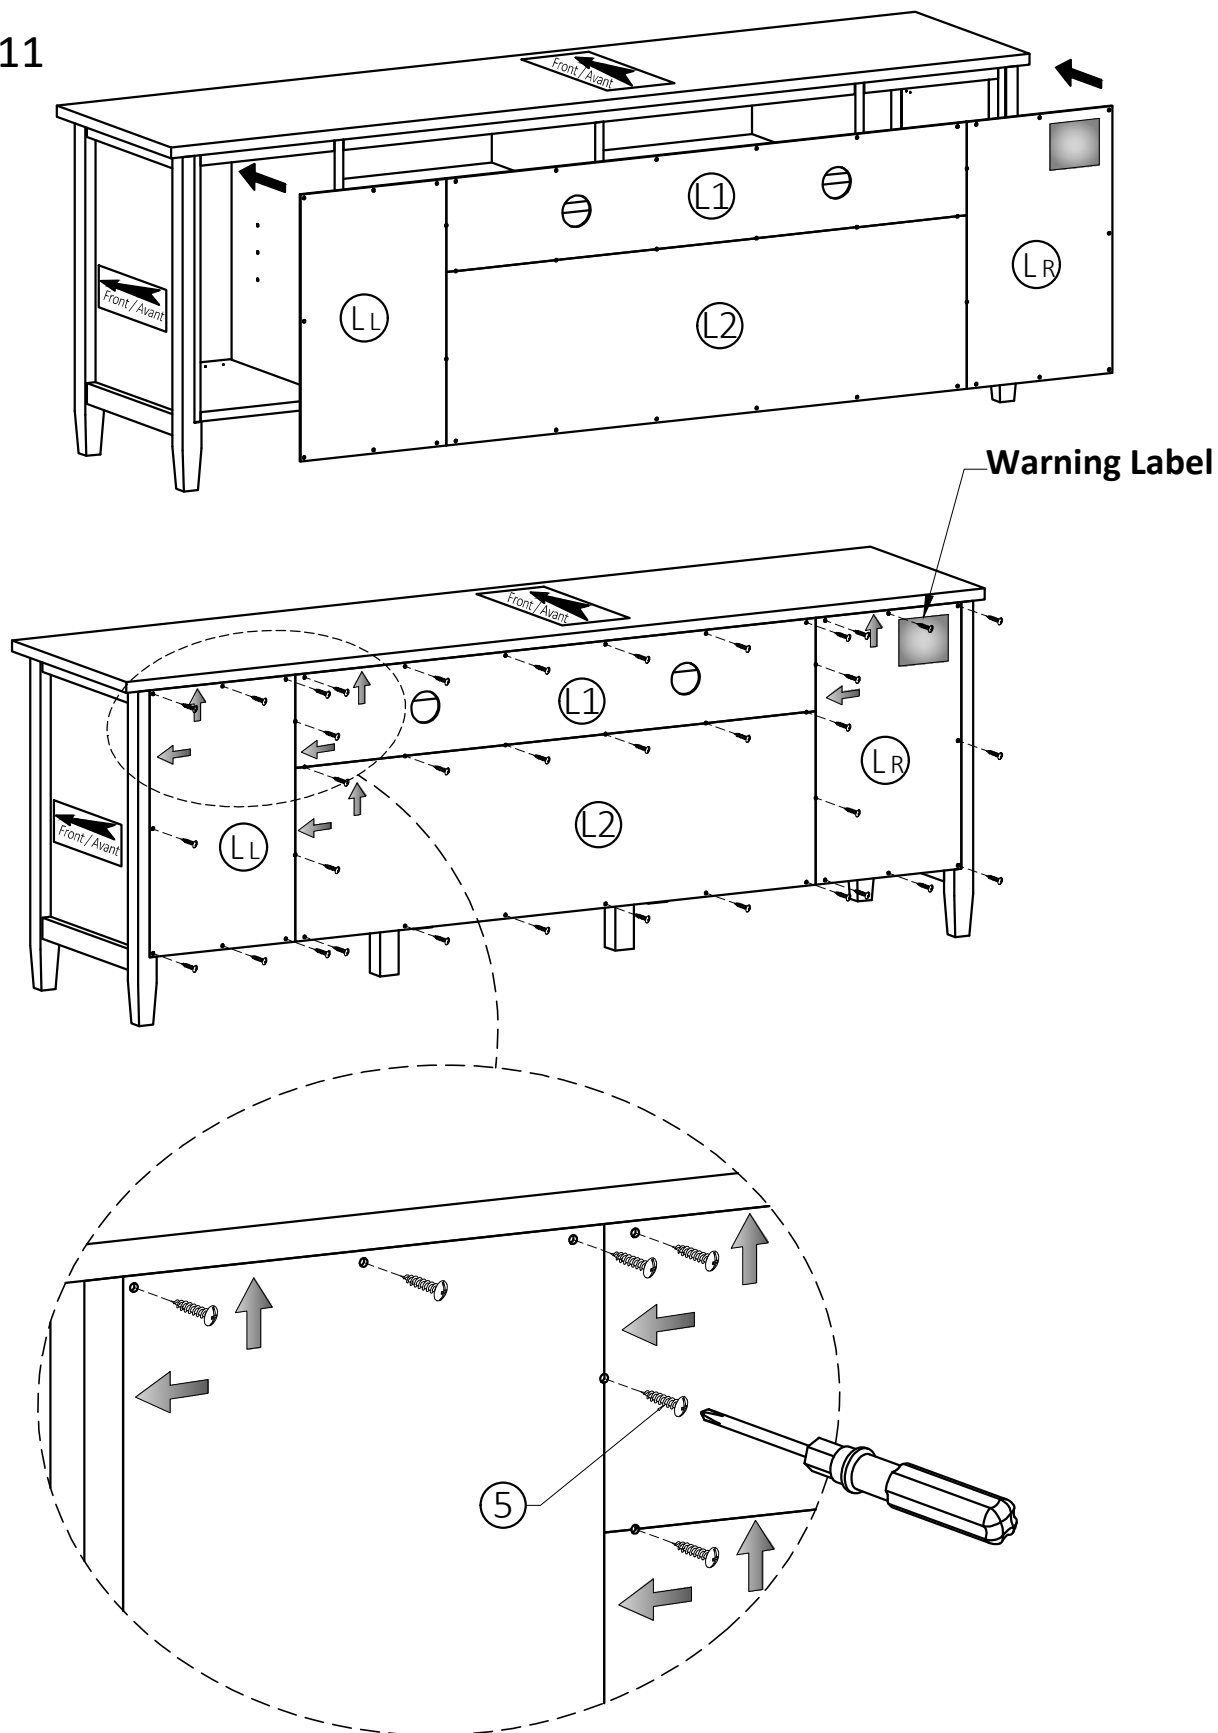


1. Attach Back Panels (LL), (LR), (L1), (L2) to back frame of TV using 36 Phillips Screws Round Head ⑤ through guide holes.
2. Use Phillips Screwdriver to tighten screws.


 
STEP-12

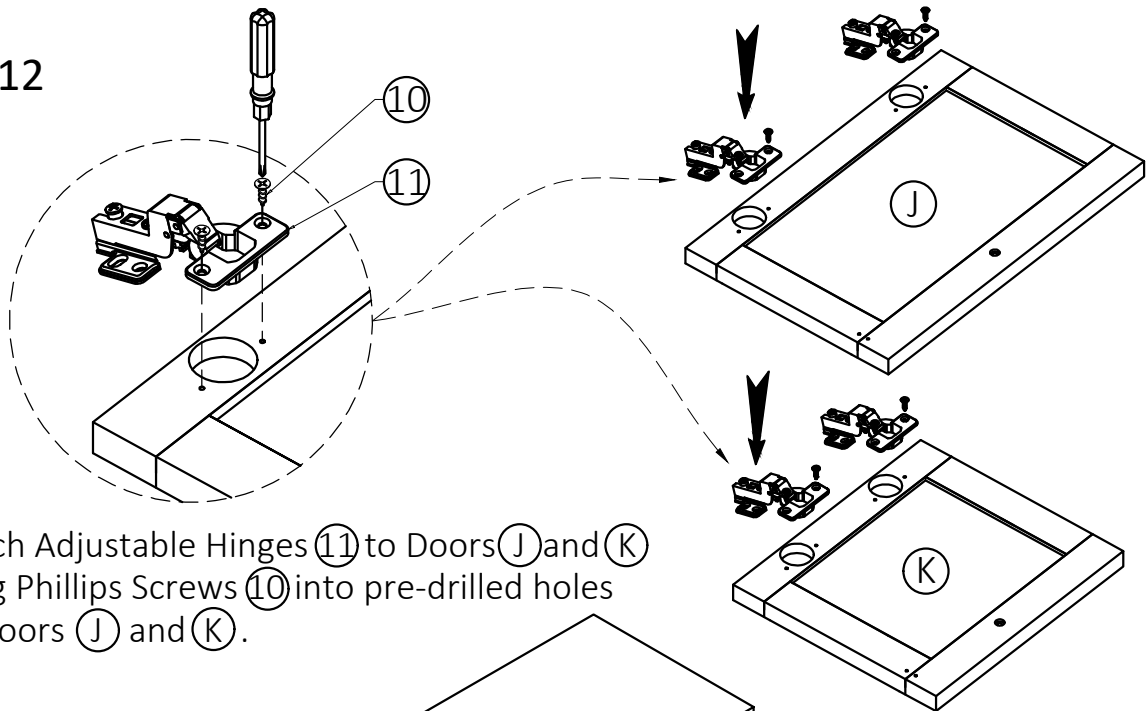

1. Attach Adjustable Hinges (11) to Doors (J) and (K) using Phillips Screws (10) into pre-drilled holes on Doors (J) and (K).

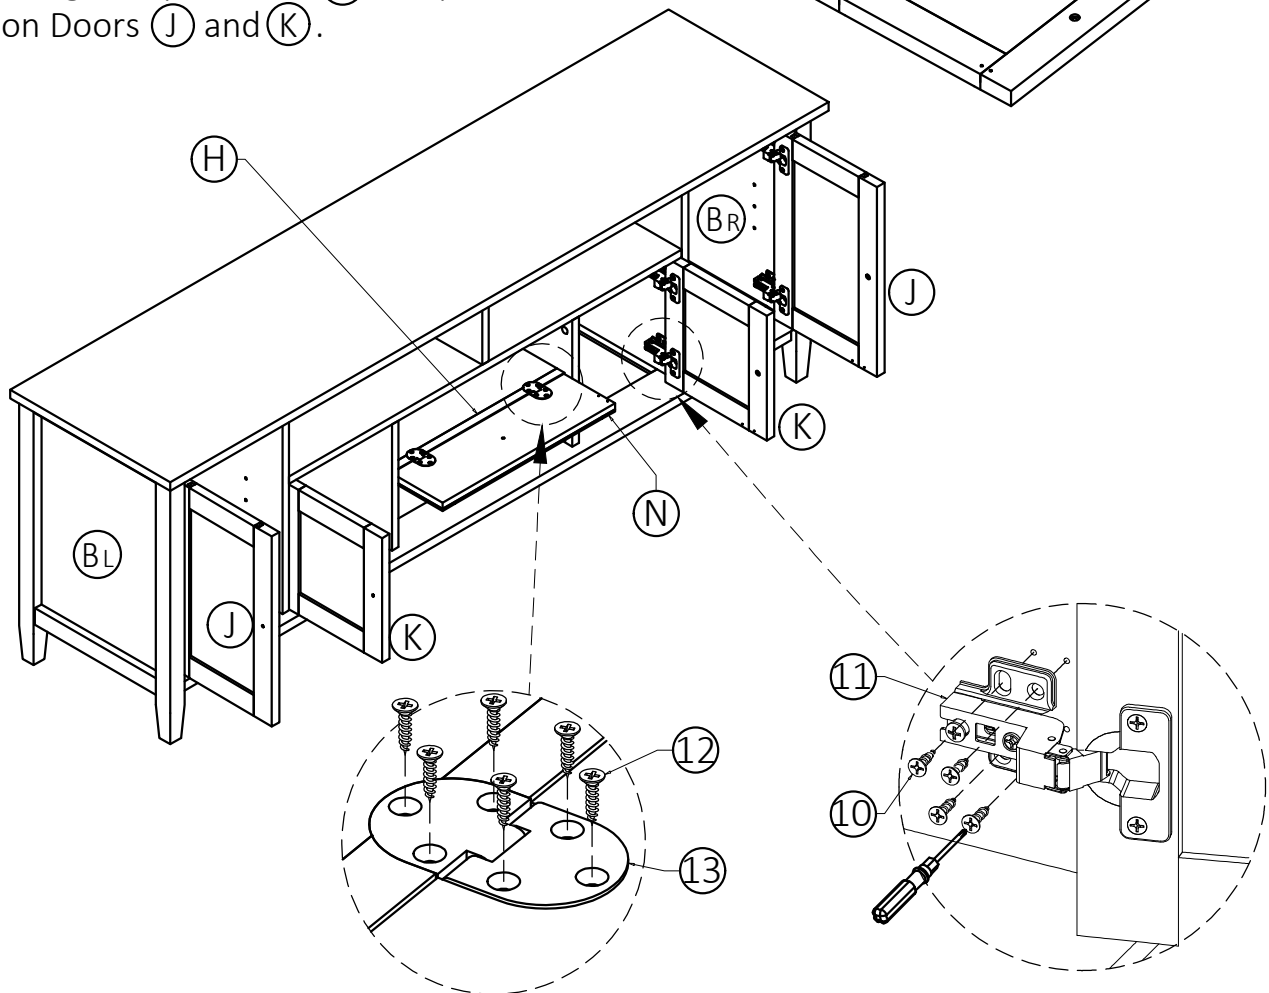 

2. Attach Adjustable Hinges on Doors (J) to Sides (BL), (BR) using Phillips Screws (10) into pre-drilled holes on Sides (BL), (BR).
3. Attach Adjustable Hinges on Doors (K) to Dividers (CL), (CR) using Phillips Screws (10) into pre-drilled holes on Dividers (CL), (CR).
4. Attach Hinges (13) to Centre Shelf (H) and Flip Down Door (N) using Phillips Screws (12) into pre-drilled holes.
5. Use Phillips Screwdriver to tighten screws.

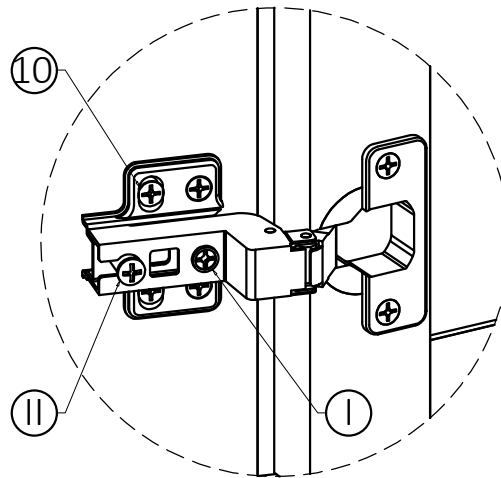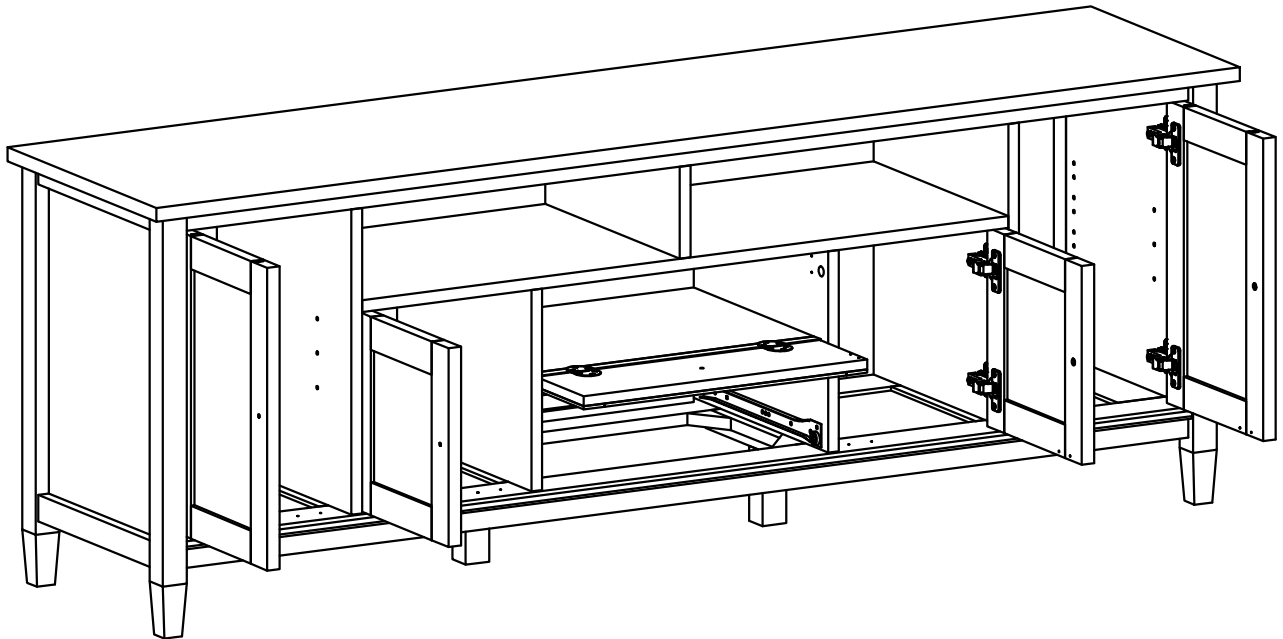  IMPORTANT NOTE:

Tighten the Screw marked ⑪ to fasten hinge. The door may need to be adjusted so that all the spaces between the door and the unit sides are equal.

To adjust, follow instructions:

1. Side adjustment 4 mm

To move the door towards the side panel, loosen screw ① and tighten screw ⑪.

To move the door away from the side panel, loosen screw ⑪ and tighten screw ①.

 
2. Depth adjustment 4 mm

Loosen screw ⑪ (just one turn), adjust door to desired position, re-tighten screw .

3. Height adjustment


Loosen screw ⑩, adjust door to desired position, re-tighten screw .

STEP-13

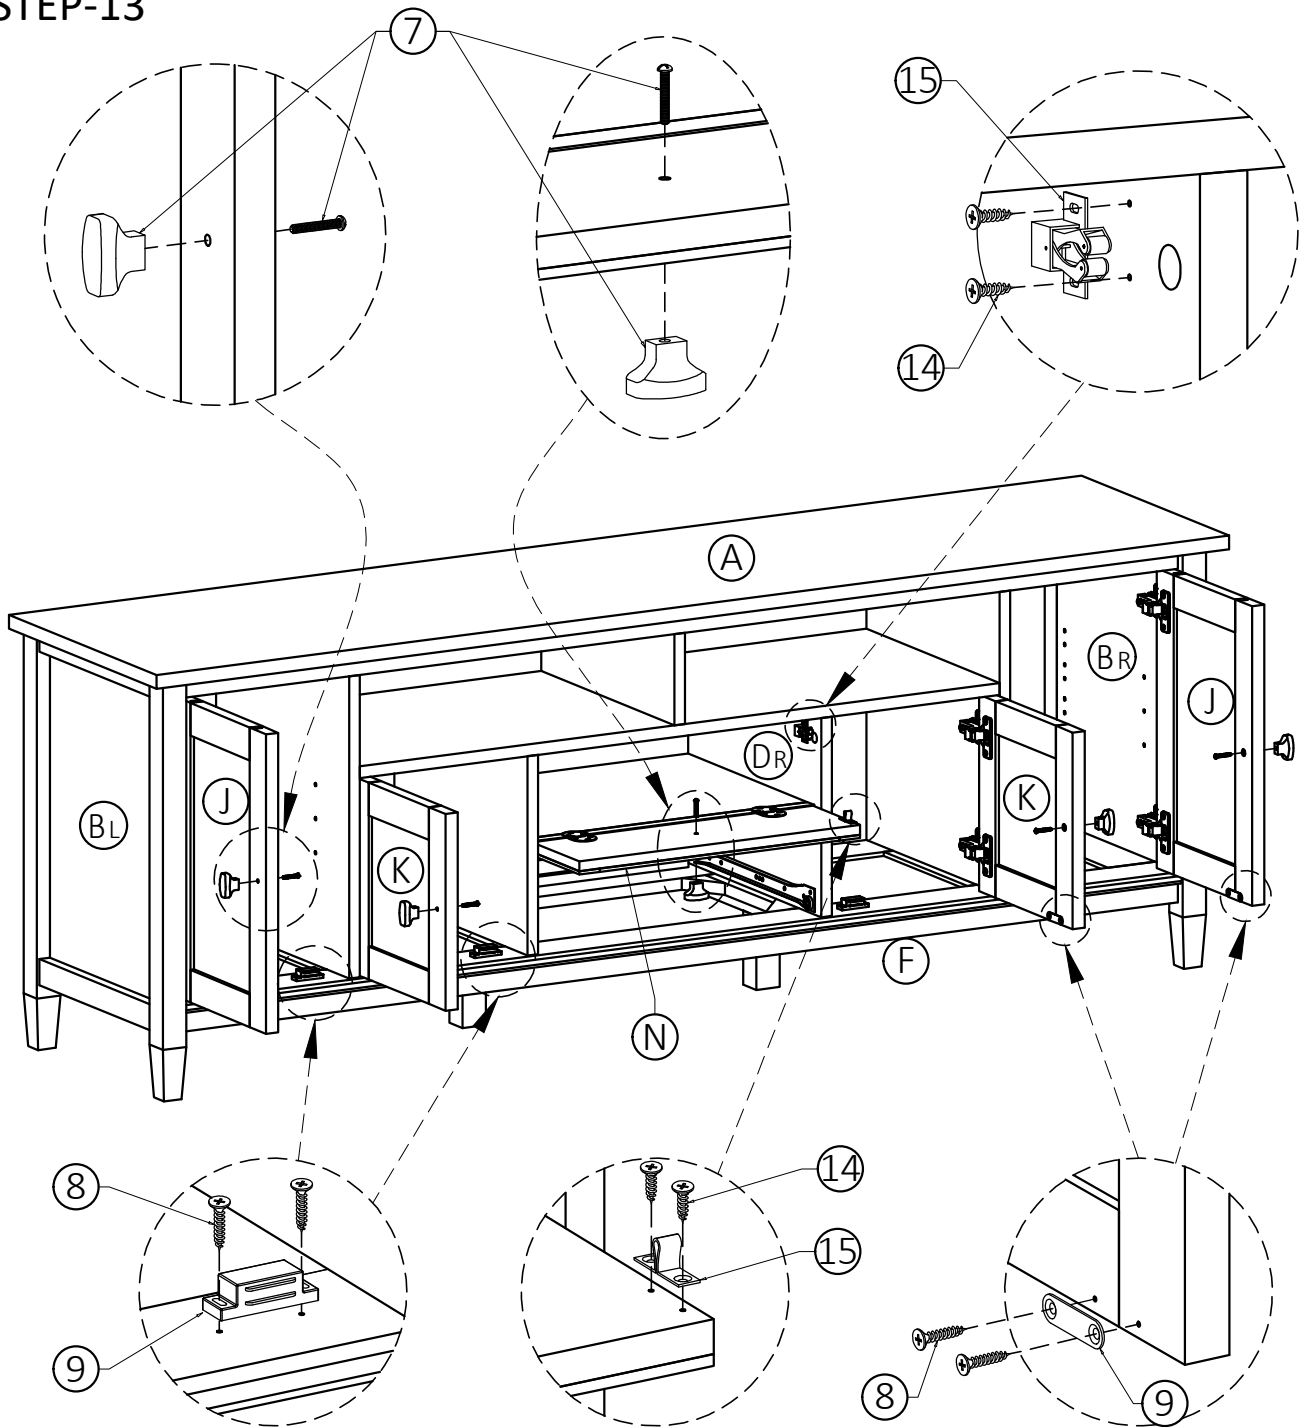




1. Attach Magnet Plates (9) to bottom corner of Large Doors (J), Small Doors (K) using Phillips Screws (8) into pre-drilled holes on Large Doors (J), Small Doors (K).
2. Attach Magnets (9) using Phillips Screws (8) into pre-drilled holes on Bottom Shelf (F).
3. Attach Latch (15) to Flip Down Door (N) using Phillips Screws (14) into pre-drilled holes.
4. Attach Latch (15) to Right Middle Divider (DR) using Phillips Screws (14) into pre-drilled holes.
5. Use Phillips screwdriver to snugly tighten screw.
6. Use Phillips screwdriver to attach Handles (7) to Large Doors (J), Small Doors (K), Flip Down Door (N).

 STEP-14

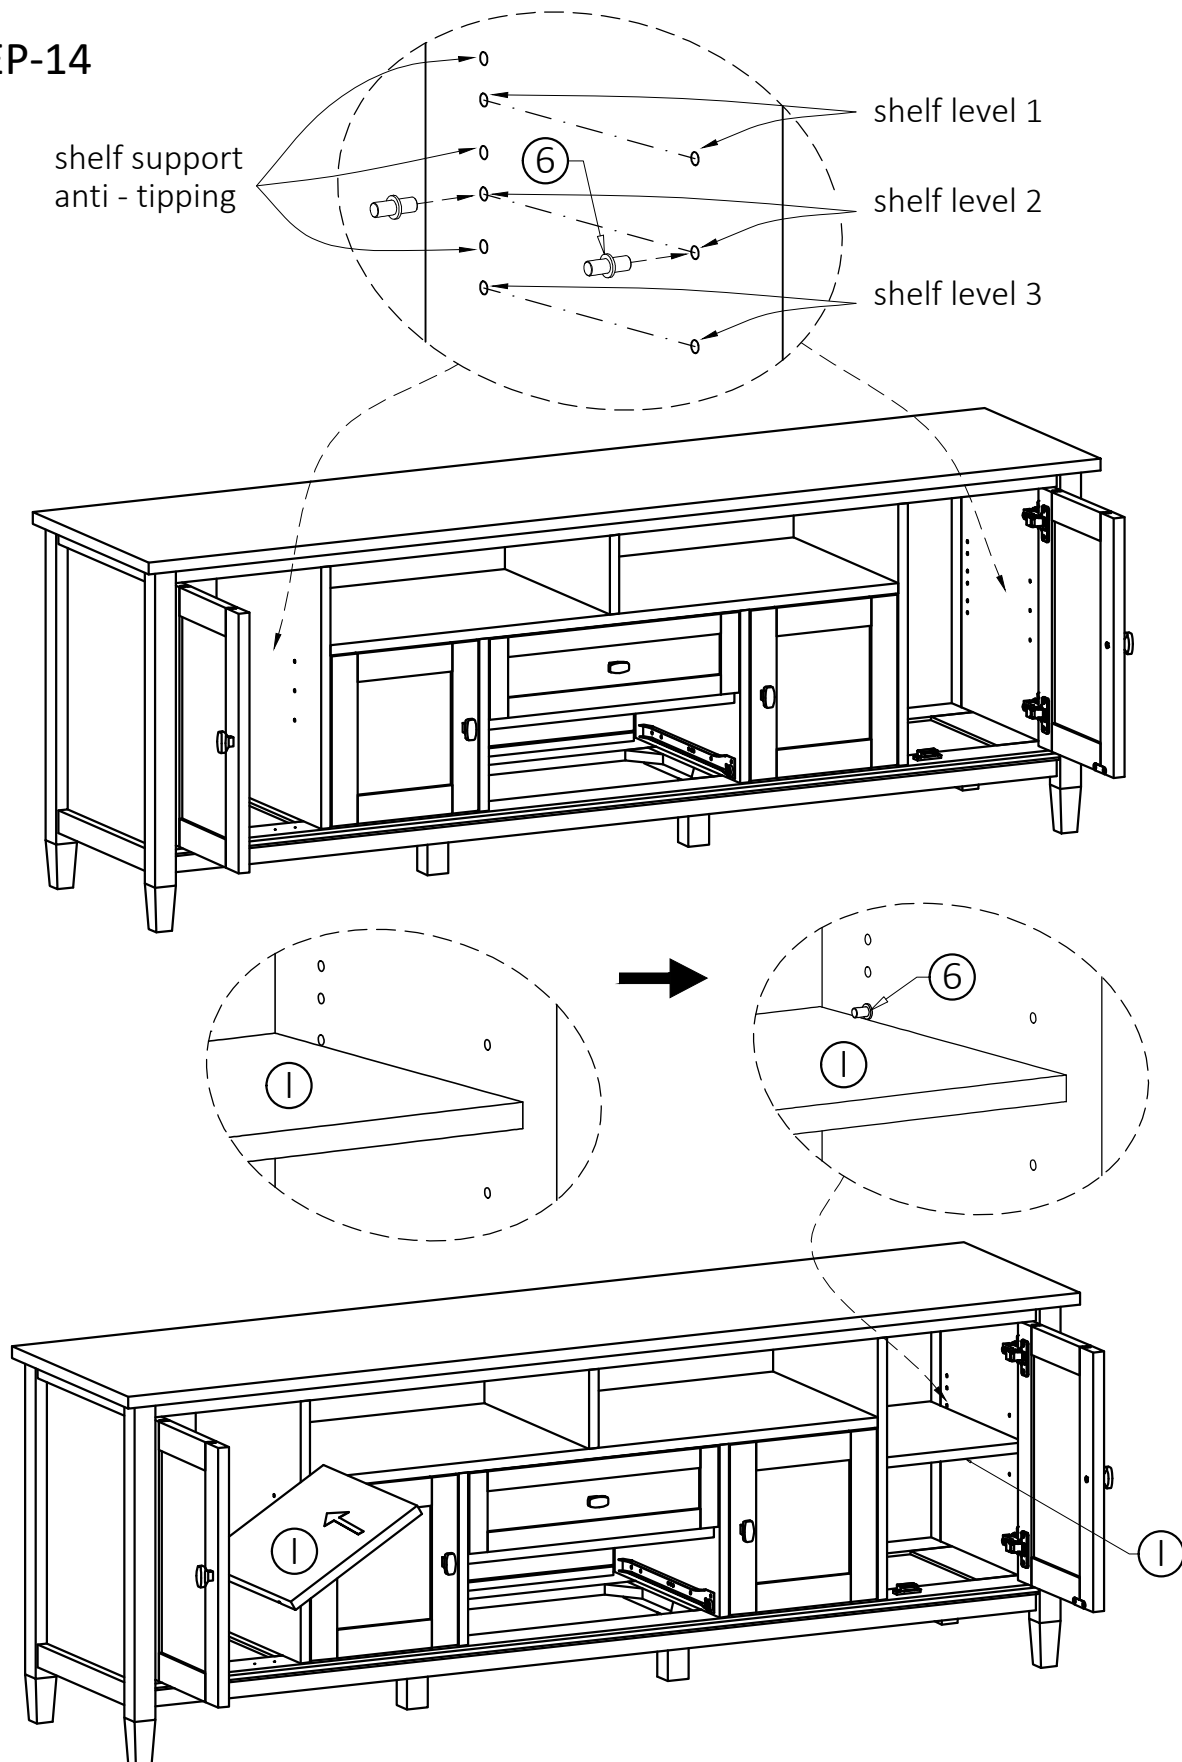

1. Use 4 Shelf Supports (6) for each Cabinet Shelf (1) in desired location.
2. 2 Shelf Supports (6) may be used on back top of each Cabinet Shelf (1) as a tipping restraint.

   STEP-15

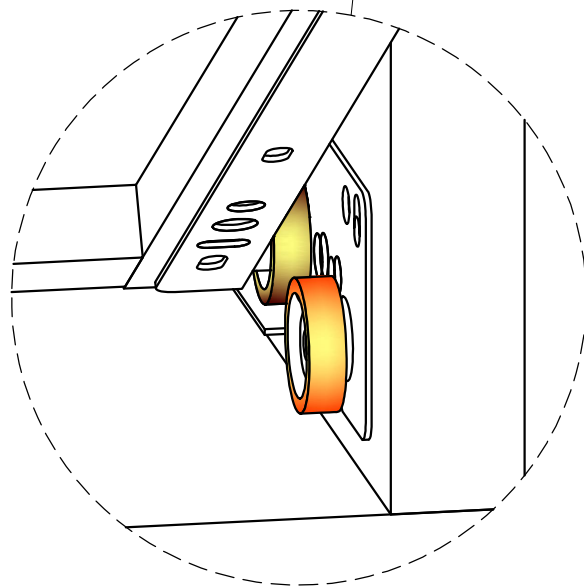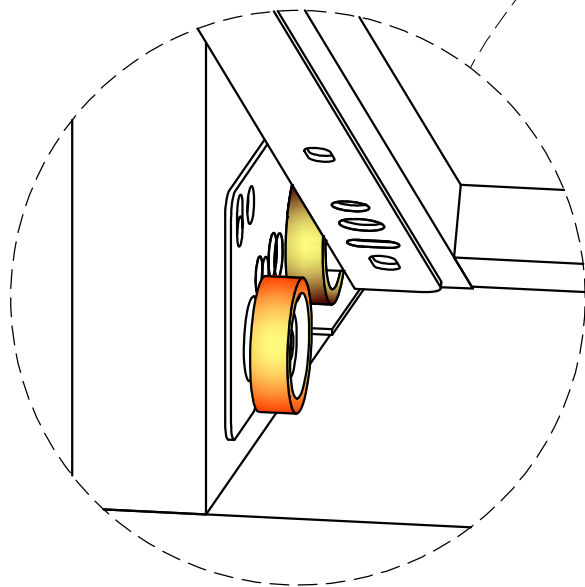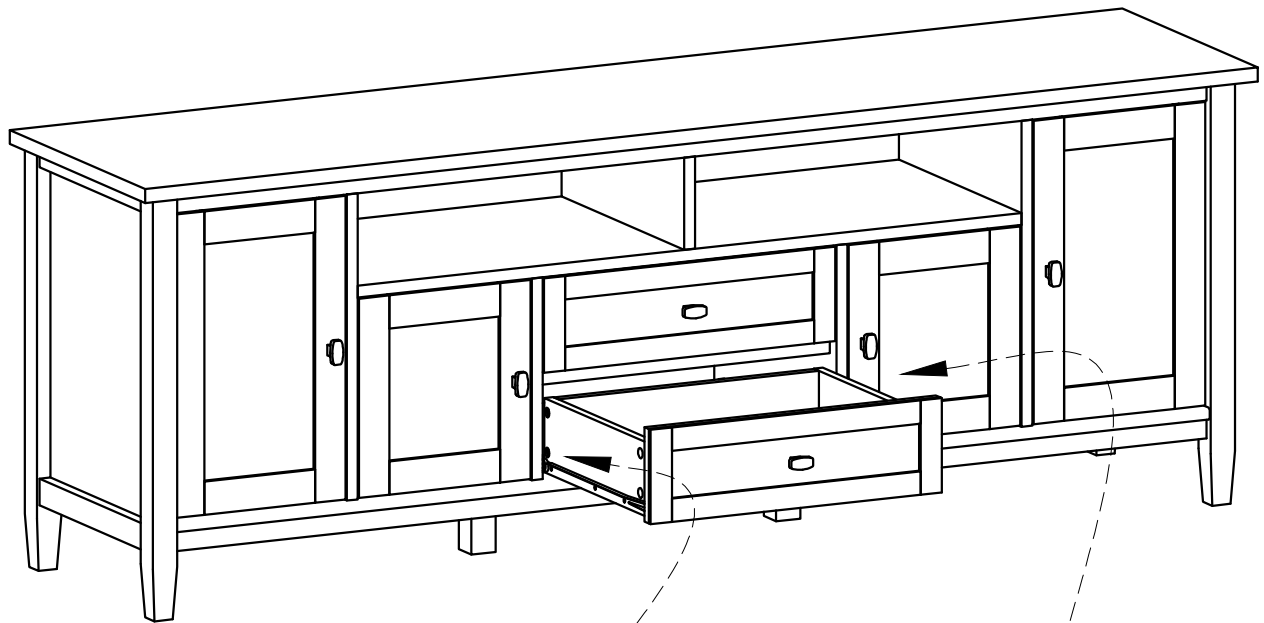


1. Insert assembled drawer into glides on assembled TV.

FURNITURE TIP OVER RESTRAINT ASSEMBLY

WARNING


Serious or fatal crushing injuries can occur from furniture tip-over.

 If the furniture tip over restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.



NOTE: The screwdriver is not included in the hardware pack.

 
STEP-16

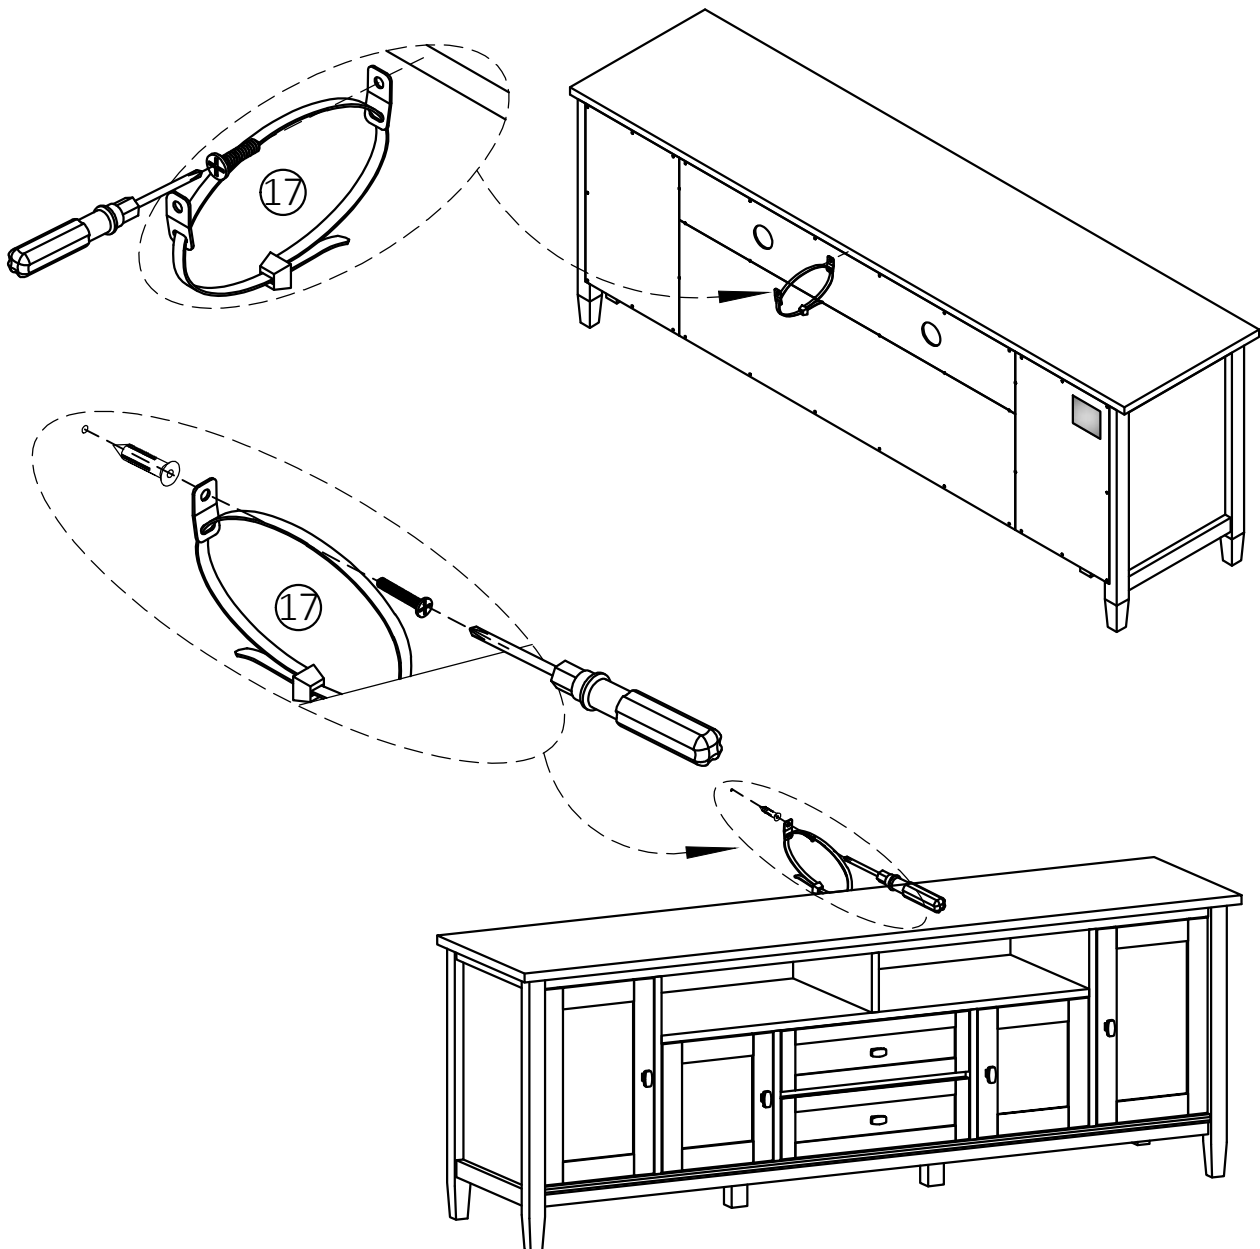


FURNITURE TIP OVER RESTRAINT ASSEMBLY

Furniture Tip Over Restraint Instructions:

 
1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the shorter screw.

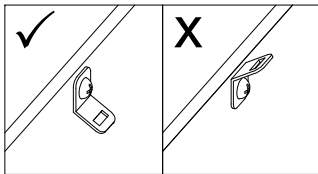

 2. Determine where furniture is to be placed and mark location on the wall for mounting bracket screw hole approximately 2 inches **below** the bracket mounted to the furniture.

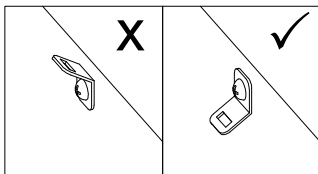

3. Drill a 3/16 inch hole in the wall. Press the plastic anchor into the hole and gently tap until the flange on the anchor is against the wall surface.
4. Position the bracket over the anchor and use the longer screw to securely attach the bracket to the wall.
5. Place the furniture so the back edge is in line with the bracket on the wall.
6. Lace an end of the nylon zip-tie strap down through each bracket. Bring both ends together and slide the smooth side upright through the square-shaped end and pull through to create the "locked" position.
7. Check to make sure the strap is securely laced and locked to the brackets.

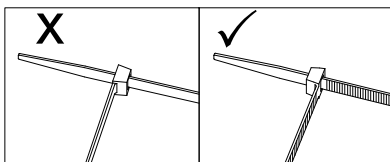 

- DO NOT place heavy objects in top drawers
- DO NOT let children climb or hang on drawers, doors or shelves

WARRANTY

Thank you for purchasing a Simpli Home – Wyndenhall – Brooklyn + Max product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

In case of any malfunction of your product (failure, missing parts, etc.) please contact us at our toll free service line at 1-866-518-0120 ext. 262 from 9 am to 4 pm, Monday to Friday, Eastern Standard Time or by email at customerservice@simpli-home.com.

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.