

Or visit [iLivingUSA.com/register-product](https://www.ilivingusa.com/register-product)



Rate us

FEEDBACK
LOVE IT? HELP US MAKE THE PRODUCT MORE FOR YOU.
Let us know with a customer review.

Please visit: <https://www.amazon.com/review/review-your-purchases#>

At iLiving USA, we are committed to bringing top quality products to our customers.

iLIVING USA

860 Mahler Road, Burlingame

CA 94010

Tel: 1-800-317-1688

Email: service@ilivingusa.com

Like us on Facebook: <https://www.facebook.com/ilivingusa/>

Follow us on Twitter: @iLIVINGUSA

Check out our website: www.ilivingusa.com



HIGH VELOCITY WAREHOUSE FAN



Models: ILG8VF10 / ILG8VF12 / ILG8VF16 /
ILG8VF20 / ILG8VF24



INSTRUCTION MANUAL

PLEASE READ AND SAVE THESE INSTRUCTIONS. READ CAREFULLY BEFORE ATTEMPTING TO ASSEMBLE, INSTALL, OPERATE, OR MAINTAIN THE PRODUCT. PROTECT YOURSELF AND OTHERS BY OBSERVING ALL SAFETY NOTICE. FAILURE TO COMPLY WITH INSTRUCTIONS COULD RRESULT IN PERSONAL INJURY AND/OR PPROPERTY DAMAGE! KEEP INSTRUCTIONS FOR FUTURE REFERENCE.



WARNING!

Installation, troubleshooting, and replacement of parts are to be performed only by authorized service technicians.

Electrical Requirements:

- The motor amperage and voltage ratings must be checked for compatibility to supply voltage prior to final electrical connection. Please refer to the motor's nameplate label.
- Wiring must conform to local, state, and national codes.
- DO NOT use this fan with any solid-state speed controller

SAFETY WARNING

- Disconnect power immediately if any abnormalities occur during operation
- Unit is not water proof. Operate unit after from water.
- Do not insert any object into the blades during operation.

SAVE THESE INSTRUCTIONS

GENERAL SAFETY INSTRUCTION

INSTALLATION AND OPERATION INSTRUCTION

All units are shipped fully assembled; no installation required.

OPERATING INSTRUCTIONS

- Make sure the unit is placed of a flat surface
- Keep the area free of objects that could impede air flow on both the intake and exhaust side of fan.
- For proper exhaust operation, a window, door, or louver should be opened for fresh air intake on the opposite side of the area to be ventilated.
- Turn the On/Off switch to engage fan

MAINTENANCE

- Shut off power before cleaning or maintenance.
- Wipe casing and impeller with care using a dampened soft cloth or neutral detergent, ensure the motor of other electrical components does not come in contact with water
- Apply mechanical lubrication in machinery axletree after ventilators has used more than 1000 hours to ensure longer use life for ventilator.


WARRANTY

This heater comes with a 1-YEAR LIMITED COMPONENT WARRANTY. If your unit does not appear to be working properly, please contact our service center by calling 1-800-317-1688. Prior to your call, we encourage you to visit our service related website www.ilivingusa.com for troubleshooting tips and service instructions if needed.



Register

WARRANTY INFORMATION
Register your product at our website:

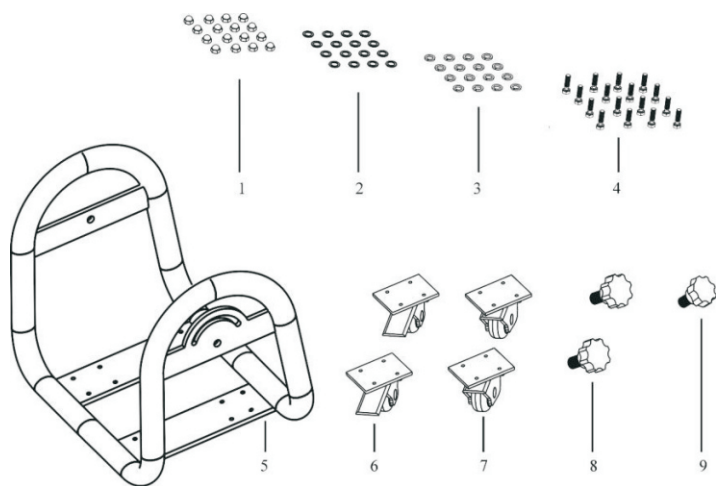

No.	Component	QTY	SIZE
1	Nut	16	M8
2	Spring washer	16	/
3	Washer	16	/
4	Screw	16	M8*20
5	Hand-push cart	1	/
6	Caster with brake	2	3"
7	Caster	2	3"
8	Cylinder locking screw	2	M14*25
9	Outlet angle adjust screw	1	M12*25

Note: Caster size of ILG8VF24 is 4"

- Do not depend on any switch as the sole means of disconnecting power when installing or servicing the fan.
- Always disconnect, lock-out, and tag-out power source before installing or servicing. Failure to disconnect power source can result in fire, shock, or serious injury.
- Motor will restart without warning after thermal protector trips. Do not touch operating motor; it may be hot enough to cause injury.
- Do not place body parts or objects in fan or motor openings while motor is connected to the power source.
- All electrical connections should be made by a qualified electrician.
- These utility exhaust fans are for general purpose exhaust applications only. Do not use these exhaust fans in an area where corrosive or explosive materials may be found.
- Follow all local and state/provincial electrical and safety codes in the United States and Canada, as well as the National Electrical Code (NEC) and the Occupational Safety and Health Act (OSHA) in the United States, and the Canadian Electric Code (CEC) in Canada.
- Always disconnect power source before working on or near a motor or its connected load.
- Protect the power cable from coming in contact with sharp objects.
- Do not kink or create tight bends in the power cable and never allow the cable to come in contact with oil, grease, hot surfaces, or chemicals.
- Make certain that the power source conforms to the requirements of your specific exhaust fan model. The fan frame and motor must be electrically grounded to a suitable electrical ground, such as a grounded water pipe or ground wire system.
- To reduce the risk of injury to persons, please observe the following: In the United States, OSHA compliant guards are required when fan is installed within 7 feet of the floor or working level. In Canada, CSA compliant guards are required when fan is installed below 2.5 meters (8.2 feet) above the floor or grade level.
- Questions? Please contact our service center by calling 1-800-317- 1688.

PRODUCT SPECIFICATIONS

Model	Impeller Size (in)	Volt (V)	Frequency (Hz)	Speed (RPM)	Power (W)	Air Flow (CFM)	Static (Pa)	Noise dB(A)
ILG8VF10	10	120	60	3450	350	1942	350	66
ILG8VF12	12	120	60	3450	550	2720	450	69
ILG8VF16	16	120	60	3450	1200	4590	780	79
ILG8VF20	20	120	60	1720	1300	6180	500	74
ILG8VF24	24	120	60	1720	2000	9182	540	77

Note


* Requires 20A outlet, do not attempt to plug into standard 15A outlets.

- Casing: Steel
- Impeller blade: Aluminum Alloy
- Available sizes: 10", 12", 16", 20", 24"
- Available colors: Yellow

SPECIAL FEATURES

- Super powerful exhaust or intake
- Super heavy duty rugged construction
- 100% copper fully enclosed direct drive motor
- Thermal protection
- Portable and out-let angle adjustable
- Certified by UL standard 507

DIMENSION

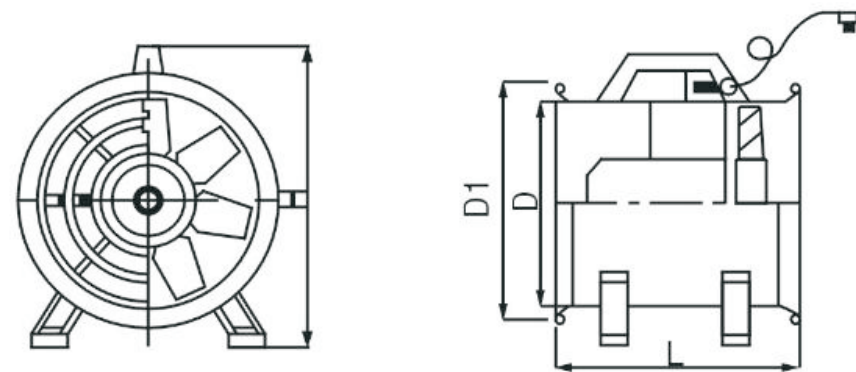

Model	L (in)	D1 (in)	D (in)	H (in)
ILG8VF10	13.75	10.25	8.0	13.0
ILG8VF12	15.0	14.75	11.9	16.9
ILG8VF16	17.7	18.9	15.8	20.0
ILG8VF20	18.9	22.8	19.8	29.7
ILG8VF24	22.8	26.7	23.8	34.25

IN THE BOX CONTENT

- High velocity fan
- Instruction Manual
- Spare part (Only for ILGVF16 / ILG8VF20 /ILG8VF24)