


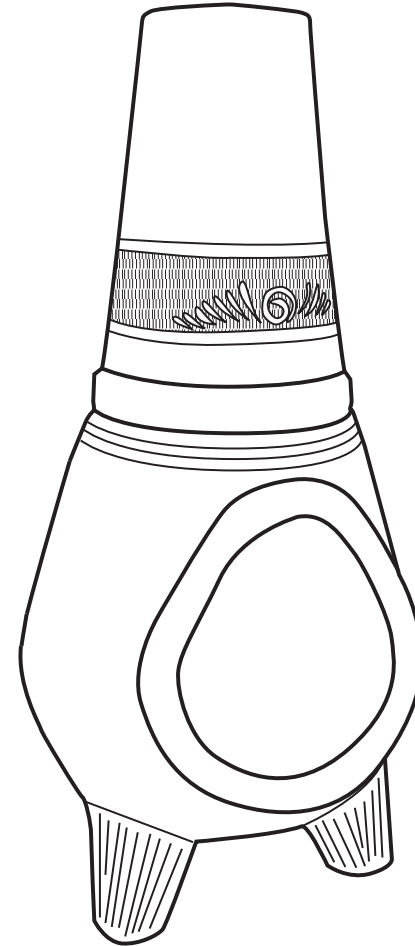

ITEM #0150118

CHIMENEA

MODEL #CH52



Lowes.com/gardentreasures 



SAFETY INFORMATION

Please read and understand this entire manual before attempting to operate the product.

DANGER:

If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury, or loss of life.

WARNING:

Improper installation, adjustment, alteration, service or maintenance can cause property damage, or personal injury. Read the installation and maintenance instructions thoroughly before installing or servicing equipment.

Warning:

FOR OUTDOOR USE ONLY.

WARNING

Do not try lighting this item without reading the “LIGHTING INSTRUCTION” section of this manual.

FOR YOUR SAFETY

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.



SAFETY INFORMATION

Please read and understand this entire manual before attempting to operate the product.

PRECAUTIONS

FOR YOUR SAFETY

- Keep a minimum of 6 feet distance around the item from any combustible material, walls, furniture, etc.
- Do not use indoors or in a covered patio or under tree branches.
- Place in open area with NO obstruction above of the item.
- Do not use lighter fluid, gasoline, kerosene or any other combustible material.
- Do not leave unattended until fire is completely out.
- Keep away from children. Do not leave item unattended.

For best results and to avoid cracking:

- Do not use item when it is wet.
- Do not allow the item to be watered by sprinklers.
- Start a small fire slowly to allow time for the clay to expand to avoid cracking.
- Store item out of freezing temperatures.
- Position item on a sound level surface to avoid tipping.
- Do not use on wood deck without insulating material under chimenea.
- Do not put the chimenea fire out with water - this will crack the chimenea.

Extreme care must be used since the item produces intense heat. When using this item basic safety practices must be followed, including the following:

CHILDREN SHOULD NOT BE LEFT ALONE OR UNATTENDED IN AN AREA WHERE THE ITEM IS BEING USED. NEVER ALLOW CHILDREN TO SIT ON, STAND ON OR PLAY AROUND THE ITEM AT ANY TIME.

Never let clothing or flammable materials come in contact with or close to any grate, burner or hot surface until item has cooled. Fabric may ignite and result in personal injury.

For personal safety, wear proper apparel. Loose fitting garments or sleeves should never be worn while lighting this item. Some synthetic fabrics are highly flammable and should not be worn near the item while it is in use.



SAFETY INFORMATION


ALWAYS PAY CLOSE ATTENTION TO WHAT YOU ARE DOING WHILE LIGHTING THE ITEM.

- DO NOT PUT FIRE OUT WITH WATER – THIS WILL CRACK THE CHIMENEA.
- Do not use the item to cook food. This will cause fat oil to drip onto the clay and be absorbed, causing a larger fire hazard.
- Use only in well-ventilated areas. Do not use in buildings, garages, sheds, breezeways or other such enclosures.

THIS CHIMENEA IS FOR OUTDOOR USE ONLY.

- Keep the area surrounding the item free from combustible materials, trash, or combustible fluids and vapors such as gasoline or lighter fluid. Do not obstruct the flow of combustion and ventilation air. If the unit is stored indoors, ensure it is cool.
- Never use the item in extremely windy conditions. If located in a consistently windy area (oceanfront, mountain top, etc.), a windbreak will be required.

PACKAGE CONTENTS

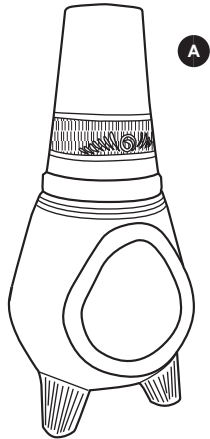

PART	DESCRIPTION	QUANTITY
A	Chimenea	1

Lowes.com/gardentreasures



LIGHTING INSTRUCTIONS

Before Lighting

- Inspect and clear the area around chimenea (A) of combustible materials.
- Be sure to check that chimenea (A) is dry. If wet, the fire will expand and crack chimenea (A). Consider using lava rock (not included) or another material that does not retain moisture in the base of the chimenea (A).
- Always keep your face and body as far from the chimenea (A) as possible when lighting.

To Light

- Use wood kindling and/ or paper when lighting chimenea (A). NEVER use combustible fluids, lighter fluid, gasoline, kerosene or any other combustible material to start the fire.
- VERY IMPORTANT: Build the fire in the chimenea (A) slowly. This will allow the clay to expand slowly and, therefore, not crack. This process may take 15 minutes or more.
- Never build a fire so big that flames come out of the mouth or top of the chimenea (A), as this will overheat the chimenea (A) and cause it to crack.

CARE AND MAINTENANCE

- Clean excess ash from item as needed.

Printed in Mexico

Garden Treasures® is a registered trademark of LF, LLC. All rights reserved.

Lowes.com/gardentreasures

