

FIRST TIME USE

If you are using your ExpressWave microwave oven for the first time, please be sure to:

- Clean the glass turntable with hot water, a small amount of dishwashing liquid and a nonabrasive cleaning pad.
- Do not immerse the body of the unit in water.
- When you plug in the unit, the display will show "12:00".
- While you are in the process of any setting, the oven will return to standby mode after 30 seconds without any operation.
- During cooking, if press **STOP/CANCEL** once or open the door, the program will be paused. Press the dial to resume cooking, but if you press **STOP/CANCEL** twice, the program will be canceled.
- When the cooking completes, the screen will display "End" with sound every two minutes until you press **STOP/CANCEL** or open the door.

Product Specifications

Power Supply	120V/60Hz
Power Consumption (Microwave)	1500W
Rated Microwave Power Output	1250W
Operating Frequency	2450MHz
Outside Dimensions (W x H x D)	24 ³ / ₄ x 14 ³ / ₁₆ x 19 ¹⁵ / ₁₆ inch
Oven Capacity	2.2 Cu.Ft.
Net Weight	Approx. 31.6 lbs