


Smart Toilet

(DV-1S0019-V3)

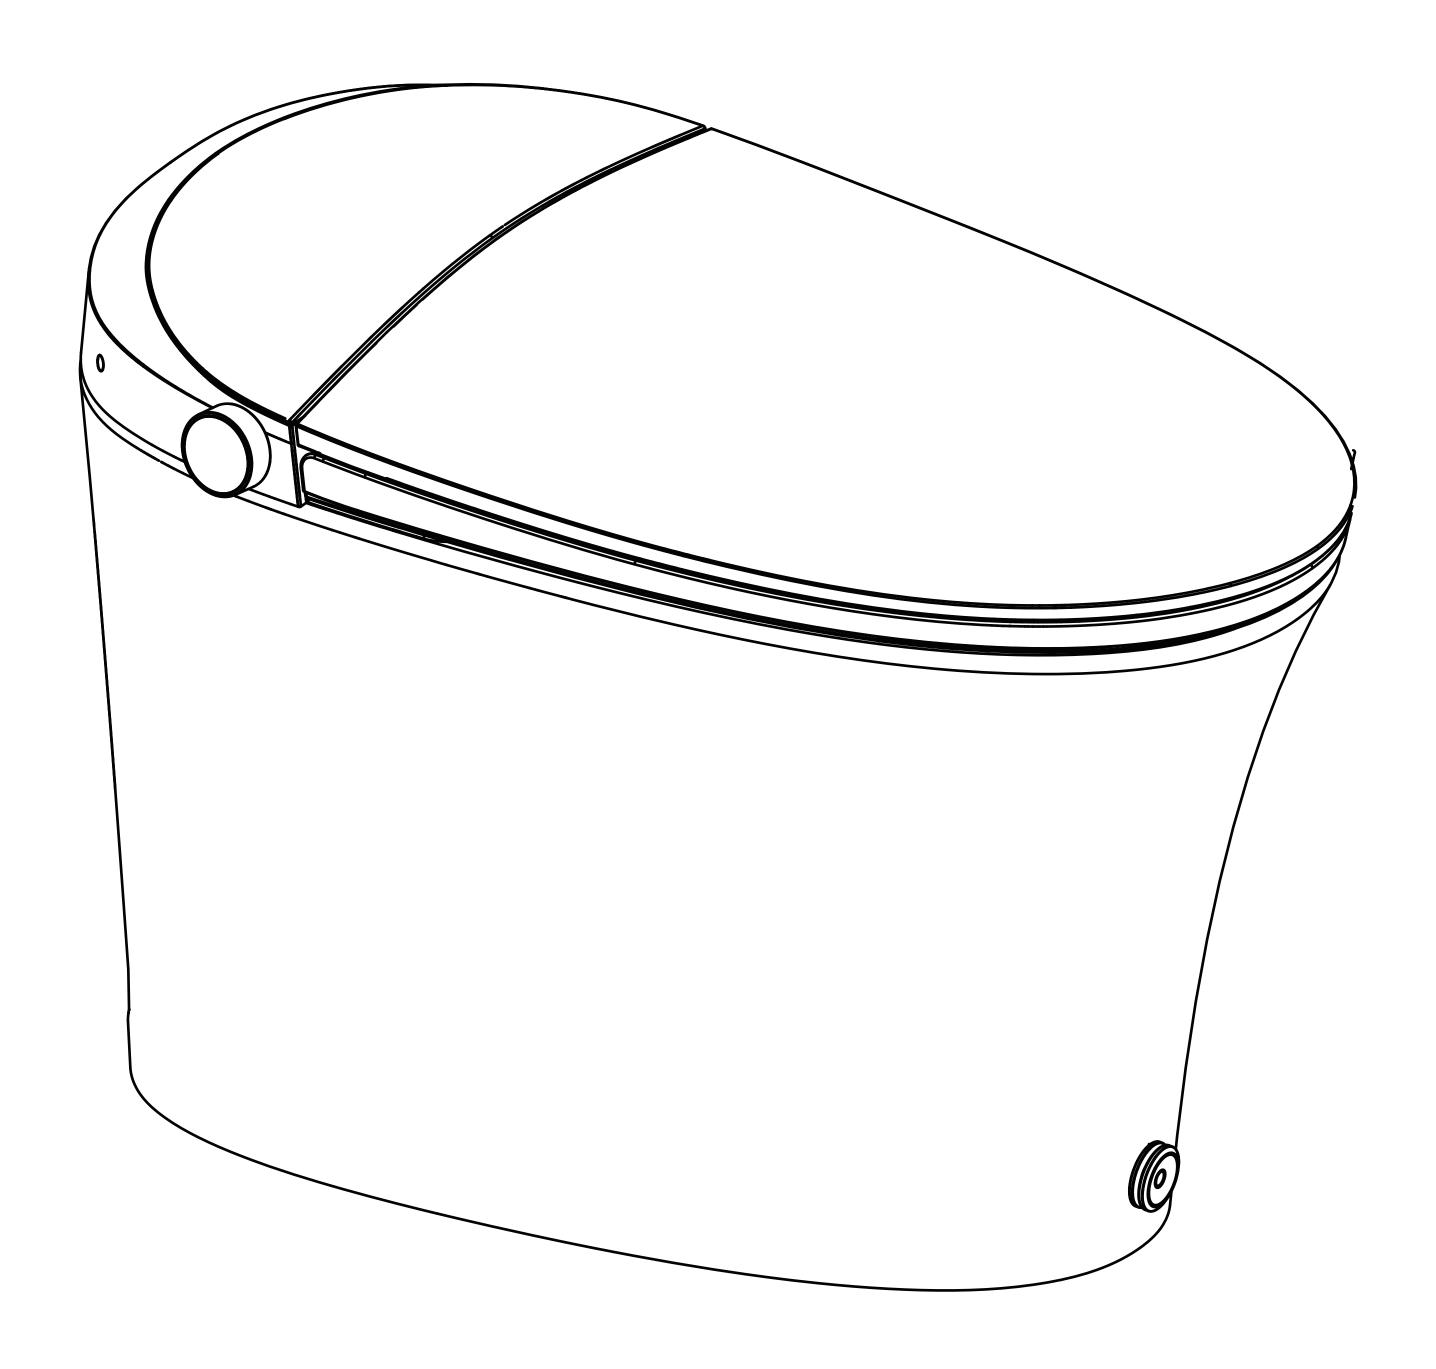



Prior to Installation:

- Inspect toilet to ensure no damages have occurred while in shipping.
- Observe all plumbing and building codes in accordance with your state and local requirements.
- Remove old toilet.
- Make sure mounting surface is CLEAN and LEVEL.

General Recommendations:

Please read installation and maintenance instructions thoroughly before installing the toilet.

Be sure to use proper tools and always wear proper personal safety accessories for your protection.

If you have any questions or concerns please contact us:

(+1) 312-626-9466 service@deervalleybath.com

TABLE OF CONTENTS

Important Safe Guards	
Explanation of Terms and Symbols	
WARNING & Attention	
Product Installation	
Tools needed	
Parts included 10	
Parts Diagram	
Smart Toilet overall view	
Remote Control	
Precautions before Installation	
Installation The Smart Toilet	
Install the Remote Control	
Install the Remote Control 11	
Test before Use	
Remote Control Operation	
 Knob and Other Operation 	

1. Important Safe Guards

IMPORTANT SAFEGUARDS

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following:


GROUNDING INSTRUCTIONS


This product must be grounded. In the event of an electrical short circuit, a grounded product reduces the risk of electric shock. This product is equipped with a cord having a grounded wire with a grounded plug. The plug must be plugged into an GCFI outlet that is properly installed and grounded.

DANGER – Improper use of the plug can result in a risk of electric shock.

Check with a licensed electrician or serviceman if the grounding instructions are not completely understood. Or if there is any doubt the product is properly grounded. This product is for use on a nominal 110 V circuit, and has a grounded plug that looks like the electrical plug illustrated below.

Grounding Methods

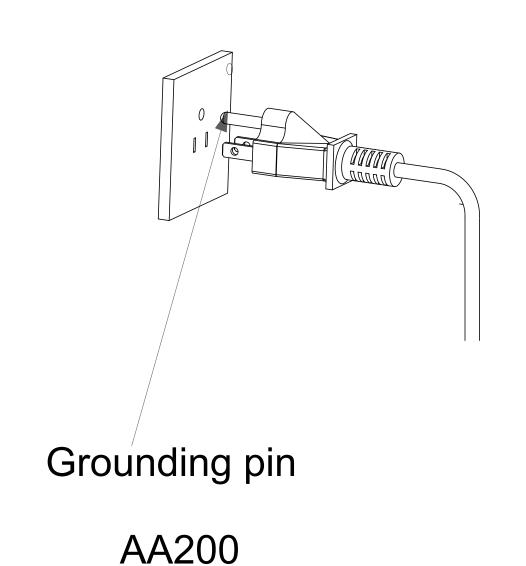

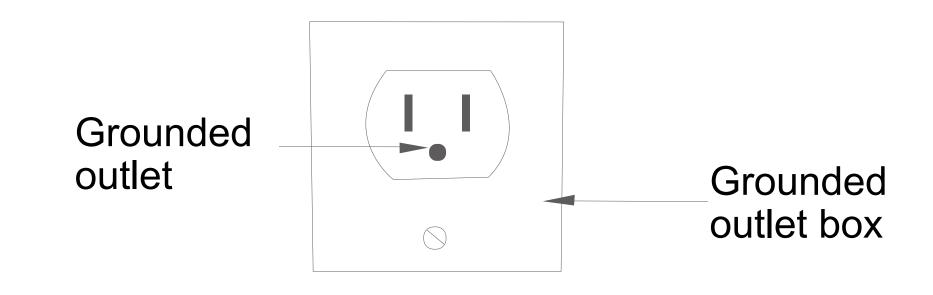

*WARNING: Risk of electric shock Connect only to a circuit that is protected by a ground-fault circuit-interrupter (GFCI).

NOTE: Specialized tools may be necessary to install DeerValley Smart Toilet, plumbing not included.

2. Explanation of Terms and Symbols

Thank you for purchasing our product. Please read this User Manual before installation and use and save it for future reference. The hazards and warnings listed herein are important to our users' safety. Significant consequences may result from failure to heed warnings.

Explanation of Terms and Symbols

WARNING • • Indicates possible injury or death resulting from improper usage due to disregarding this message.

ATTENTION • • Indicates human injury or property loss that may result from improper usage due to disregarding this message.

• • • When used with the above "Warning" and "Attention" signs, indicates a strict request to follow noted precautions.

• • • Prohibits any individual from performing any action with this symbol.

• • • Prohibits any individual from disassembling the product.

Keep product away from any wet environments, including, but is not ' ' Iimited to, humid environments, close proximities to baths, showers or sinks.

• • • Do not touch.

• • Do not touch with a wet hand.

• • • Keep away from any extreme heat or fire.

• • • Operate only as instructed.

• • • Unplug the unit from power.

• • • Protective grounding.

3. WARNING & Attention

! WARNING

This product needs to be properly grounded.

Risk of electric shock. If unsure, contact an electrician.



Do not place a lit cigarette along with other burning objects into the unit. Risk of fire.




Do not touch, insert or pull out the power plug with a wet hand. Risk of electric shock.



Do not use during thunderstorms (pull out the power plug during storms). Failure in doing so may lead to injury or malfunction.




Do not use a power socket in poor condition or a damaged power plug. Risk of fire and/or electric shock.

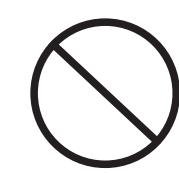

When the seat or lid is damaged, to avoid any harm, be sure to unplug the unit from power, shut off the water supply and contact your local distributor for replacement.



 Risk of fire and/or electric shock.





Risk of fire and/or electric shock.

! WARNING

Regularly unplug the unit from power and wipe off any dust on the plug using a dry cloth.

Risk of fire.



Young children, the aged and the physically disabled should be given supervision by a person responsible for their safety while using the unit.

Otherwise, prolonged use may cause low temperature burns.



Do not pull, damage, bend, twist, stretch, roll, bundle, clamp or squeeze the power cable. Do not place anything on power cable. Risk of fire and/or electric shock.



This product is not a toy. Advise children not to play with product. Risk of injury.




If the power cord is damaged, to prevent any injuries or accidents, it should be replaced by a professional.

Risk of fire and/or electric shock.



For cleaning or maintenance of plastic parts, do not use any harsh cleaning agents. (These include but not limited to concentrated sulfuric acid, concentrated nitric acid, glacial acetic acid, carbon tetrachloride, chloroform, acetone, butanone, benzene, methylbenzene, phenol, methylphenol, dimethylformamide, methyl ether, soybean oil, acetate, 40% nitric acid, thick salt acid, 95% alcohol, kerosene, gasoline, or brake oil, etc.)

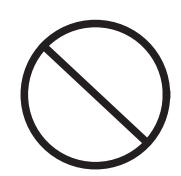

Otherwise, the plastic part may crack and cause personal injury; Risk of fire and / or electric shock.

WARNING

Do not disassemble, repair or alter this product on your own. Call in a professional or contact service center for future advise.

Risk of fire, electric shock, and/or other accident that may lead to injury.




Do not use industrial or polluted water.

Risk of cystitis, dermatitis and electric shock and fire due to internal corrosion of the unit.



Do not apply any force to the unit's seat and lid. Do not stand on the lid or open or close the lid and the seat forcefully.


Risk of product damage and user injury.

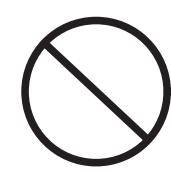

Do not add water or detergent into the unit or onto the remote control. Do not splash water or cleaner on the product and power plug. Risk of fire and electric shock.



Do not place your hand or any other object into the dryer outlet, and do not cover the dryer and dryer outlet when product is. Risk of fire, electric shock, and/or other accident that may lead to injury.

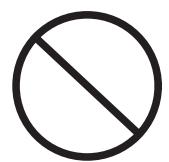

Do not install or use the unit in a damp and easily immersed bathroom. Do not spray water on this product or rinse it with water to prevent damage. Risk of fire and electric shock.



Do not spray urine at the dryer. Risk of electric shock.



! BATTERY WARNING

Read the following for proper battery usage:


- Properly install the battery according to its correct polarity.
- Remove the battery during long periods without use.
- •Replace the battery before it reaches the end of its usage. Failure to do so may result in interrupted signals.
- •Cover the battery with tape before disposal. This will prevent battery fluid leakage that may cause fire and / or other damages.
- •Place the battery out of children and infant reach.

 If battery is swallowed, contact a doctor immediately.
- •If battery fluid leaks onto user, quickly rinse off with clean water.



Do not do the following with the batteries:

- •Do not hold or store with metal objects (such as a necklace or a watch).
- Do not mix new and old batteries.
- Do not pull apart battery or throw it into water and/or fire.
 Battery fluids may cause a fire.

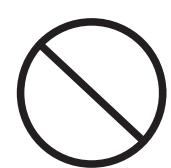

ATTENTION

Do not use the heated seat or dryer for a long time with high or middle temperature.



Risk of burns.

Avoid direct sunlight or heat.

Risk of product discoloration.



While using the unit, make sure that the skin is in contact with the seat sensor area. Otherwise, product may not operate correctly.

Children may have difficulty staying in contact with sensor area.



ATTENTION	
To avoid danger from false reset of the thermal breaker, do not supply power through an external switching device, such as a timer, or connect to a circuit that is periodically turned on and off by a general-purpose component.	
Do not hit the ceramic with gravity to prevent damage and water leakage.	
Do not spray urine on the nozzle. Dirt may cause clogging.	
Please do not bury cementitious materials (cement mortar, etc.) in the toilet base to prevent the toilet from being cracked due to expansion.	
Do not flush newspaper, diaper pads, sanitary napkins and other items that are easily blocked into the toilet.	
When replacing the filter, be sure to turn off the angle valve. When the filter is being installed, be sure to fasten it with force. Risk of leakage.	
Do not use the unit in an environment below 0°C.	

ATTENTION

Unplug the unit when the product is in disuse for a long time. Make sure to shut off the water supply and drain the water inside the product. Risk of fire, leakage and product damage.



Do not use old hose to connect to unit. Use the one provided with your product. Anything else connected to the older hose may need replaced.



Risk of water leakage and property loss.

When storing or transporting in cold climate, make sure to drain the water from the unit. Product may crack and other damages may occur due to freezing water.



Risk of fire, leakage, and product damage.

In case of sudden power failure, unplug the power plug and turn off the angle valve to prevent water leakage.



Risk of water leakage or property loss.

WARNING- To reduce the risk of burns, electrocution, fire, or injury;


- 1. Close supervision is necessary when this product is used by, on, or near children.
- 2. Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- 3. Never operate this product if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.

Return the product to a service center for examination and repair.


- 1. Keep the power cord away from heated surfaces.
- 2. Never block the air openings of the product or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
- 3. Never use while sleeping or drowsy.
- 4. Never drop or insert any object into any opening or hose.
- 5. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- 6. Connect this product to a properly grounded outlet only. See Grounding Instructions.

4. Product Installation

(1) Tools needed

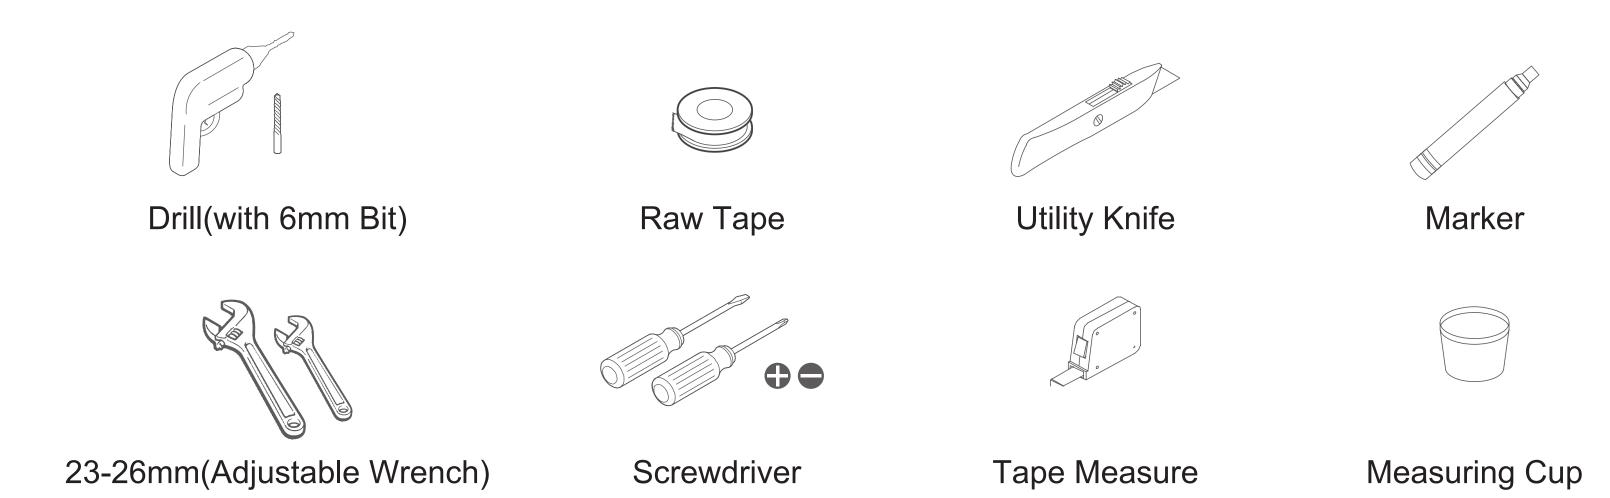


(2) Parts included

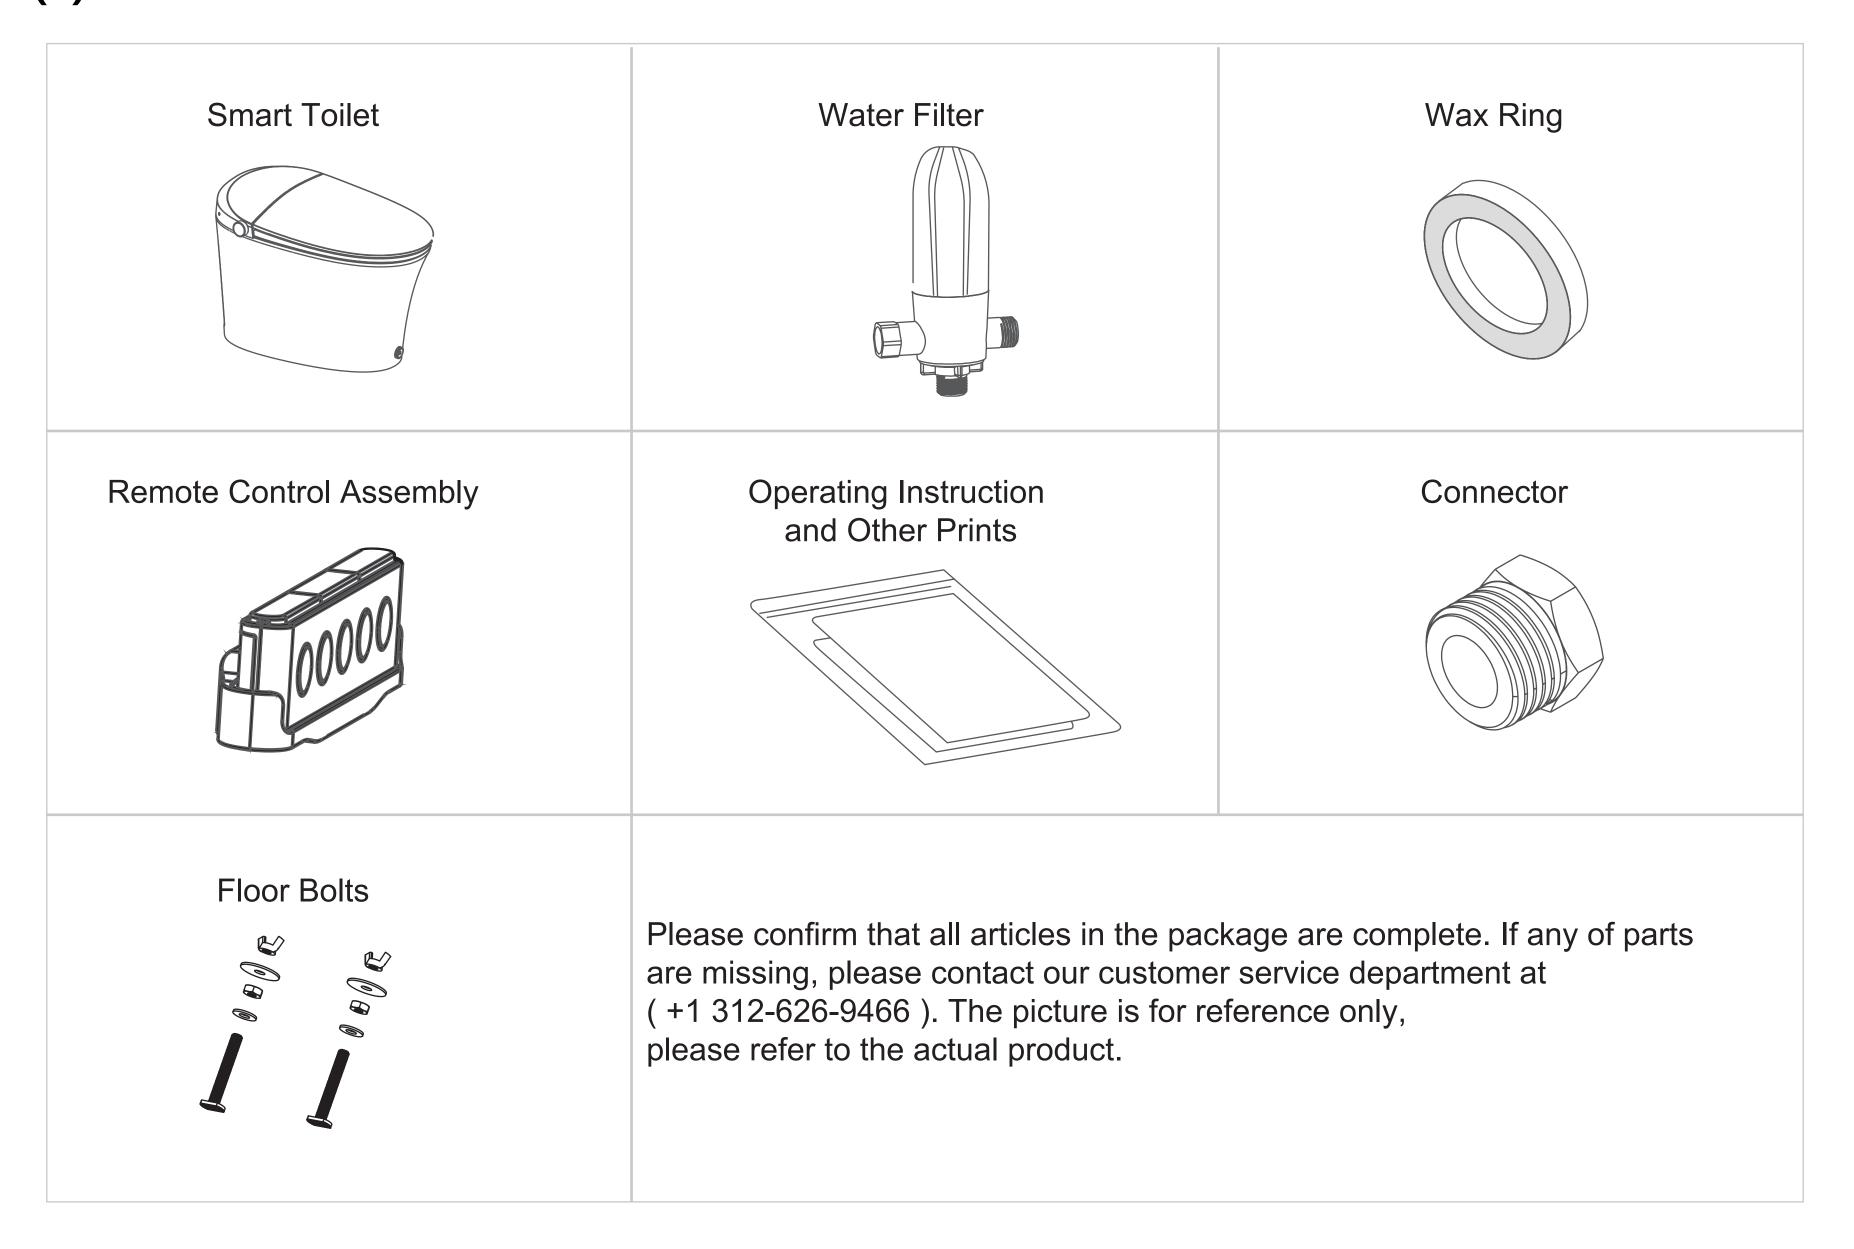


DeerValley®

3. Parts Diagram

(1) Smart toilet overall view

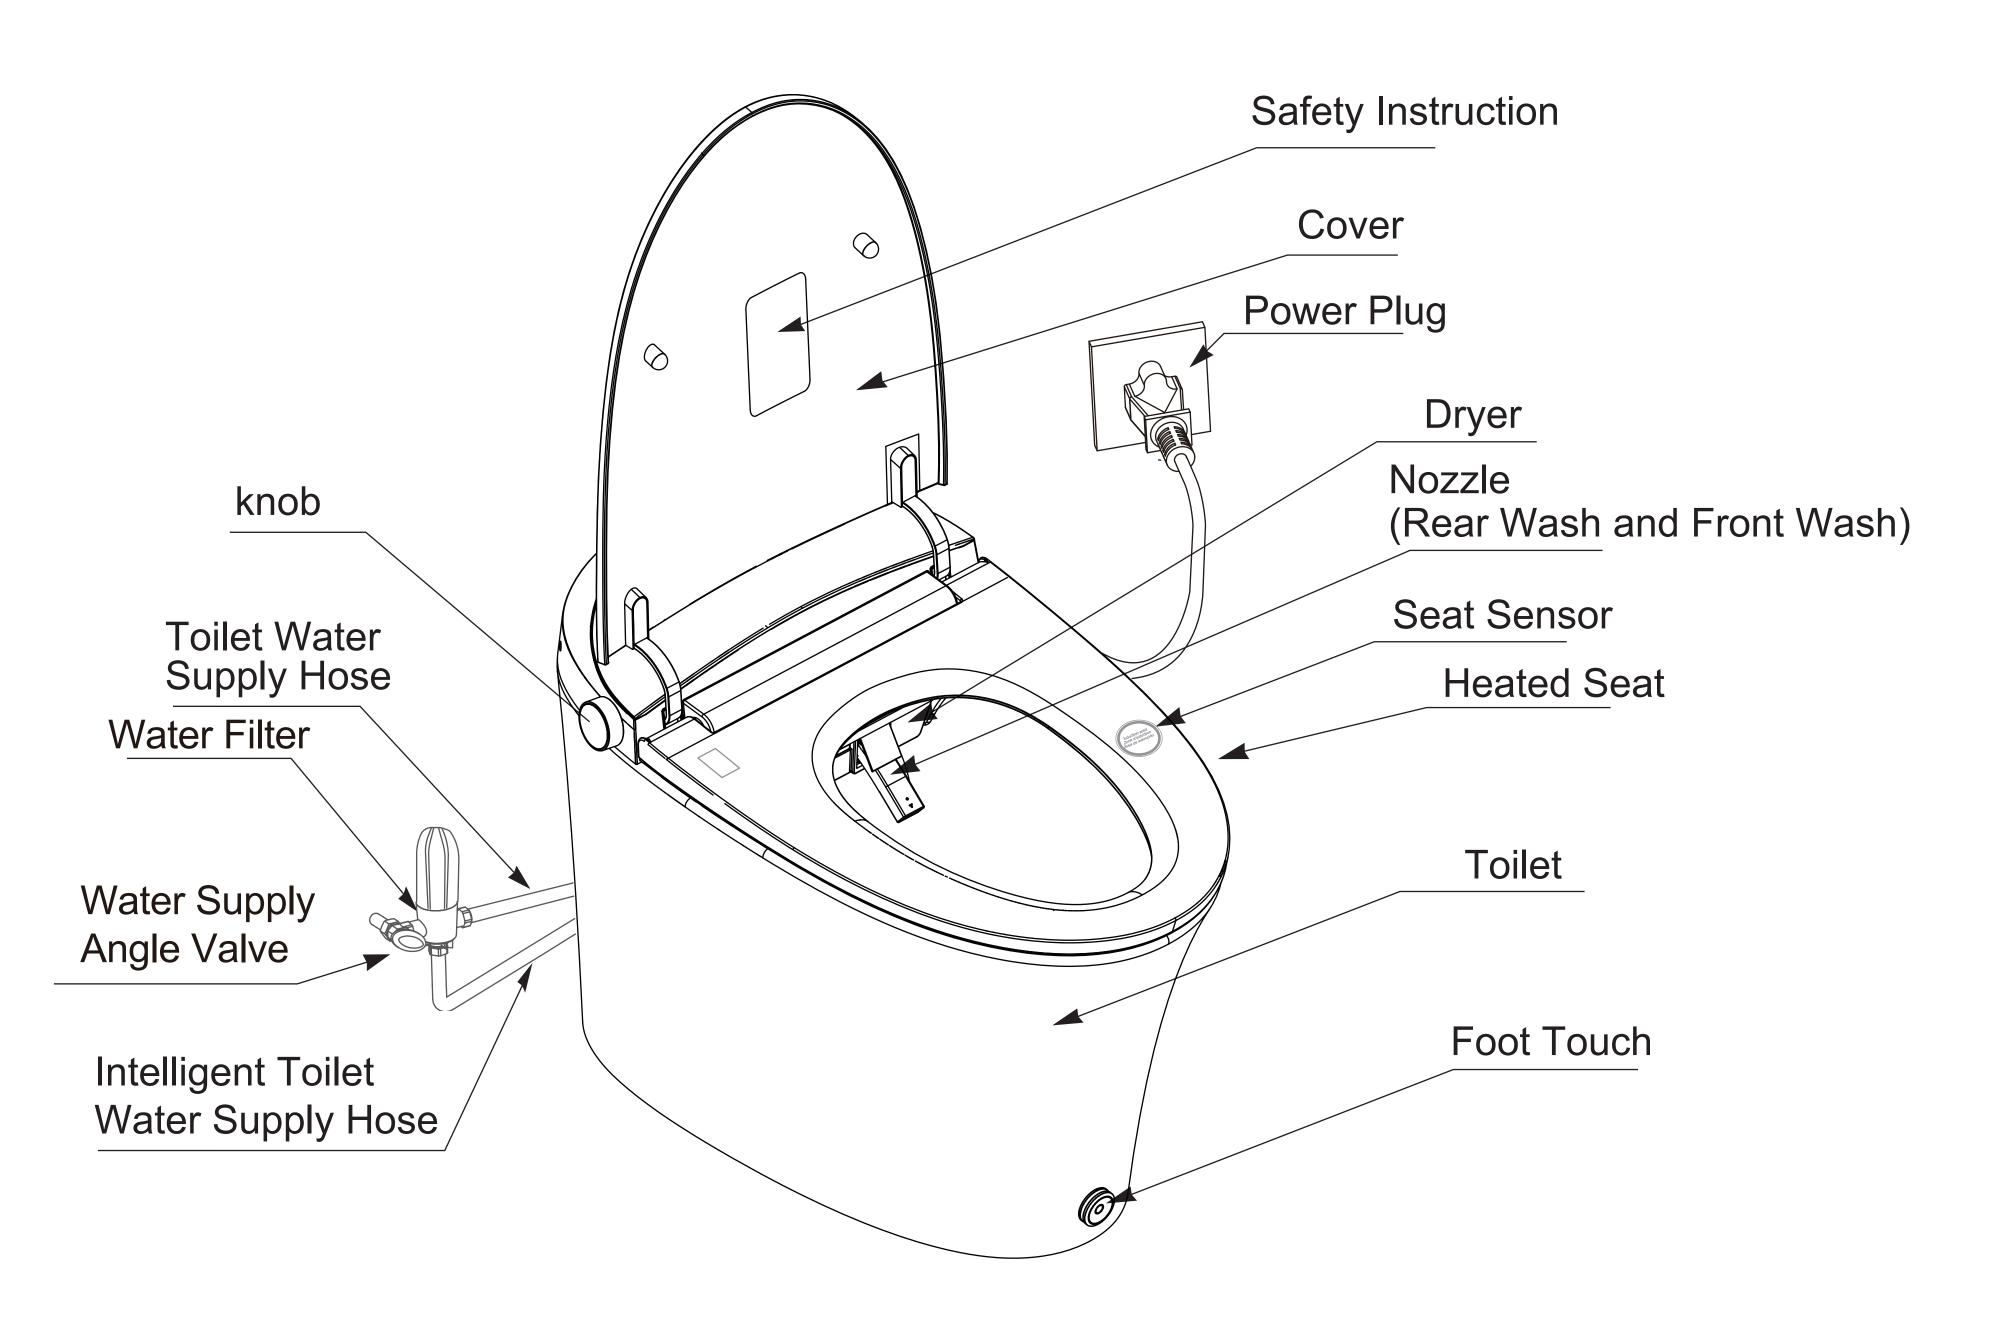


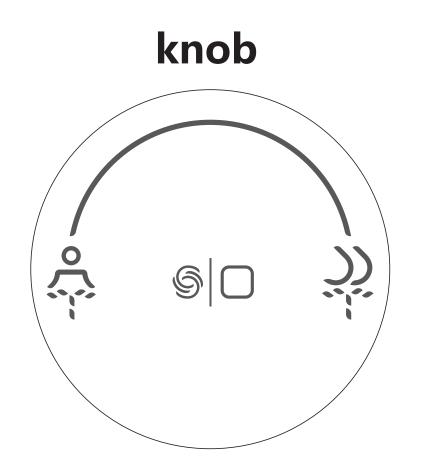

• The appearance and functions of the real product shall prevail.

DeerValley®

(2) Remote Control

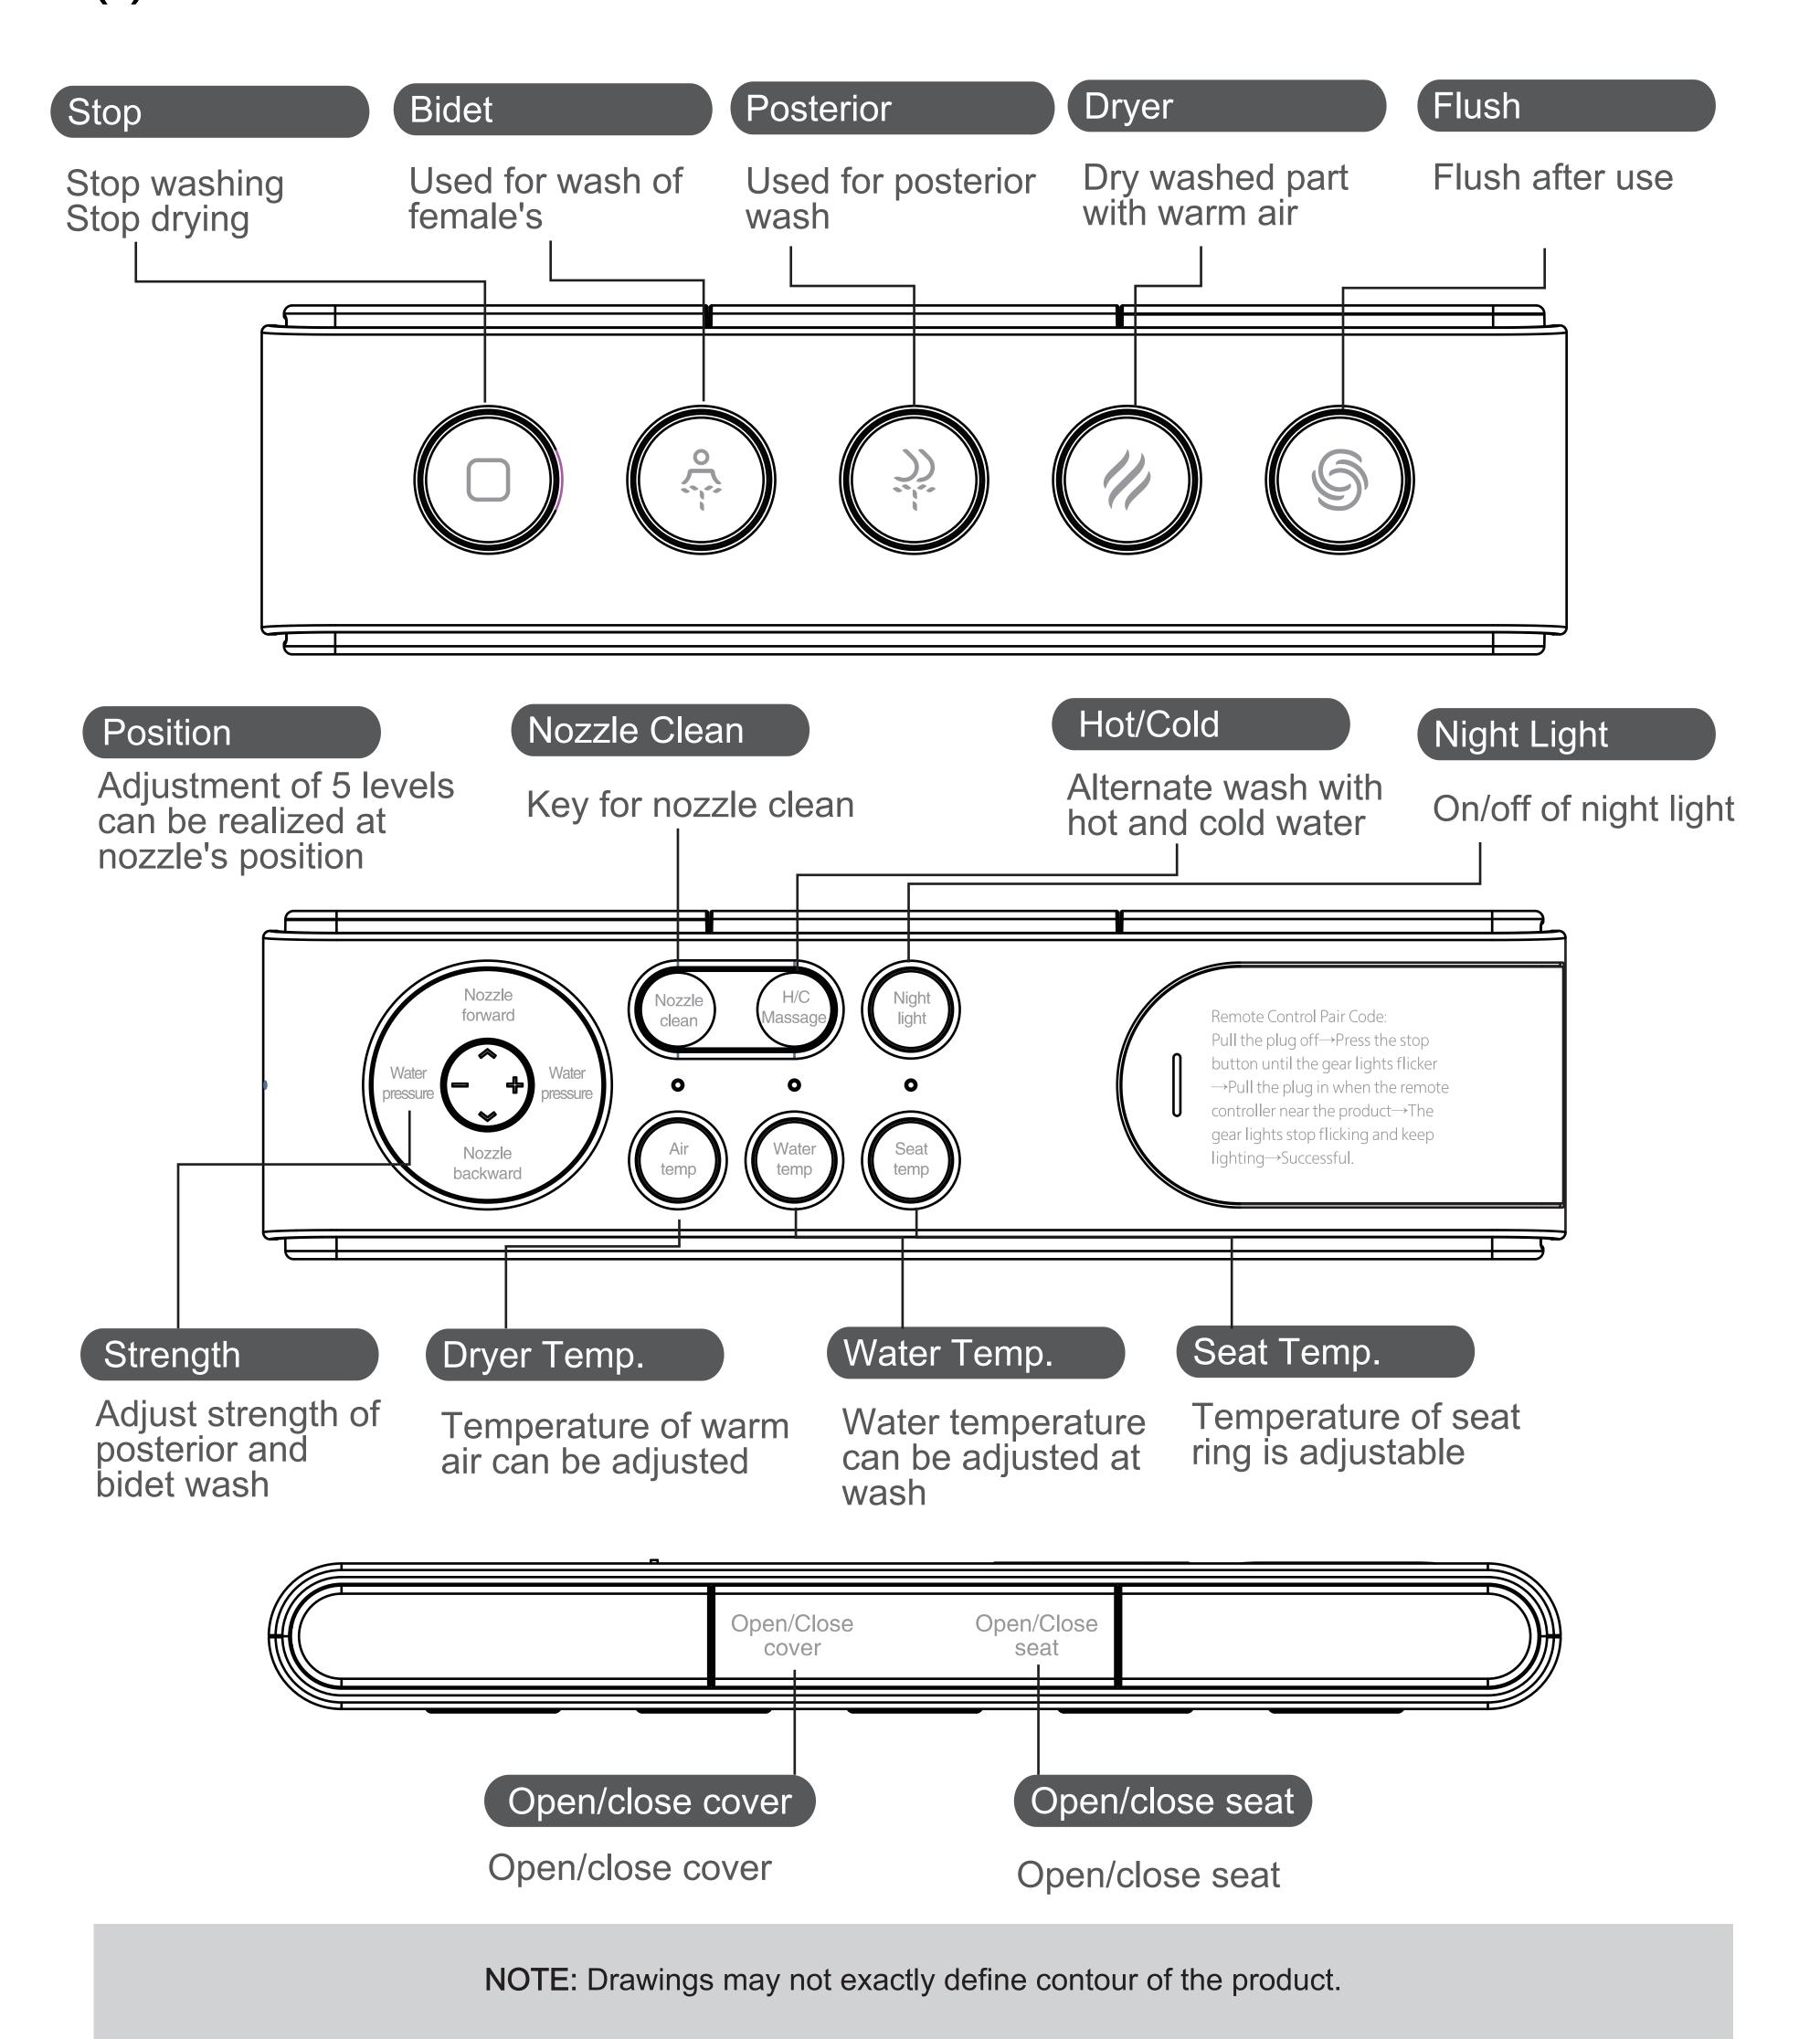


(3) Precautions before Installation

Confirmation of water pressure

● The minimum dynamic operating water pressure is 25 Psi, and the maximum static water pressure is 80 Psi.

Determination method for minimum water flow

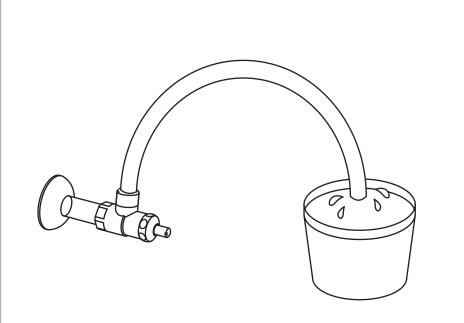

Open the angle valve for water supply. The measured water flow for 10 seconds should exceed 3L.


If the above conditions cannot be met, the best flushing effect cannot be achieved and an additional booster pump is required to increase the pressure.

(Tools: stopwatch, measuring cup.)

Wall Unit: inches Front view Unit: inches Unit: onches Top View


4. Installation The Smart Toilet

- (1) Draw a cross marker on the drain outlet on the ground.
- Clean the floor and wipe off any excess dust or dirt. Failure to install on an cleaned surface will affect the quality of installation.

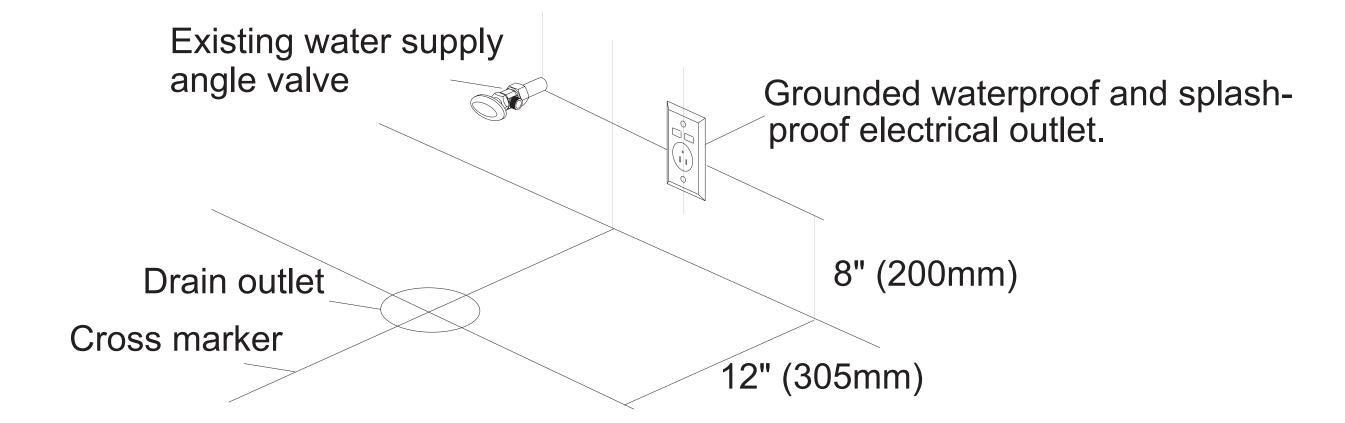


(2) Installation of floor flange.




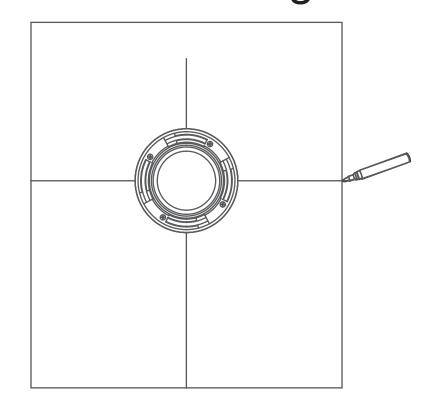


- (3) Install smart toilet bottom flange anchor screw.
- Turn the ceramic body over laterally and place on a prepared foam surface. By visual measurement, draw a line on one lateral side of the ceramic body point of the drain outlet perpendicular to the plane against the central of ceramic bottom, and the same for the other lateral side, and draw a line perpendicular to the floor from the front central point of ceramic body.

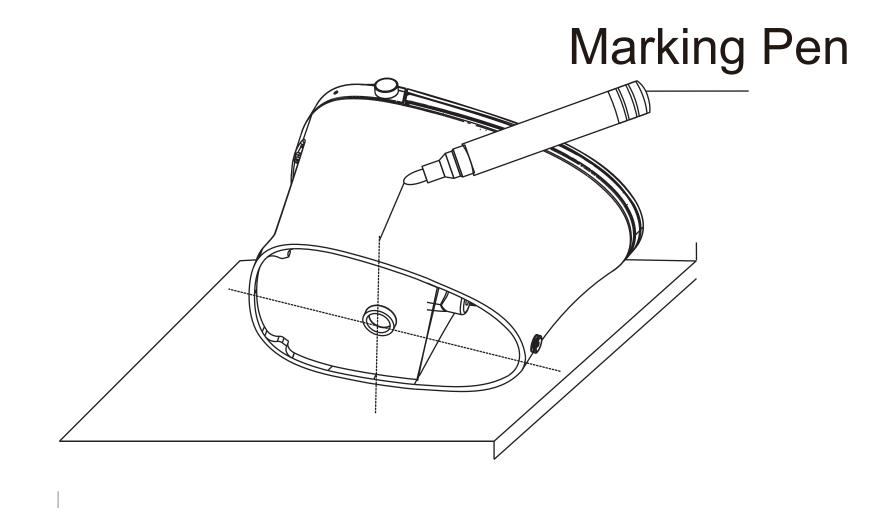



- (4) Install the wax ring and brass floor bolts onto floor flange.
- Insert the 2 brass floor bolts flat head thru the appropriate slot in the floor flange.
 Use the provided plastic floor bolt washer to secure the floor bolts on the floor flange.
 Brass bolts should remain verticle FIGURE 5A. Install the wax ring at the sewage outlet of the product FIGURE 5B.

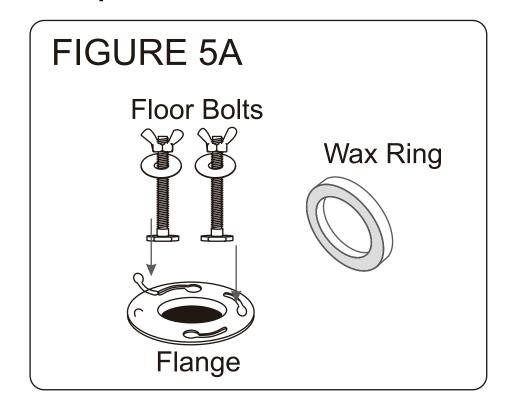


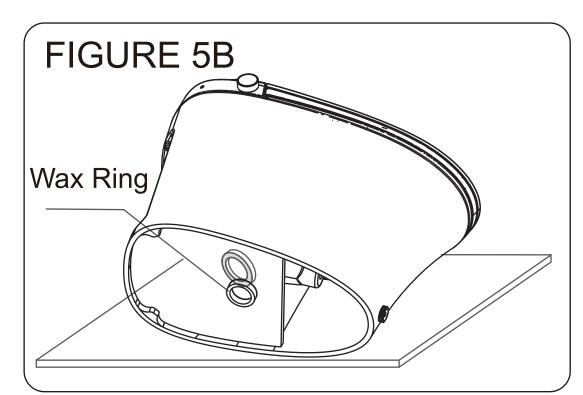


- (5) Preparing the toilet seat for toilet bowl installation.
- Hold both seat and cover vertical, pull upward to detach them from ceramic bowl.
 Move the seat forward as shown.

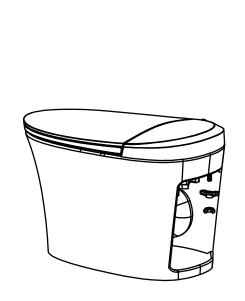


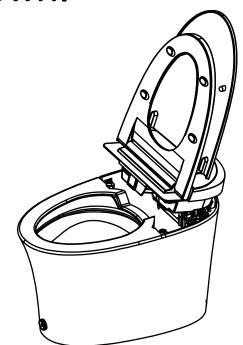


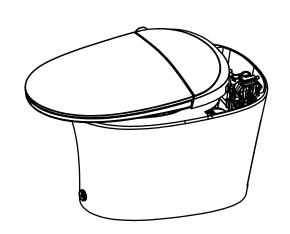


- (6) Installing the toilet bowl onto floor flange
- Two people to lift the toilet bowl, slowly lower the bowl onto the floor flange use the guide marking as the toilet reference. Making sure the floor bolts on the floor flange completely come through bolt opening on the bottom of toielt bowl by viewing from the back of the seat.
- Next, press down the toilet bowl firmly onto the floor so the wax ring can create the full seal.
- Lastly, screw down the nuts on the floor bolts by hand to secure the toilet bowl on the floor from the opening behind the back of the seat.

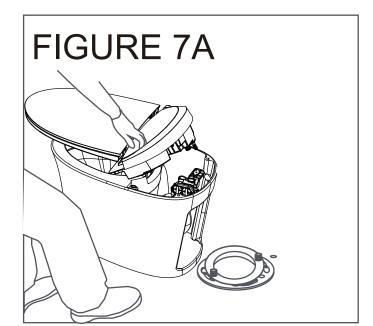

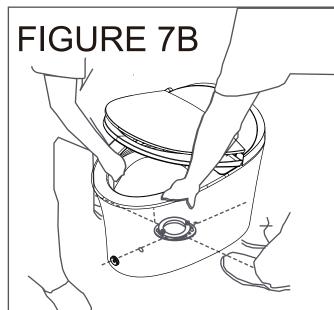


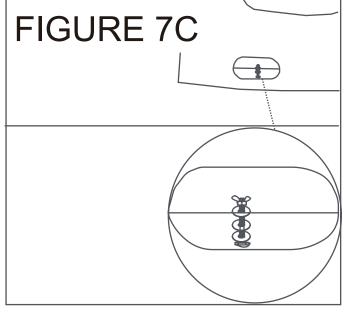


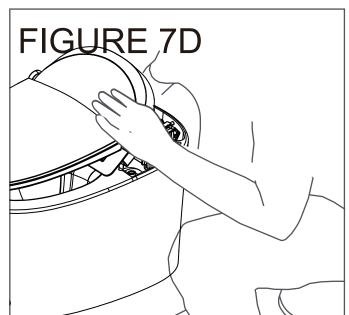

Caution: Do not move the toilet bowl around once the toilet bowl is in position. It can damage the wax ring seal and result in water leakage.


- (7) Connecting the water filter to shut off valve and connecting braided water supply hoses.
- With the 3/8" male connection facing to the right, apply Telflon tape and screw on adapter (supplied).

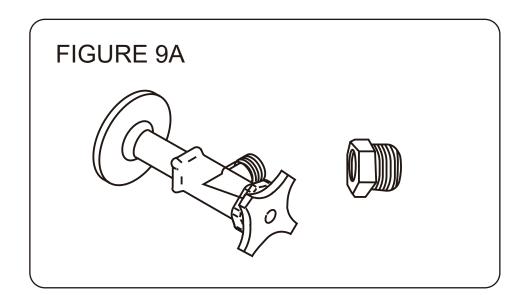


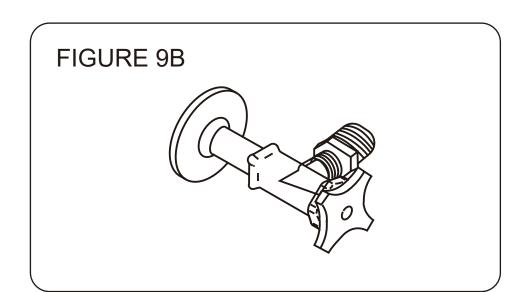


- Connect water filter to male thread on adapter (apply Telflon tape to male threads).
 Connect braided supply tubes to tee valve male connections.
 - 1/2" seat water supply hose to bottom of tee valve
 - 1/2" toilet water supply hose to right side of tee valve

Note: Use Telflon Tape on all threaded connections to insure a water tight seal.

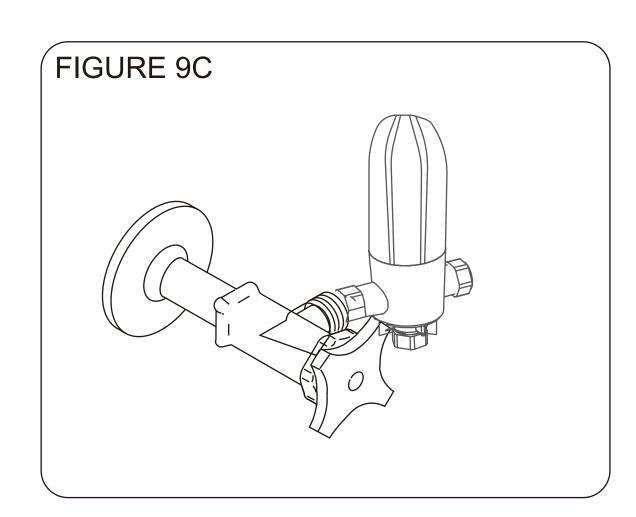

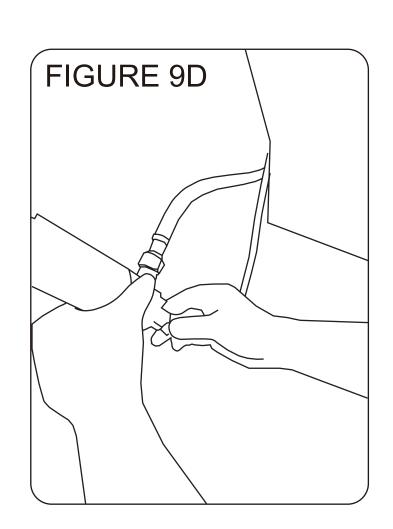

- (8) Confirm the water supply.
- Open the water supply angle valve to the greatest extent as shown in the drawing.
- Make sure there is no water leakage in each connection part. If there is water leakage, please re-tighten the nut for re-installation.

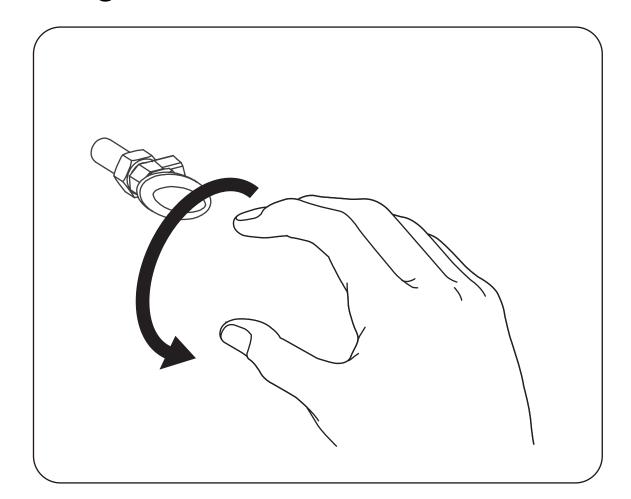


DeerValley®

Installation and Owner's Manual

- (9) Connect the power supply.
- Connect the ground wire.
- Power plug into the AC 120V socket.
- Confirm whether the power is connected.

Note:

Confirm indicator light on the power plug. A lit-up power indicator light will confirm that the smart toilet is powered-on. When powered on, press and hold the knob for 3 seconds to enter standby mode.

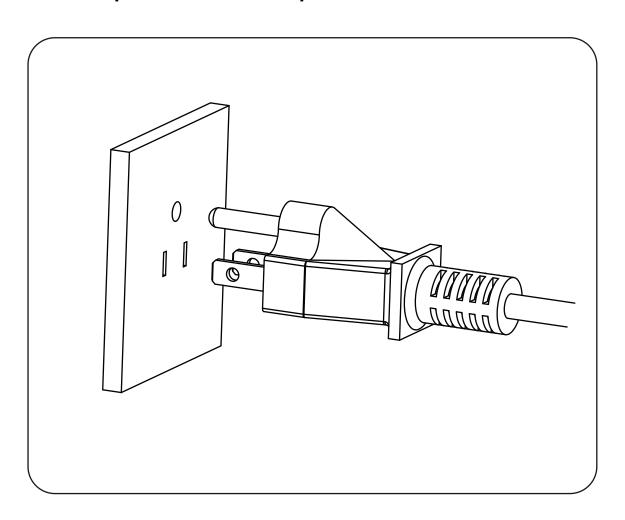


5. Install the Remote Control

- (1) Install the Remote Control
 - 1. According to the location of the screw holes of the remote control holder, drill two holes with a 6mm-diameter drill bit on the wall with a depth greater than 45mm.
 - 2. Install the expansion tube into the holes.
 - 3. Place the remote control holder onto the fixing hole.
 - 4. Fix the remote control holder with the configured expansion screws.
 - 5. Open the battery area of the remote control and install new batteries.
 - 6. Place the remote control on its holder. The specific steps are shown in the drawings below.

If the wall for installation is of a specific material (such as wood panel, MDF), please use a suitable fixing method.


The remote control should be installed in a place that is not easily exposed to water.

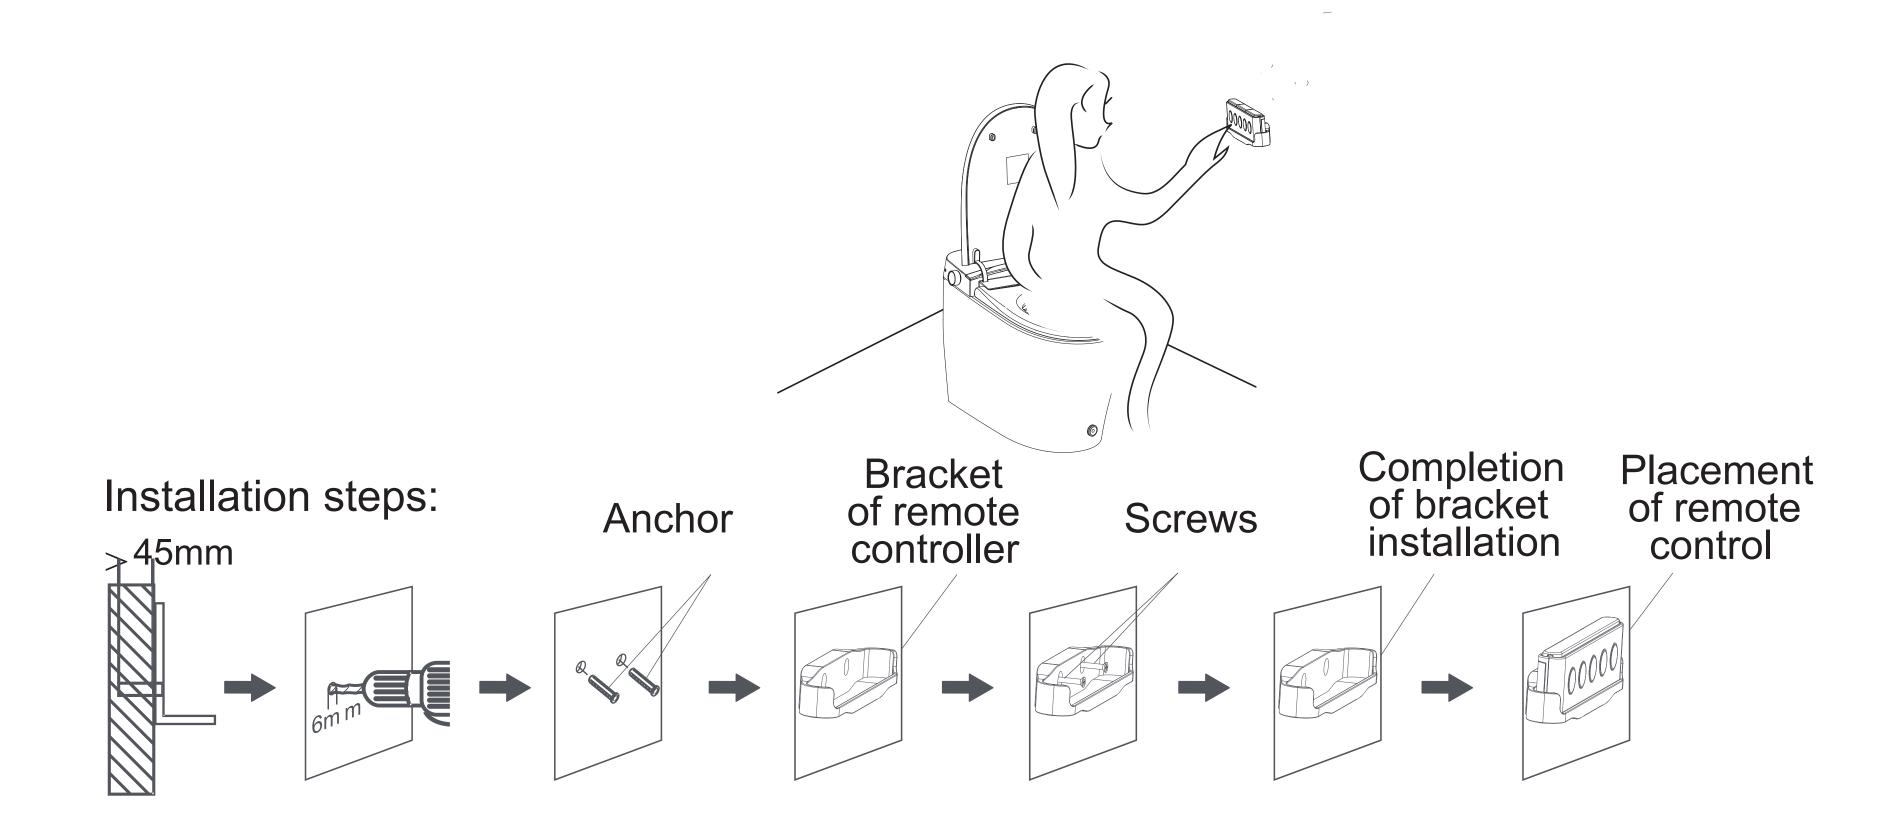

(2) Test before use


Test run (test all function buttons on the remote control and the knob on toilet body.)

- Is each function of the product normal?
 Are the rear wash and front wash (including spray strength adjustment, nozzle position adjustment), dryer, air temperature, water temperature and seat temperature, nozzle clean working normally?
 All the above series of actions should be checked.
- Operation to test rear wash process
 Please use your hand to cover the sensor area, turn the knob

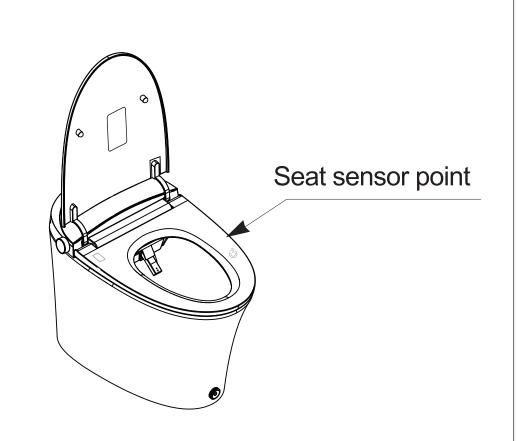


Code matching of remote controller


Code matching of the remote controller has been completed at delivery of the product. In case of malfunctioning of the remote controller, match the codes as the following method.

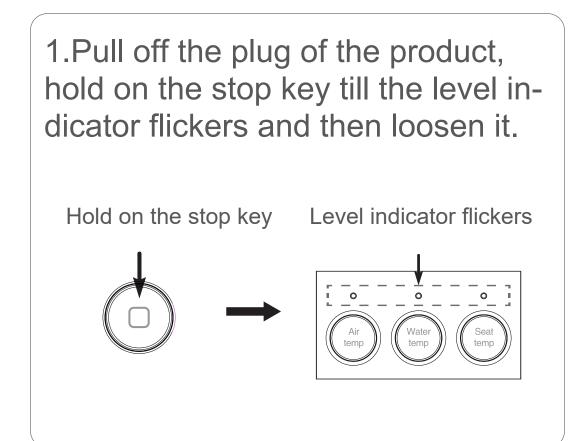

2.Put the remote controller close to the product and insert the plug.

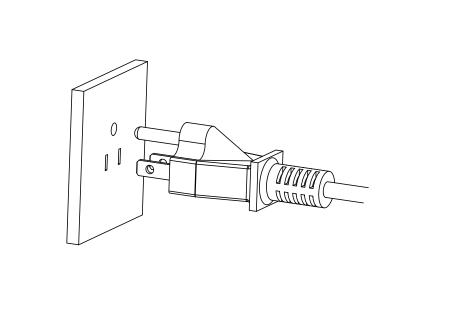

3. The level indicator stops flickering and is normally on. All level indicators (in red) are normally on

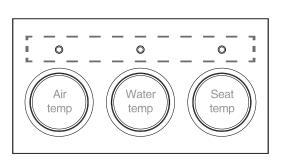

4.Code matching succeeds.

6. Remote Control Operation

The product has a built-in sensor in the seat. If user is not seated properly, the rear wash, front wash and dryer functions cannot be operated.

■ Bidet


Press "Bidet" key.

Water flow for wash is jetted out of the front end of the nozzle, and the private part of female is washed by way of wash in movement. Press it again to turn off wash in movement.

Posterior

Press "Posterior" key.

Water flow for wash is jetted out of the front end of the nozzle and washes the posterior by way of wash in movement. Press it again to turn off wash in movement.

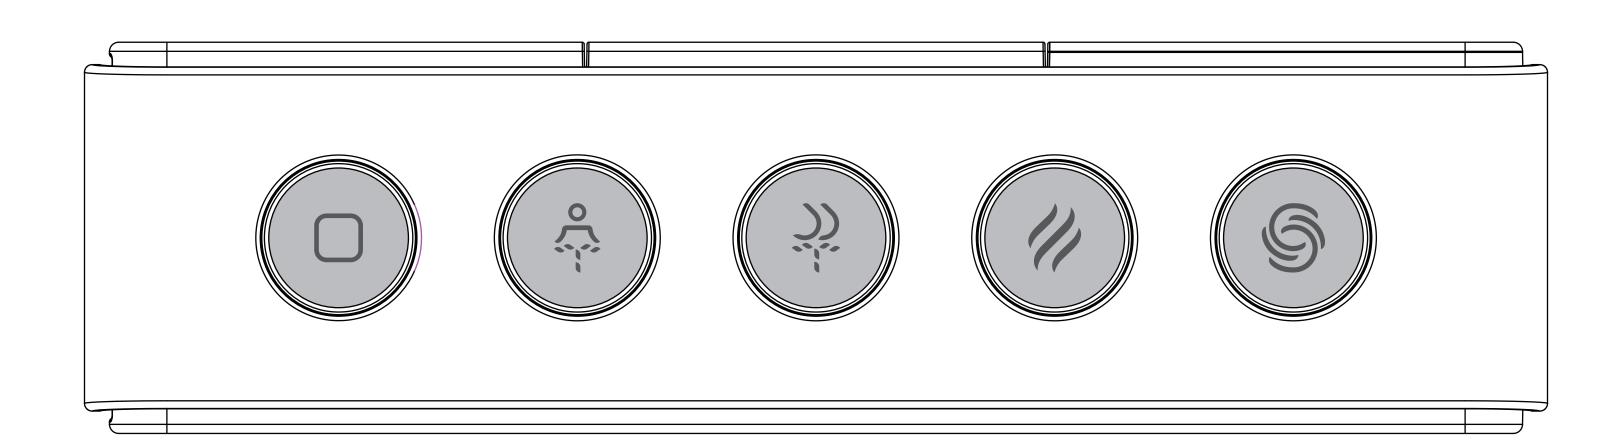

Flush

Press "Flush" key.

The product flushes for once.

Stop

Press "Stop" key to stop the product.

For posterior and Bidetwash, there's an auto-stop function 4 minutes later.

Dryer

Press "Dryer" for drying washed part.

Press Dryer for drying washed part.
When it is switched to warm-air temperature, press "Dryer Temp." key, current temperature level will be displayed when the key is pressed for the first time. When it is pressed again, it will be switch to temperature level, and proper temperature can be set.

References

• After cleaning, use toilet paper to gently wipe off water droplets and then turn on the drying function, which makes the drying speed faster.

Hot/Cold

Press "Hot/Cold" key, and Hot/Cold function will be enabled or disabled.


In wash mode, press Hot/Cold key to realize cold and warm water wash alternately.

This function can only be used in wash mode.

Night light

Press "Night light" key.

Night light will be on or off.

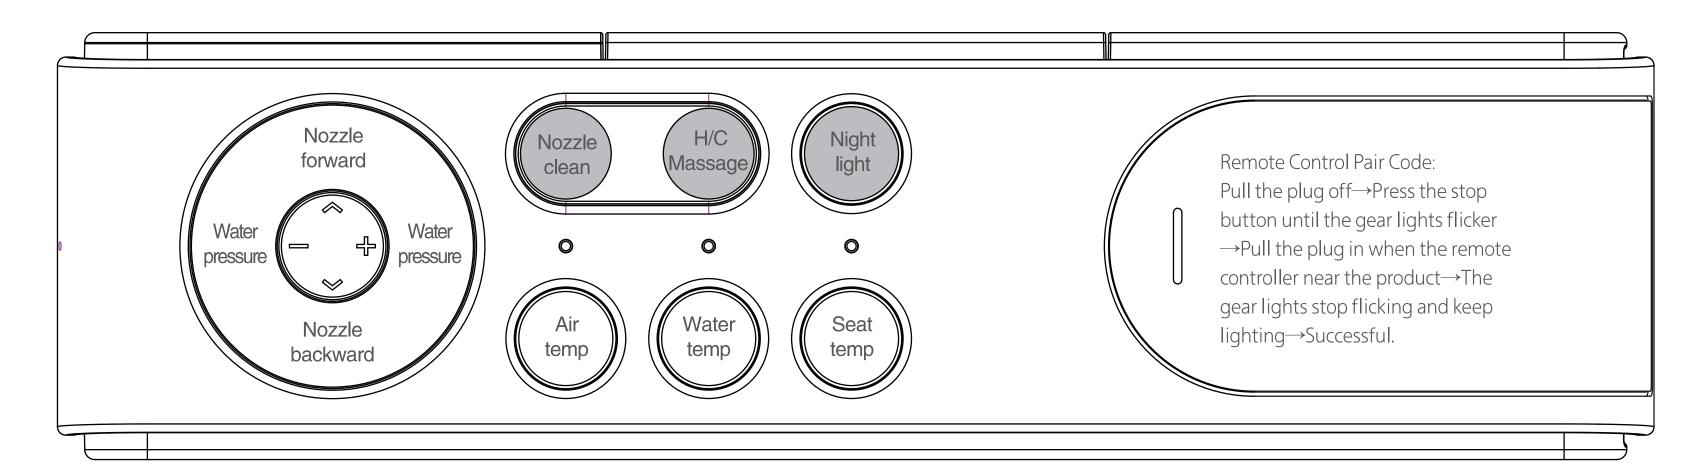

Nozzle Clean

Press "Nozzle Clean" key.

- •The cleaner sticks out for manual wash.
 This function can only be used when the human body or other objects do not contact the seat ring sensing area.
- •When the human body is sitting in place, press "Nozzle Clean key" to realize on/off of wash with air bubbles.

This function can only be in wash mode.

Position

Press "Position" key.

Position can be adjusted within five high or low levels.

Strength

To change wash strength, press "+" or "-" key.

Wash strength can be adjusted for 3 levels. For pressing each time, suitable water flow strength can be set.

Note

- •When water pressure is low, wash strength will be weak, and sometime water cannot be jetted out. At this time, increase wash strength.
- •Please sit on the seat ring inwards, thus splashed water will be less.

■ Water Temp.

Press "Water Temp." key to adjust water temperature for wash.

Current temperature level will be displayed when the key is pressed for the first time. When it is pressed again, temperature level will be switched, and proper temperature can be set.


• When the key is pressed, display indicator is switched among [Off (display indicator is off)], [Low level (display indicator is in blue)], Middle level (display indicator is in purple)] and [High level (display indicator is in red)].

Seat Temp.

Press "Seat Temp." key to adjust seat ring temperature.

Current temperature level will be displayed when the key is pressed for the first time. When it is pressed again, temperature level will be switched, and proper temperature can be set.

• When the key is pressed, display indicator is switched among [Off (display indicator is off)] , [Low level (display indicator is in blue)], [Middle level (display indicator is in purple)] and [High level (display indicator is in red)].

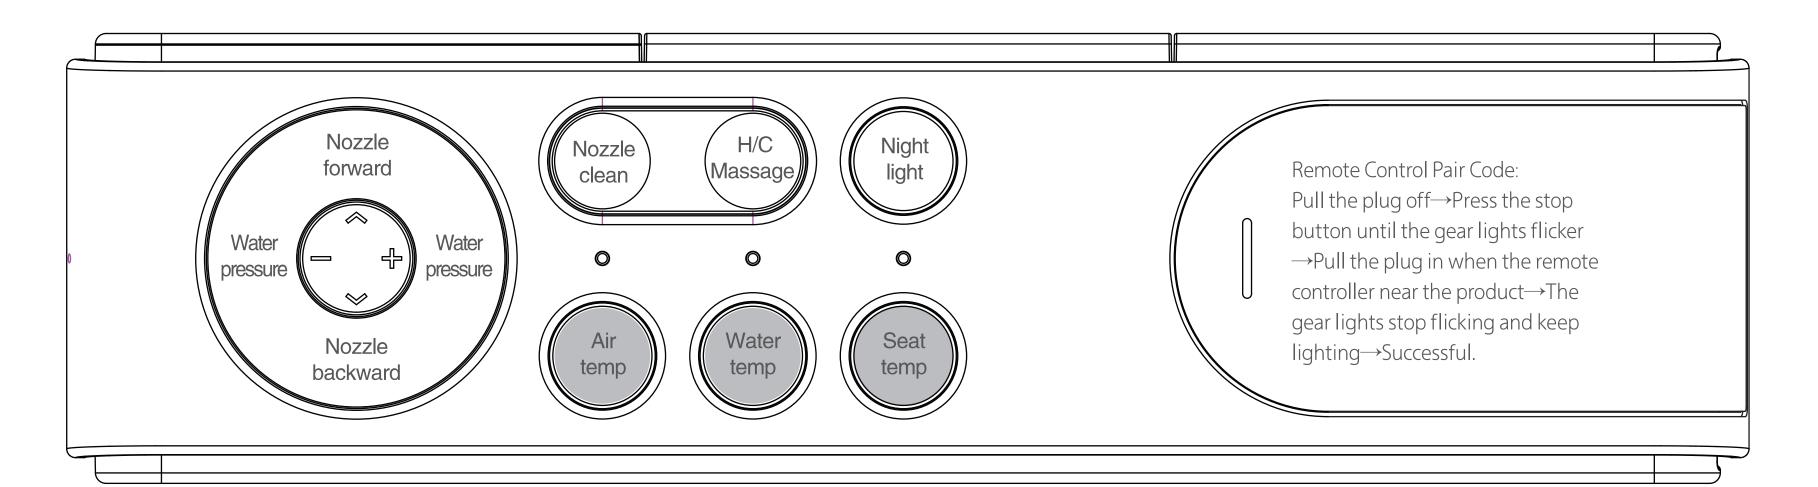

Dryer Temp.

Press "Water Temp." key to adjust water temperature for wash.

Current temperature level will be displayed when the key is pressed for the first time. When it is pressed again, temperature level will be switched, and proper temperature can be set.

When the key is pressed, display indicator is switched among [Off (display indicator is off)], [Low level (display indicator is in blue)], Middle level (display indicator is in purple)] and [High level (display indicator is in red)].

Marning

When a child, an old man, a patient, a person with poor skin or who moves slowly, or a person unable to adjust the temperature, or a person having drunken too much, is using this product, the accompanying person shall set air temperature to "Low level". Do not use the product for a long time, or low temperature burning may occur.

Note

- •When water pressure is low, wash strength will be weak, and sometime water cannot be jetted out. At this time, increase wash strength.
- Please sit on the seat ring inwards, thus splashed water will be less.

Open/close cover

Press "Open/close cover" key to open/close the seat cover.

When the seat ring and cover are closed, press the "Open/Close cover" button briefly to open the seat cover. When the seat cover is opened, and the seat ring is closed, press the "Open/Close cover" briefly to close the seat cover. When the seat ring and cover are opened, press the "Open/Close cover" briefly to close the seat cover and ring.


X After the human body is seated, no action will be performed.

Open/close ring

Press the "Open/Close seat" button-briefly to open/close the seat ring.

When the seat ring and cover are closed, press the "Open/Close seat" button briefly to open the seat cover and ring. When the seat cover is opened, and the seat ring is closed, press the "Open/Close seat" button briefly to open the seat ring. When the seat ring and cover are opened, press the "Open/Close seat" button briefly to close the seat ring.

X After the human body is seated, no action will be performed.

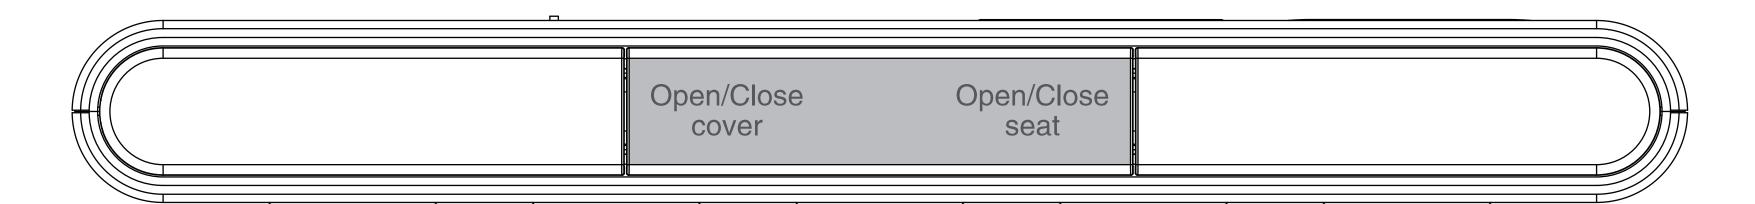

7. Knob and other operation




Powered on and seated, with front wash, rear wash and dryer functions off.

Turn the knob counterclockwise for auto front wash with default oscillating function. The entire process will consist of 4 mins front wash + 3 mins dryer+ flushing once while drying. During the front wash stage, turn the button counterclockwise again will bring it to the drying stage.

Posterior

Powered on and seated, with front wash, rear wash and dryer functions off.

Turn the knob clockwise for auto rear wash with default oscillating function. The entire process will consist of 4 mins rear wash + 3 mins dryer+ flushing once while drying. During the rear wash stage, turn the button counterclockwise again will bring it to the drying stage.

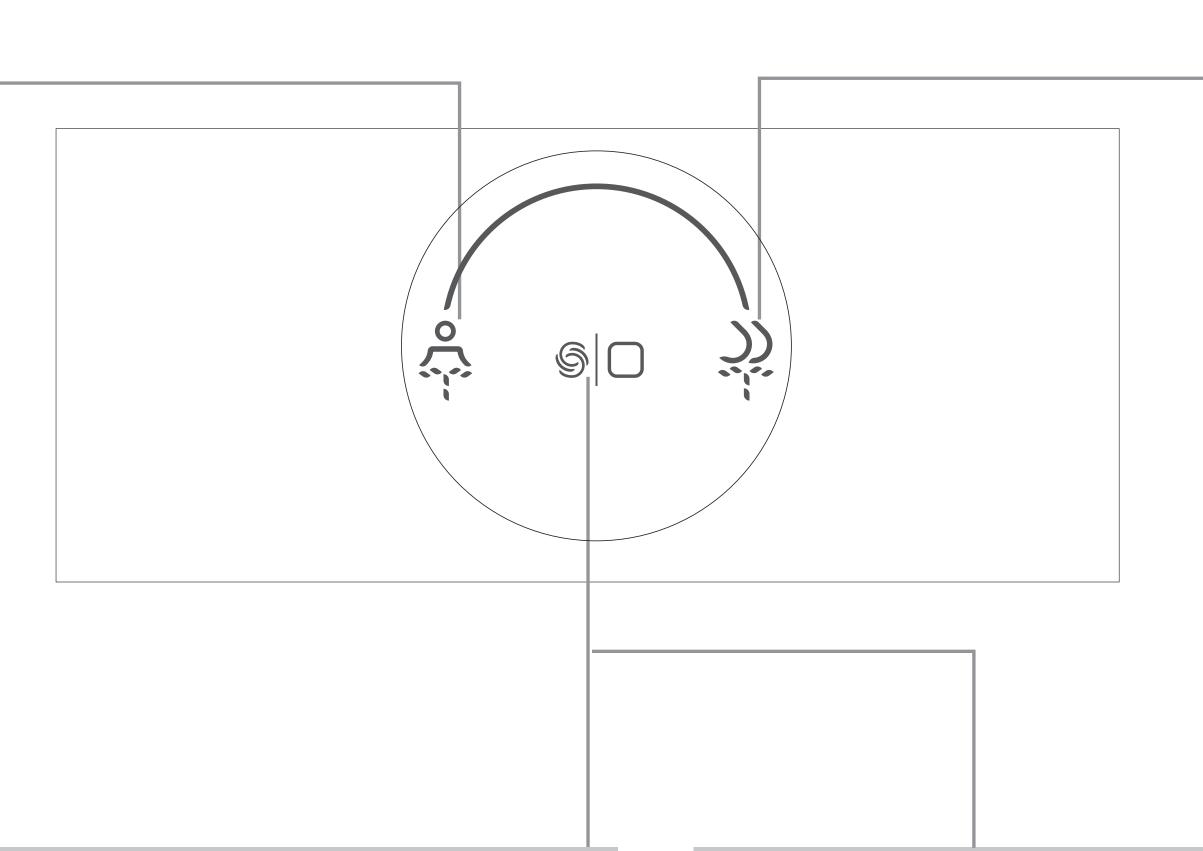

Power/Stop

Powered off: press to flush; press and hold for 3s to power on.

Powered on: press to stop functions; press and hold for 3s to power off when not seated; press and hold for 3s to start drying when seated.

Powered on with no functions running. Short press the knob to flush the toilet.

Flush

DeerValley®

Installation and Owner's Manual

П

Deodorization

The function will operate automatically.

Deodorizing fan automatically turns on after seating and turns off 3 minutes after leaving the seat.



Auto Flush

Human body leaves the seat sensor area after seating.

When the human body leaves the seat after seating, it will automatically flush once.



Kick to Flush

Kick the "foot touch button".

To flush the toilet.

Do not kick with force or high frequency.



Sensing Cover Flip

Press the "Nozzle clean + H/C Massage" buttons briefly to turn on/off the sensing cover flip function.

When the human body approaches, the seat cover can be automatically opened by using microwave induction components.



UV


After running the cleaning function, ultraviolet rays sterilize the spray rod surface and start 10 seconds after leaving.


After pressing the "stop" button of remote control or the seat, the stop command is sent to immediately stop the sterilization function of the ultraviolet spray rod.







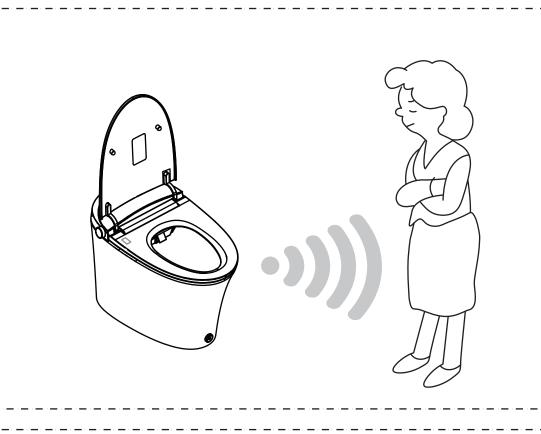

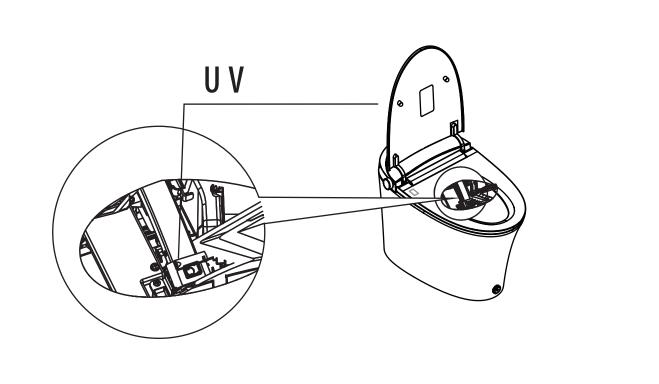


8. Battery Backup Installation

- •Take out the battery box, pry open the two sides of the clasp with a screwdriver, take out the battery box cover;
- •Align the positive and negative terminals of the battery with the positive and negative terminals inside the battery box, and then install it into the battery box base. Cover the battery compartment cover tightly and lock the clips.
- •Connect the connection cable of the battery box to the connection cable at the rear of the product and lock the nut.

Please do not insert the battery and the connecting cable forcibly, otherwise it will cause damage to the product.

If you have any questions, please call customer service.

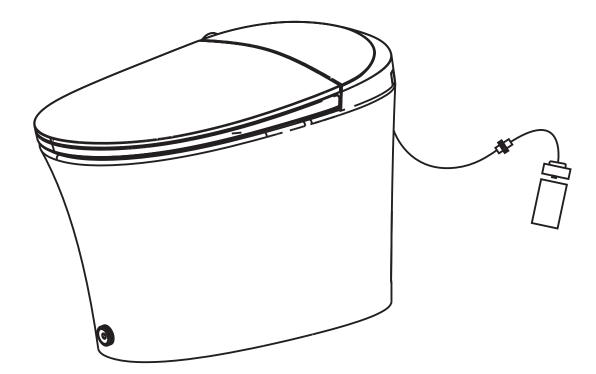

Attention:

Please confirm the positive and negative battery

Do not charge, disassemble, burn, mix with old batteries or different types of batteries, so as not to cause leakage or explosion. The battery box has a moisture-proof function, please ensure that the fixing screws are screwed in place so as to achieve a good sealing effect Need to replace the battery recommended to contact professionals to replace.

User-friendly Design

Slow-closing lid/seat

Preserve your toilet's life and allows you to close the lid/seat silently.

Damper

The product has installed the damper which provide the toilet cover and toilet seat with a buffer function, to achieve the mute effect.

- 8 Layers of safety
- 8 different built-in safety features to protect the user and product.
- Memory mode

After power failure, water temp, water pressure, seat temp, and wand position are all restored to mid-range after power failure. Night light is turned on by default after power failure. On / off, keep the last memorized setting state.

Pre-flushing

After seating, the product will flush once towards the seat to ensure that the seat wall is moistened.

9. Specifications

(1) Product specifications

Power rating		110V
Frequency		60Hz
Rated power input		1050W(When inlet water temp in 15°C)
Seat and	d dryer temperature range	39.4 °F~104 °F
Source water temperature range		39.4 °F~95 °F
•	Water supply type	DN15(G1/2")
\\\	Minimum pressure	25psi , ensuring a flow of water at least 18L/min
Water Inlet	Maximum pressure	80psi (still)
Toilet	Flush type	Tornado flush
Tollet	Rough-in	Rough-in 12in
	Way for heating	Transient heating
Flushing	Temp pf warm water	Off/about 93.2°F ~102.2°F(4 levels)
	Safety devices	Thermostat series, thermal fuse, flow detection device
	Warm wind temp	Off/about 95 °F ~131°F (4 levels)
Warm wind	Wind speed	Above 4m/s (3 levels regulations)
Safety devices		Bimetal thermostat series, thermal fuse
0 1	Seat ring temp	Off/about 93.2 °F~104°F (4 levels)
Seat ring	Safety devices	Thermal fuse
	Dimension	7.48in(L) * 2.01in(W) * 0.87in(H)
Remote control	Battery	Two AAA Batteries(Purchase required)
Power cable length		Appx. 59in
Product dimension		27.17in * 16.61in * 18.43in



(2) Function Table


Category	Function	
	Posterior (Rear cleaning)	•
	Bidet (Front cleaning)	
	Instant heating	
	Oscillating cleaning	
Cleaning	Hot & cold massage cleaning	
	Water pressure adjustment	
	Water temperature adjustment	
	Nozzle position adjustment	
	Self-cleaning nozzle	
	Antibacterial nozzle & seat cover	
	Instant heating	
	Seat heating	
	Seat ring temperature adjustment	
	Warm wind drying	
	Warm wind temperature adjustment	
Comfort	Air-cleaning filter system	
	Soft close seat cover	
	Electrostatic induction	
	Night Light	
	Foot touch control flush	
	Automatic seat cover˚ open&close	
	Remote control	
	Automatic flush	
Human care	Flush with power failure	
	Remote control flush	
	Flushing water pressure	
_	Pre-wetting	
	Water fiter	
	Air isolation channel backflow prevention	
	Business mode	
	Nano glaze	
Safety	Eight-fold protection	
	Self diagnosis	
	Prevent low temperature scald	
	Ultraviolet Sterilization	

(3) Regular maintenance

Regular maintenance is required to ensure normal use

WARNING

Do not spray water or detergents on the toilet, remote control or the power cord. Doing so may cause electrick shock or fire.

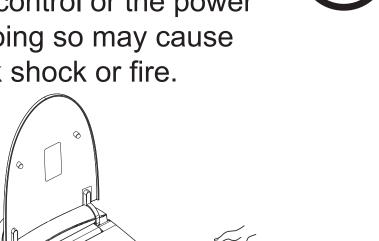

Note

- Cut off the power and water supply before maintenance.
- Direct water wash to the entire product is prohibited.
- During winter season, the water inside may freeze after long periods of storage and non-usage. Please take measures to prevent.


Note


- Before connecting the product to the water supply and electrical outlet, allow it to defrost for 30 mins in a warm indoor environment.
- In cases of extreme cold/freezing/nozzle stuck in place, wrap the water input line with a warm towel. Never pour hot water or use a hot dryer directly on the toilet.

Maintenance of water filter

Keep area around water filter clear and away from harsh cleaners.
 Do not install water filter next to any heat source.
 Do not expose to long periods of intense sunshine or allow water filter to freeze once installed.
 Turn off water supply at shut off valve if intelligent toilet won't be

used for an extended period of time (ie: one month).

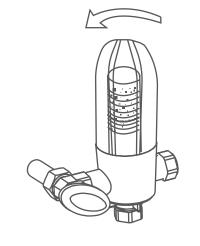

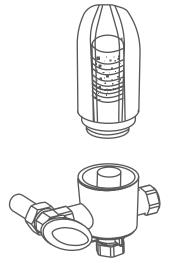

Replace water filter every 6 months.
 Contact our Customer Service team on details for water filter requirements.
 (When filter elements become black or brownish).


Remove the expired filter cartridge by rotating counterclockwise. Install a new filter cartridge. Turn clockwise to lock it in place.

Maintenance of product surface and ceramics

Wipe dust or stains with a soft wet cloth

nozzle

 A wet soft brush, cloth or sponge may be used to clean the ceramic area Do not use abrasive cleaning solutions, such as alcohol, bleach, paint thinner, cresol, benzene, gasoline, etc.

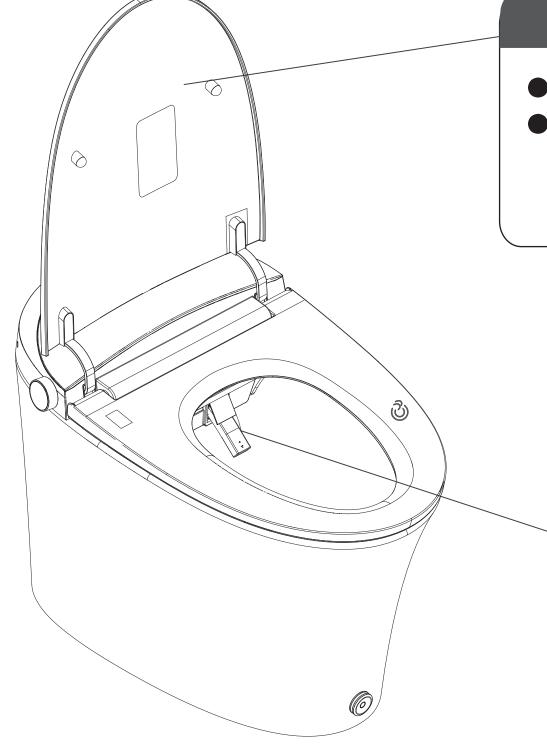

Maintenance of the nozzle

Powered on and not seated: Press the "Nozzle Clean" button on the remote controller, and the washer will automatically extend. If there is dirt in the nozzle orifice, If there is dirt in the nozzle orifice, you can gently hold the washer with one hand and clean it with a toothbrush with the other hand.

Do not use excessive force, otherwise it will damage the nozzle. When the nozzle is clogged, it is recommended to replace it with a new one.

(4) Problems & Solutions

Power Button		
Problems	Fault Diagnoses	Solutions
	Check whether the attaching plug is loose or not	Please check the circuit
Not working	Check whether the power is switching on or off (the power light is not on)	Press rotated switch for 3s, the power light is on.
	Check whether there is any electric leakage or not (the light of leakage protection plug is not on)	Unplug the attaching plug from the socket, plug it again later. Press the reset switch of the leakage protection plug, if it is still not working, please unplug the attaching plug and contact with local distributor to repair.

Wash Functions		
Problems	Fault Diagnoses	Solutions
No water from the spout	Check whether the water supply cuts off or not	Wait for the water supply restoring
	Check whether the angle valve switches off or not	Open the angle valve
	Check whether the water filter is blocked or not	Clean the filter mesh
	Check whether the inlet pipe is flexed or not	The inlet pipe must be straight
The intensity of cleaning is not strong enough	Check whether the water pressure of cleaning switch to low level or not	Regulate the water pressure according to the instruction manual
	Check whether the inlet filter is blocked or not	Clean the filter mesh or change the water filter
Unusual water flow from the spout	Abnormal operation	Unplug the attaching plug for one minute and then plug it again
The water temp is not warm enough	Check whether the water switches to low level or not	Regulate the water temp according to the instruction manual
The cleansing is always leaking	Solenoid valve no longer has any effect	Please contact with our qualified maintenance personnel for repairing
The cleaning function is not working normally	The human induction system of the toilet seat no longer has any effect	Please contact with our qualified maintenance personnel for repairing

Dryer		
Problems	Fault Diagnoses	Solutions
The dryer blows cold air	Check whether the dryer switches off or not	Regulate the temperature of dryer according to the instruction manual
	Check whether the heating element of dryer is damaged or not	Please contact with our qualified maintenance personnel for repairing
Heated Seat		
Problems	Fault Diagnoses	Solutions
The seat temp is too low or is not hot	Check whether the temp of toilet seat is on the "off" position or not	Regulate the temperature of toilet seat according to the instruction manual
Remote Control		
Problems	Fault Diagnoses	Solutions
The blue light of water temp is flickered	Low battery	Please replace a new battery
Remote control is not working	Check whether there is any water on the remote control or not	Wipe off water by dry towel
Toilet Unit		
Problems	Fault Diagnoses	Solutions
	No power supply	Power restoration
The product is not	No water from the spout	Please contact with our qualified maintenance personnel for repairing
flushed clean	No water but have the sound of flushing	 Check whether or not the pipeline is blended on not, please keep the water supply pipeline open and smooth Check there is any damage of water pump
	Have water all the time	Please contact with our qualified maintenance personnel for repair if there is any unusual from the water inlet valve.
Soft-Closing Fea	ture	
Problems	Fault Diagnoses	Solutions
The function of flipping the seat cover/ring up by foot touch cannot	Auto-damping is damaged	 Recharge after unplug the attaching plug Please contact with our qualified personnel if the following solution is not working.

NOTE: Drawings may not exactly define contour of the product.

open or close