


MAXIMA
STEAM


MCT Maytag Commercial Technology

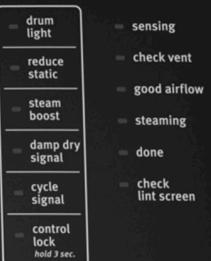


Appearance may vary depending on model.

Quick Start Guide Using Your High Efficiency Dryer

1 CLEAN THE LINT SCREEN

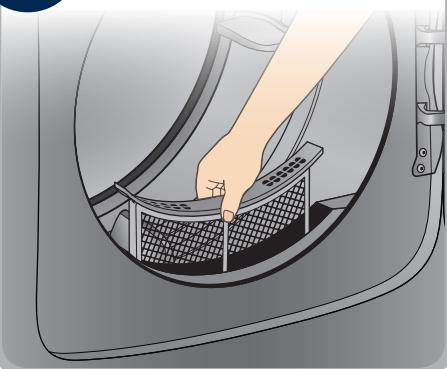

2 LOAD THE DRYER

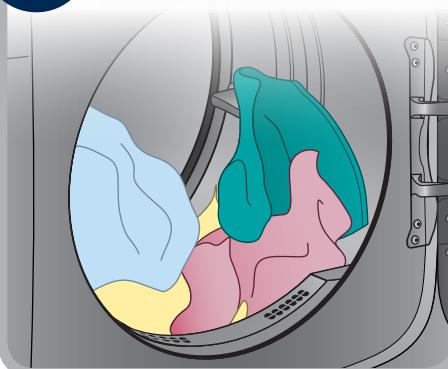

3 PRESS POWER TO TURN ON THE DRYER



5 ADJUST CYCLE SETTINGS, IF DESIRED*



ENERGY SAVER

Activate the ENERGY SAVER setting to increase your energy savings. This setting uses a slightly lower heat level and extends cycle time.



Turn on for optimal energy savings.
Turn off for optimal cycle times.

ENERGY SAVER will default on for NORMAL.

NOTE: Energy savings may vary across loads and cycles.

6 SELECT ANY ADDITIONAL OPTIONS*



4 SELECT THE DESIRED CYCLE FOR YOUR LOAD*



7 TOUCH AND HOLD START/PAUSE TO BEGIN CYCLE



hold to start

* **NOTE:** See "Cycle Guide" in the Use and Care Guide for more information about cycles, settings, and options. Not all cycles, settings, and options are available with all models. Read your Use and Care Guide before using your dryer.

W10678962A

W10678963A - SP

®/™ ©2014 Maytag. All rights reserved. Used under license in Canada.

04/14
Printed in U.S.A.

MAXIMA
STEAM

MCT Maytag Commercial Technology



L'aspect peut varier selon le modèle.

Guide de démarrage rapide

Comment utiliser votre sécheuse haute efficacité.


1

NETTOYER LE FILTRE
À CHARPIE



2

CHARGER LA
SÉCHEUSE

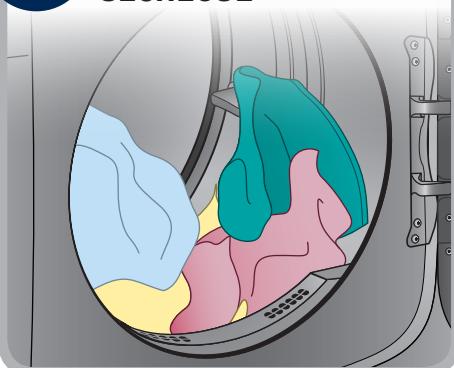

3

APPUYER SUR POWER
(MISE SOUS TENSION)
POUR METTRE LA
SÉCHEUSE EN MARCHE



4

SÉLECTIONNER LE
PROGRAMME SOUHAITÉ
POUR LA CHARGE*



5

AJUSTER LES RÉGLAGES
DE PROGRAMME SI
DÉSIRÉ*



ENERGY SAVER

Activer le réglage ENERGY SAVER pour augmenter les économies d'énergie. Ce réglage diminue légèrement le niveau de chaleur et allonge la durée du programme.




Activer pour réaliser des économies d'énergie optimales. Désactiver pour optimiser la durée des programmes.

Le réglage ENERGY SAVER est activé par défaut pour le cycle NORMAL.

REMARQUE : Les économies d'énergie peuvent varier en fonction des charges et des programmes.


6

SÉLECTIONNER
TOUTE OPTION
SUPPLÉMENTAIRE*

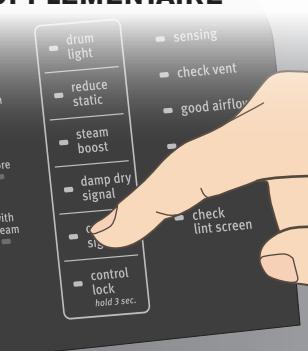

7

APPUYER SANS
RELÂCHER SUR START/
PAUSE (DÉMARRER/
PAUSE) POUR DÉMARRER
LE PROGRAMME

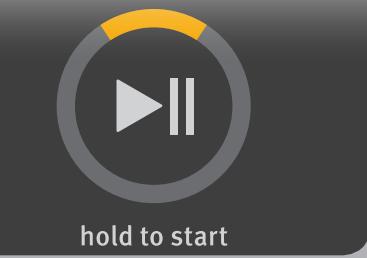

***REMARQUE :** Voir le "Guide des programmes" du Guide d'utilisation et d'entretien pour plus d'informations sur les programmes, les réglages et les options. Certains programmes, réglages et options ne sont pas disponibles sur certains modèles. Lire le Guide d'utilisation et d'entretien avant d'utiliser la sécheuse.

W10678962A

W10678963A - SP

®/™ ©2014 Maytag. Tous droits réservés. Emploi sous licence au Canada.

03/14

Imprimé aux É.-U.