

IDEAL® FISH TAPE LINE SAVE USER GUIDE

ENGLISH

BLUEVIEW™ BLUED-STEEL™ FISH TAPES

BLUEVIEW™ S-CLASS® FISH TAPES

Getting Started

- 1. Install included AAA Batteries (Batteries can be found in the on-board storage location). See "How to Replace Batteries" section for details.
- 2. Press and hold the power button located just above the screen (Figure 1).
- 3. Press and hold the zero button located behind the screen on the inside of the handle (Figure 2).
- 4. Your BlueView™ Fish Tape is ready to use.

How to Calibrate

The BlueView™ Fish Tape comes factory calibrated and ready to use. It is recommended that the fish tape be calibrated at the following increments:

- 500' of use
- 5000' of use
- As needed after 5000' of use

To Field Calibrate:

- 1. Retract the fish tape all the way into the case.
- 2. Press and hold the Zero button for 3 seconds.
- 3. Pull out and measure 10' of fish tape material using a measuring tape (Figure 4).
- 4. Using a stripped 12 AWG Solid Wire (or similar object) locate and press the 10' Calibrate button located on the face of the handle (Figure 3) "CAL" will appear on the screen when complete.
- 5. The BlueView™ Fish Tape is now calibrated and ready for normal use.

How to Replace Batteries

- 1. Locate the two #2 Phillips drive screws located on the back cover of the handles (Figure 5).
- 2. Remove the cover to expose the battery pack (middle of handle) and on-board storage (rear of handle) location (Figure 6).
- 3. Remove batteries and inspect the battery compartment for any signs of degradation.
- 3. Once batteries are installed, replace the cover by tilting the locking tab into the slot near the battery holder and pushing down flat (Figure 7).
- 4. Replace the two screws until snug, do not over tighten these screws.

Maintenance and Information

- Power off the fish tape before performing any maintenance
- Clean the case with a damp cloth and mild detergent. Do not use abrasives or solvents
- · Keep away from liquids and ensure the fish tape is completely dry before use
- See the instruction guide for the respective fish tape material for any end repair/replacement instructions
- Removing the front cover and tampering with the electronics on board may void the units warranty.
- To save battery life, the display will auto darken after 30 seconds of inactivity. To relight the display, feed or retract the tape slightly.
- · After 30 minutes on inactivity, the fish tape will automatically power down completely.

Disposal of Used Batteries/Accumulators

The user is legally obliged to return used batteries and accumulators. Disposing of batteries in household waste is prohibited! Batteries/ accumulators containing hazardous substances are marked with the crossed-out wheeled bin. The symbol indicates that the product is forbidden to be disposed via domestic refuse. The chemical symbols for the respective hazardous substances are Cd = Cadmium, Hg = Mercury,

Pb = Lead. You can return used batteries/accumulators free of charge to any collecting point of our local authority, or where batteries/ accumulators are sold. Consequently, you must comply with your legal obligations and contributor to environmental protection.

- · Always use approved safety glasses when using this product.
- Do NOT use on or near live circuits or near energized equipment. Electrical shock may occur causing injury or death. Make sure all
- Do **NOT** use pliers or other tools that may kink, damage, or weaken the Fish Tape.
- Do **NOT** attempt to use fish tape that is fractured, has multiple ends or has a damaged jacket.
- Keep the fish tape wound in the reel to prevent damage to the tape.
- Use this product in a safe work position to prevent loss of balance.
- Never remove the screws from case while fish tape is coiled inside the reel.
- Do not submerge or leave exposed to water/rainfall
- Operating Temperature range -4°F to 130°F (-20C to 55C)
- · Remove batteries for storage if the fish tape will not be used for longer than one month
- · Battery leakage will compromise the safety of the fish tape and cause irreparable damage to internal components

Full-Line of IDEAL® Fish Tapes









 






Figure 2





Figure 3

Figure 4





Figure 5

Figure 6





Figure 7





Ordering Information

| Cat. No. | Length (ft.) | Fish Tape Type |
|----------|--------------|----------------|
| 31-656 | 120 | Blued-Steel™ |
| 31-657 | 240 | |
| 31-661 | 100 w/Eyelet | S-Class® |
| 31-663 | 100 w/Leader | |