 
 




ASSEMBLY INSTRUCTION


MODEL: # FSH2430

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.


*** Do not fully tighten screws until fully assembled ***

No.	COMPONENT LIST		Q'ty	No.	COMPONENT LIST		Q'ty
Ⓐ		CONSOLE TABLE TOP	1pc	Ⓑ		UPPER LEG	4pcs
Ⓒ		STAND LEG	4pcs	Ⓓ		SHELF	1pc


Step 1: Use your hand to rotate unclockwise stand leg (C) and upper leg (B).

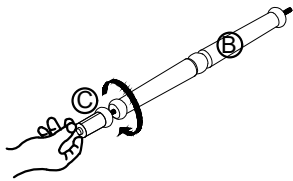

Step 2: Align and place Upper Leg (B) into Table Top (A) then use your hand to rotate clockwise fully tight.

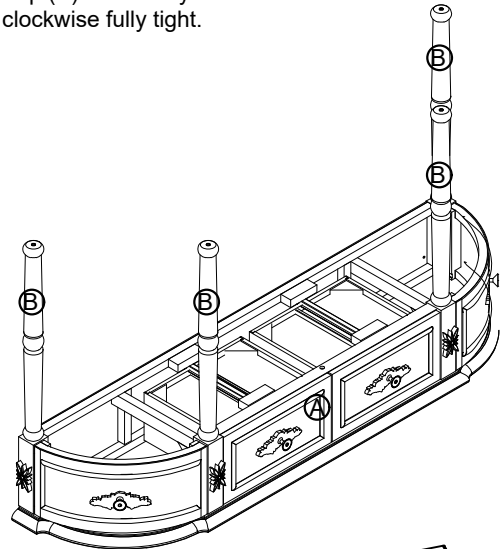

Step 3: Align and place shelf (D) into upper leg (B) and take stand leg (C) into upper leg (B) then use your hand to rotate clockwise stand leg (C) fully tighten.

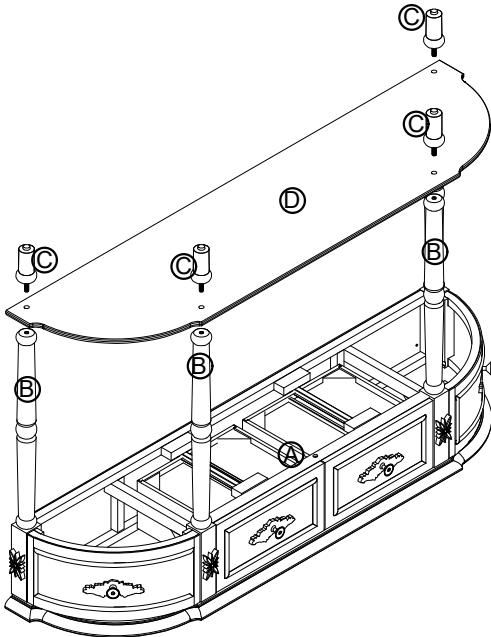

FINISH .
THANK YOU !