

## Remote Control Instructions

Thank you for choosing our product. Please read the instructions carefully before installation and keep it available for future maintenance or reference.

# Content

## Installation preparation

01. Remote control installation	01
02. Battery installation	01

 
## Usage instruction

01. Remote control illustration	02
02. Rear/Front washing	03
03. Drying/Dryer temperature	04
04. Water pressure adjustment	04
05. Nozzle position adjustment	04
06. Energy saving	04
07. Water temperature adjustment	05
08. Seat temperature adjustment	05
09. Night light	05
10. Foam setting	05
11. Half flush/Full flush	06
12. Open the lid by remote control	06
14. User code	07
15. Other operations	07

## Remote control installation


### Remote control holder installation 1:

1. Drill a 6mm (15/64") diameter hole in the wall to a depth of about 35mm (1-3/8").
2. Tear off the double-sided adhesive sticker on the back of the holder.
3. Install an anchor into the hole, stick the holder to the wall and secure with screws and then stick the patch with tape.

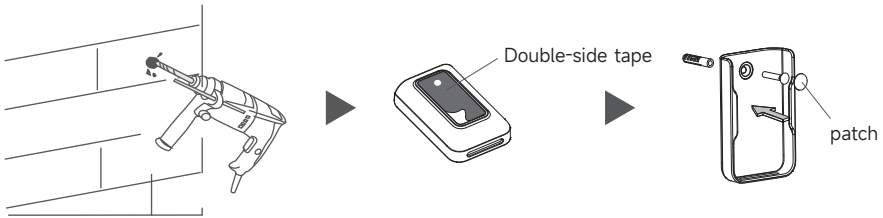


### Remote control holder installation 2:

 1. Clean and dry the pre-installation area of the holder.
2. Remove the double-sided adhesive tape on the back of the holder.
3. Stick the holder to the wall vertically and then stick the patch with tape.

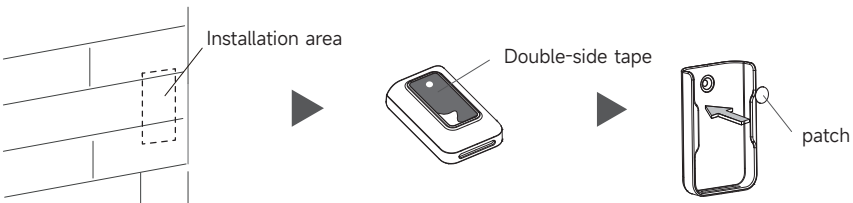

## Battery installation

 1. Insert batteries into the remote control.
2. Put the remote control to the holder.

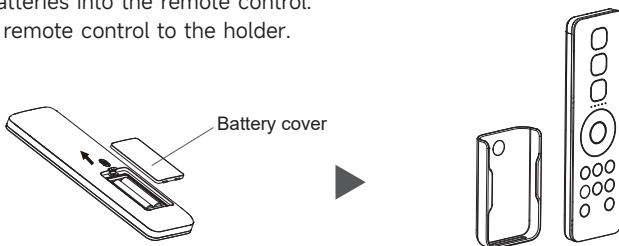


### Notice:

1. Please ensure the remote control is within reach when a person is on the seat.
2. Do not install and use the product in damp places such as shower room or wet room.
3. Do not place the product in a place where it is easily exposed to water.

# Usage Instruction
 
## Remote control illustration

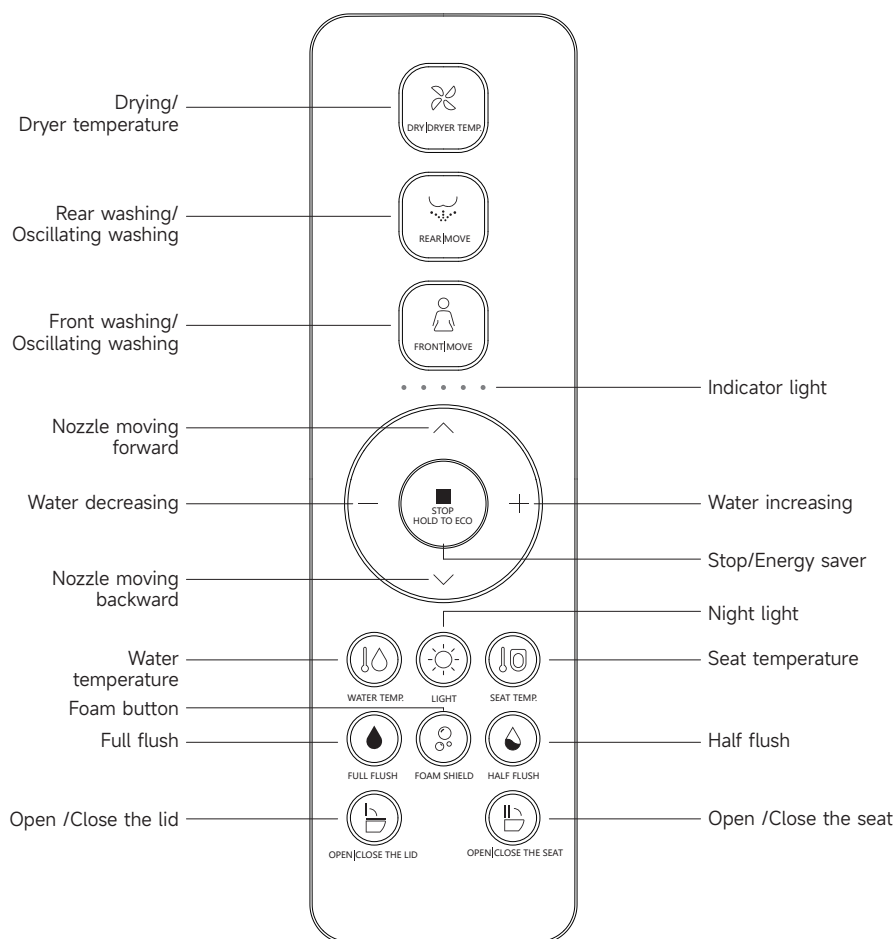

# Usage Instruction

## Notice :

- Only when the user is seated and the buzzer beeps can the functions of front/rear washing and drying be activated.
- Please sit backward on the seat for correct washing position and to avoid splashing.
- The nozzle will continue to spray for 1-2 seconds after user stands up during washing, so please press "STOP" button before standing up.

## REAR|MOVE

 


- Press "REAR|MOVE" button, the indicator light is on showing current water temperature level, it starts rear washing. Press again "REAR|MOVE" button to shift to oscillating washing (nozzle moves forward and backward to expand washing area). The washing will stop automatically after one cycle, and it will stop immediately if the user presses "STOP" button.

## FRONT|MOVE




- Press "FRONT|MOVE" button, the indicator light is on showing current water temperature level, it starts front washing. Press again "FRONT|MOVE" button to shift to oscillating washing (nozzle moves forward and backward to expand washing area). The washing will stop automatically after one cycle, and it will stop immediately if the user presses "STOP" button.

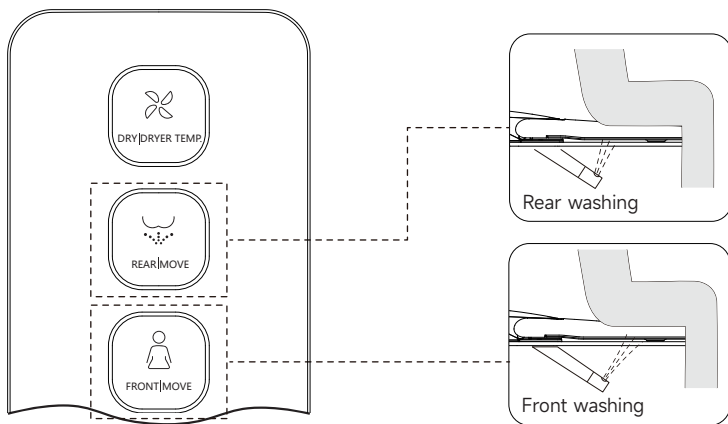



# Usage Instruction

## DRY|DRYER TEMP



 ① Press "  " button, the indicator is on showing current air temperature level, it starts drying. The drying will stop automatically after one cycle or after user leaves the seat.

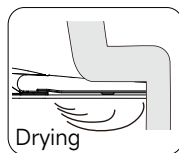

② Under drying, press "  " button to adjust the air temperature between 0-5 level, and the indicator light is on showing the air temperature level. When the indicator light is off, the temperature is at level 0 (room temperature).

○ ○ ○ ○ ○

Room  
temperature

● ○ ○ ○ ○

Level 1

● ● ○ ○ ○

Level 2

● ● ● ○ ○

Level 3

● ● ● ● ○

Level 4

● ● ● ● ●




Level 5

## Water pressure adjustment

   - Press " + " or " - " button when it is under function of rear washing or front washing, the indicator light is on showing current water volume level, and water volume can be adjusted.


## Nozzle position adjustment

- Press " ^ " or " v " button when it is under function of rear washing or front washing, the indicator light is on showing current nozzle position, and nozzle position can be adjusted in 5 levels.

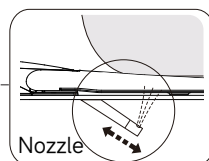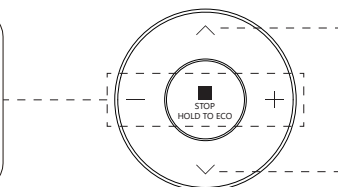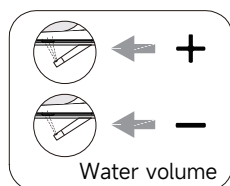

## Energy saving



① Long press "  " button to enter energy saving mode, and the buzzer will beep once.

② Long press "  " button again to exit energy saving mode, and the buzzer will beep twice.

· Under energy saving mode, seat temperature is set to Level 1 for energy saving. (Note: If the seat temperature before energy saving is neutral, then it will be neutral as well.)

### Remark


Energy saving mode will be suspended and the product will enter functional mode if the seat is used. The seat starts to heat immediately (without turning off the seat temperature), and the energy saving mode is restored once the seat is no longer being used.

# Usage Instruction

## Water temperature adjustment



WATER TEMP.

- Short press "  " button to adjust the water temperature between 0-5 level. The indicator light is on showing water temperature level. When the indicator is off, the temperature is at Level 0 (room temperature) .

○ ○ ○ ○ ○

Room  
temperature

● ○ ○ ○ ○

Level 1

● ● ○ ○ ○

Level 2

● ● ● ○ ○

Level 3

● ● ● ● ○

Level 4


● ● ● ● ●

Level 5

## Seat temperature adjustment



SEAT TEMP.

- Short press "  " button to adjust the seat temperature between 0-5 level. The indicator light is on showing seat temperature level. When the indicator is off, the temperature is at Level 0 (room temperature) .

○ ○ ○ ○ ○

Room  
temperature

● ○ ○ ○ ○

Level 1

● ● ○ ○ ○

Level 2

● ● ● ○ ○

Level 3

● ● ● ● ○

Level 4




● ● ● ● ●

Level 5

## Night light




 
 



LIGHT

- ① Night light adjustment: Short press "  " button to turn on/turn off night light.
- ② Intelligent mode: Long press "  " button to enter into intelligent mode (Night light will be on or off depending on the surrounding light.). If the product is on intelligent mode, short press "  " button to exit intelligent mode. (Factory setting: intelligent mode)

## Foam setting



FOAM SHIELD

- ① Short press "  " button to activate the foam shield function.
  - ② Long press "  " button to turn on pumping quickly until the foam comes out and then release it . (Note: This operation is only used when the toilet has just been installed or the foam agent is used up, and the foam agent is added again. The use of the rest of the time will cause foam agent to be wasted.)
  - ③ Press "  " button first, then press "  " button to turn on the automatic foaming function, and the buzzer will beep once.
  - ④ Press "  " button again and press "  " button to turn off the automatic foaming function, and the buzzer will beep twice.
- After the automatic foaming function is on, when it is detected that the user is sitting, the foam shield function will be turned on automatically. (The automatic foaming function is turned off by default)





## Half flush/Full flush



 
HALF FLUSH



FULL FLUSH

- ① Short press "  " button, the toilet starts half-flush.
- ② Short press "  " button, the toilet starts full-flush.
- ③ Long press "  " button to turn on the auto flush function, and the buzzer will beep once.
- ④ Long press "  " button again to turn off the auto flush function, and the buzzer will beep twice.

· When the auto flush function is turned on, toilet will automatically flush after detecting user leaves the seat.

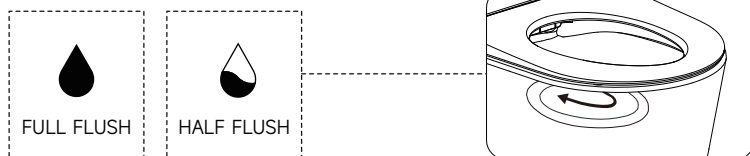




 
## Open the lid by remote control



OPEN|CLOSE THE SEAT



OPEN|CLOSE THE LID

- ① Short press "  " button to open or close the lid.
- ② Short press "  " button to open or close the seat.
- ③ Long press "  " button to turn on the auto opening function, and the buzzer will beep once.
- ④ Long press the "  " button again to turn off the auto opening function, and the buzzer will beep twice.

(The auto opening function is off by default, and it needs to be turned on for the first time.)



## User code

- IR remote control

- ① Plug in the toilet and the self-inspection starts. It beeps when the self-inspection completes.
- ② Press and hold " ■ " button, then press " 🚽 " button, the indicator light will flash.
- ③ Press and hold the Pressure " + " or " - " button to select user 1-9 (as shown below). The indicator light displays the corresponding user code and flashes.
- ④ Press " ■ " button, then press " 🚽 " button. The main unit beeps once, indicating that the remote control and the toilet are matched successfully.

● ○ ○ ○ ○  
User 1

○ ● ○ ○ ○  
User 2

○ ○ ● ○ ○  
User 3

○ ○ ○ ● ○  
User 4

○ ○ ○ ○ ●  
User 5

● ● ○ ○ ○  
User 6

○ ● ● ○ ○  
User 7

○ ○ ● ● ○  
User 8

○ ○ ○ ● ●  
User 9

## Other operations

### Quiet mode

- Press and hold the " ■ " button and press the " 🧑 " button to turn on/off quiet mode.

### Sterilization function


- When no one seated and washing/drying is off, long press " 🌸 " button to turn on plasma sterilization function. This function will stop automatically after 2 hours. Under this mode, if any other button is pressed or user is seated, it will stop automatically. (Only for the toilet with sterilization function.)

### Automatic pre-wet function

- ① Press " ■ " button first, then press the " 💧 " button to turn on the auto pre-wet function, and the buzzer will beep once.
  - ② Press " ■ " button again, and press the " 💧 " button to turn off the auto pre-wet function, and the buzzer will beep twice.
- After the auto pre-wet function is turned on, when it is detected that the user is sitting, the ceramic pre-wet function will be activated. (The button combination is only applicable to toilets with automatic pre-wet function)

# Usage Instruction

## Auto deodorization


① Press " ■ " button, and press "  " button to turn on the auto deodorization function, and the buzzer will beep once.


② Press " ■ " button again, and press "  " button to turn off the auto deodorization function, and the buzzer will beep twice.

- Under auto deodorization, the deodorization function will be on when it is detected that the user is seated, and it will automatically stop when the user leaves the seat.

- Under drying, the deodorization function is turned off. (This button combination is only applicable to toilets with auto deodorization function, and the auto deodorization function is turned on by default when the power is on every time.)

## Foot sensor function

① Long press "  " button to turn on the foot sensor, and the buzzer will beep once.

② Long press "  " button again to turn off the foot sensor, and the buzzer will beep twice.


- In the seated state, the foot sensor is invalid. (This operation button is only applicable to the toilet with foot sensor)

## Remark:

- The buzzer will "BEEP" once when the user presses one button indicating that the main unit receives the signal and conduct the operation accordingly. If the buzzer doesn't sound, it means the main unit doesn't receive the signal, please adjust the remote control direction and repress the button.

- In case of power cut during nozzle spraying, the wand cannot be retracted, please wait until the power is restored. In case of a power cut for a long period, please push the wand softly back by hand. Do not push hard, to avoid damage to wand and electrical machine.



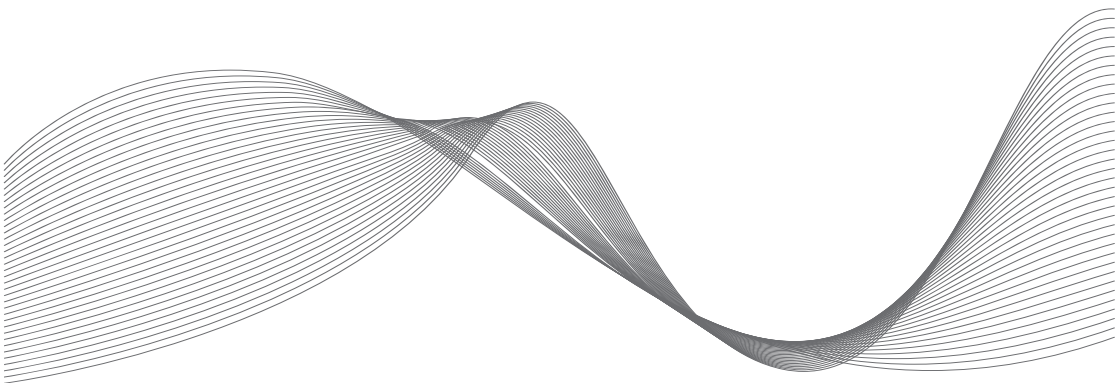

The picture of product may not be entirely consistent with actual appearance and color because of product improvements, please in kind prevail.