

CARING FOR WOOD FURNITURE

Wood furniture adds warmth and character to your home but requires proper care to maintain its beauty and durability. Follow these essential tips to ensure your wood furniture remains in excellent condition for years to come:



REGULAR DUSTING

Dust your wood furniture regularly with a soft, dry cloth or a microfiber duster. This prevents the buildup of dust and particles that can scratch the wood's surface.



USE COASTERS AND MATS

Place coasters or placemats under hot and cold beverages, dishes, and flower vases to prevent heat rings and water stains on wooden surfaces.



GENTLE CLEANING

Use a mild, non-abrasive wood cleaner or a mixture of mild dish soap and water for regular cleaning. Dampen a soft cloth with the solution, wipe the surface, and dry it thoroughly.



REPAIR SCRATCHES AND DENTS

Use a wood touch-up pen or wax stick that matches the furniture's finish for minor scratches. For deeper scratches or dents, consult a professional furniture repair expert.



AVOID HARSH CHEMICALS

Please refrain from using abrasive cleaners, ammonia-based products, or harsh chemicals on your wood furniture, as they can strip the finish or damage the wood.



GENTLE STORAGE

If you need to store wooden furniture for an extended period, do so in a climate-controlled environment to prevent warping or cracking.



AVOID DIRECT SUNLIGHT

Position your wood furniture away from direct sunlight or use window coverings to protect it. Sunlight can cause fading and drying out of the wood over time.



WIPE SPILLS PROMPTLY

Accidents happen. When spills occur, wipe them up immediately with a clean, slightly damp cloth to prevent staining and warping.



HANDLE WITH CARE

Lift and move furniture items rather than dragging them, as this can cause scratches and damage to the furniture and the floor.

By following these care and maintenance guidelines, you can ensure that your wood furniture continues to enhance your living space with its timeless charm and elegance.