 
 

Operation Instruction for Oil Filled Radiator

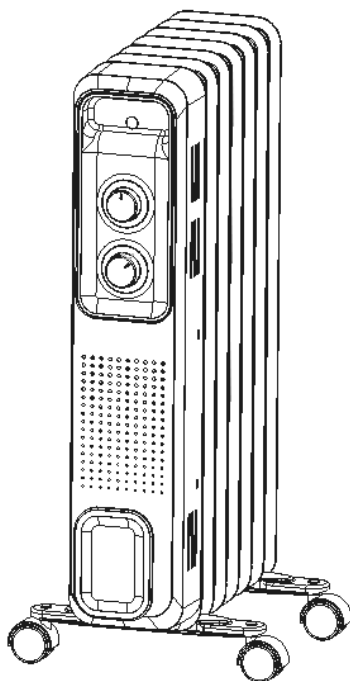

Model No.: HD983-R7Q
Item No.: U630181/U630182/U630183

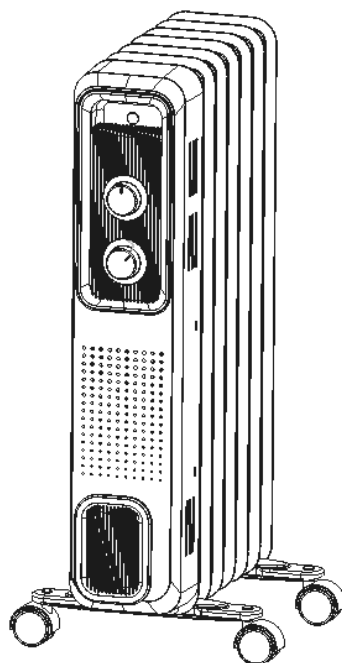

Model No.: HD984-R7Q
Item No.: U630192/U630193

Thank you for purchasing this product! If you have any questions about the product, such as missing parts, damaged products, product assembling, or operation, please contact us via Amazon Message or customer service number: 213-4467172 or 661-4358826.

INSTRUCTION MANUAL

1200W Portable Oil Filled Radiator Heater

Model# HD983-R7Q 120V 60Hz 1200W

Model# HD984-R7Q 120V 60Hz 1200W

IMPORTANT INSTRUCTIONS

When using heater, basic precautions should always be followed to reduce the risk of fire, electric shock, injury to persons, and hyperthermia, including the following:

- 1) Read all instructions before using this heater.
- 2) This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
- 3) Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- 4) Always unplug heater when not in use.
- 5) Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater, or return to authorized service facility for examination and/or repair.
- 6) Do not use outdoors.
- 7) This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- 8) Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- 9) To disconnect heater, turn controls to off, then remove plug from outlet.
- 10) Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- 11) To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- 12) A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- 13) Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- 14) Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- 15) **SAVE THESE INSTRUCTIONS**
- 16) Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.
- 17) To avoid excessive room temperatures which can cause hyperthermia: **DO NOT** leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.

 
PLEASE READ AND SAVE THESE INSTRUCTIONS

Thank you for choosing our heater please read this instruction carefully before operating and keep it for future reference.

I. Product characteristics

- ◆ Our electrothermal warmer operates as follows: tubular element is taken as a heat source, efficient and permanent heat conduction oil is taken as the medium, heat eliminates via radiation fin, room temperature is increased via air circulation.
- ◆ Our electrothermal warmer has the following advantages: convenient, safe, beautiful, tranquil operation, without electromagnetic disturbance etc. It is suitable for such locations as scientific research rooms, hospitals, hotels, training practice houses, and bedrooms, etc. The warmer keeps your room or office more comfortable in cold seasons!

II. Product structure diagram

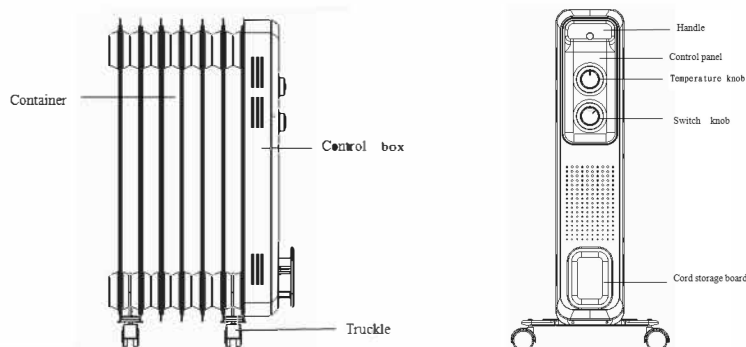


III. Operation instruction

Mounting:

Take out the heater and all the parts from the packing carton;


1. The heater should be unplugged during assembly or disassembly
2. For the convenience of assembly, turn the unit upside down.
3. Place the footplate on the top of both radiation fins; You'd better refer to the product structure diagram, and check the wheels location between the first and last set of fins;
4. Fix the footplate on the heater with specified U type bolt and wing nut, tighten the screw;
5. After assembly is complete, turn the unit wheel side down for operation

 Note: Do not operate without wheels attached.

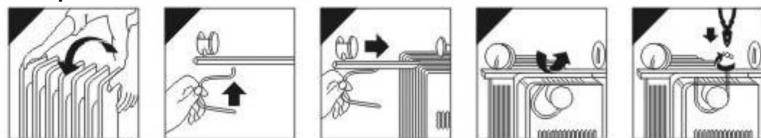

Operating:

 1. Do ensure the temperature knob and power setting knob are at MIN position before using and plug the power cord into a wall outlet (120VAC, 60Hz);
2. When the unit is turned on, the power indicator light will illuminate to tell you that the heater is functioning;
3. The temperature knob can regulate room temperature. Turn the temperature knob clockwise to increase the temperature; turn it anti-clockwise to reduce the temperature until appropriate temperature is reached, the indicator "ON".
4. "I" – Low Heating (500 Watts)
"II" – Medium Heating (700 Watts)
"III" = Maximum heating (1200 Watts)

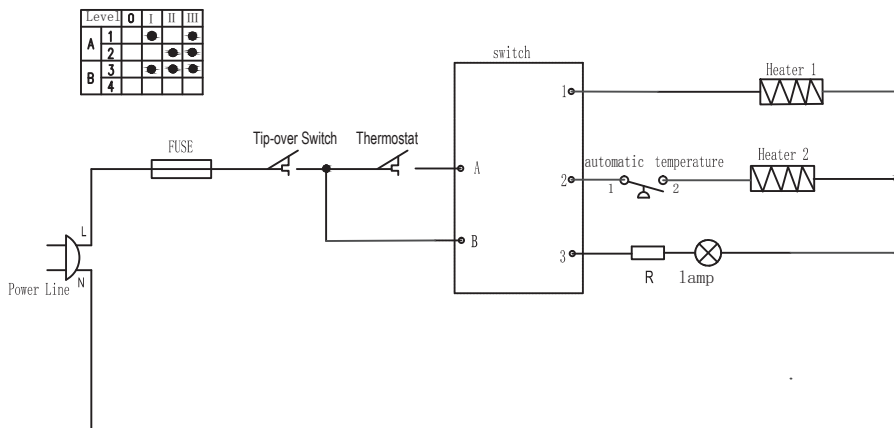

3. When you don't use the heater, please rotate the power setting knob to OFF position, turn the temperature knob into the minimum position and plug it off.

Note: the warmer operates via heat elimination of heat conduction oil, and the oil cools out slowly after the warmer is turned off, so do not move the warmer unless the oil has cooled out, and move the warmer with the handle.

NOTE: The product may emit an odor during first use; this is normal. Ventilate the area as needed.

During Season Care:

1. Before cleaning, be sure to turn off and unplug the heater.
 2. Carefully wipe the unit with a soft damp cloth. Please be very cautious about the motor and heating elements.
 3. Do not immerse the heater in water.
 4. Never use gasoline, benzene or thinner. This will damage the surface of the heater.
- After cleaning, be sure to completely dry the unit with a cloth or towel.

Note: Do not use waxes or brush polish, since they will react with the heater, resulting in discoloration.

After-Use Care:

1. Store the heater in a cool and dry location with the power cord properly secured.
2. Please store the unit in its original carton or suitable container.

Note: Do not disassemble the radiation fin. Do NOT attempt to repair or adjust any electrical or mechanical functions on this unit.

Do not remove knob parts from the heater.

IV. Technical parameters

Model#	Number of Fins	Rated Voltage (V)	Frequency (Hz)	Rated Power Input (W)	Power in Setting I (W)	Power in Setting II (W)	Total Input Power in Setting III
HD983-R7Q HD984-R7Q	7	120	60	1200	500	700	1200

Thank you for purchasing this product! If you have any questions about the product, such as missing parts, damaged products, product assembling, and operation, please contact us via **Amazon Message** or customer service number: **213-4467172 or 661-4358826**.

IMPORTANT

Please call our customer service department for any consulting:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

DATED PROOF OF PURCHASE IS REQUIRED FOR WARRANTY SERVICE.

AVIS

Veuillez appeler le service à la clientèle pour toutes questions au:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

PREUVE D'ACHAT ORIGINALE REQUISE POUR SERVICE DE GARANTIE.

IMPORTANTE

Sólo hay que llamar nuestro departamento de servicio al cliente en caso de tener preguntas o inquietudes:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

SE REQUIERE PRUEBA DE COMPRA CON FECHA PARA SERVICIO BAJO GARANTÍA.

Address: ROWAN ELECTRIC APPLIANCE LLC

28407 Ascent Way, Santa Clarita, CA 91350

Phone: 213-4467172 or 661-4358826