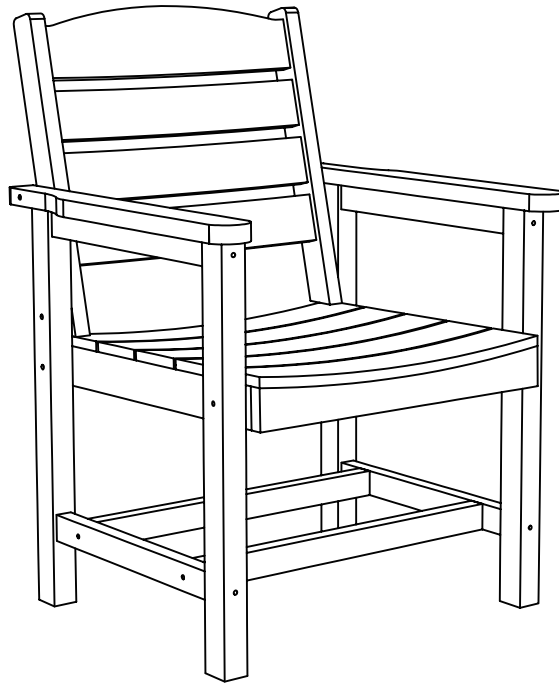


Instruction Manual

HIPS Dinning Chair



1. Please find the assembly guidelines on Page 4-6.
2. You can scan the QR code of our official website and leave a message to register for the 4-year warranty.

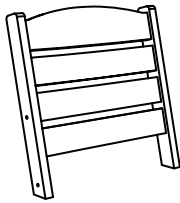
 
 
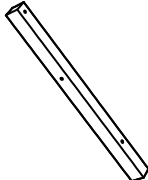
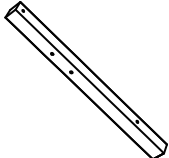
 
 
 
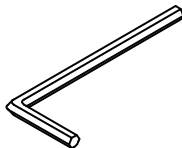
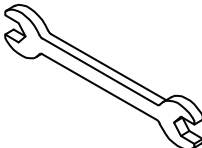
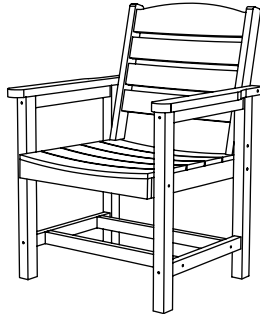


3. Scratches may occur due to violent impacts during the shipping process.
If you find any defective parts, please get in touch with us through Amazon messages or any of the contact methods below. We will respond within 8 hours and provide free replacement parts or other services you need.

Fortunecandy Inc.


✉ customerservice@fortune-candy.com

🔗 Connect with us on fortune-candy.com


			
A x 1	B x 1	C x 1	D x 1
			
E x 2	F x 2	G x 2	H x 2
 M6*50	 M6*80	 M6*65	 M6*55
AA x 4	BB x 4	CC x 10	DD x 2
 			
Tools			

Precautions before Assembly

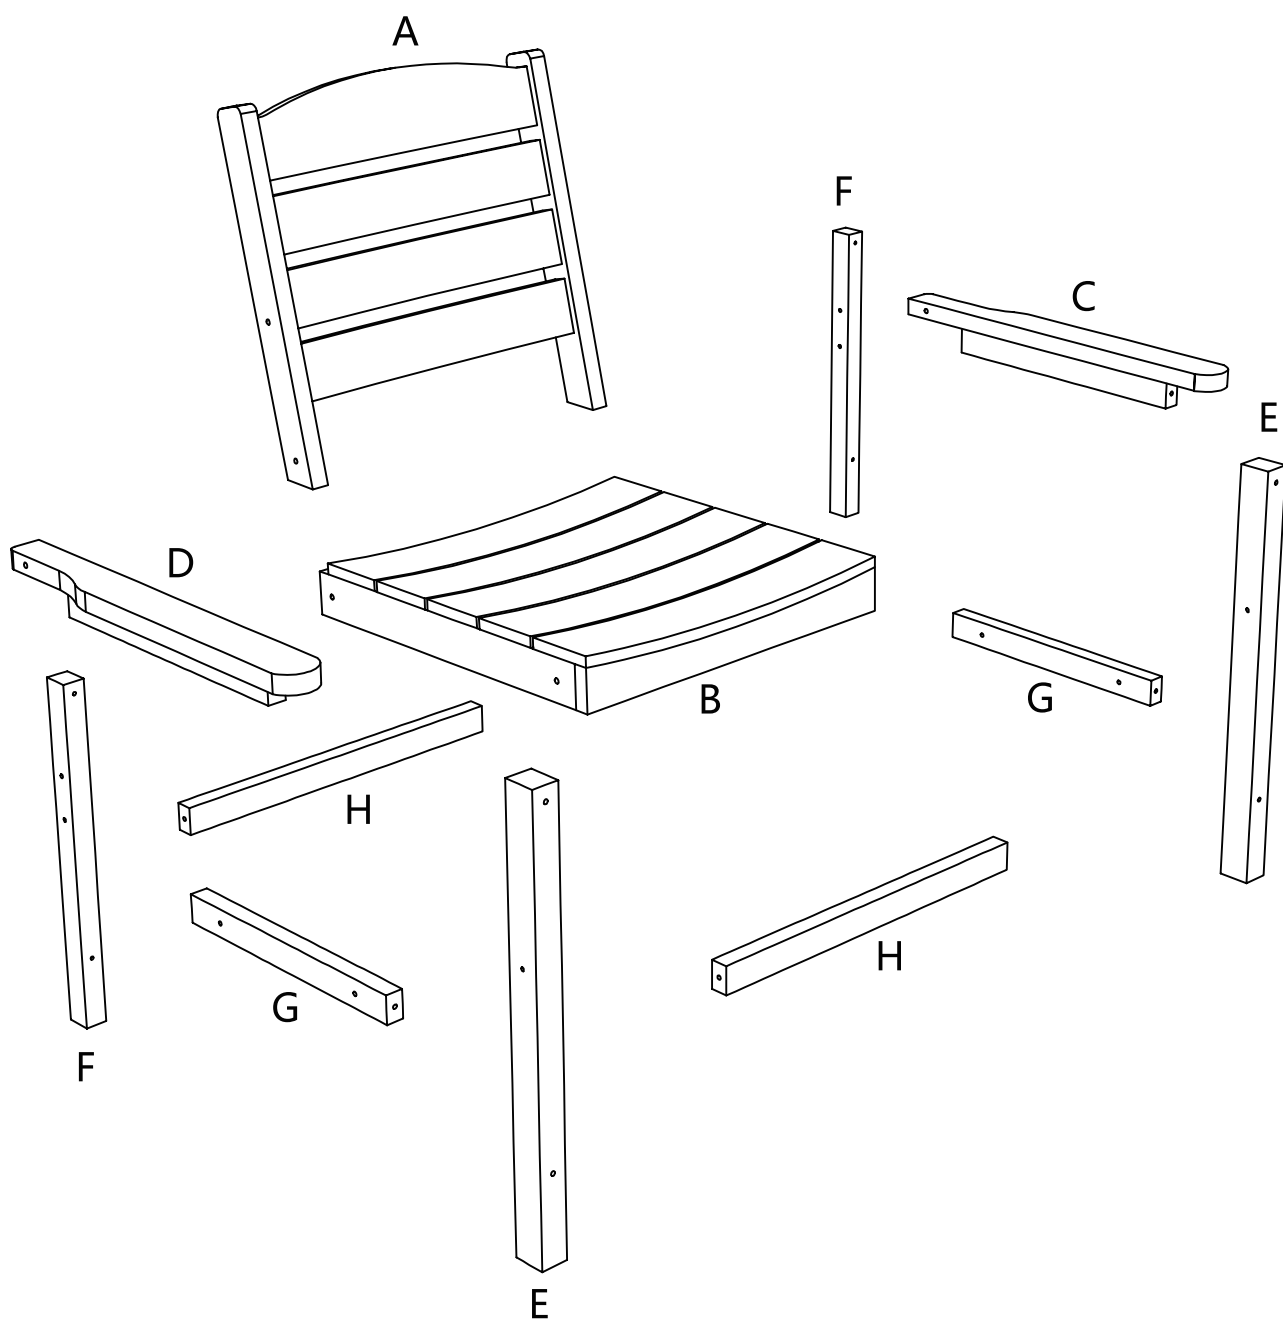1. If any parts are missing, scratched, or damaged, please get in touch with the seller or Fortune Candy customer service for a partial refund and replacement parts.
2. Although there are many parts, it is not difficult to install because many of them are repeated, and all the screw holes are accurate. One person can complete the installation, but we recommend two people install it together, making it more manageable.




1

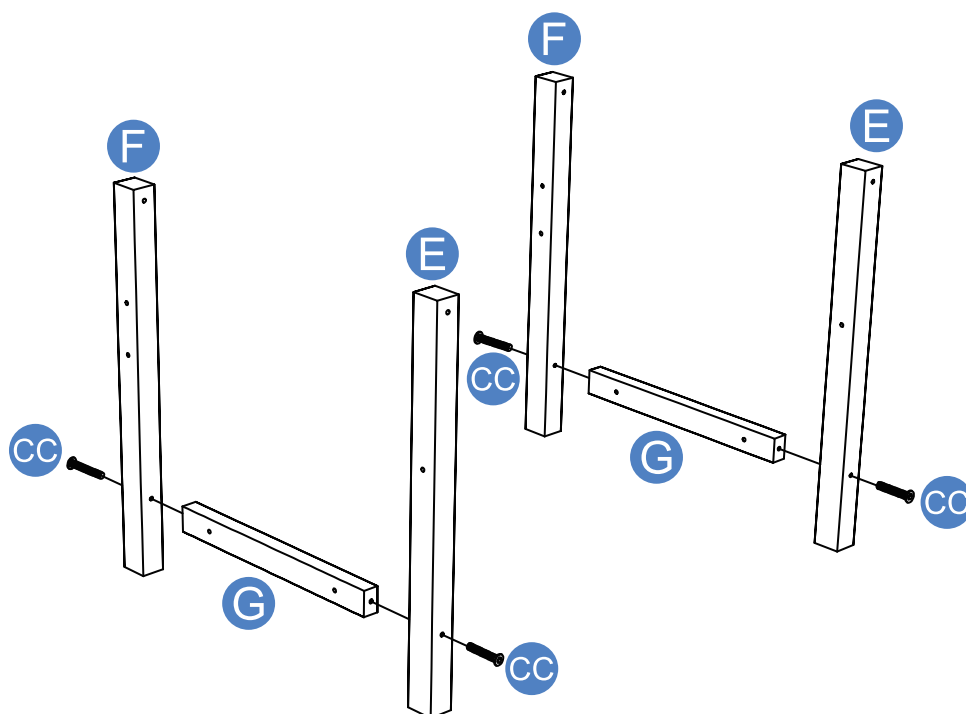


1. In this step, you only need to tighten the screws to 80%. Fixing it too early will make the other parts difficult to assemble.

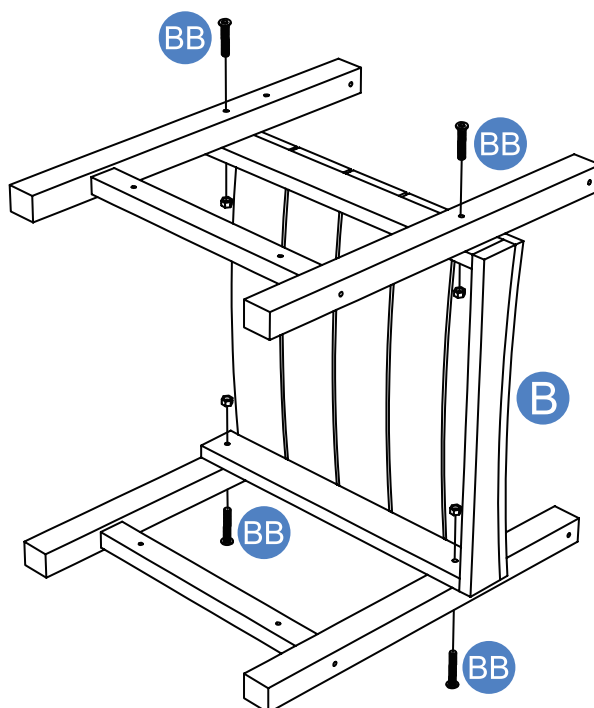2




2. In this step, you only need to tighten the screw nuts to 80%. Fixing it too early will make the other parts difficult to assemble.

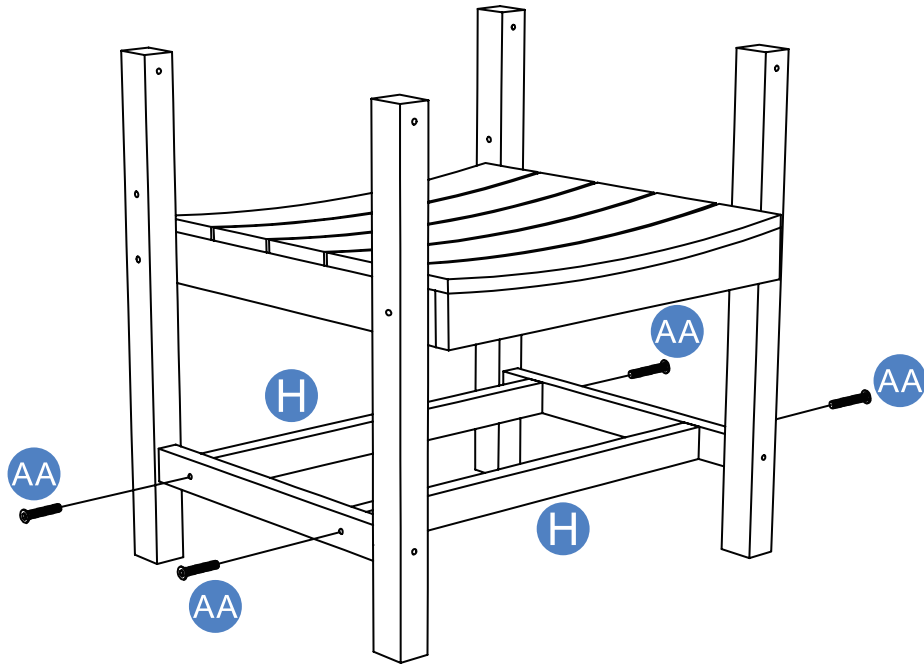3





3. Please do NOT tighten the screws to the tightest in this step.

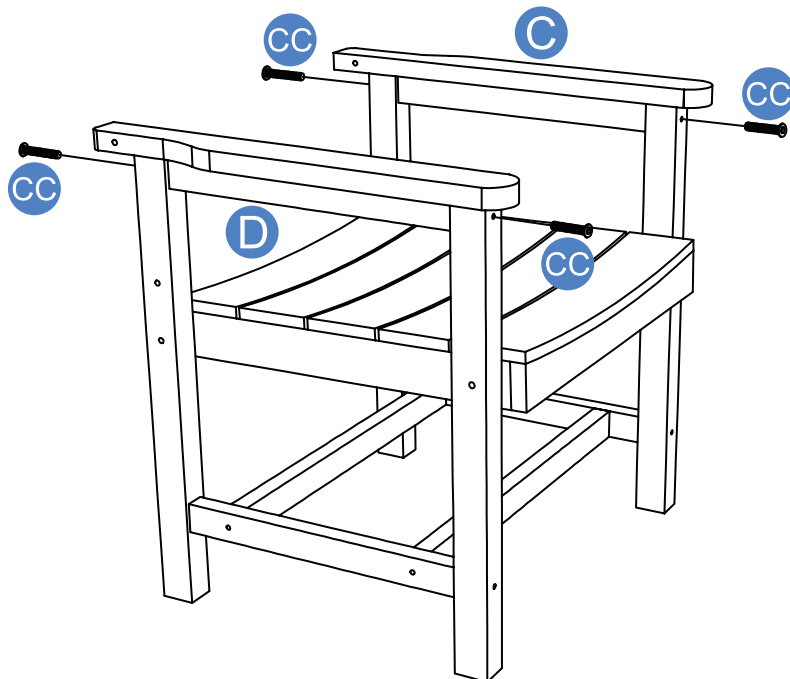4




4. Please do NOT tighten the screws to the tightest in this step.

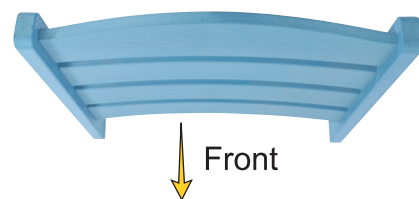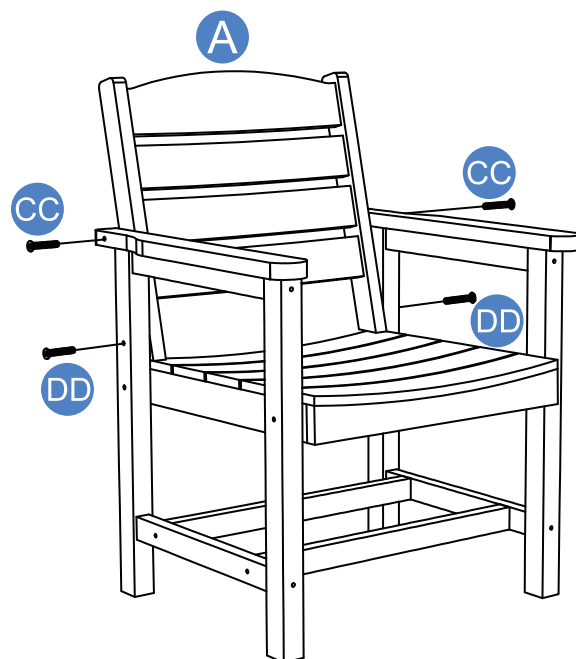5



5. Assemble the backrest. Please identify the direction.

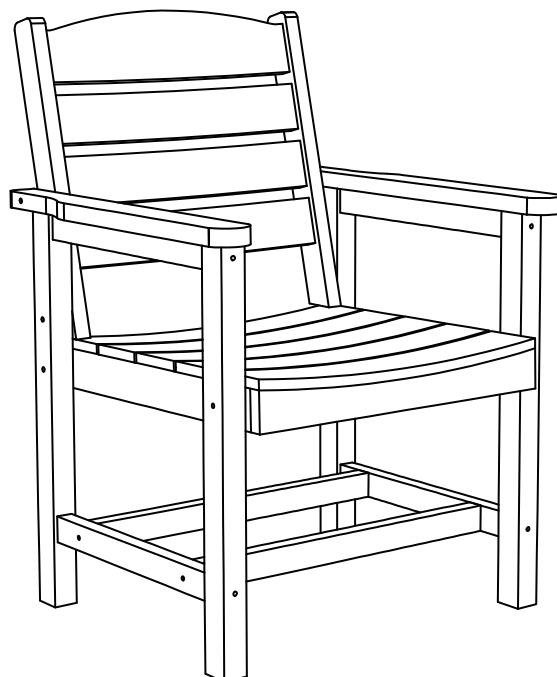6



6. ⚠ After confirming that all parts are installed correctly, please tighten all nuts and screws to the maximum tightness. The installation is now complete.

FAQs for This Product :

Q: How to maintain this product?

A: Please check the nuts regularly for looseness and tighten them. This product is entirely weather-resistant and very suitable for outdoor use. HIPS (High-impact polystyrene) is the most durable material for outdoor furniture.

Q: How to register for the warranty?

A: Please scan the QR code on the first page to go to our official website, <https://fortune-candy.com>, and use the online chat tool to send your order number; then we will register your product for warranty. You can also send an email to customerservice@fortune-candy.com.

Q: How to contact us to send replacement parts?

A: If you find any defects, scratches, or missing parts, the easiest way is to tell us which part you need using Amazon messages. In this way, we can find out which product you purchased and your delivery address. You can also send an email to customerservice@fortune-candy.com. Please tell us your order number, shipping address, and which part is needed. No matter how you contact us, we will reply within 8 hours and give you a satisfactory solution.