
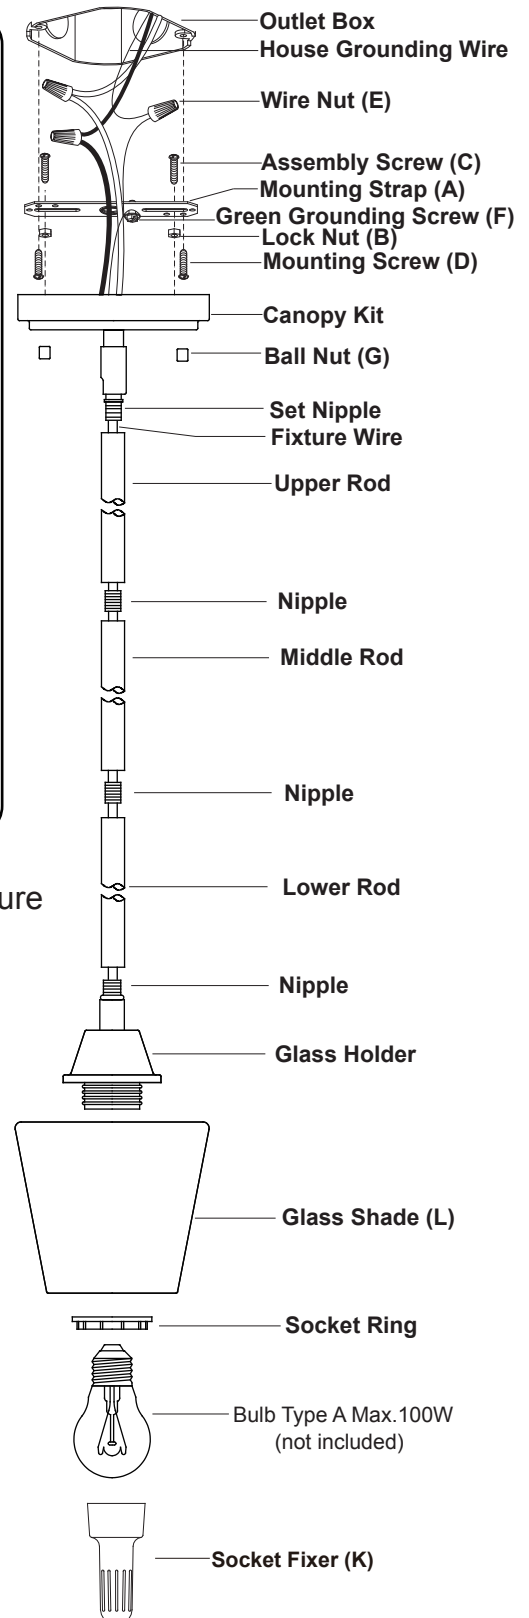


ASSEMBLY AND INSTALLATION INSTRUCTIONS

P0091 / P0093

WARNING: BE SURE TO SHUT OFF POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE INSTALLING OR SERVICING THIS FIXTURE.

**NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THESE INSTRUCTIONS.**

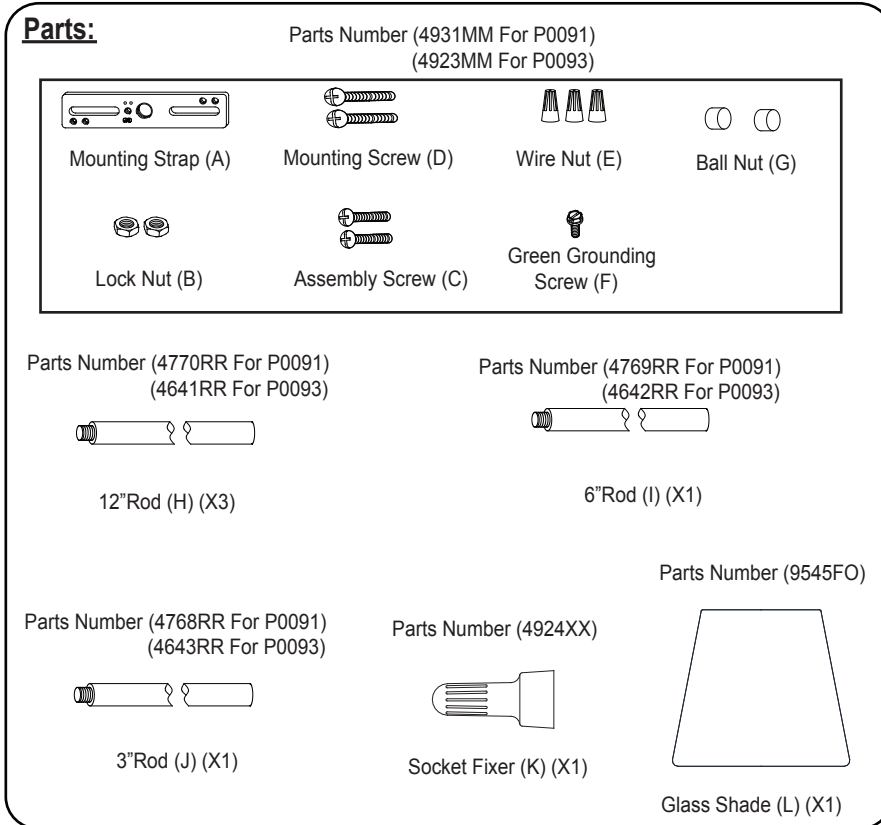



1. Thread two assembly screws to the mounting strap, and secure them with two lock nuts. Adjust the length of the assembly screws if necessary.
2. Attach the mounting strap to the outlet box by using two mounting screws.
3. Rod connections:
 - a. Thread the fixture wire from the fixture through the lower rod, and then secure the lower rod onto glass holder using the nipple.
 - b. Thread the fixture wire through the middle rod, and then secure the middle rod onto the lower rod using the nipple.
 - c. Thread the fixture wire through the upper rod, and then secure the upper rod onto the middle rod using the nipple.

The height can be adjustable to 13-1/4" ~ 54-1/4", by using the rods.
4. Thread the fixture wire through the canopy kit, then secure the rod assembly to the set nipple of the canopy kit.
5. Pull out the outlet wires and the house grounding wire from the outlet box. Make wire connections using the wire nuts:
 - The black wire from fixture to the black wire from power source.
 - The white wire from fixture to the white wire from power source.

---Attach the fixture grounding wire to the mounting strap with the green grounding screw. Then connect it to the house grounding wire with the wire nut.

Carefully put the wires back into the outlet box.

6. Attach the canopy to the mounting strap by inserting the assembly screws, and secure it with two ball nuts.
7. Attach the glass shade to the glass holder, then secure it with the socket ring, using supplied socket fixer.
8. Install a bulb (not included). See relamping label at socket area or packaging for maximum allowed wattage.
9. Turn on the power at the main fuse or circuit breaker box.
10. ***Angled mounting recommended for a vaulted or angled ceiling. (See Fig. 1)***

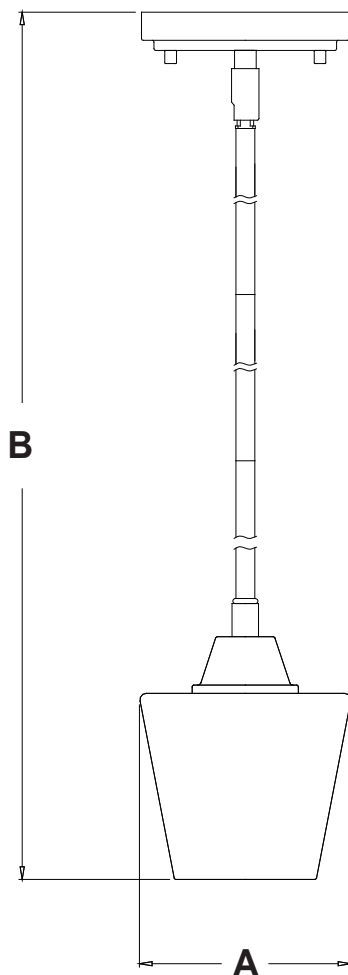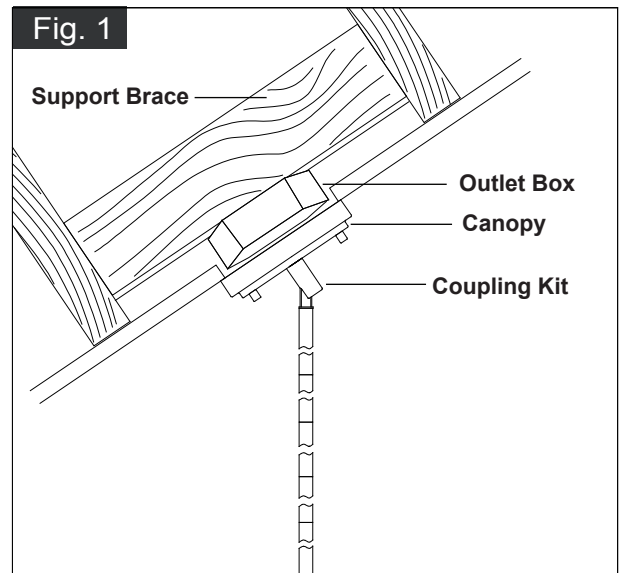

A: 5"

B: 13-1/4" ~ 54-1/4"