

achieved temperature for up to several hours when unplugged, depending on the environment.

CARE INSTRUCTIONS

- Keep the cords, plugs, and DC power socket clean at all times. Debris on the plugs or in the DC socket may affect performance.
- To clean, first slide the power switch in the OFF position and disconnect from power, then use a non-abrasive cloth and window cleaner on the mirrored glass door, and wipe the interior of the unit with a warm, damp cloth or sponge and mild soap if needed. Do not use harsh or abrasive cleaners. After cleaning, ensure interior is dried fully by leaving the door open to air dry or use a non-abrasive cloth to wipe dry.
- Do not immerse unit or power cords in water or any liquid. Removable shelf and door pocket are hand wash only and are not for use in dishwasher.
- During use, some condensation is normal. Wipe interior with a non-abrasive cloth to prevent excessive moisture collection.
- Do not operate under direct sunlight.
- Avoid dropping unit.
- The fan should be rotating at all times when in the COOL setting. Do not use if fan is not rotating.
- Electrical products should not be disposed

of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.


Thank you for purchasing this product! If you have any questions about the product, such as missing parts, damaged products, product assembling, and operation, please contact us via Amazon Message or customer service number: 213-4467172 or 661-4358826.

IMPORTANT
Please call our customer service department for any consulting:
213-4467172
661-4358826
(8:30am - 5:30pm P.S.T.)
DATED PROOF OF PURCHASE IS REQUIRED FOR WARRANTY SERVICE.

AVIS
Veuillez appeler le service à la clientèle pour toutes questions au:
213-4467172
661-4358826
(8:30am - 5:30pm P.S.T.)
PREUVE D'ACHAT ORIGINALE REQUISE POUR SERVICE DE GARANTIE.

IMPORTANTE
Sólo hay que llamar nuestro departamento de servicio al cliente en caso de tener preguntas o inquietudes:
213-4467172
661-4358826
(8:30am - 5:30pm P.S.T.)
SE REQUIERE PRUEBA DE COMPRA CON FECHA PARA SERVICIO BAJO GARANTÍA.

Address: ROWAN ELECTRIC APPLIANCE LLC
28407 Ascent Way, Santa Clarita, CA 91350
Phone: 213-4467172 or 661-4358826

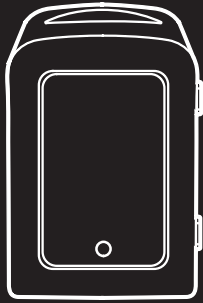

41L / 0.14 CU. FT.
Mini Beauty
Fridge

USER GUIDE

MODEL NO.: LY1904
ITEM NO.: F3404M-WHITE-AS
F3404M-WHITE-WAL-AU
F3404M-BLACK-WAL-AU

Mirrored Door
Dimmable LED Light

Thank you for purchasing the Mini Beauty Fridge. Write down and retain the model number and serial number, which can be found on a sticker located on the back of the product.

READ ALL INSTRUCTIONS BEFORE USE.

For your safety and enjoyment of the product, please read all instructions in the user guide before use.

EXTERIOR DIMENSIONS:
9.3 IN (D) x 7 IN (W) x 10 IN (H)
INTERIOR DIMENSIONS:
5.5 IN (D) x 5.3 IN (W) x 7.9 IN (H)
CAPACITY:
4 L / 0.14 CU. FT.

1. Integrated Handle
2. Door Handle
3. Mirrored Door with Dimmable LED Light
4. LED ON / DIMMABLE / OFF Touch Control
5. Green (cool) Indicator Lights
6. OFF / COOL Switch
7. DC Plug In
8. AC Plug In
9. Removable Shelf
10. Removable Door Pocket
11. AC Power Cable
12. DC Power Cable

SAFETY INSTRUCTIONS

WARNING! When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before using the product.
 2. Do not use this product near water. Keep product out of wet weather conditions.
 3. To protect against electrical shock, do not immerse cord or plugs in water or other liquids. Do not pour water into the unit directly.
 4. This unit only works on 120V AC (North American Standard) or 12V DC. The product should be connected to a power supply only of the type described in the operating instructions or as marked on the product.
 5. Close supervision is necessary when this product is used by or near children. This product is not a toy and is not intended for use by children.
 6. Unplug the unit from outlet when not in use and before cleaning. Allow to cool prior to cleaning the product.
 7. Do not operate any product with a damaged cord or plug or after any malfunction or damage to the unit.
 8. Do not let the cord hang over edge of table or counter, or on a hot surface.
 9. Do not place on or near any heat source, such as radiators, heat registers,
10. Always attach plug to the unit first, then plug cord into the wall outlet or DC unit. To disconnect, turn unit to the OFF position, then remove plug from the outlet.
 11. When plugging in the unit, make sure the power cord is inserted tightly into the outlet. A loose socket can cause damage or fire.
 12. Do not use product for any use other than intended use.
 13. When COOL setting, turn the switch to the OFF position first, wait two (2) minutes, then turn the switch to the desired setting.
 14. For mobile use, disconnect the plug from the 12V power outlet when not in use or when the motor is not running.
 15. Allow adequate ventilation on all sides of the unit when in operation. Keep the fan free from any obstruction. Care should be taken so that objects and liquids are not spilled or dropped into the enclosure through openings.
 16. The appliance is not intended for commercial, professional or industrial use. It is designed and built exclusively for domestic use only.
 17. Save these instructions.

stovetops, ovens, or other products that produce heat. Keep away from fire or other flammable substances.

CHILD ENTRAPMENT WARNING: DANGER or WARNING: Risk of child entrapment.

Before you throw away your old mini beverage refrigerator, take off the door. The appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure they do not play with the appliance.

OPERATING INSTRUCTIONS

IMPORTANT: Before plugging in the unit, make sure the switch on the back of the unit is in the OFF position.

- Place unit a minimum of 3" from wall or structures to allow proper ventilation to the top, back and sides of the unit.
- FOR HOME USE: Insert the provided AC power cord by first inserting the AC power cord into the AC-in port on the back of the unit, and then plugging the cord into a 120V AC wall outlet.
- FOR MOBILE USE: Insert the DC power cord into the DC-in port. If using in a vehicle, first ensure the vehicle's motor is turned on, then plug the DC power cord into a 12V DC outlet. Do not use DC power if the motor is not turned on.
- Use of extension cords is not recommended with this product.
- To turn the unit on, slide the power switch from OFF to COOL setting. A green light will indicate the unit

is in cooling mode .

- When changing location of the unit, slide power switch to the OFF position before unplugging, then wait 30 minutes before sliding switch into COOL setting.
- When COOL settings, first slide the switch to the OFF position, wait two (2) minutes

- The Mini Beauty Fridge uses thermoelectric technology to maintain temperature of the goods being stored.
- When in the COOL setting, the unit cools up to 32°F below ambient temperature of the surrounding air and can cool down to a **MAXIMUM** cool temperature of 40°F, depending on the environment. It is not recommended to store perishable items. Maximum cool temperature based on ambient room temperature is reached within 1–2 hours of the unit being placed in the COOL setting. The COOL setting is best for maintaining the temperature of pre-chilled beverages, snacks, or beauty products.
- The thermoelectric cooler is well insulated and will keep items at the already