

### INSTALLATION INSTRUCTIONS

Model(s): L36CB50E26, L54CB50EX39, L120CB50EX39

- 1. Turn off of the main power to the fixture.
- 2. Remove the existing lamp.
- 3. Cut lamp connections from the lamp holder and remove ballast, capacitor, and the ignitor.
- 4. Connect the live wires to the center connection of the lamp holder.
- 5. Connect the line neutral (common) to the external connection of the lamp holder.
- 6. Insert and screw in the lamp.
- 7. Install the safety cable
- 8. Turn the main power back on.



#### **WARNING**


- Disable all power to the luminaire. The lamp holder must be disconnected from the wiring to the ballast, capacitor, or ignitor. Verify that the voltage does not exceed 277V. Please see "Wiring Diagram".
  Failure to follow instructions can result in damage to the product and will void warranty It could also result in an electrical shock or fire.
- This device requires <u>120V-277VAC</u> input voltage.
- Suitable for use in damp locations. DO NOT use where directly exposed to liquid, vapor, rain.
- Added weight of the device may cause instability of a free-standing portable luminaire.
- This device is not intended for use with emergency exits.
- This device is not intended for use with dimmers or remote controls.



## SIMPLY CONSERVE

- This device is suitable for enclosed fixtures, minimum lamp compartment dimensions: 63W(270(L) x 300(W) mm)80W(350(L) x 300(W) mm)100W(374(L) x 300(W) mm)120W(410(L) x 300(W) mm)
- 63W above is only suitable for base up or base down installation.

# WIRING DIAGRAM

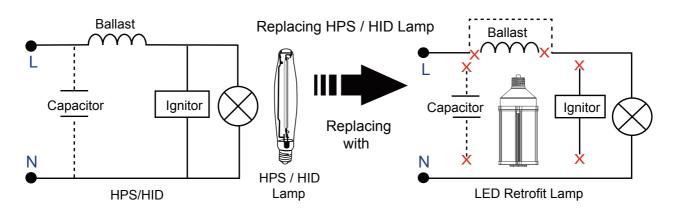

Simply Conserve is a registered trademark of AM Conservation Group, Inc. 2019 Simply Conserve All rights reserved. www.SimplyConserve.com

Am Conservation Group, Inc. 1701 Charleston Regional Parkway Suite A.Charleston.SC 29492

#### 5-Year Limited Warranty

For Warranty claims please contact: customercare@amconservationgroup.com Please see our website www.amconservationgroup.com

