
If you have any questions, please feel free to contact us. Email: lowesteam@aminalife.com


ASSEMBLY INSTRUCTION 4 PIECE OUTDOOR SOFA SET

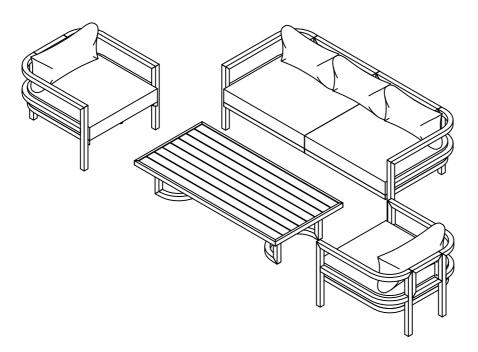


WF301832;WF301833;WF301834;WF301835


Notice

- 1. 50% Tighten before fixings all screws, Allen wrench is recommended instead of an electric drill.
- 2. Place the item on a flat ground to adjust and make sure it remains stable.
- 3. Tighten up all screws with tools gradually.
- 4. If the screws are not aligned with holes during assembly, please loosen all all the other screws to 50% and continue the assembly process.
- 5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
- 6. Note: If one or more screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are disigned to be relatively larger to provide more space for the adjustment of the screws.

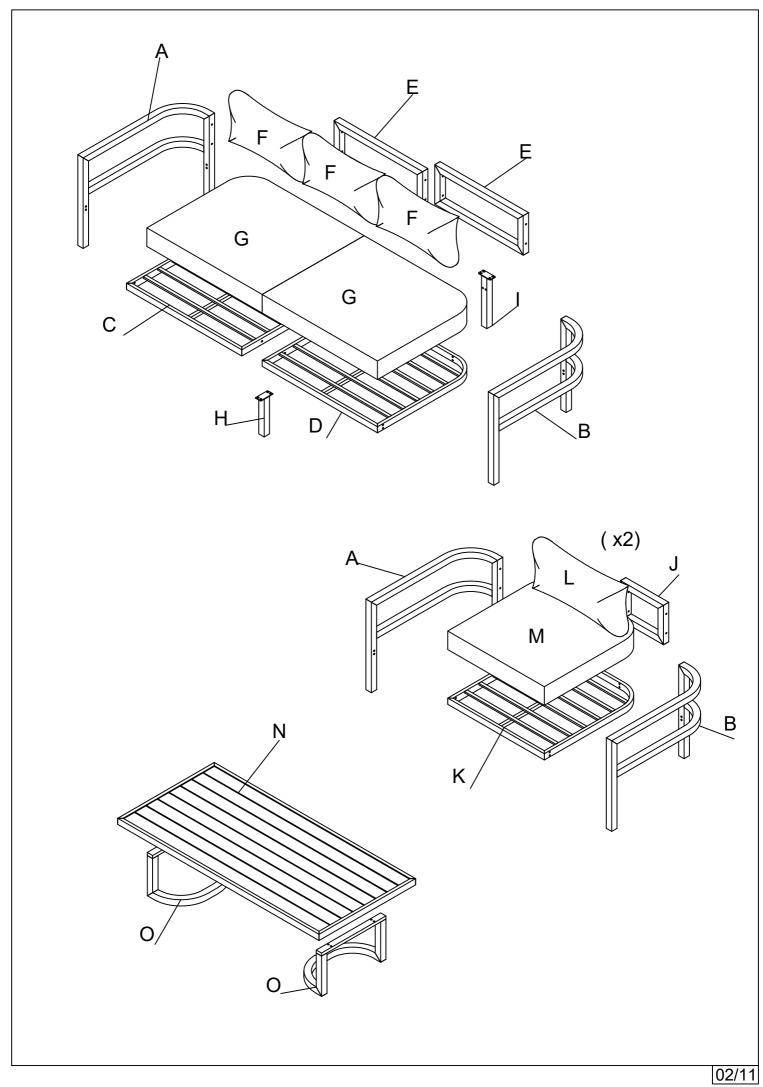


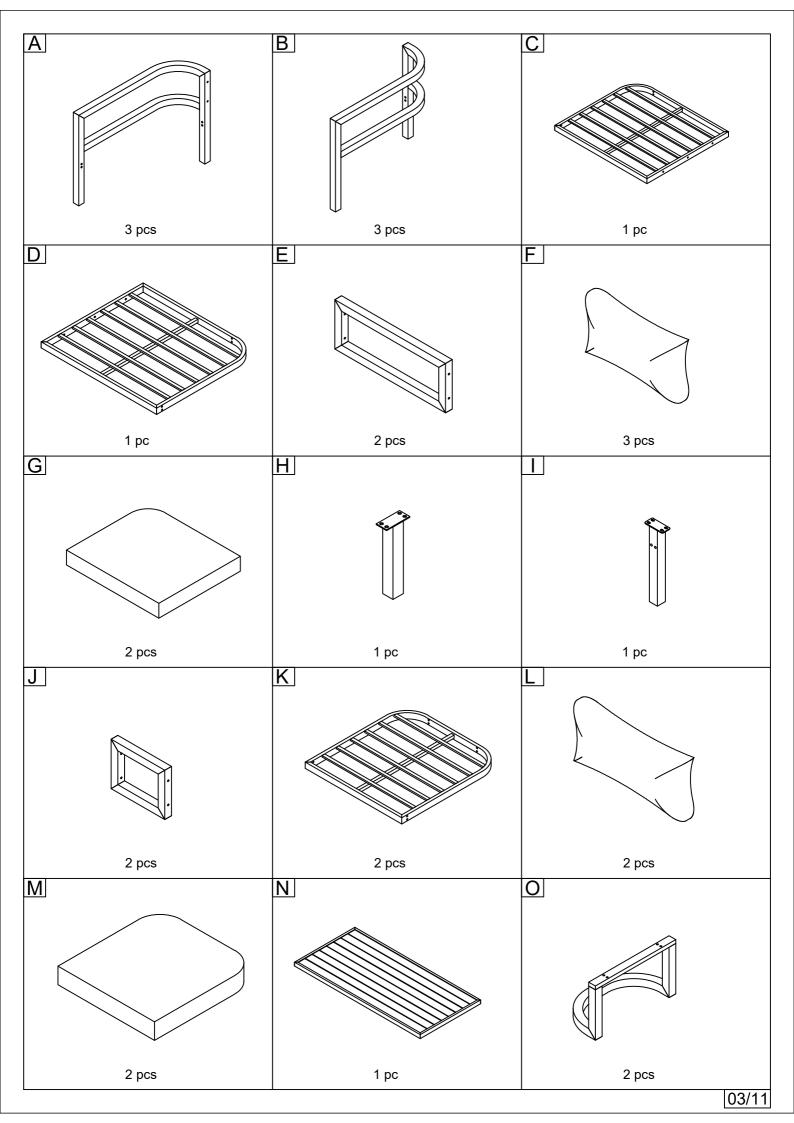



1	2	3
Bolt M6x75 mm	Bolt M6x60 mm	Bolt M6x55 mm
(2 pcs)+extra 1 pc	(12 pcs)+extra 1 pc	(5 pcs)+extra 1 pc
Bolt M6x40 mm (24 pcs)+extra 2 pcs	Bolt M6x35 mm (8 pcs)+extra 1 pc	Bolt M6x15 mm (8 pcs)+extra 1 pc
7	8	9
	Nut M6	
(2 pcs)+extra 1 pc	(3 pcs)+extra 1 pc	Plastic feet (20 pcs)
10	11	
Spanner (1 pc)	Allen key M4 (2 pcs)	
		04/11

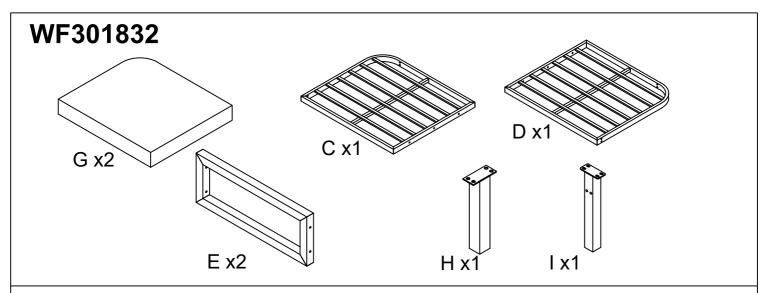




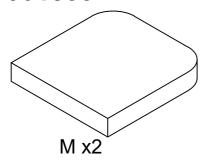


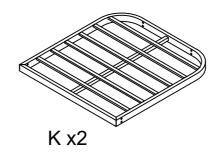


 


WF301834

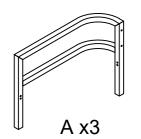

 

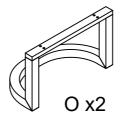

 





WF301835

