CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use. Remove wooden furniture from standing water. Dust regularly with small brush or vacuum Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

SAFAVIEH OUTDOOR

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening

Weight Capacity: 600 Ibs

Warning: Do not stand on bench

Warning: Do not over torque bolts / screws







Part List and Hardware List

PIECE	DESCRIPTION PICTURE		QUANTITY
А	Leg Frame		2X
В	Back frame		1X
С	Seat Frame		1X
D	Cross Bar		1X
Е	Cushion Seat		1X
F	Cushion Back		2X
G	Screw	⊚ M6x60	2X
Н	Screw	M6x80	2X
I	Bolt	(M6X35)	6X
К	Allen key	LG4	1X

Model# PAT7050


Product Dimensions:29.92" W x 48.82" D x 30.71" H



Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

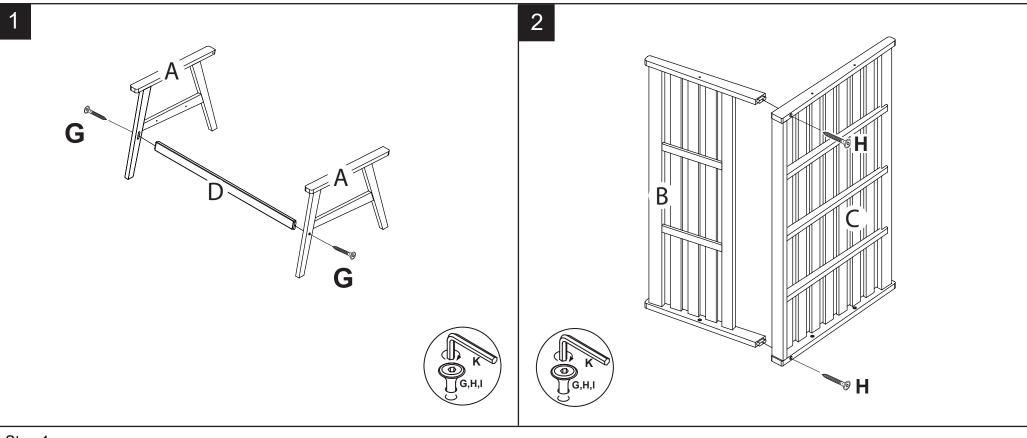


Step 1
Attach leg frame (A) to cross bar (D) ,use screws (G),tighten with allen key (K).

Step 2
Tighten screws (H) with allen key (K) to attach seat frame (C) and back frame (B).

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

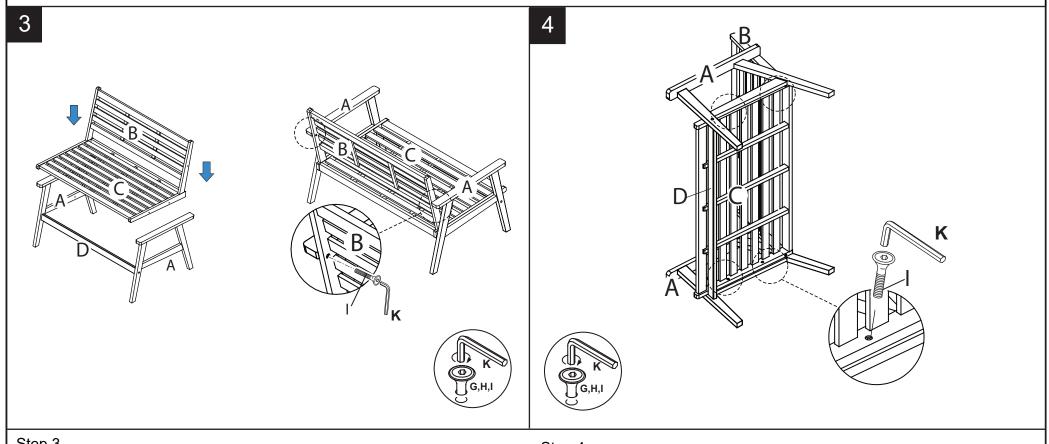

Step 3

Attach leg frame (A) to back frame (B) and seat frame ,use Bolt (I), tighten with allen key(K).

Step 4

Tighten Bolt (I) with allen key (K) to attach seat frame (C) and Leg frame (A).

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

5

Step 5

Attach Ensure all screws are fully locked into position. Place Seat Cushion (E), Back Cushion (F) into the Chair. The Chair is ready to be used.

Step 6 Caution: This Chair can only be used on a flat, level surface

CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use. Remove wooden furniture from standing water. Dust regularly with small brush or vacuum Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

SAFAVIEH OUTDOOR

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening

Weight Capacity: 600 Ibs

Warning: Do not stand on chair

Warning: Do not over torque bolts / screws








Part List and Hardware List

PIECE	DESCRIPTION PICTURE		QUANTITY
А	Leg Frame		2X
В	Back frame		1X
С	Seat Frame		1X
D	Cross Bar		1X
Е	Cushion Seat		1X
F	Cushion Back		1X
G	Screw	(a) M6x60	2X
Н	Screw @ M6x80		2X
I	Bolt	M6X35	6X
K	Allen key	LG4	1X

Model# PAT7050A

Product Dimensions:26.27" W x 29.92" D x 30.71" H

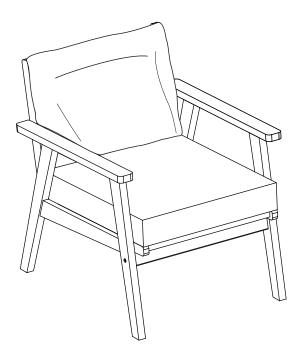



Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.


Tools Required for Assembly (included): Allen Key

 1

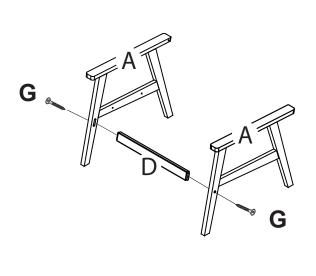



2

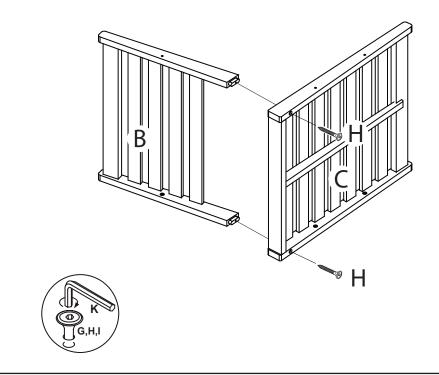


Step 2
Tighten screws (H) with allen key (K) to attach seat frame (C) and back frame (B).

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

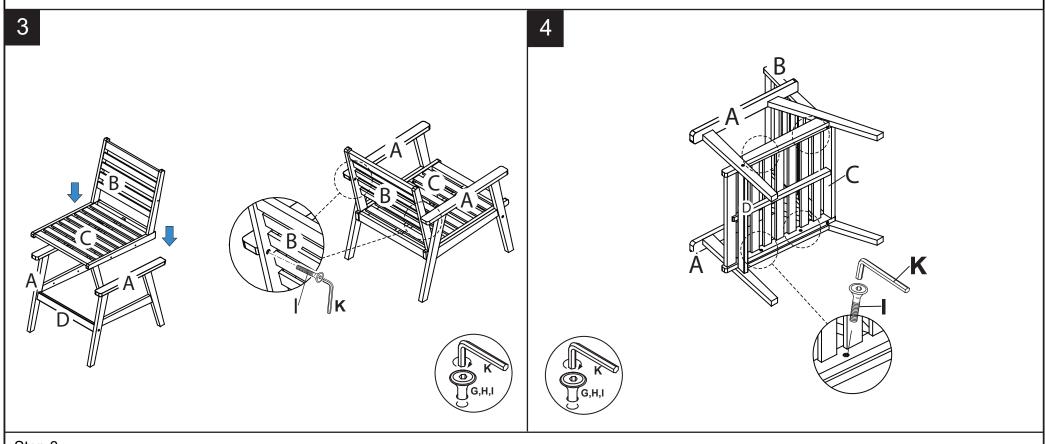

Step 3
Attach leg frame (A) to back frame (B) and seat frame ,use Bolt (I), tighten with allen key(K).

Step 4
Tighten Bolt (I) with allen key (K) to attach seat frame (C) and Leg frame (A).

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

5

Step 5 Attach Ensure all screws are fully locked into position.
Place Seat Cushion (E), Back Cushion (F) into the Chair.
The Chair is ready to be used.

Step 6 Caution: This Chair can only be used on a flat, level surface

CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use.
Remove wooden furniture from standing water. Dust regularly with small brush or vacuum Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening



PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Frame Table		1X
В	Leg Table		4X
С	Bolt	(A) (M8x60 mm	8X
D	Washer	Ø 8.5x20x2mm	8X
Е	Allen key	LG4	1X



Weight Capacity: 40 Ibs

Warning: Do not stand on table

Warning: Do not over torque bolts / screws







Model# PAT7050A


Product Dimensions: 23.62" W x 39.37" D x 14.57" H



Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

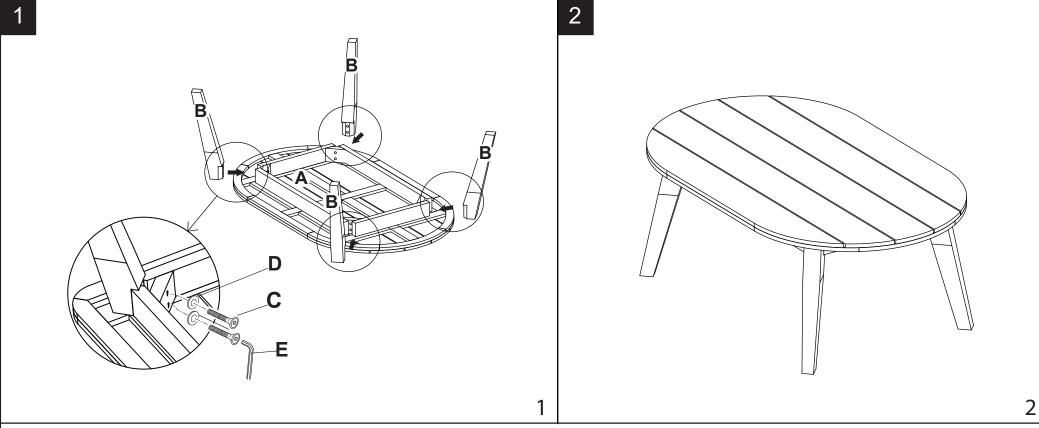

Step 1
Place the Table top (A) with its underside skywards onto a clean, soft surface to avoid any scratch or damage to the product.
Affix loosely the Legs (B) into the mounting position at the corners of the Table Top (A), using the Bolts (C) with Flat Washers (D), with the Allen Key(E), as shown in the picture.

Step 2 Complete.