



Portfolio® is a registered trademark of LF, LLC. All rights reserved.


ITEM #0337508

# WALL LANTERN

MODEL #FS130125-30

Français p. 8

Español p. 15

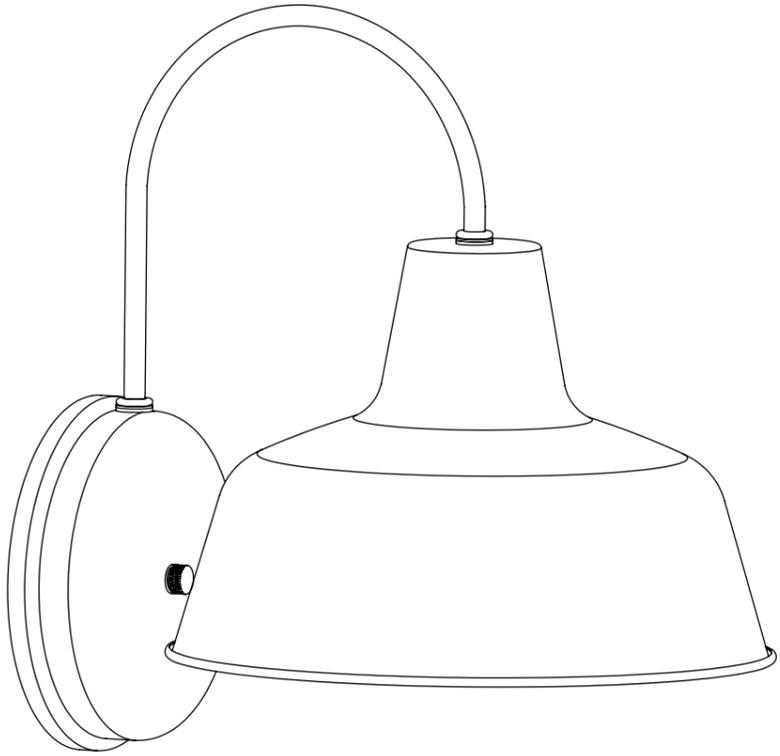

**ATTACH YOUR RECEIPT HERE**

Serial Number \_\_\_\_\_ Purchase Date \_\_\_\_\_




**Intertek**



**Questions, problems, missing parts?** Before returning to your retailer, call our customer service department at 1-800-643-0067, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.






**PACKAGE CONTENTS**

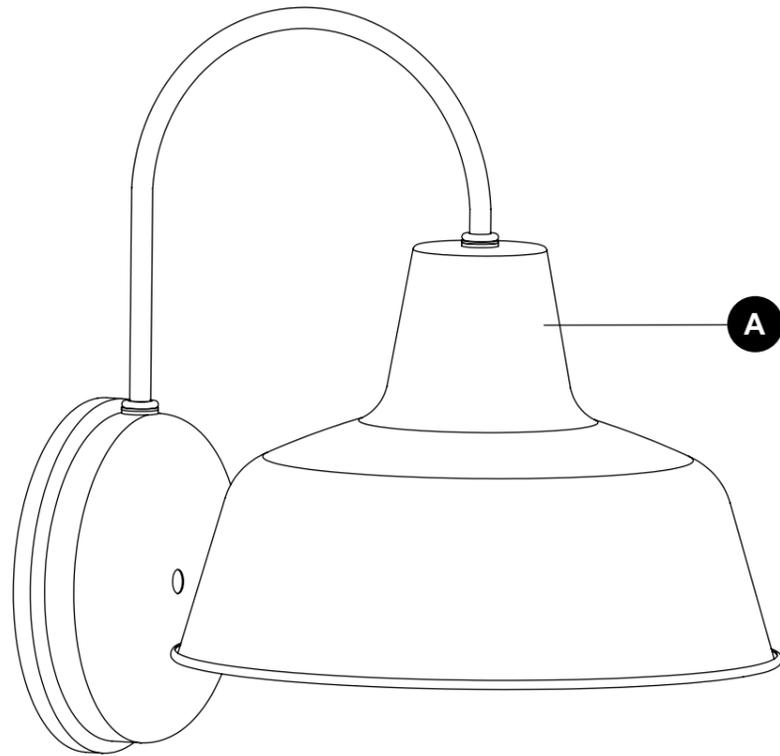

PART	DESCRIPTION	QUANTITY
A	Fixture	1

**HARDWARE CONTENTS (shown actual size)**
  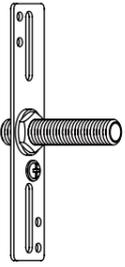
<b>AA</b>	<b>BB</b>	<b>CC</b>	<b>DD</b>	<b>EE</b>
				
Wire nut	Mounting screw	Mounting bracket (Not shown to size)	Cap nut (preassembled to Mounting bracket (CC))	Rubber ring (preassembled to Mounting bracket (CC))
Qty. 3	Qty. 2	Qty. 1	Qty. 1	Qty. 1

**! SAFETY INFORMATION**

Please read and understand this entire manual before attempting to assemble, operate or install the product.

**! WARNING**

- TURN OFF ELECTRICITY at main fuse box (or circuit breaker box) before beginning installation by removing fuse (or switching off circuit breaker).
- MINIMUM 90° C SUPPLY CONDUCTORS.

**CAUTION**

- CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.
- If in doubt about electrical installation, consult a licensed electrician.

**PREPARATION**

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

**Estimated Assembly Time: 25 minutes**

Tools Required for Assembly (not included): Flathead screwdriver, Phillips screwdriver, Pliers, Electrical tape, Wire cutters, Safety glasses.

Helpful Tools (not included): Wire strippers, Step ladder.

## ASSEMBLY INSTRUCTIONS

1. Remove cap nut (DD) and rubber ring (EE) from mounting bracket (CC). Attach mounting bracket (CC) to the outlet box (not included) with mounting screws (BB). Note: Preassembled threaded rod on mounting bracket (CC) should protrude away from outlet box.


### Hardware Used




<b>BB</b> Mounting screw		x 2
<b>CC</b> Mounting bracket		x 1
<b>DD</b> Cap nut		x 1
<b>EE</b> Rubber ring		x 1

2. Strip 3/4 in. of insulation from wire ends. Twist stripped ends together with pliers (not included), black to black (power) and white to white (neutral). Attach copper wire to ground wire. **Helpful hint:** If necessary, attach copper ground wire to grounded outlet box.

3. Attach wire nuts (AA). Tape wire nuts (AA) and wires together.
 
### Hardware Used


<b>AA</b> Wire nut		x 3
--------------------	---	-----

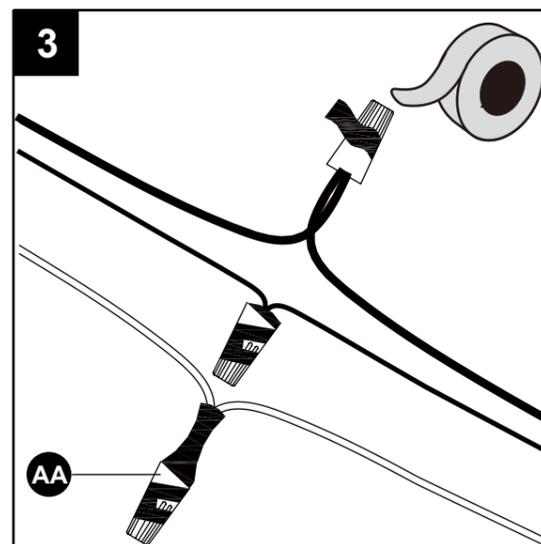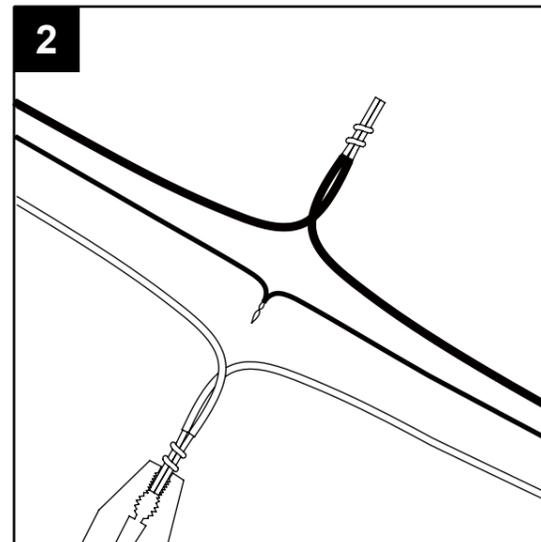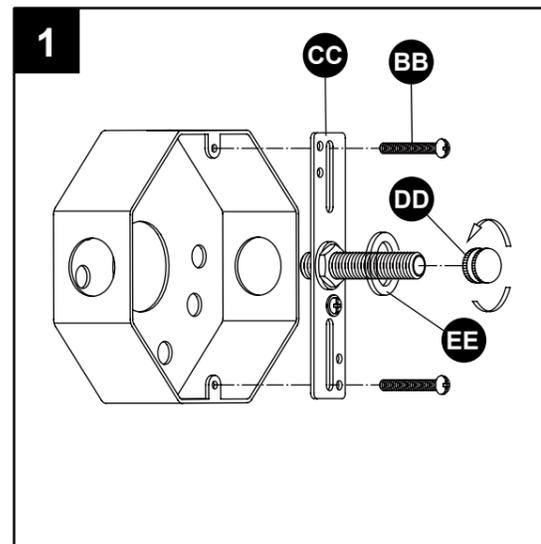



## ASSEMBLY INSTRUCTIONS

4. Place fixture (A) onto threaded rod of mounting bracket (CC). Secure with previously removed rubber ring (EE) and cap nut (DD).
 
### Hardware Used

<b>CC</b> Mounting bracket		x 1
<b>DD</b> Cap nut		x 1
<b>EE</b> Rubber ring		x 1

5. Install light bulb (not included). Use one 60-watt max. standard-base bulb or one 13-watt standard-base CFL bulb.

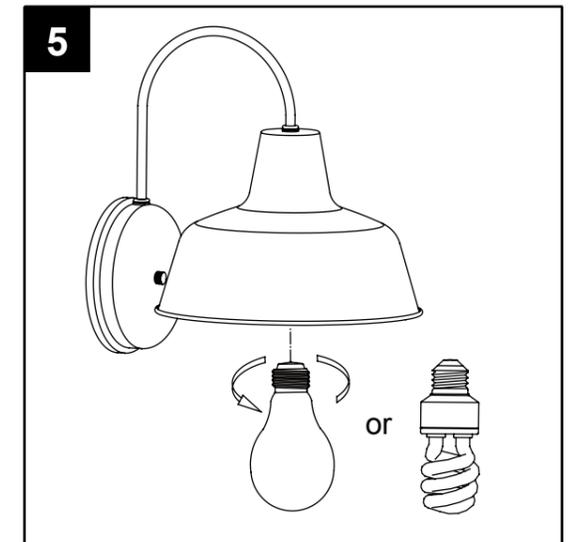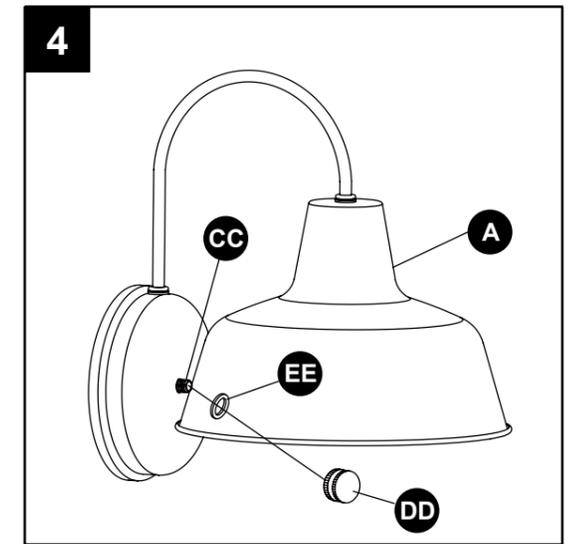

## CARE AND MAINTENANCE

- Shut off main power supply before wiping product with damp cloth or window cleaner. Do not use abrasives.

## TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Bulb won't light.	<ol style="list-style-type: none"> <li>1. Bulb is burned out.</li> <li>2. Power is off.</li> <li>3. Faulty wire connection.</li> <li>4. Faulty switch.</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace light bulb.</li> <li>2. Make sure power supply is on.</li> <li>3. Check wiring.</li> <li>4. Test or replace switch.</li> </ol>
Fuse blows or circuit breaker trips when light is turned on.	Crossed wires or power wire is grounding out.	Check wire connections.


## WARRANTY

The manufacturer warrants all of its lighting fixtures against defects in materials and workmanship for three (3) years from the date of purchase. If within this period the product is found to be defective in material or workmanship, the product must be returned, with a copy of the original sales receipt as proof of purchase in the original carton, to the place of purchase. The manufacturer will, at its option, repair, replace or refund the original purchase price to the consumer. This warranty does not cover fixtures becoming defective due to misuse, accidental damage, improper handling and/or installation and specifically excludes liability for direct, incidental or consequential damages. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state.

## REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-800-643-0067, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

PART	DESCRIPTION	PART #
AA	Wire nut	375-022000
BB	Mounting screw	109-042600
CC	Mounting bracket	139-103009
DD	Cap nut	FY13-028-04
EE	Rubber ring	401-161000

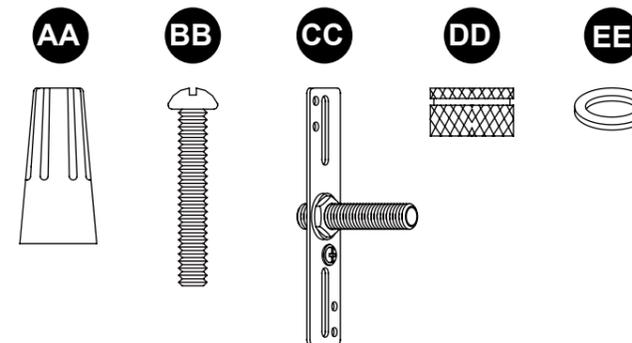

Printed in China

Portfolio® is a registered trademark of LF, LLC. All rights reserved.