Warning: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer. Do not damage the refrigerant circuit.

Do not use electrical appliance inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

This appliance is not intended for use by persons(including children)with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

If the supply cord is damaged, it must replaced by a special cord or assembly available from the manufacturer or its service agent.

Children should be supervised to ensure that they do not play with the appliance.



# **COMPACT FRIDGE**

# INSTRUCTION MANUAL

Model:FLS-80-BLACK FLS-80-WOOD FLS-80-SILVER

Before operating the unit, please read the manual thoroughly, and retain for future reference.



# HOW TO INSTALL THE LIGHT

# Light installation:



⊕ =

- I. Pls put light on the light-shelf according to whore.
- II. Pls put the installed light and light-shelf on to light holder , ple find the detail as attached picture.
- III. Cover the chimney and install the switch
- IV. Pls fix one side of the light com pages to inner clip, and fix the other side on to the our ter.

# FEATURES

- Energy saving design, low consumption of power.
- ${\ensuremath{\bullet}}$  Suitable for long period storing of frozen foodstuffs and freezing fresh
- Foodstuffs
- Low noise
- With a lock (at customers request)

### Light installing picture



#### Safety precautions **Read Instructions**

before operating this appliance.

important; please pay attention to them.

Model and Serial Numbers

**Follow Instructions** 

**Retain instructions** 

Heed warnings

this product.

Please read all safety and operating instruction

All warning, Cautions and Notes on this refrigerator are

corresponding with Samsung or your Dealer concerning

#### Contents Features -----Installation -Cautions while using \_\_\_\_ 5 parts -Basic preparation ---- 8 Please keep this Owner Manual for future reference. \_\_\_\_ 8 -Before using \_\_\_\_\_ \_\_\_ q -Storing food ------ 10 How to use -\_\_\_\_\_10 -Temperature control -To make ice cubes ----- 11 \_\_\_\_12 -Defrosting -----For best results, follow all instructions given in this manual. Level the appliance — 13 How to clean the unit Include both the model number and the serial number when Trouble shooting \_\_\_\_\_\_15 How to install the light \_\_\_\_\_\_16 How to install the handle ------ 17

# This manual includes one model Date of Purchase: Model No: Serial No:

# TROUBLE SHOOTING

SYMPTOMS	CHECKS
When the Refrigerator/Freezer is not operating or the food is not sufficiently frozen	-The plug is not properly connected. -The power fuse is turned off. -The temperature control is set to low, -The appliance is exposed to direct sun light or installed near a heater. -The appliance is positioned too close to the wall.
When food is frozen in the refrigerator	-The temperature control is set to high. -The ambient temperature is too low. -The food is juicy or moist, as this can easily freeze.
When there is noise from the unit	-The refrigerator is not install in a flat, stable place. -The appliance is positioned too close to the wall. -There are any objects behind or under the appliance. -It is the sound of the compressor.
A sound like water flowing can be heard	-This sound is generated by movement of the refrigerant. It is not a malfunction
Bad odour inside the appliance	-Seal stored food

# HOW TO CLEAN THE UNIT

#### Exterior

Wipe with a damp sudsy cloth, then dry. For stubbom strings and for periodic waxing, use silicon wax.

### Interior

Wash either compartments with a baking soda solution(two tablespoon of baking soda to one quart or warm water). Rinse and dry.

### Interior parts

Wash compartments shelves etc. With either the baking soda solution or a mild detergent and warm water. Rinse an dry.

## Magnetic door gaskets

Wash with warm sudsy water, rinse throughly and dry.

# Compressor

Dust which collects, on the compressor may reduce the efficiency of heat radiating. Please clean these parts regularly with soft brush or vacuum cleaner.

Note: please disconnect the plug before cleaning your refrigerator.

# INSTALLATION

#### 1.

The refrigerator should not be placed directly in the sunshine or in the vicinity of heat sources such as stove or steam heaters. Do not put the refrigerator in the places where it is subjected to humidity and water drops.



## 2.

Do not place any object under or behind the refrigerator for proper air circulation, If there is a hanging wall-cabinet,there should be a distance of at least 300mm from the top of refrigerator. It is better to have no hanging object over the refrigerator.

#### 3.

The refrigerator should be set on solid floor. Please turn the two level feet at the front side of refrigerator to keep la at a level position.



# LEVELING THE APPLIANCE

4 Because of the special design of the refrigerator, it can still operate normally when the ambient temperature is below 10°C or sl: you only need to connect the season button.



#### 5

There will be some odour of plastics when the refrigerator is in it ally opened. This is normal. Please don worry about it. You can clean the inner parts of the inside cabinets with warm water and neutral soap or detergent in order to eliminate or lessen the odour. But do not use any solvent or powered abrasive, because they will damage the appearance of the refrigerator.

#### 6

For personal safety, properly ground this appliance. Please do not ground this refrigerator with a telephone line, gas pipe, etc.





When the refrigerator leans to the right, turn the right front foot counterclockwise.



# CAUTIONS WHILE USING

#### Defrosting







4. If the frost is too thick, please use the defroster. Note: Do not use sharp tools



#### 1.

Do not allow water to splash onto the back of the refrigerator, Otherwise water impairs the insulation of electric parts and may cause an electrical shock or a shock hazard.



#### 2.

Do not flammable sprays such as lacquer and paint near the refrigerator. If there occurs the leakage of gas pipes or liquid petroleum gas, be careful never to pull out the power cord from the socket or switch off the thermostat because there is a possible danger of exploding ignited by the electric spark caused.



3.

Do not touch the interior wall of the freezing compartment or the refrigerator, because the temperature is very low.



#### 4.

Do not store volatile chemicals such as ether and benzene in the refrigerator. The fumes, besides damaging food, can build up and cause an explosion,



#### 5.

To avoid damage to the refrigerator or injury to the child, do not allow children to hang on the refrigerator door.



#### 6.

Do not use the refrigerator if it is not operating correctly or has been damaged, Disconnect it from the power supply and call your local service center, If the power cord is damaged, avoid a hazard by replacing it through the manufacturer or its service agent or a similarly qualified person.



#### To make ice cubes



4.

3. When you want to make ice cubes rapidly, you should set the thermostat control at 7



Hold both ends of the ice tray, remove the ice cubes from the tray by twisting it gently. Do not bend the ice tray or it will crack.



**Note:** When the thermostat is set at 7 t he refrigerator room may ice.



# HOW TO USE

# PARTS

#### Temperature control

Point 0 is power off point, when the thermostat is set at this, the compressor stops working, the refrigerator is not performed, and the light in the compartment is off. If you want to stop the refrigerator, you should dial the temperature control knob point 0







When ambient temperature is too low(below 10°C or so), the compressor will stop for a long period, and the temperature in the freezing compartment will be too high. In this case, the season button installed under the thermostat should be connected.





1.FREEZER
2.THERMOSTAT KNOB
3.SEASON SWITCH
4.LAMP SWITCH
5.REFRIGERATOR
6.REFRIGERATOR SHELF
7.BOX PROFILE

8. MAGNETIC 9. RACK-EGG 10. DOOR RAIL

# **BASIC PREPARATION**

#### Before using

All parts are well packed in the factory, please remove the insertions and adhesive tapes for packaging when the packing box is opened. The cabinet shelf can be easily taken off and adjusted up or down according to your needs.



You can store food only when the temperature in the refrigerator gets sufficiently low. It will take about 3 hours for the refrigerator to get a sufficiently low temperature after initial stating.



Wipe the appliance inside and outside using a cloth dampened with warm water and a small amount of detergent.



#### Storing food

Allow hot food and drinks to cool to room temperature before placing them in the refrigerator or freezer.



 Place liquid at the front of the refrigerator to avoid freezing.
NOTE: be sure not to store bottles of drinks in freezing compartment. Otherwise the bottles would be frozen cracked.



Seal food in containers with lids, in plastic wrap or in plastic bags to prevent from drying and mingling of odours.

