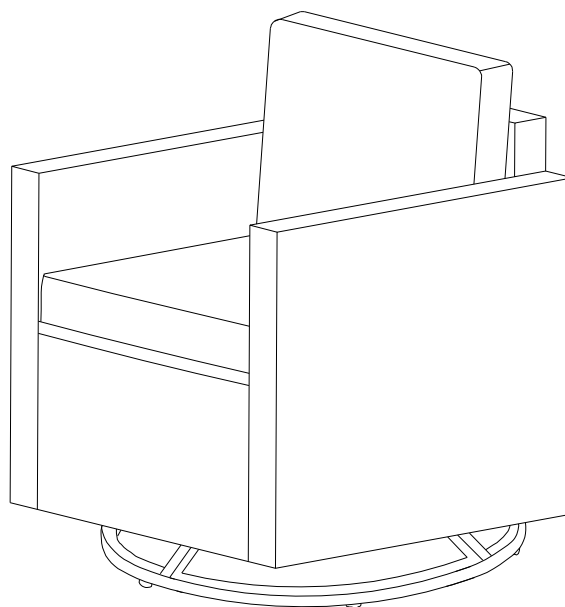 




Palm Harbor Outdoor Wicker Swivel Rocker Chair

CO7123-BR



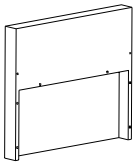 
 
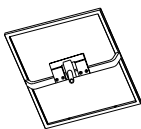 
 
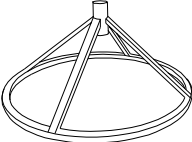 
 


Congratulations! You have purchased a stylish piece of Crosley Furniture. We strive to provide fine furniture products, built with quality materials and hand finished details. Please carefully follow the assembly instructions to ensure your furniture is assembled correctly to provide long lasting enjoyment.





Should you experience any missing or damaged parts **do not return to the store.** Please visit our website www.crosleyfurniture.com or contact us directly at 800-815-4796.

Care: Use a soft, clean cloth that will not scratch the surface when cleaning. The use of solvents is not necessary. Should you choose to use solvents, test in an inconspicuous area first to avoid damaging the finish. To clean, simply use a soft, clean cloth lightly dampened with water.

PART LIST

					
Arm Panel		Back Panel		Seat Panel	
A	2PCS	B	1PC	C	1PC
					
Lower Front Panel		Base		Seat Cushion	
D	1PC	E	1PC	F	1PC
					
Back Cushion					
G	1PC				

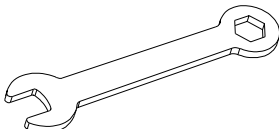    HARDWARE LIST


					
Short Bolt(M6*30mm)		Medium Bolt(M6*40mm)		Long Bolt(M6*50mm)	
H	1PC	I	4PCS	J	10PCS
					
Nut(M6mm)		Washer(M6mm)		Wrench(M6mm)	
K	14PCS	L	29PCS	M	1PC
					
Allen Key(M6mm)		Adjustable Leveler			
N	1PC	O	6PCS		

EXTRA HARDWARE LIST


				
HX1PC	IX1PC	JX2PCS	KX3PCS	LX3PCS

Step 1. Lay Arm Panel (A) down on a flat surface. Attach Back Panel(B) to Arm Panel(A) using the Medium Bolts(I), Washers(L), Nuts(K), Wrench (M) & Allen Key (N).

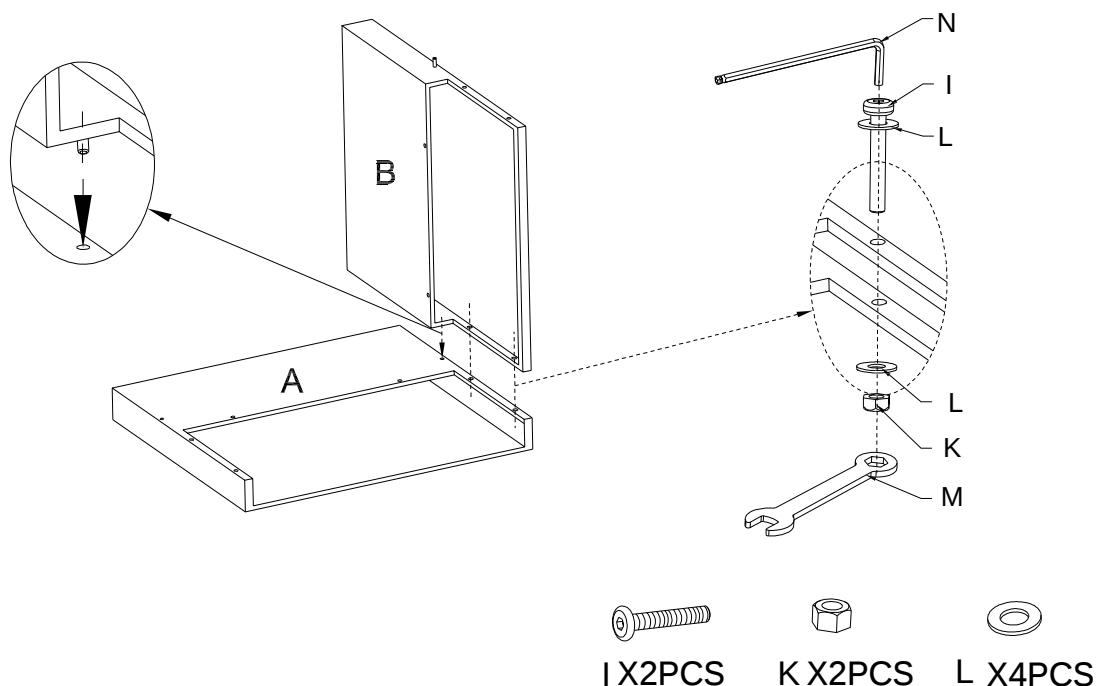 
NOTE: Please do not fully tighten bolts until unit is fully assembled.



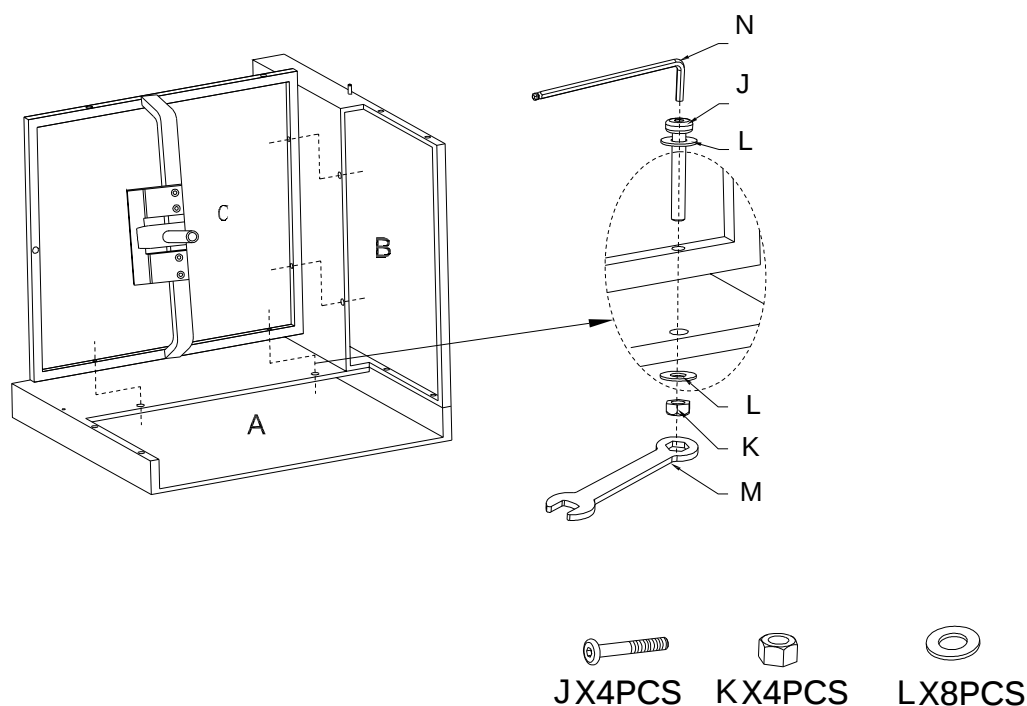 
Step 2. Attach Seat Panel(C) to Arm Panel(A) and Back Panel (B) using the Long Bolts(J) Washers(L), Nuts(K), Wrench (M) & Allen Key (K)



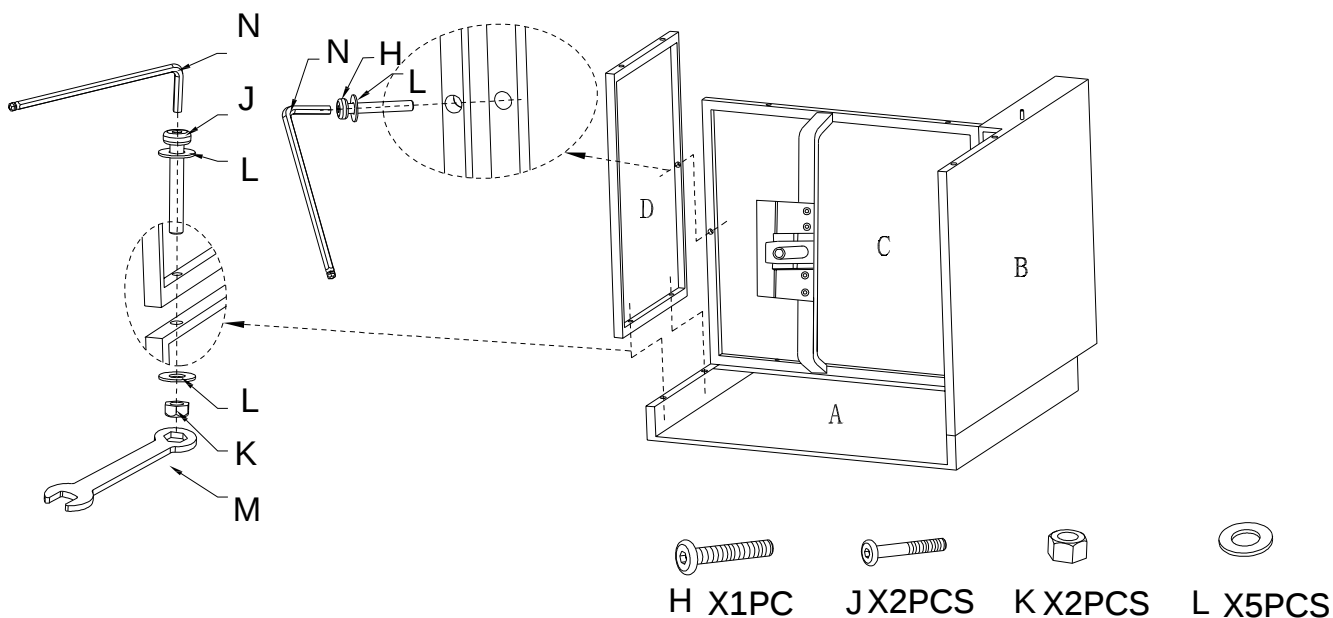 
Step 3. Attach Lower Front Panel (D) to Arm Panel (A) using the Long Bolts(J), Washers (L), Nuts(K), Allen Key (N) & Wrench (M), to Seat Panel (C) using Short Bolts (H), Washers (L) & Allen Key (N).



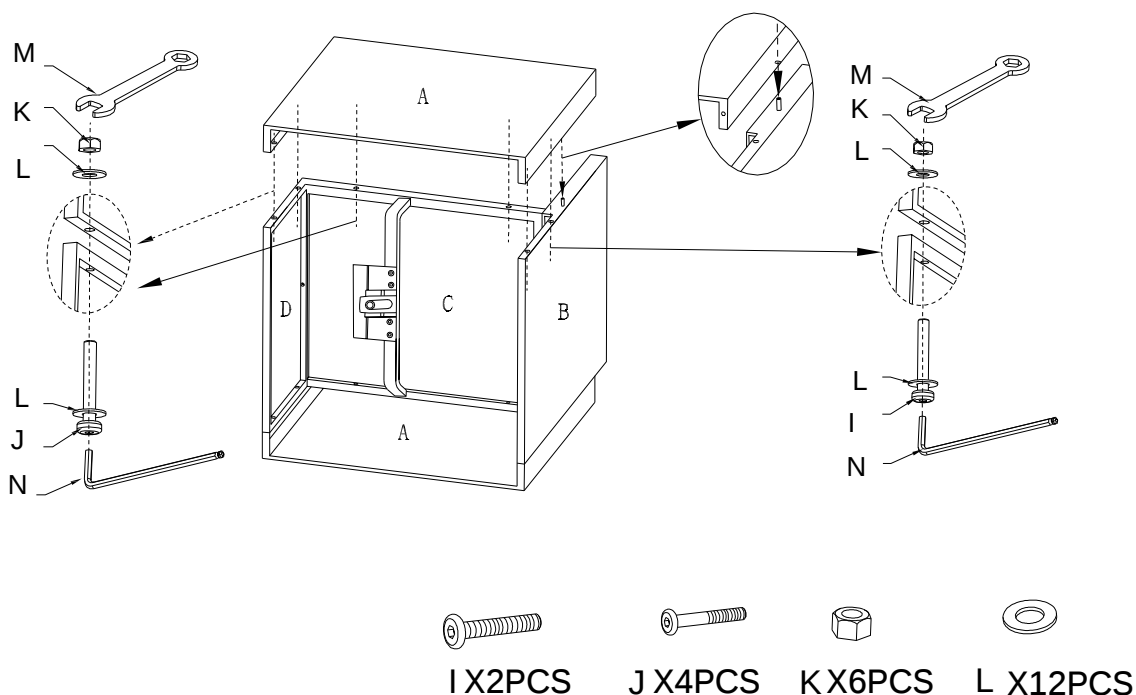 
Step 4. Attach the other Arm panel(A) to the assembled Parts (A,B,C&D) using Medium Bolts (I),Long Bolts (J),Washers (L),Nuts (K),Wrench (M) and Allen Key (N) as shown.



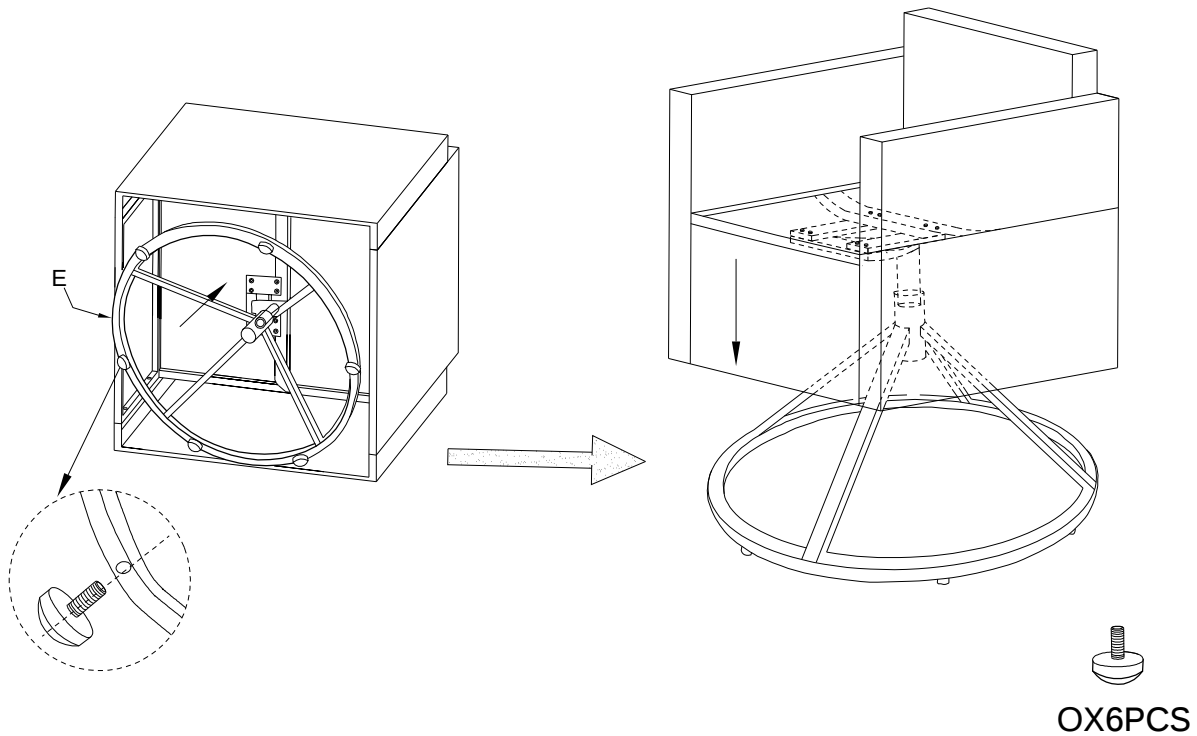 Step 5. Screw the Adjustable Levelers (O) into the pre-drilled holes on the Base (E). Attach Base (E) to the Seat Panel(C).



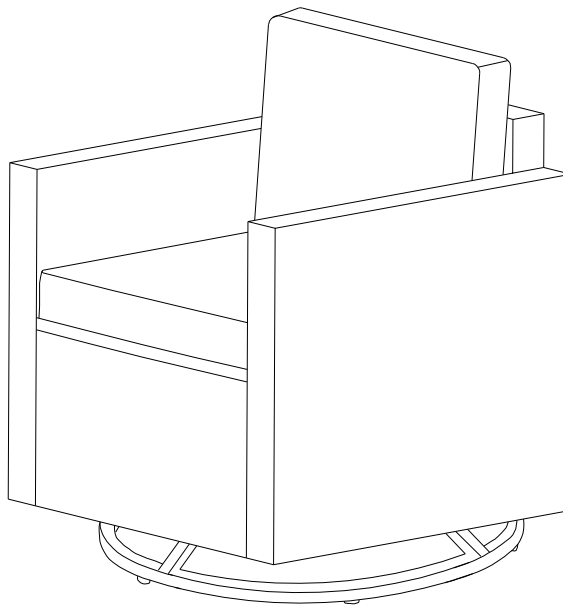 Step 6. Place Seat Cushion and Back Cushion on the Chair.





Limited Manufacturers Warranty

Crosley Furniture Products are warranted against defects in material and workmanship for a period of 90 days beginning from the date of sale. Should any parts be missing or defective, we will replace or repair the parts for a period of 90 days from the date of purchase.

Should you experience any missing or damaged parts, do not return to the store. Please contact us directly at 800-815-4796 from 9 AM to 5 PM (EST) Monday to Friday.

This warranty gives the purchaser specified legal rights in addition to any rights which may vary from state to state.

In accordance with the "Moss-Magnuson Warranty Act" of July 10, 1975, this is termed a "limited warranty" which in no way compromises Crosley Furniture's high standards of Quality and Workmanship.