 


INSTRUCTION MANUAL

ICE MAKER

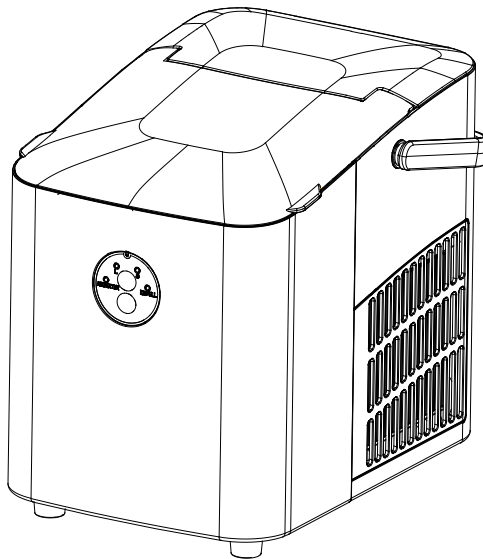

Item No: Z390142

Model No: ICM1262A

Thank you for purchasing this product! If you have any questions about the product, such as missing parts, damaged products, product assembling, or operation, please contact us via Amazon Message or customer service number: 213-4467172 or 661-4358826.

IMPORTANT NOTICES

When using an electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

1. Read all instructions before using.
2. Remove all packing material and carefully check your ice maker to ensure it is in good condition and that there is no damage to the ice maker or power cord and plug.
3. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
5. This appliance is intended to be used in household and similar applications such as
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses, hotels, motels and other residential-type environments;

- bed and breakfast type environments;
- 6. –Warning: Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
 - Warning: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
 - Warning: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
 - Warning: Do not damage the refrigerant circuit.
 - Warning: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
 - WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged.
 - WARNING: Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
 - WARNING : When disposing of the appliance, do so only at an authorized waste disposal centre. Do not expose to flame.
 - WARNING: fill with potable water only.
 - WARNING: Connect to potable water supply only.

The refrigerant (R600a) is flammable.



Caution: risk of fire / Flammable materials

The refrigerant isobutene (**R600a**) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, which is nevertheless flammable. During transportation and installation of the appliance, ensure that none of the components of the refrigerant circuit becomes damaged.

If the refrigerant circuit should be damaged:

- Avoid opening flames and sources of ignition.
 - Thoroughly ventilate the room in which the appliance is situated.
7. Before using the Ice maker for the first time, please wait for 2 hours after positioning it, and keep the transparent lid open for at least 2 hours.
 8. Pure water is not allowed to be used on this unit, spring water is recommended.
 9. Ensure the voltage is compliant with the voltage range stated on the rating label, and ensure the earthing of the socket is in good condition.
 10. Do not upend this product or incline it over a 45°C angle.
 11. To protect against risk of electric shock, do not pour water on cord, plug and ventilation, immerse the appliance in water or any other liquid.
 12. Unplug the appliance after using or before cleaning.
 13. Keep the appliance 8cm from other objects to ensure the good heat releasing.
 14. Do not use the accessories which are not recommended by Manufacturer.
 15. Do not use the appliance close to flames, hot plates or stoves.
 16. Do not switch on the power button frequently (ensure 5min. interval at least) to avoid the damage of compressor.
 17. Do not use outdoors.
 18. Never clean with scouring powders or hard implements.
 19. Please keep the instruction manual.
 20. To avoid contamination of food, please respect the following instructions:
 - Opening the door for long periods can cause a significant increase in the temperature of the compartments of the

appliance.

- Clean regularly surfaces that can come in contact with food and accessible drainage systems.

- Clean water tanks if they have not been used for 48 h; flush the water system connected to a water supply if water has not been drawn for 5 days.

- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.)

21. Regarding the information pertaining to the use of the appliance, please refer to the paragraphs below.

SPECIFICATIONS

Item no: Z390142

Model no: ICM1262A

Voltage: 120V/60Hz

Power Consumption: 120 W

Daily Ice Output: 12kg/24 hours

Ice Storage Capacity: 1.0L/600g

Water Reservoir Capacity: 1.0L

N.W: 6.6kg

G.W: 7.2kg

 
Compression-Type Refrigeration: 120V/60Hz

Cooling Agent: R600a environmental friendly refrigerant Max Overall

Dimensions (WxDxH): 205X282X269mm

Packing Dimensions (LxWxH): 323X240X298mm

DESCRIPTION

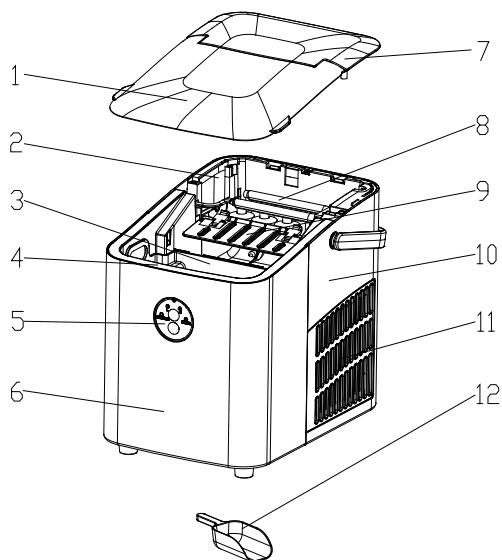

- | | |
|-------------------------|---------------------|
| 1. Transparent lid | 7. Top Lid |
| 2. Micro switch support | 8. Evaporator |
| 3. Ice collecting tray | 9. Ice shovel board |
| 4. Water tank | 10. Rear housing |
| 5. Control panel | 11. Air vent |
| 6. Front housing | 12. Ice scoop |

 
FEATURE

- ✧ Quick ice-making
- ✧ Prompt when the ice is full and the water is insufficient
- ✧ Transparent bullet ice
- ✧ 8 pcs ice can be made in nine minutes

WARNING

1. During transportation, do not tilt the machine more than 45 degrees, do not reverse the machine. This may damage the compressor and the sealing system.
2. Remove all packing materials, check the machine carefully and make sure that the machine, power cord and plug are normal.
3. The machine should be on a level surface. To ensure sufficient ventilation, the distance of the back of ice maker to the wall should be at least 150mm, it should be away from the oven, radiator or other heat source.
4. Before using the machine for the first time, place the machine and leave the transparent cover open for at least two hours.
5. Make sure that the home voltage is consistent with the voltage indicated by the machine.
6. When the ambient temperature is lower than 15 degrees, please choose small ice. When the ambient temperature is higher than 30 degrees, it is recommended to choose large ice.
7. Do not use chemicals, acidic or alkaline liquids to make ice.

CONTROL PANEL OPERATION

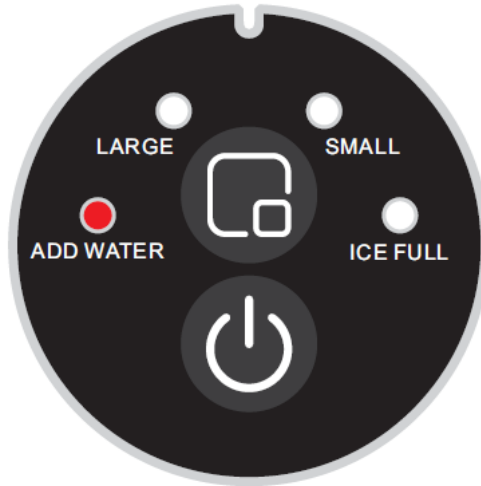

LARGE: large ice indicator light

SMALL: small ice indicator light

ADD WATER: water shortage alarm

ICE FULL: ice full alarm

START/STOP: START/STOP button

ICE SIZE SELECTION BUTTON

1. Plug in power, the machine is in standby mode, and the large ice indicator light flashes green. Press the **START/STOP** button, and the machine starts to work. The corresponding indicator lights up for a long time, and the ice cube production starts. After the ice making is completed, the ice is shed, and the machine enters the deicing function, and so on.
2. ICE SIZE SELECTION BUTTON: Press the large and small ice selection button to switch and select the large and small ice modes.
3. CLEANING FUNCTION: Plug in power, press and press down the

START/STOP button for 3 seconds, the machine enters the cleaning function, and the four lights flash alternately. Do not disconnect the power supply during cleaning. After cleaning, the machine will automatically enter the standby mode.

4. **ADD WATER:** water shortage alarm: when the light is on, it means water shortage in the water tank. You need to add water and press the **START/STOP** button to restart the machine.
5. **ICE FULL:** ice full alarm. When the ice reaches the maximum amount of ice storage container, the "**ICE FULL**" indicator light is on and the machine stops. At this time, the ice needs to be poured out. When the ice position is lower than the full sensor position, the machine will restart automatically.

OPERATING INSTRUCTIONS

Step 1

Open the lid and take out the ice collecting tray and add water to the reservoir.

Note: There is a maximum scale MAX in the reservoir. The water should not exceed the MAX position. If the water exceeds the maximum scale MAX, you need to open the bottom drain plug, release the excess water, and cover it with a transparent cover.

Step 2

 
Plug in power, press the **START/STOP** button to start the machine.

CAUTION

1. In the first three cycles when used at the first time, the ice produced may be small and irregular.
2. When the ice collecting tray is full, please take out the ice immediately, do not let the ice overflow the ice collecting tray.

CLEANING & USE GUIDANCE

1. Clean the inner liner, ice collecting tray, water tank and ice shovel frequently. When cleaning, unplug the unit and remove the ice cubes. Use a diluted solution of water and vinegar to clean the inside and the outside surface of the Ice maker. Rinse thoroughly before use.
2. Keep ventilation openings in the appliance enclosure, or in the built-in structure, clear of obstruction. Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
3. Reuse the machine after being idle for a period of time, it may not be able to pump enough water up for air blockage. In this case, the water shortage indicator sign is displayed, just repress the **START/STOP** button to restart the ice maker.
4. To ensure the cleanness of ice, please change the water of the water reservoir at least once a day. If do not use it for a long time, please drain the water out and clean it up.
5. If the compressor does not work due to the lack of water, ice full, power failure, etc, it will delay for 3 minutes to start again after being restarted.
6. Always use fresh water before starting ice production either at initial installation or after a long shut-off period.
7. According to the actual use of the machine, the filter screen in the water tank shall be regularly cleaned after disassembly to prevent the water inlet from being blocked by incrustation scale. As shown in the figure below, take out the ice collecting tray and filter cover from the water tank in turn, clean the filter cover with clean water and a brush, and then put it back in place.

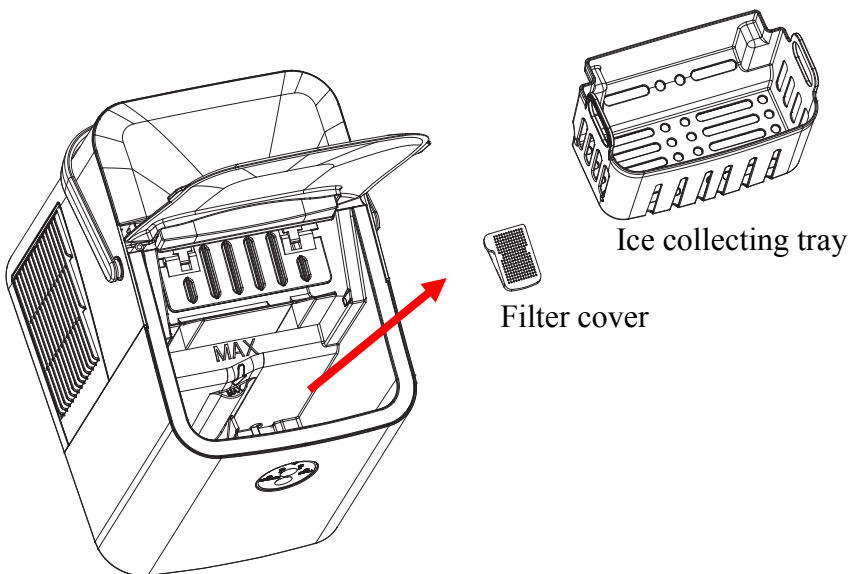

TROUBLESHOOTING

1. Please note, if a power failure occurs due to the disconnection of the power cord, or the power button has been pushed off during an ice-making cycle, small ice chips may form and lodge in the automatic shovel causing it to jam. If this occurs, the ice chips can be removed by disconnecting the power cord and gently pushing the shovel to the rear of the cabinet and removing the ice chips, and restarting it at last.
2. Please check if the water reservoir is flat when the ice shovel can not remove the ice to the ice collecting tray. If not, please push the ice shovel gently by finger, then press **START/STOP** button to restart.

| PROBLEM | POSSIBLE CAUSE | SUGGESTED SOLUTIONS |
|-----------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The compressor works abnormally with a buzzing noise. | The voltage is lower than recommended one. | Stop the ice maker and do not restart it until the voltage is normal. |
| Water shortage indicator light is on. | 1. There is no water 2. The pump is full of air | 1. Add some water until it reaches MAX position. 2. Press START/STOP button to restart the machine. |
| Indicator lights on control panel are not on. | Blown fuse/No power | Replace fuse /Turn the power on |
| The ice made is too large and with pieces sticking together. | Ice of previous cycles left in the water tray | Take out the ice under the standby state |
| The ice making process was correct, but no ice came out. | 1. The compressor has no refrigerant 2. Compressor damaged 3. Fan motor damaged | Call the service hotline. |
| All indicator lights flash at the same time. | 1. The water box is blocked by ice. 2. The motor is stuck, or the motor falls off, or the motor is damaged. 3. Micro switch damaged. | 1. Take out the ice under the ice shovel, plug in power again, and press the POWER button. After 3 minutes, the machine will restart automatically. 2. Call the service hotline. |
| The machine has been working, but the water has been warming. | Solenoid broke down. | Replace the solenoid valve. |
| When the ice is full, the machine does not display the ice full icon. | 1. Ice full sensor damaged. 2. Solar light interference. | 1. Replace the ice full sensor. 2. Making ice indoors. 3. Call the service hotline. |

WARNING

1. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
2. Fill it with potable water only.
3. It is normal for the compressor and condenser surface to reach temperatures between 70°C and 90°C during operation and surrounding areas may be very hot.
4. Due to fast freezing, ice cubes may be opaque. This is air trapped in the water and will not affect quality or taste of ice.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Children should be supervised to ensure that they do not play with the appliance.
7. Do not immerse in water.

Correct Disposal of this product



This marking indicates that this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

Thank you for purchasing this product! If you have any questions about the product, such as missing parts, damaged products, product assembling, and operation, please contact us via **Amazon Message** or customer service number: **213-4467172 or 661-4358826**

IMPORTANT

Please call our customer service department for any consulting:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

DATED PROOF OF PURCHASE IS REQUIRED FOR WARRANTY SERVICE.

AVIS

Veuillez appeler le service à la clientèle pour toutes questions au:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

PREUVE D'ACHAT ORIGINALE REQUISE POUR SERVICE DE GARANTIE.

IMPORTANTE

Sólo hay que llamar nuestro departamento de servicio al cliente en caso de tener preguntas o inquietudes:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

SE REQUIERE PRUEBA DE COMPRA CON FECHA PARA SERVICIO BAJO GARANTÍA.

Address: ROWAN ELECTRIC APPLIANCE LLC 28407

Ascent Way, Santa Clarita, CA 91350

Phone: 213-4467172 or 661-4358826

