


DX42/DX52
V20251229

User's Manual

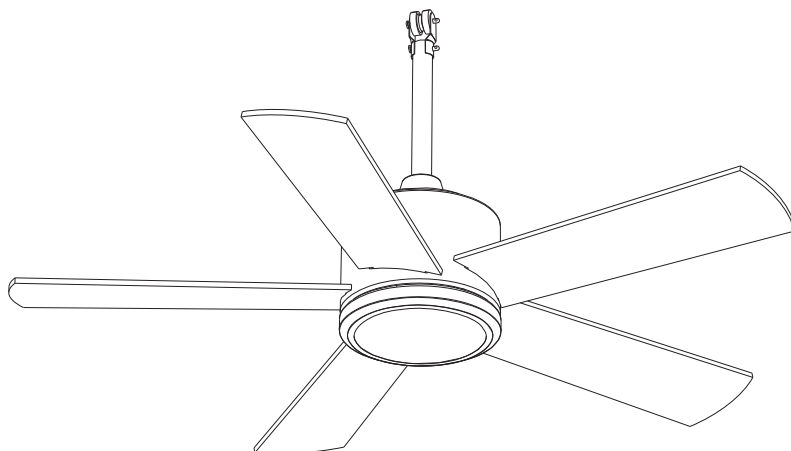

**Scan for support or
view installation videos**

After-sales Email: support@fanlamppro.com

**To assist you faster, please share your order confirmation
screenshot so we can quickly resolve this.**

Warm Tips

1. About Light Memory: (Figure 1)

- * Turn off light (plug off or remote controller)
- * Turn on the light after 10s to remain last light setting.

P.S: If turn on within 10s, light CCT will change.

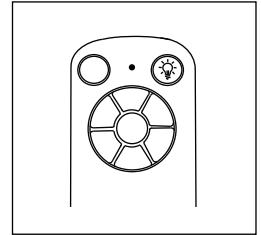


Figure 1

2. The lighting kit is replaceable.


WARNING!!!

To avoid fire, shock and serious personal injury, follow these instructions.

1. Read your user's manual and safety information before installing your new fan. Review the accompanying assembly diagrams.
2. Before servicing or cleaning the unit, switch off the power at the service panel and lock the service panel to prevent power from being switched on accidentally. If the service disconnecting means cannot be locked, securely fasten a warning device, such as a tag, to the service panel.
3. Be cautious around the fan and blades when clearing, repairing, or working near the fan. Always turn off the power to the ceiling fan before performing any servicing.
4. Do not insert anything into the fan blades while the fan is operating.
5. This appliance is not intended for use by young children or individuals with disabilities without supervision. Young children should be supervised to ensure they do not play with the appliance.
6. Before installing your ceiling fan, refer to the section on the proper method of wiring your fan. If you feel that you do not have enough wiring knowledge or experience, it is recommended to have your fan installed by a licensed electrician.


Accessories

Check to see that you have received the following parts

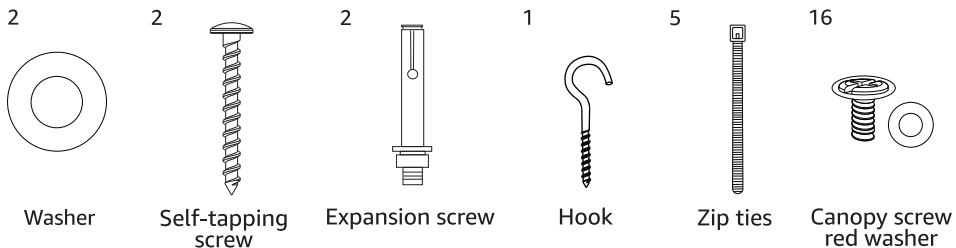

Package Contents

Check to see that you have received the following parts

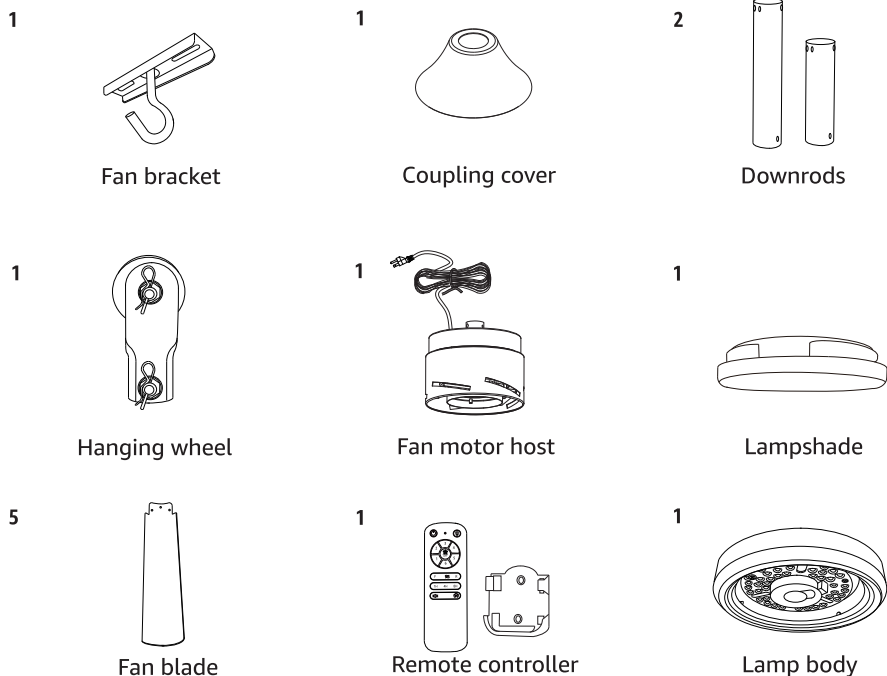

Energy Saving Usage

Ceiling fan performance and energy savings rely heavily on the proper installation and use of the ceiling fan. Here are a few tips to ensure efficient product performance.

Choosing the Appropriate Mounting Location

Ceiling fans should be installed or mounted in the middle of the room and positioned at least 7 feet above the floor and 18 inches away from the walls.

If the ceiling height allows, it is recommended to install the fan 7~9 feet above the floor to achieve optimal airflow.

Turn Off When Not in the Room



If the room is unoccupied, turn off the ceiling fan to conserve energy.

Using the Ceiling Fan Year Round



Summer Season: Use the ceiling fan in the counterclockwise direction. The airflow created by the ceiling fan produces a wind-chill effect, making you feel cooler. Select a fan speed that provides a comfortable breeze; lower speeds consume less energy.

Winter Season: Reverse the motor and operate the ceiling fan at a low speed in the clockwise direction. This produces a gentle updraft, which pushes the warm air near the ceiling down into the occupied space. Remember to adjust your thermostat when using your ceiling fan. This simple step can lead to additional energy and cost savings.



Installation

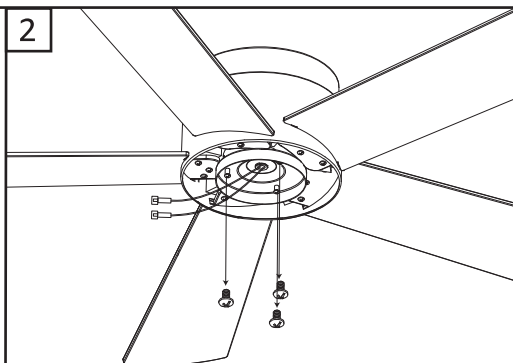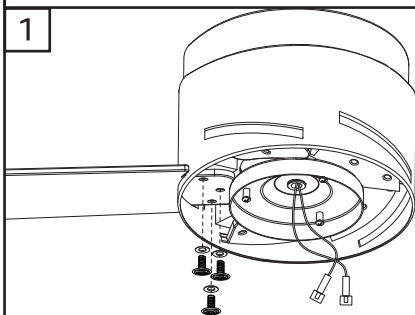

- Align the holes on the fan blade with those on the motor, and secure them with 3 washers and 3 screws. Repeat this step to install the remaining fan blades.
- Remove three screws from the circular plate on the fan motor host.

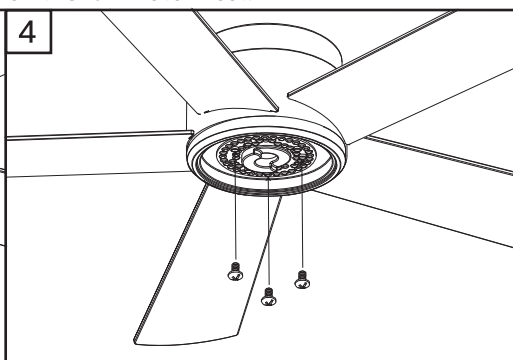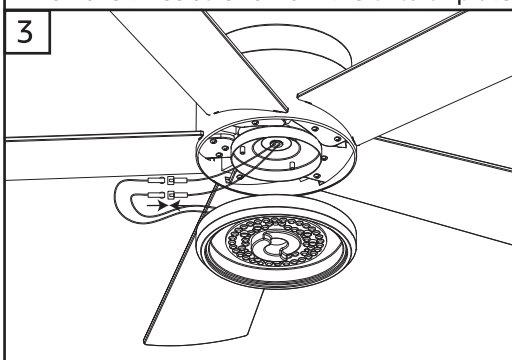


- Connect the wire terminal of the LED.
- Move the lamp body upward and secure it with the screws removed from the circular plate (Step 2).

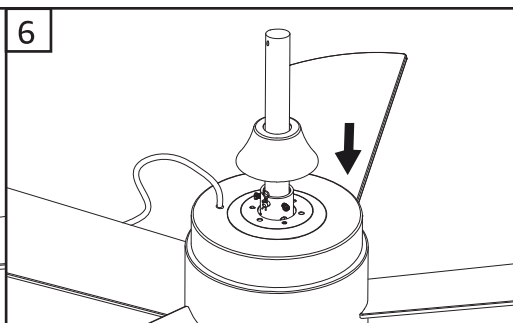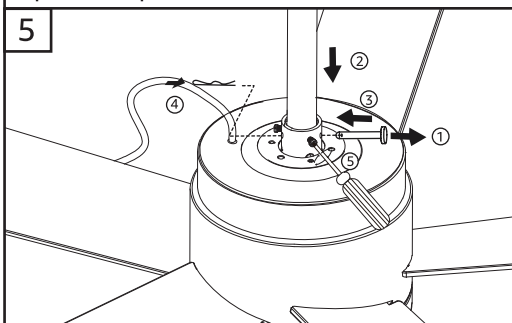


- Remove the pin from the fan motor host, then insert the downrod into the motor host and secure it with the downrod pin. Finally, tighten the two screws on the yoke.
- Move the coupling cover downward.

Installation

7

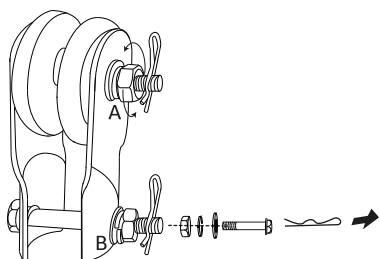


8

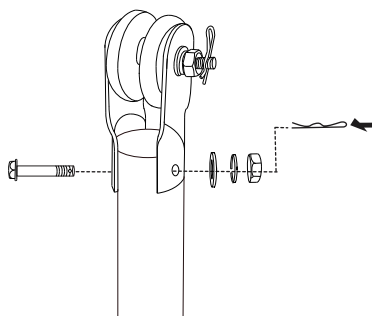

- Loosen the nut at point A, and remove the pin, washer, and nut at point B.
- Install the hanging wheel clamp onto the suspension downrod according to the diagram. (Select the appropriate length of downrod relative to the desired height.)

9

 Wood ceiling

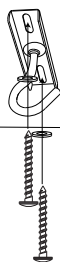


10

Cement ceiling




- Use self-tapping screws to secure the fan bracket to the wooden ceiling.
- Drill a hole in the concrete ceiling, then use expansion screws to attach the fan bracket to the ceiling.

11

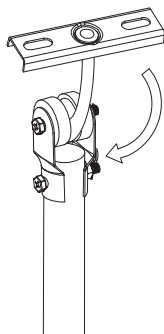


12

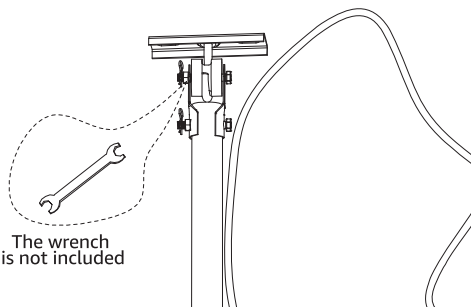


- Hang the fan's pulley onto the hook.
- Tighten the two nuts on the hanging wheel using a hex wrench. (The wrench is not included.)

Installation

13

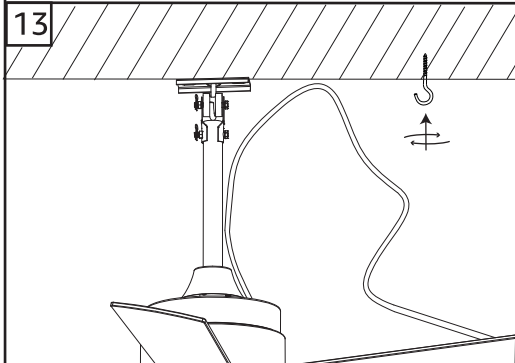


14

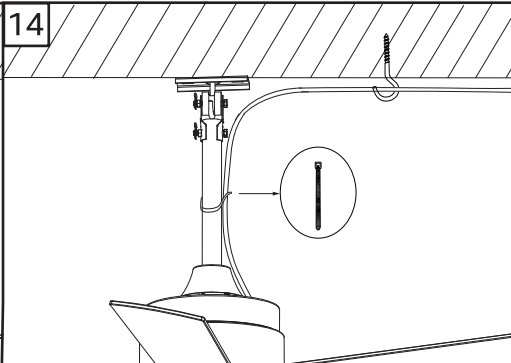


- Install the hook onto the ceiling.
- Use zip ties to bundle the power cord and hang the excess power cord on the hook.

15

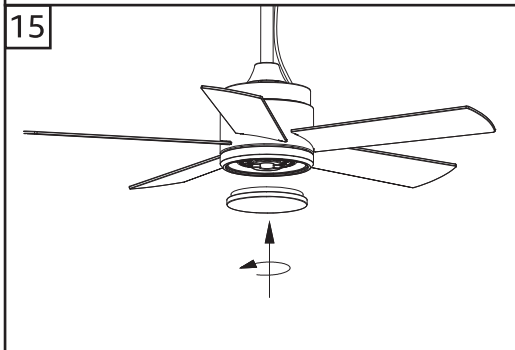


16

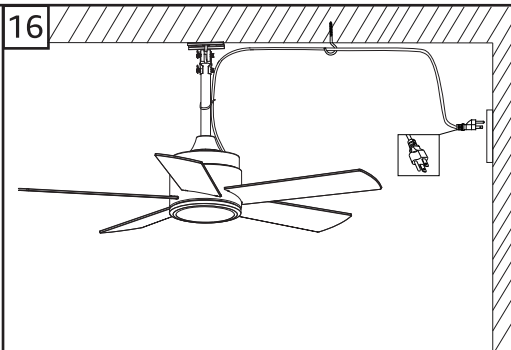

- Locate the locking point and screw the lampshade upward into place.
- Plug in and operate with remote controller.

Remote Control

	All off
	Light on/off (light memory after 10 seconds) CCT switch (fast click to switch)
1-6	Fan speed setting
	Fan off
	Natural wind
F	Forward
R	Reverse
1H 4H 8H	Quick timer setting (1H-4H-8H)
	Anti-theft mode (Pressing the button will turn off the light and fan. Then, the light and fan will run for 5 minutes every 2 hours.)
	Mute

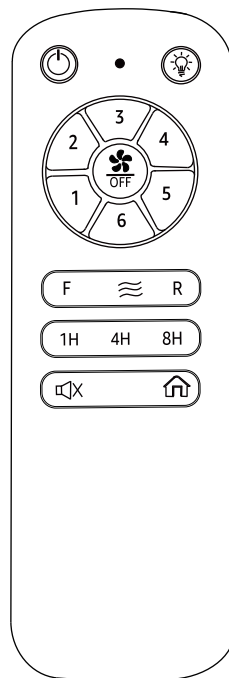

To operate the fan, please install 2 AAA batteries (included) in the handheld remote transmitter. If not used for extended periods of time, remove the batteries to prevent damage to the transmitter. Store the remote away from excessive temperatures and humidity.

Pairing method: (single/multiple fans)

The remote control transmitter can be used to control multiple receivers.


1. For the ceiling fan you want to pair, plug off for at least 60 seconds.
2. Plug on the ceiling fan, then press and hold the " " button for 3-5 seconds.
3. Wait for a beep sound, then release the button. Pairing is complete. If the pairing process is unsuccessful, please repeat the above steps.

Troubleshooting

PROBLEM	SUGGESTED REMEDY
If Fan Does Not Start	1. Check if the remote controller is paired and battery is working. 2. Check the outlet is in good condition.
If Fan Sounds Noisy	1. Make sure all screws in the yoke are snug. 2. Allow a "break-in" period of 24 hours. Most noises associated with a new fan will disappear after this period. 3. Check if the fan blades are in contact with the something.
If Fan Wobbles	1. Make sure that hook is scured. 2. Make sure all screws in the yoke are snug.
If Light Does Not Work	1. Check for loose wiring of the LED board.
Remote Does Not Work	1. Battery out of power or not installed correctly; change new AAA battery and ensure well installed. 2. Repair the mote, refer to page.7

Installing Wall Plate

Attach wall plate using the two provided screws.

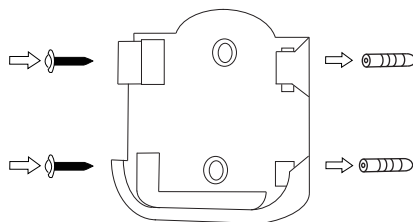

Customer Service

30-Days Full Refund Guarantee

If you are not completely satisfied or the item isn't what you expected, just tell us within 30 days. We will give you a full refund unconditionally.

Friendly Reminder

It's better to contact us than leaving a negative shopping experience. Nothing is more important than your satisfaction, and we will do our best to serve you.

Quick Response within 12 Hours

You can contact us without any hesitation at any time of the day, and we will reply to you within 12 hours. (It would be appreciated if you could provide us with a video or pictures, if available)

2-year Warranty

Your fan light comes with a two-year warranty. If a malfunction occurs due to product quality issues, we will assist in diagnosing the problem and provide replacement parts free of charge to ensure your fan light resumes normal operation.

Contact Information



: You can contact us by sending an email to support@fanlamppro.com