

3 mm  
3 mm

### Control the display


The default temperature is 43°F. Adjust via ▲ or ▼ buttons within 40–61°F. Display flashes during setting, then reverts to the current internal temperature after a few seconds.

The display adjusts as temperature changes. Press ▲ or ▼ buttons during adjustment to view the set temperature.

**Note:** The unit restores the last setting when power resumes after an outage.

### Light with LED



Press and hold the ▼ button for 3 seconds to turn the LED light on and off.

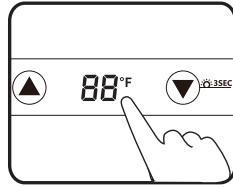

## Step 5: Maintenance

### Defrosting the Appliance

1. Remove the beverages. Unplug the unit to melt the frost.
2. Melted frost will flow into a drip tray. If excess water accumulates, empty it manually.
3. Clean the interior with lukewarm water and a soft cloth, dry thoroughly, then reset the temperature to 6°C (43°F) and cool for 2 hours.
4. Reload the beverages and adjust to your desired temperature.

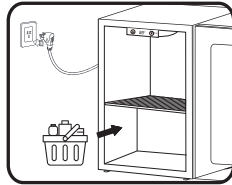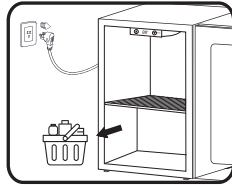

### Caution:

1. **DO NOT** use hot water, harsh detergents, gasoline, kerosene, solvents, acids, or anything flammable to clean the wine refrigerator. These can damage the paint and degrade the plastic components.
2. If any replacement components are required, they must be obtained from the customer service department.

### Customer Support

For assistance with any of the following, contact our customer service team:

1. Operational issues such as unusual noise or cooling problems.
2. Damage or missing parts resulting from shipping.
3. Product size not meeting requirements.
4. Any other questions or concerns.

Support is available by phone at 1-833-632-0897 or by email at [support@homyd.com](mailto:support@homyd.com).

## FAQs

1. **Is this rated for outdoor use?**  
This wine refrigerator is primarily designed for indoor use and is not suitable for outdoor use.
2. **What are the warranty specifications?**  
We provide a 12-month warranty and lifetime technical support for this refrigerator. If you would like to learn more, please contact our customer service team.
3. **Is it normal for the wine refrigerator to get hot on the outside?**  
It is normal for a refrigerator to emit some heat on the outside. This happens because refrigerators work by transferring heat from inside the unit to the outside, keeping the inside cool.
4. **Can the shelf inside the wine refrigerator be moved?**  
The shelf inside the wine refrigerator is adjustable and can be movable.

Refer to the product manual for more detailed information on usage, cleaning, and maintenance.

If issues persist after carefully reviewing the troubleshooting section, contact customer service for assistance.

We're here to help!



usage



cleaning



maintenance



troubleshooting

[support@homyd.com](mailto:support@homyd.com)

1-833-632-0897

# QUICK GUIDE

FWC008 Wine Refrigerator

FWC008-11BL-USZX

141 mm

正面

105 mm

315 mm

## Important Safety Instruction

### ⚠️ Preparation Requirements Before First Use

Let the machine sit for 24 hours on a stable, level surface before first use to allow the refrigerant to settle down. Damage caused by skipping this step is not covered by the warranty.

### 👶 Child Safety Protection

Keep the appliance and its cord out of the reach of children. Close supervision is necessary when using near children.

Before discarding the unit, remove the door and leave the shelf in place to prevent child entrapment.

### ⚡ Electrical Safety Specifications

Always connect the wine refrigerator to the correct voltage as specified on the product's rating label.

**DO NOT** make any unauthorized modifications, as these modifications may pose safety risks and compromise your health.

### ⚠️ Note: DO NOT use outdoors or expose to sunlight.

If the appliance is found to be damaged upon arrival, contact the customer support team to resolve the issue.

## Operating Instructions

### Warning:

1. Use a dedicated three-hole grounded outlet (115V/60Hz). DO NOT use extension cords or share the outlet with other appliances.


share the outlet with other appliances.

2. Voltage Warning: If voltage fluctuates beyond  $\pm 10\%$  of 115V, it may cause accidents or damage the unit.

## Step 1: Unboxing




1. Remove all inner and outer packaging and check the appliance accessories.

2. Avoid pulling or yanking accessories forcefully.

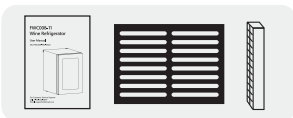

## Step 2: Placing the Unit

1. Ensure the wine refrigerator is stable and level.
2. To ensure high-quality product performance, follow these dimensions during installation: sides **5 cm (2 inches)**, top **5 cm (2 inches)**, and back **25 cm (10 inches)**.
3. Keep away from heat sources (e.g., ovens, radiators), direct sunlight, and damp areas.
4. Maintain a room temperature between **10°C (50°F)** and **32°C (90°F)**.
5. Keep your hands dry and clean when touching the unit.

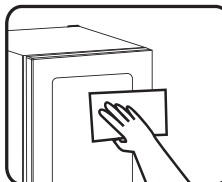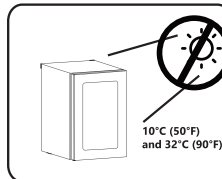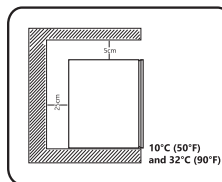


## Step 3: Cleaning before First Use

Wipe the interior surfaces and all accessories with lukewarm water and a soft cloth. Dry thoroughly before powering on.

## Step 4: Operating the Control Panel

### Start up the device

Connect the power cord to a standard wall outlet. **DO NOT** use a GFCI (Ground Fault Circuit Interrupter) outlet to connect the freestanding wine cabinet. After connection, you will immediately hear a short beep.

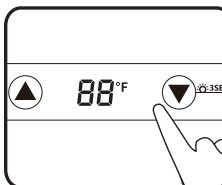

SKU: CIM010-80BL-USZX

