




OPC524

4-INCH KINETIC CHIPPER

POWERED BY KOHLER®

STARTING INSTRUCTIONS

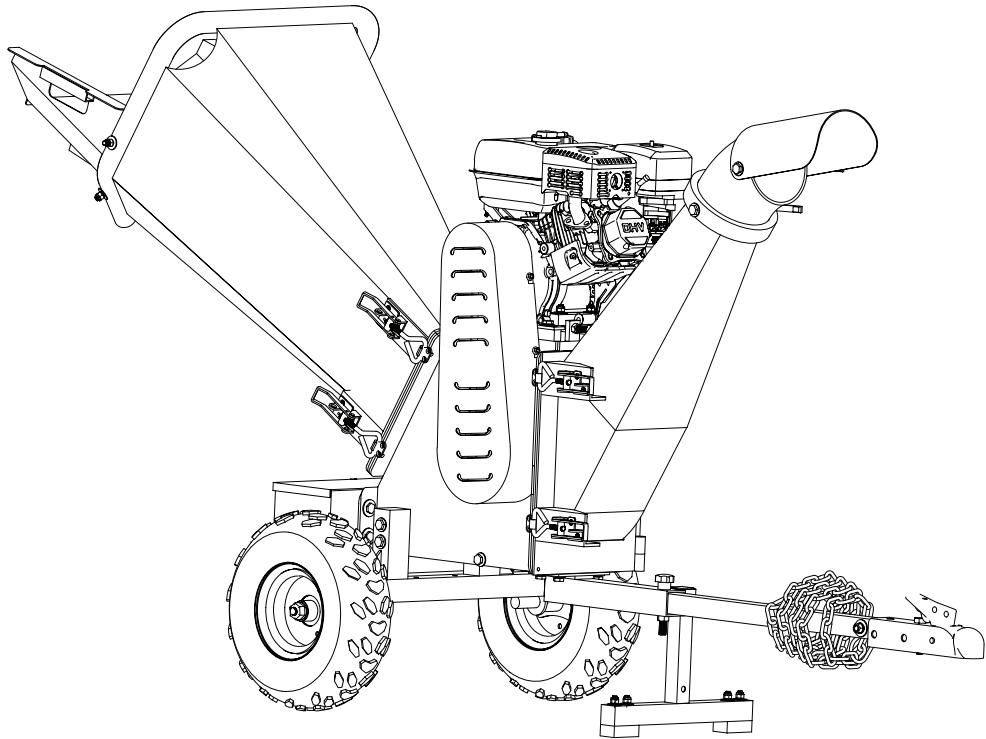

DK2 USA WEST

3311 MEADE AVENUE STE
E DOCK 13, LAS VEGAS, NEVADA
89102 USA

DK2 CORPORATE HEAD OFFICE

5330 MAINWAY
BURLINGTON, ONTARIO
L7L6A4 CANADA

DK2 USA EAST

3750 SOUTH AVENUE
NORTH UNIT, TOLEDO, OHIO
43615 USA

NOTE: If you find any damaged or missing parts please **call DK2 Customer Service or contact us via our website**. We will replace any damaged or missing parts to you for free. **Please do not return to the store.**

CUSTOMER SERVICE 1 (888) 277-6960 | WWW.DK2.COM

STARTING INSTRUCTIONS



1. Adjust the **Gas Lever** 1 to the far right.
2. Adjust the **Choke Lever** 2 halfway to the right.
3. Turn and pop-up the **Stop Switch** 4 on the feed chute of the machine.
4. Pull the **Engine Cord** 3 to start spinning the drum.
5. Retract the **Engine Cord** 3 and continue to pull the cord repeatedly, continually spinning the drum by following this process 3 or 4 times.
6. Once the engine fires up, adjust the **Choke Lever** 2 to the far right slowly as the engine gains RPM.