
Item Number: 6558690

WARNING (To reduce the risk of fire, electric shock, or personal injury):


- 1. We suggest installation by a licensed electrician.
- 2. Please read the instruction carefully and save it as you may need it at a later time.
- 3. Before you start, **NEVER** attempt any work without shutting off the electricity until the work is done.
 - **»** Go to the main fuse, or circuit breaker, box in your home. Place the main power switch in the "**OFF**" position.
 - » Place the wall switch in the "OFF" position.
- 4. Mounting surface should be clean, dry, flat, strong enough and 1/4" larger than the canopy on all sides. Any gaps between the mounting surface and canopy exceeding 3/16" should be corrected as required.
- 5. Make sure that the ceiling or wall can stand the weight of the lamp before installation.
- 6. Make sure the voltage you are using is **120V**. The maximum wattage is **Type A, Max 60W** per bulb.
- 7. Keep the lamp away from acidic and alkaline substances in case of damaging the surface of the lamp.
- 8. When replacing bulbs, you should turn off or unplug the lamp and you must wait until it is cool as bulbs get hot guickly.
- 9. The safety instructions appearing in this manual are not meant to cover all possible conditions that may occur. It must be understood that common sense, caution and care must be used with any electrical products.

IMAGE FOR FINISHED PRODUCT:

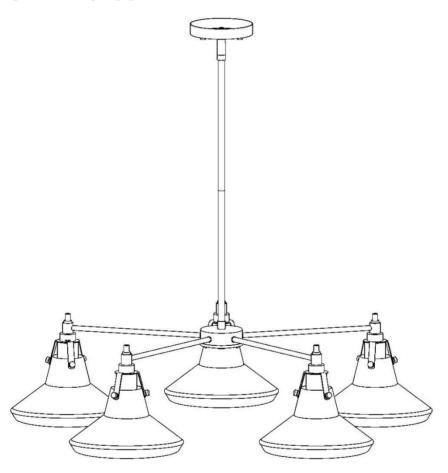

TOOLS REQUIRED (NOT INCLUDED):

Before starting assembly and installation please prepare the needed tools as below picture

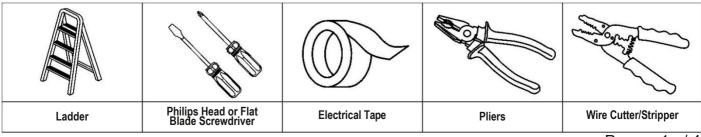


OUTLET BOX PARTS TYPE & QTY INCLUDING: A (C) Mounting plate (1) C (D) Green ground screw (1) D (E) Canopy (1) B (F) Swivel joint (1) \mathbf{F} (G) Knob nut (2) F (H) Tube (I) Arm assembly (1) G (J) Arm (5) H (K) Socket assembly (5) (L) Screw (15) (M) Lampshade (5) **ACCESSORIES & QTY ENCLOSED:** I (A) Plastic wire connector (3) (B) Mounting screw (2) J (L) Screw (1) (spare part) K L M

ASSEMBLY & INSTALLATION INSTRUCTIONS:

- 1. Carefully remove the fixture from the carton and check that all parts and accessories are included as shown in the above illustration.
- 2. Turn off power

Before you start the installation, NEVER attempt any work without shutting off the electricity until the work is done.


- **»** Go to the main fuse, or circuit breaker, box in your home. Place the main power switch in the "**OFF**" position.
- » Place the wall switch in the "OFF" position.
- 3 » Unscrew knob nuts (G) from canopy (E) and then gently remove mounting plate (C).

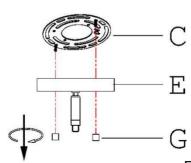

Page: - 2 - / 4

1) According to your desired hanging height to choose and use tubes (H).
 2) Then pass the fixture wires through the chosen tubes (H), swivel joint (F) and canopy (E).
 3) Screw the chosen tubes (H) into swivel joint (F) and the top of arm assembly (I) and then hand tighten till snug.

5 » Attach mounting plate (C) to the outlet box with mounting screws (B).

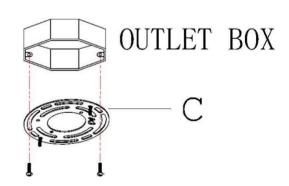

6 » Make wire connections

GREEN GROUND

SCREW

Connect wires as below wires connection shown. PLEASE NOTE THAT GROUND WIRE IS BARE COPPER WIRE, NEVER CONNECT OTHER WIRES TO GROUND WIRES.

WASHER

OUTLET BOX GROUND OUTLET BOX GROUND FIXTURE GROUND CUPPED

GREEN GROUND

SCREW

DIMPLES

Connect ground wires according to the below chart

* Note: When parallel wires (SPT I& SPT II) are used. The neutral wire is square shaped or ridged and the other wire will be round in shape or smooth (see illus.)

Connect Black or Red Supply Wire to: Black *Parallel cord (round & smooth) Clear, Brown, Gold or Black without tracer Insulated wire(other than green) with copper conductor Connect White Connect White Supply Wire to: *Parallel cord (square & ridged) Clear, Brown, Gold or Black with tracer Insulated wire(other than green) with silver conductor


Connect wires according to the below chart

- Twist wires together with plastic wire connectors (A) until tightly joined.
- Wrap each connector with approved electrical tape.
- · Be sure that no wire strands are exposed and then carefully tuck all wires into the outlet box.
- 7 » Raise canopy (E) to the ceiling and secure canopy (E) in place by tightening knob nuts (G) onto the pre-assembled screws in mounting plate (C).


Note: canopy (E) should be snug against the ceiling and knob nuts (G).

If not, adjust the threaded length on mounting plate (C):

- Unscrew the pre-assembled hex nuts.
- Screw the pre-assembled screws in or out of mounting plate (C).
- When the secure length is achieved, tighten the hex nuts and back to step 7.

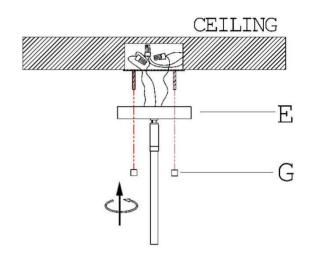

- 8 » 1) Remove screws (L) from socket assemblies (K).
 - 2) Align holes of lampshades (M) with holes of socket assemblies (K) and then secure them with screws (L) as shown in the illustration.
 - 3) Install bulbs (Not included) (Please do not exceed the maximum wattage recommended on the socket.)

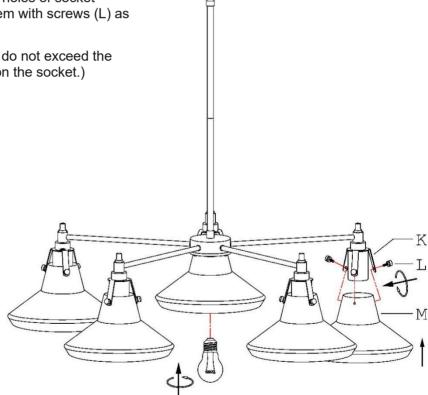

9. Check everything is already installed properly, then you could turn on the light. Enjoy!

ORDERING PARTS

Keep this sheet for future reference in case you need to order replacement parts. All parts for this fixture can be ordered from the place of purchase. Be sure to use exact wording from illustration when ordering parts.

CLEANING

To clean, wipe the fixture with a soft cloth. Do not use abrasive materials such as scouring pads or powders, steel wool or abrasive paper.