 


INSTALLATION

 
 
Product Manual

Version: 330137-01-24A-SCX

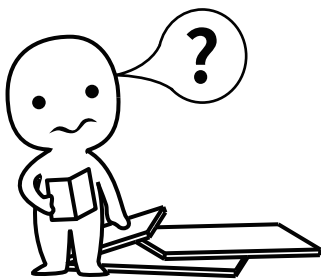


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

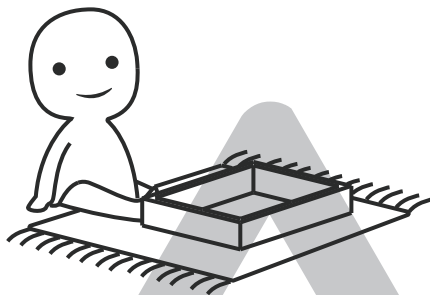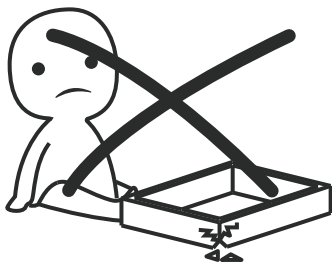



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

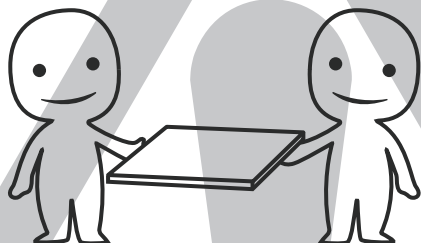

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

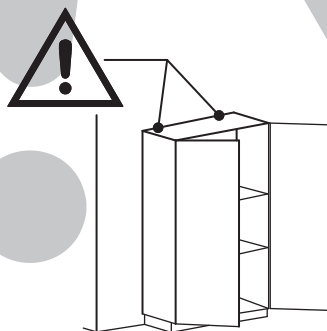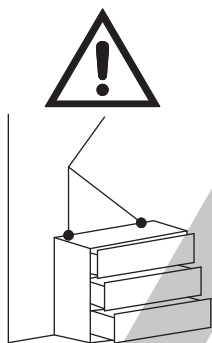

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

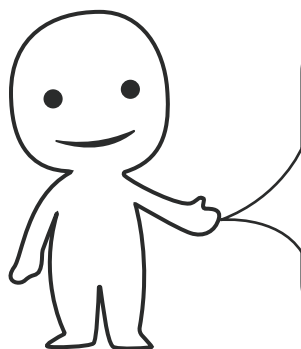


Please prepare the following tools

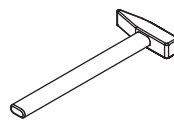   


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 
A x 2




B x 1

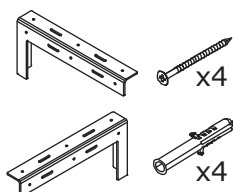 

C x 1

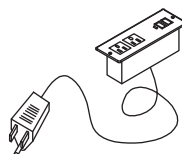 

D x 1

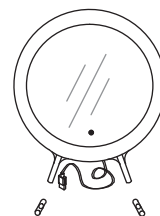 


E x 68+1




Ø 3 x 12 mm

 F x 83+1

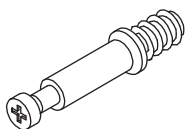

Ø 6 x 35 mm

 G x 23+1




Ø 4 x 30 mm

H x 83+1




Ø 15 x 10 mm

 J x 2




Ø 4 x 20 mm

 K x 82+1




Ø 8 x 30 mm

 L x 30+1

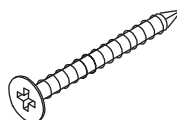

Ø 4 x 35 mm

 M x 1



L = 50 mm

N x 2



P x 10



 
Q x 72+1






Ø 4 x 14 mm

R x 7



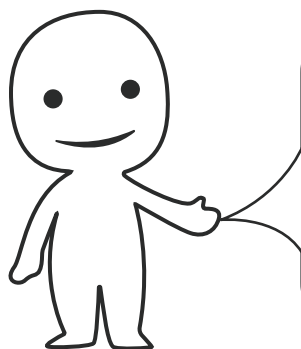


Please prepare the following tools

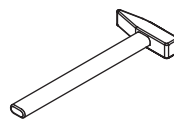   

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 S x 6+1




Ø 4 x 16 mm

T x 5




Ø 4 x 8 mm

 
U x 4

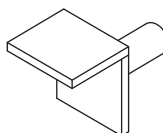

V x 2

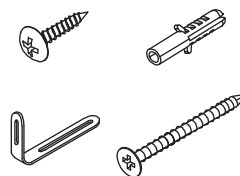 


W x 2

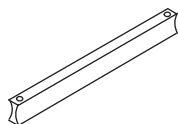 


L = 128 mm

 X x 28



Ø 2 x 20 mm

 Y x 4




Ø 3 x 14 mm

Z x 4




 CL x 5

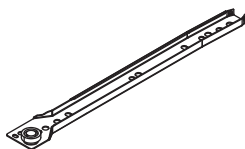


L = 350 mm

 CR x 5

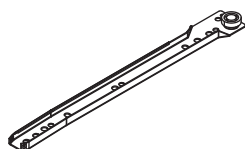


L = 350 mm

 DL x 5














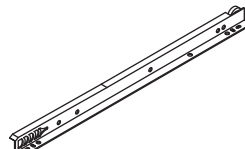

















L = 350 mm















 
DR x 5

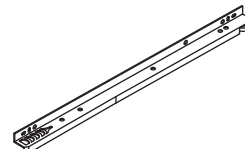


L = 350 mm

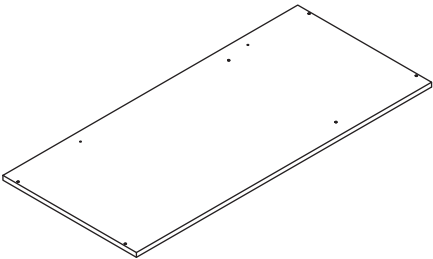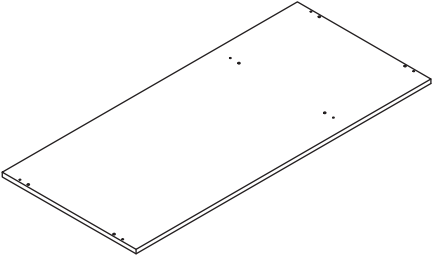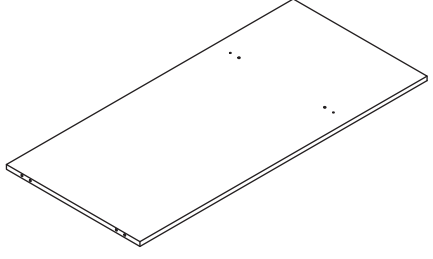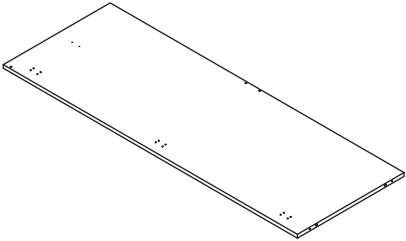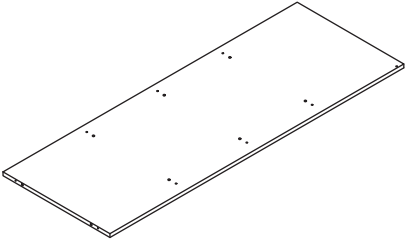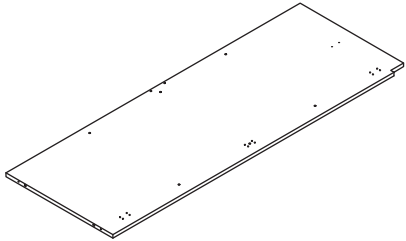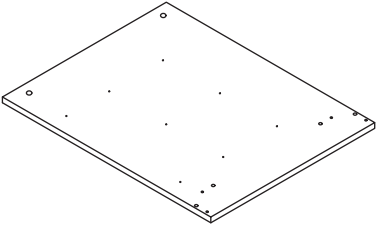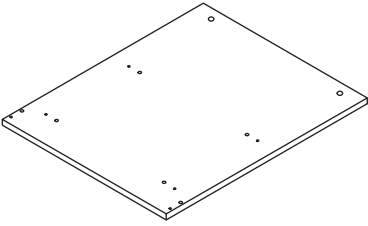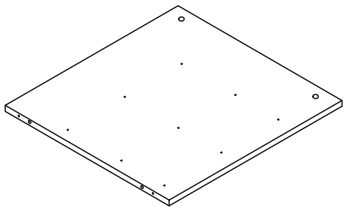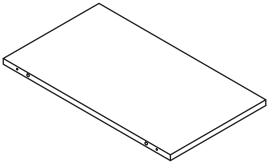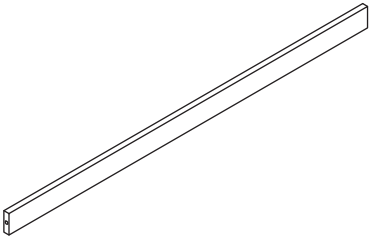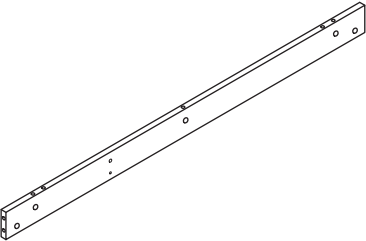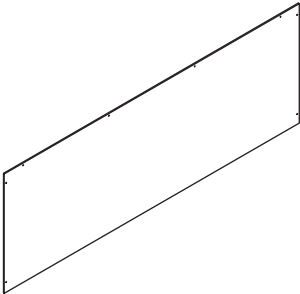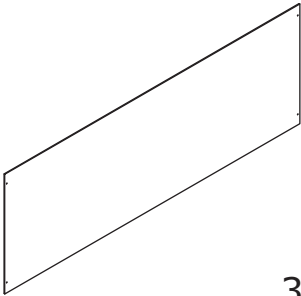              ①  1PC	②  1PC	③  1PC
④  1PC	⑤  1PC	⑥  1PC
⑦  1PC	⑧  1PC	⑨  1PC
⑩  4PCS	⑪  1PC	⑫  1PC
⑬  1PC	⑭  2PCS	⑮  3PCS
5/55		

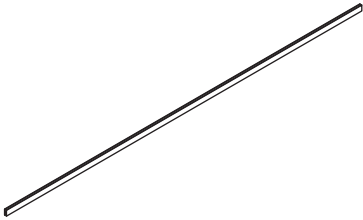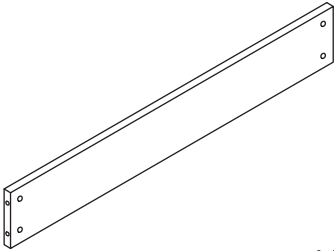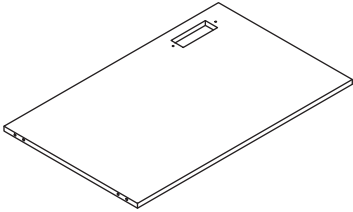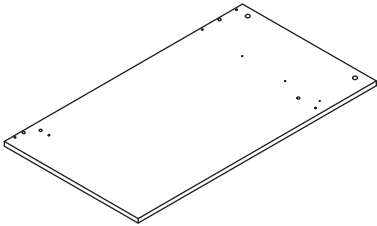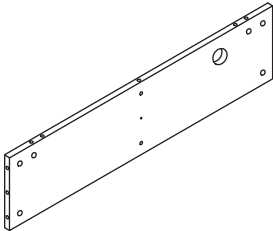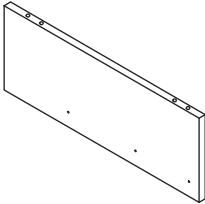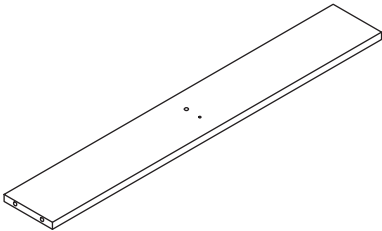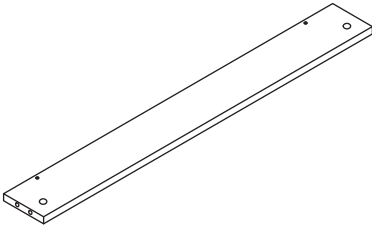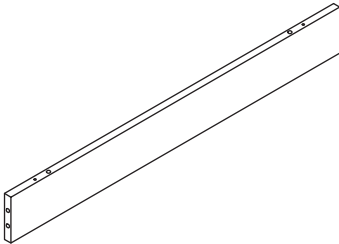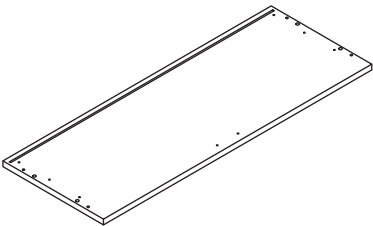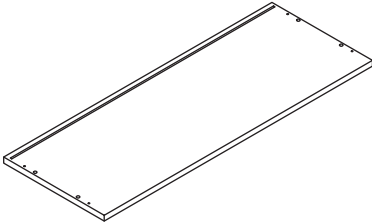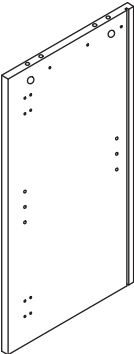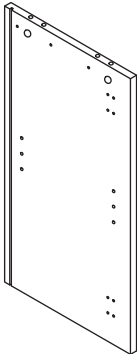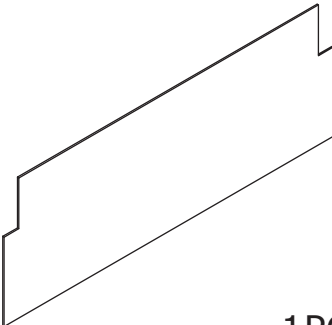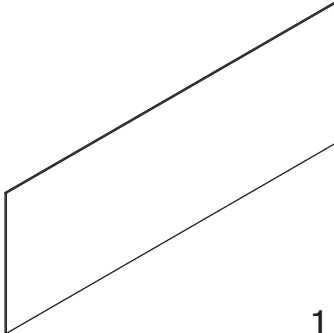               16  4PCS	17  1PC	18  1PC
19  1PC	20  1PC	21  1PC
22  1PC	23  1PC	24  1PC
25  1PC	26  1PC	27  1PC
28  1PC	29  1PC	30  1PC
6/55		

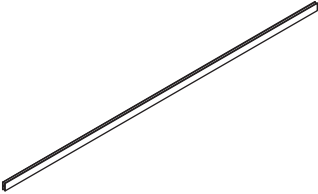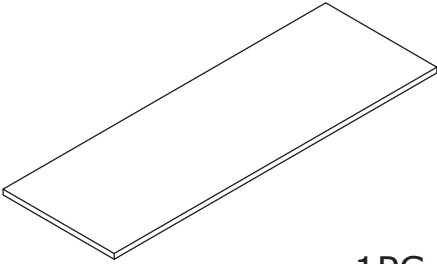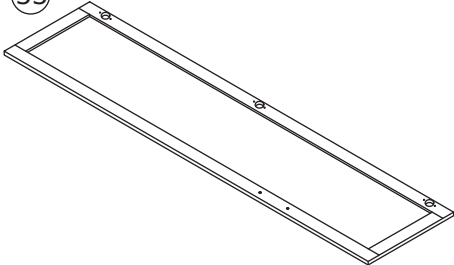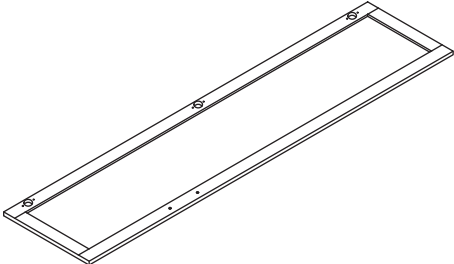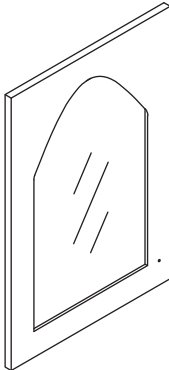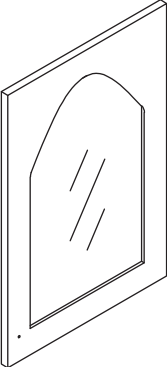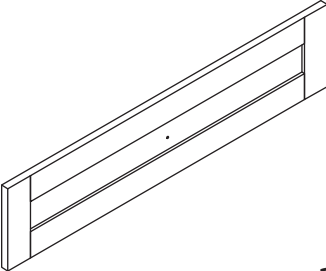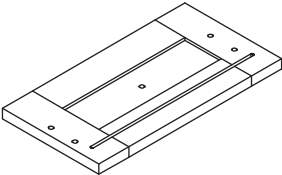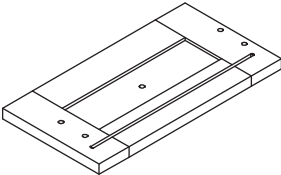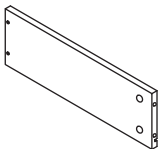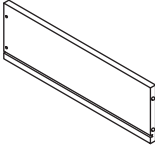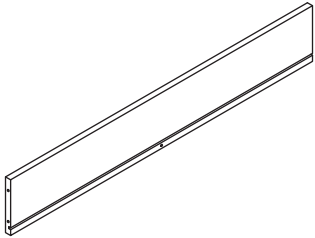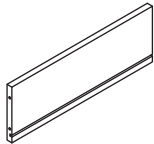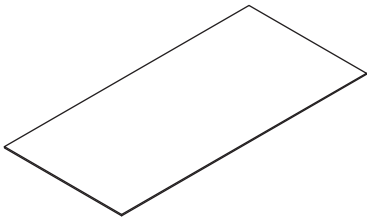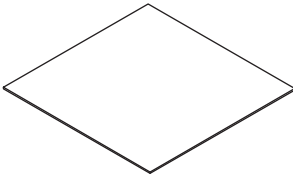               
31  1PC	32  1PC	33  1PC
34  1PC	35  1PC	36  1PC
37  3PCS	38  1PC	39  1PC
40  5PCS	41  5PCS	42  3PCS
43  2PCS	44  3PCS	45  2PCS
7/55		

 46




3PCS

 47

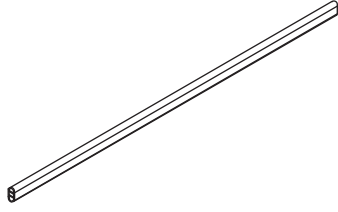


1PC

 48

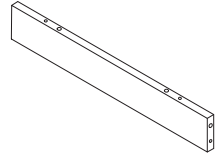


1PC

 49

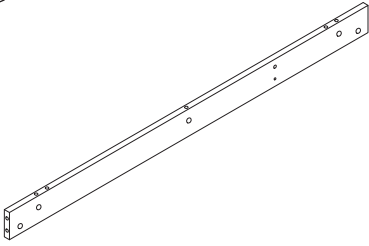

1PC

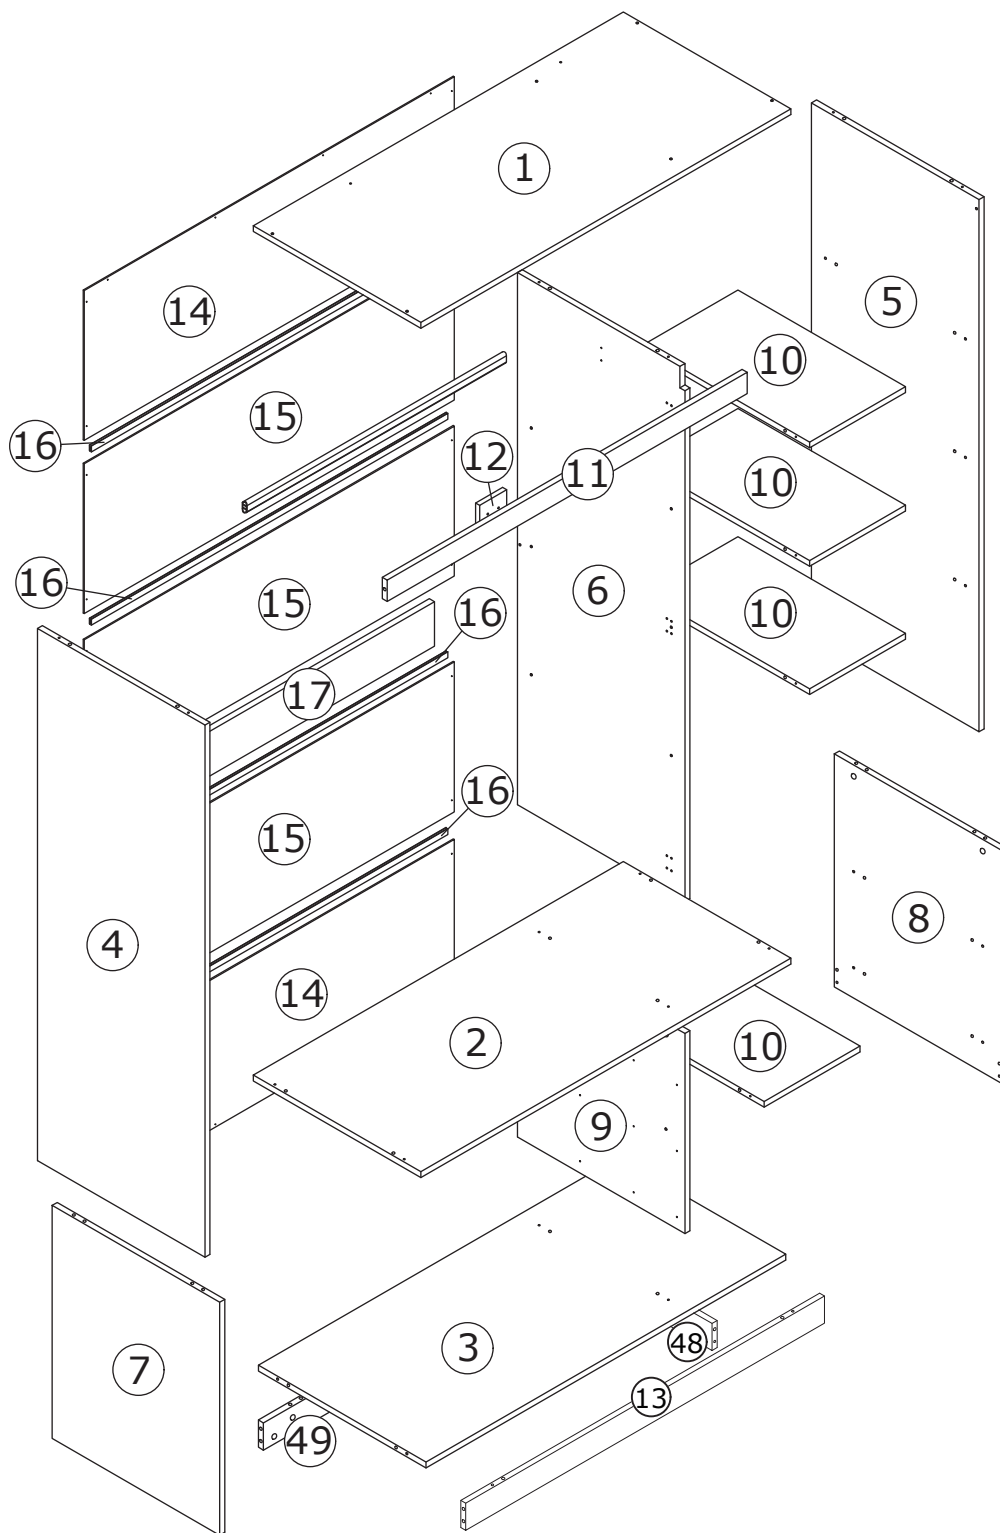 


⚠ WARNING




Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*

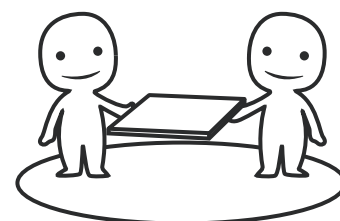

ASSEMBLED BY 2 ADULTS

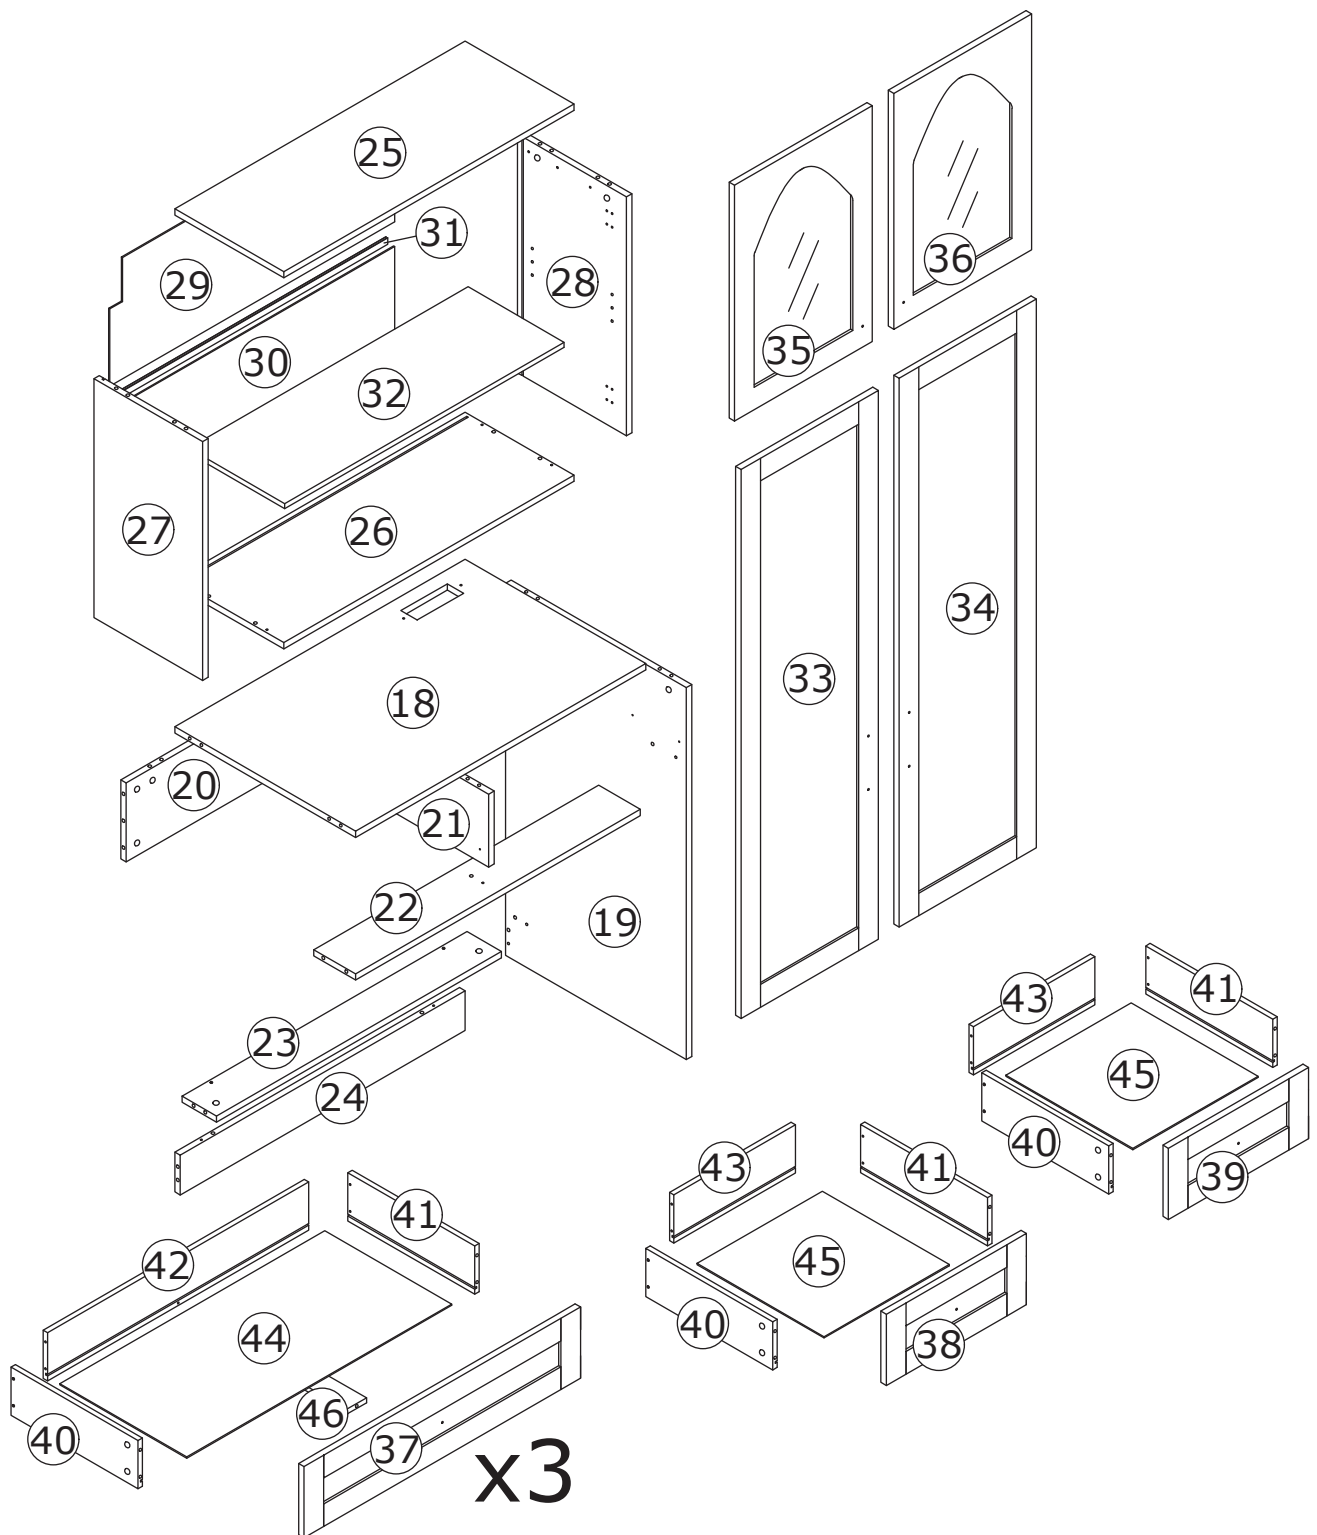 


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*

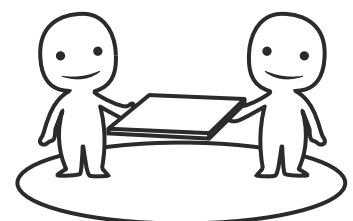


ASSEMBLED BY 2 ADULTS

1






E x 18



 
CL x 3

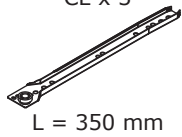

CR x 3

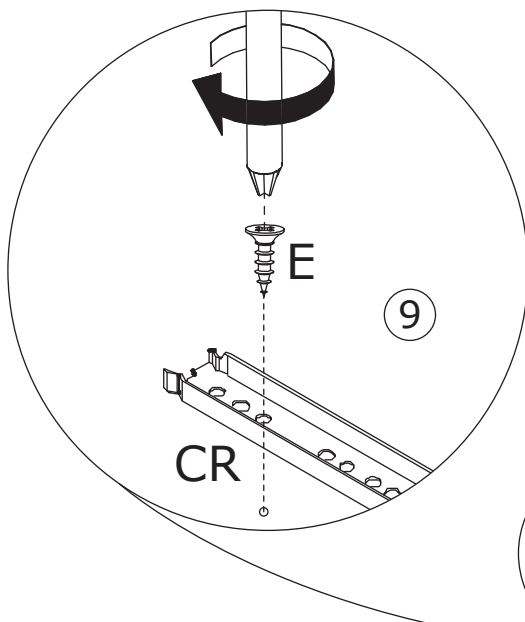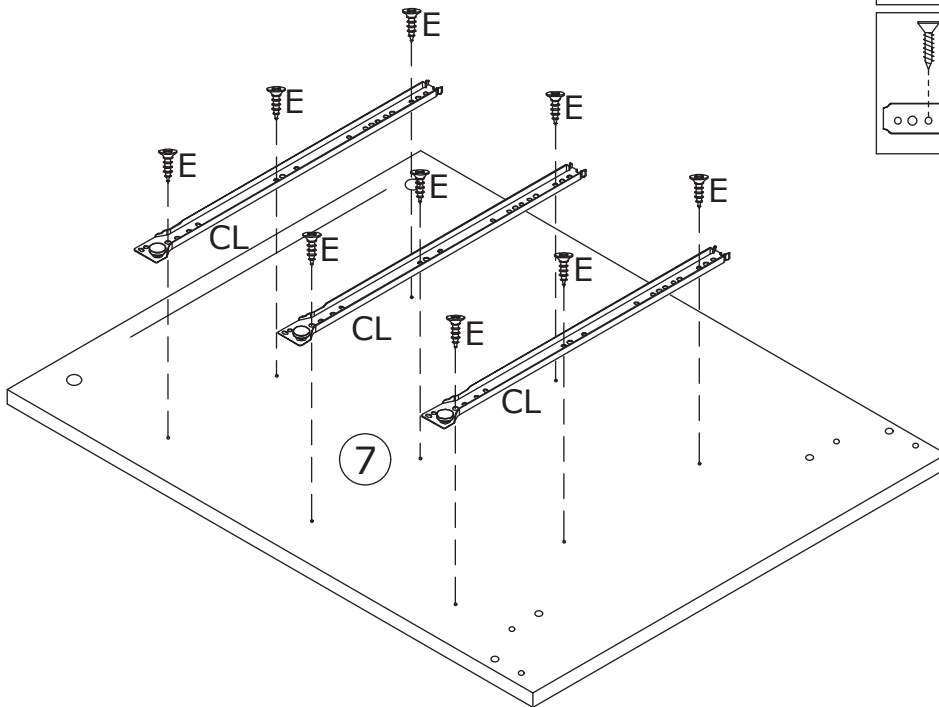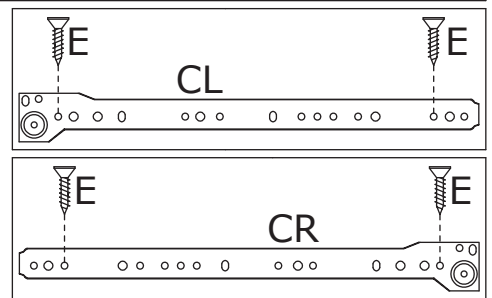   
 
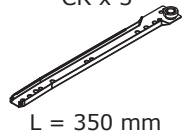 


 Fix rail(CL) and (CR) to panel 7 and 9 with screw(E) as shown.


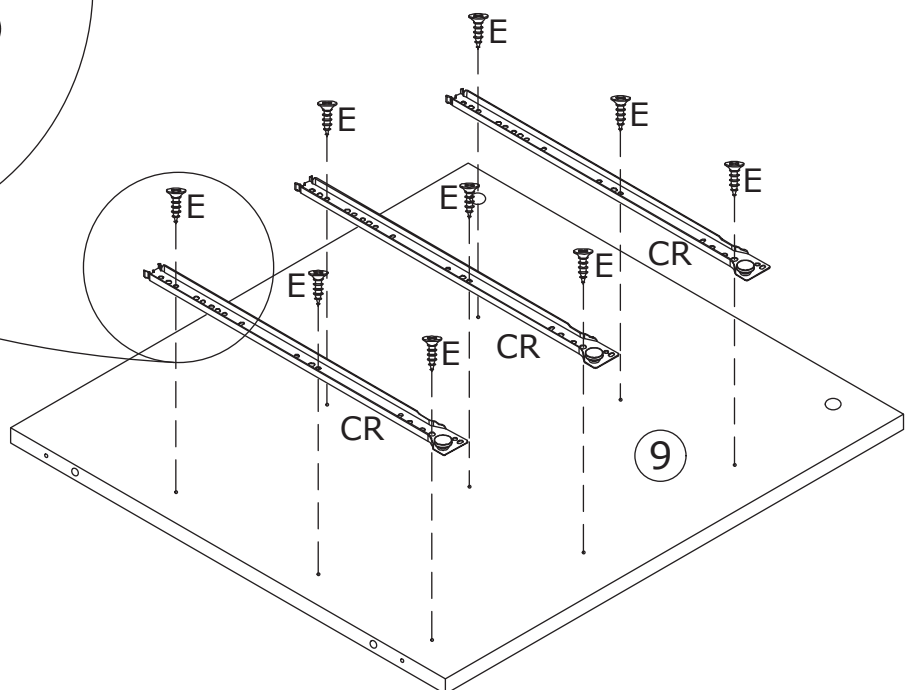


2

   
F x 12
Ø6 x 35 mm

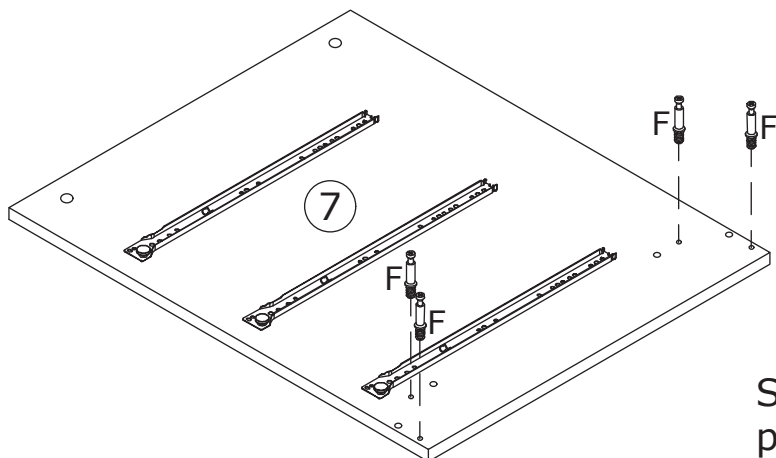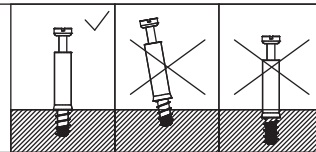

 
 
Screw eccentric rod(F) into panel 7 and 8 at first.
Flip panel 8 to back, screw eccentric rod(F) into as shown.

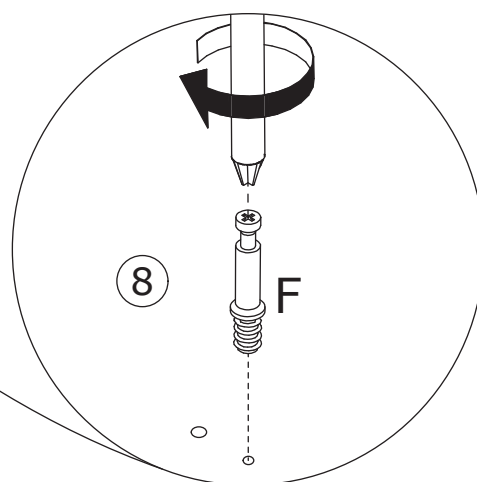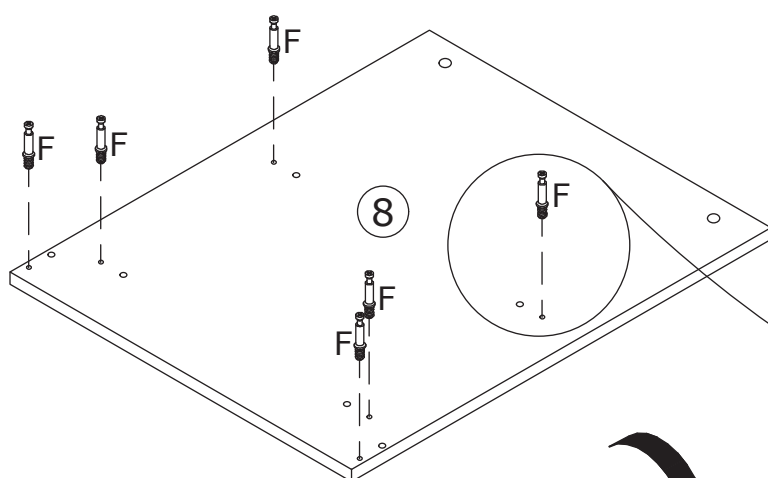

180°


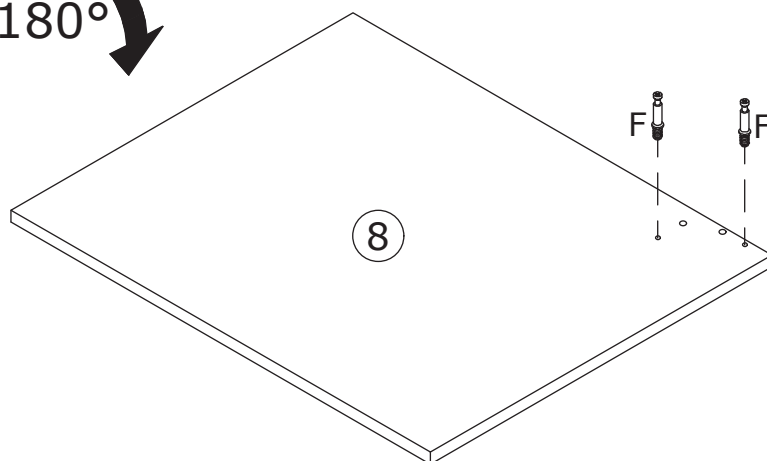 


3

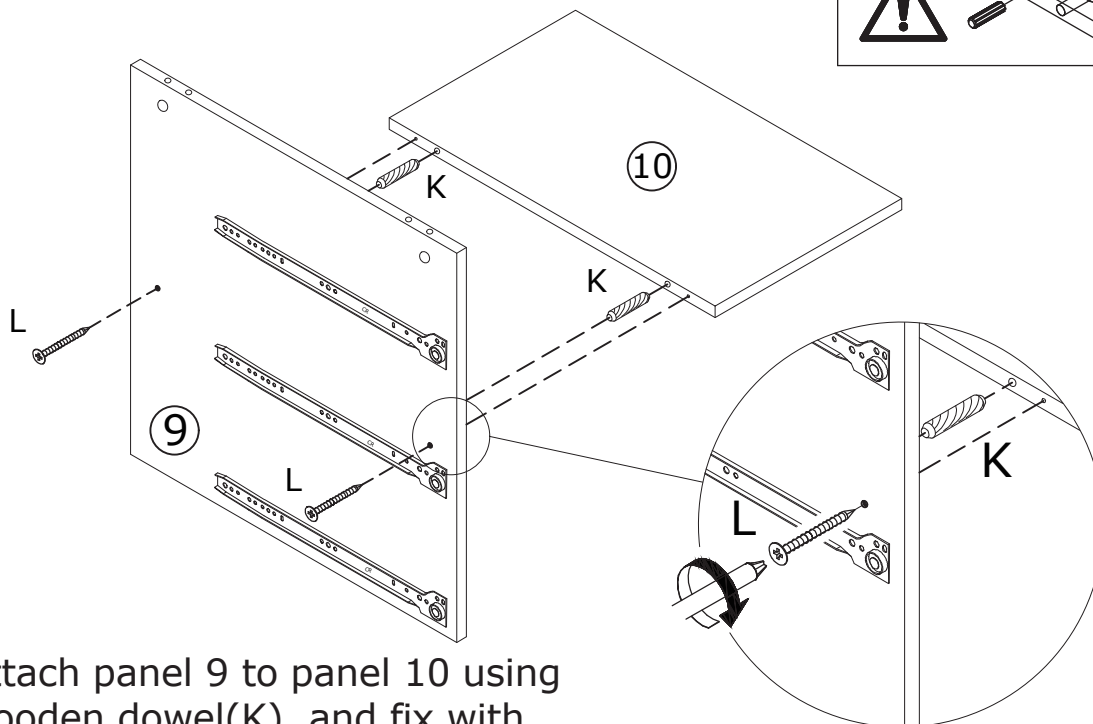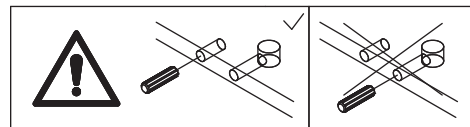  


Attach panel 9 to panel 10 using wooden dowel(K), and fix with screw(L) as shown.

  4

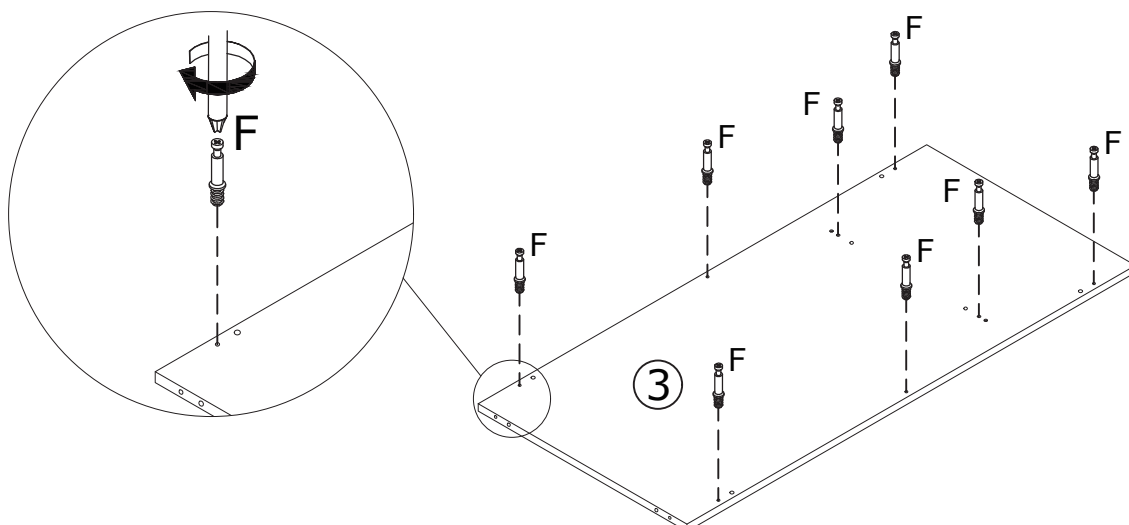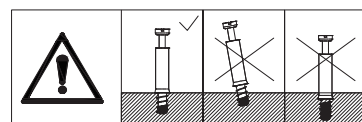


Screw eccentric rod(F) into panel 3.

 5

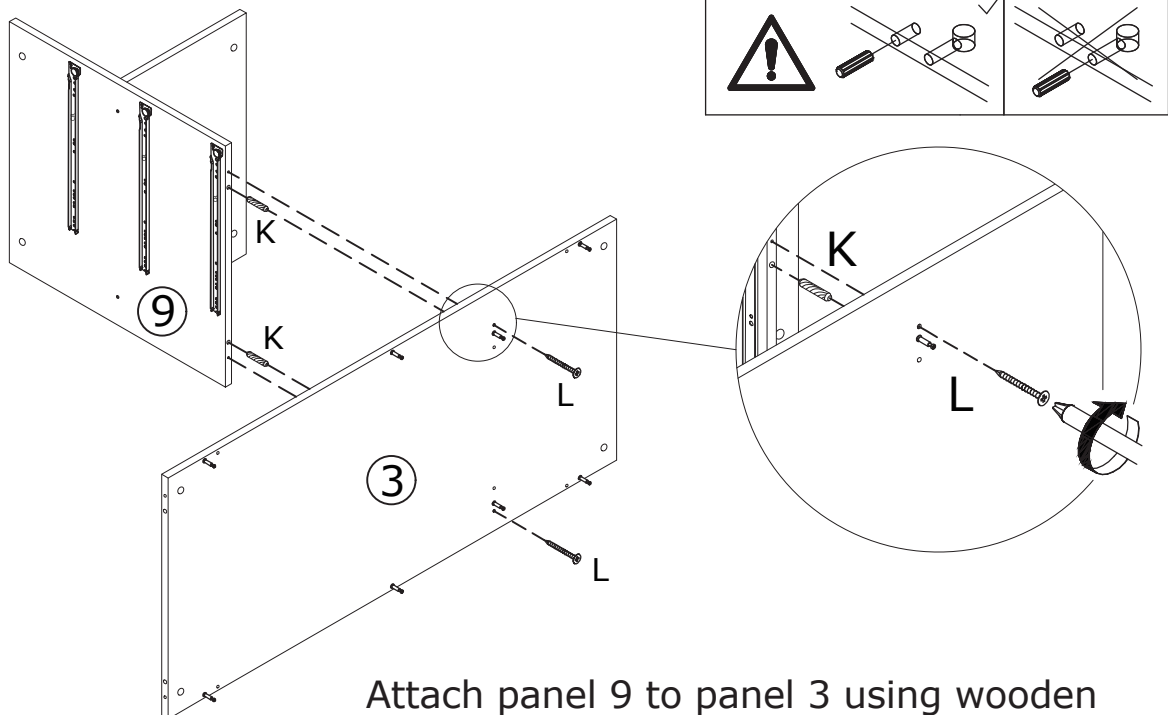


Attach panel 9 to panel 3 using wooden dowel(K), and fix with screw(L) as shown.


 
6

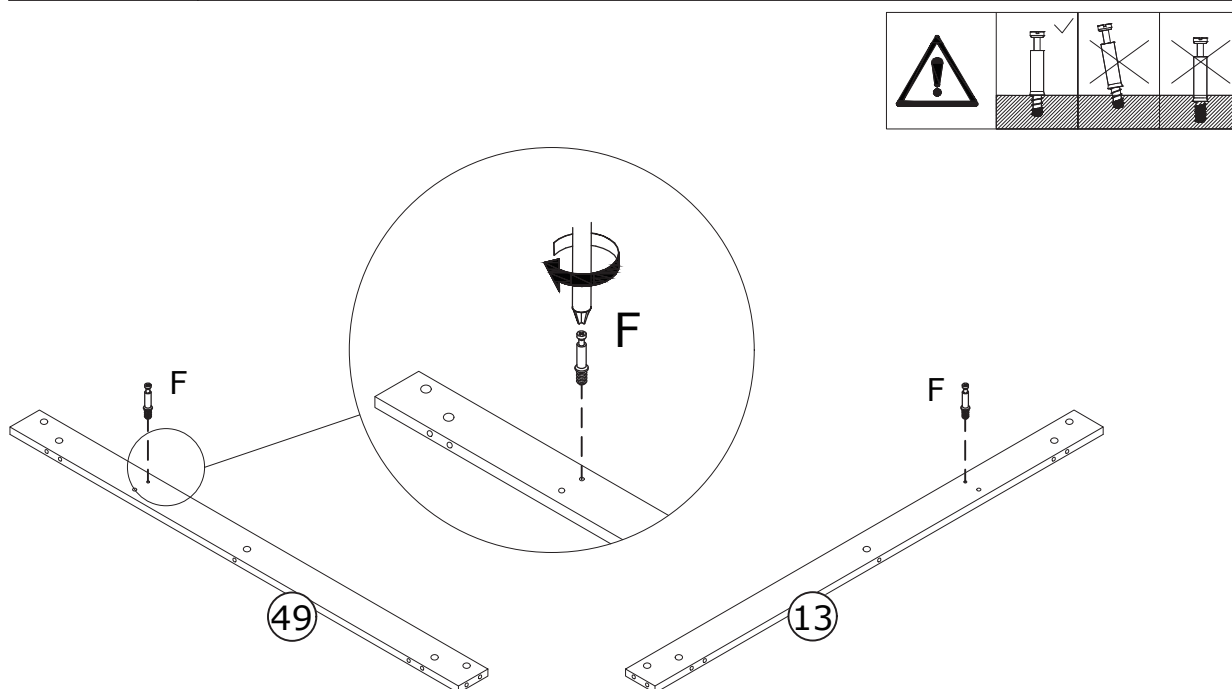

Screw eccentric rod(F) into panel 13, 49 .

 
7

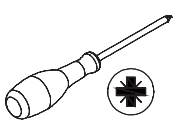
H x 2  ø15 x 10mm	K x 2  ø8 x 30mm	
--	---	---

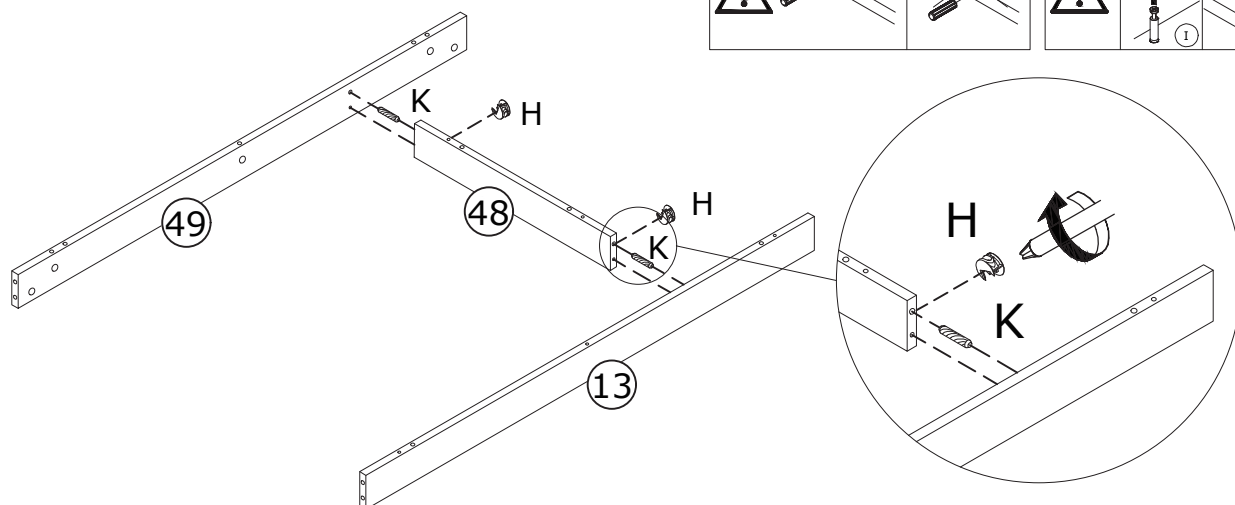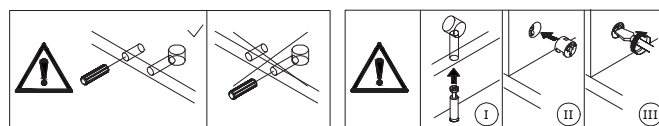  


Attach panel 48 to panel 13 and 49 using wooden dowel(K), add cam lock(H) into and turn clockwise to tighten as shown.

 8

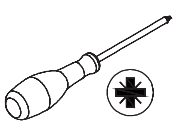H x 8  ø15 x 10mm	K x 6  ø8 x 30mm	
--	---	---

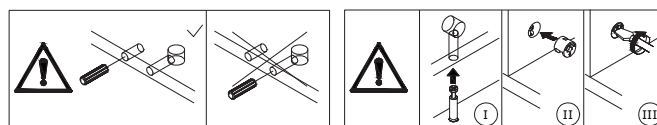 


 
Attach panel 13, 48 and 49 to panel 3 using wooden dowel(K), add cam lock(H) into panel 13 and turn clockwise to tighten as shown.

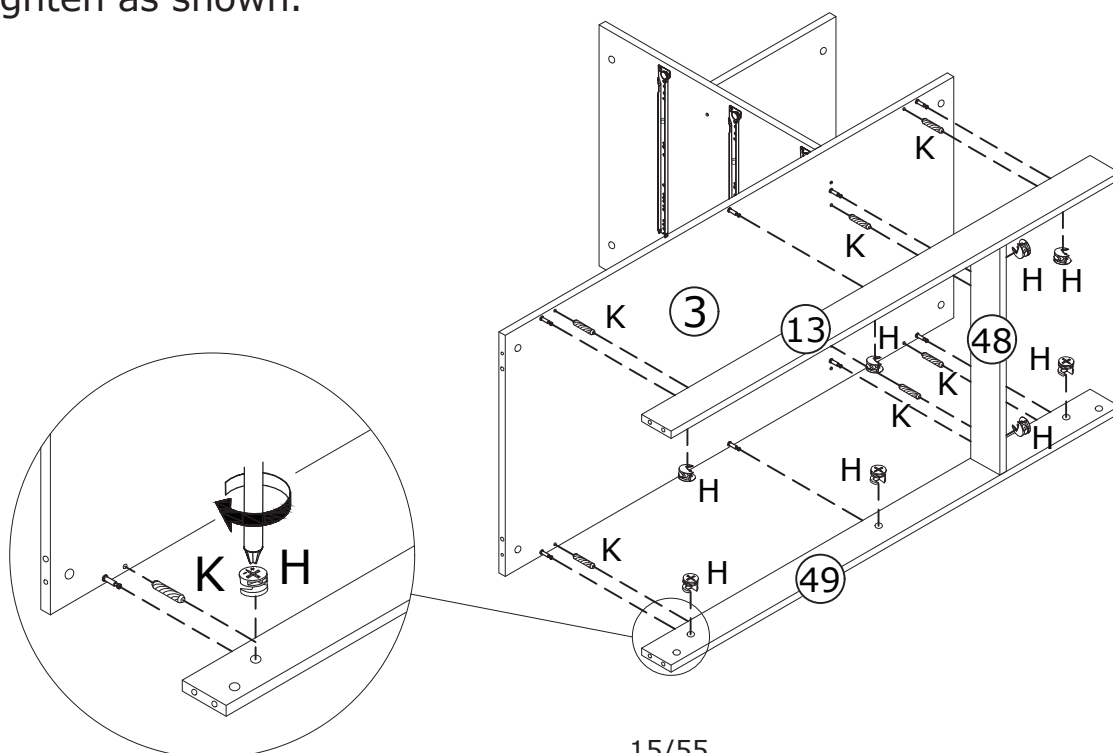


9



  Connect panel 7 and 8 to panel 10, 13, 49 and 3 using wooden dowel(K), add cam lock(H) into panel 10, 13, 49, 3 and turn clockwise to tighten as shown.

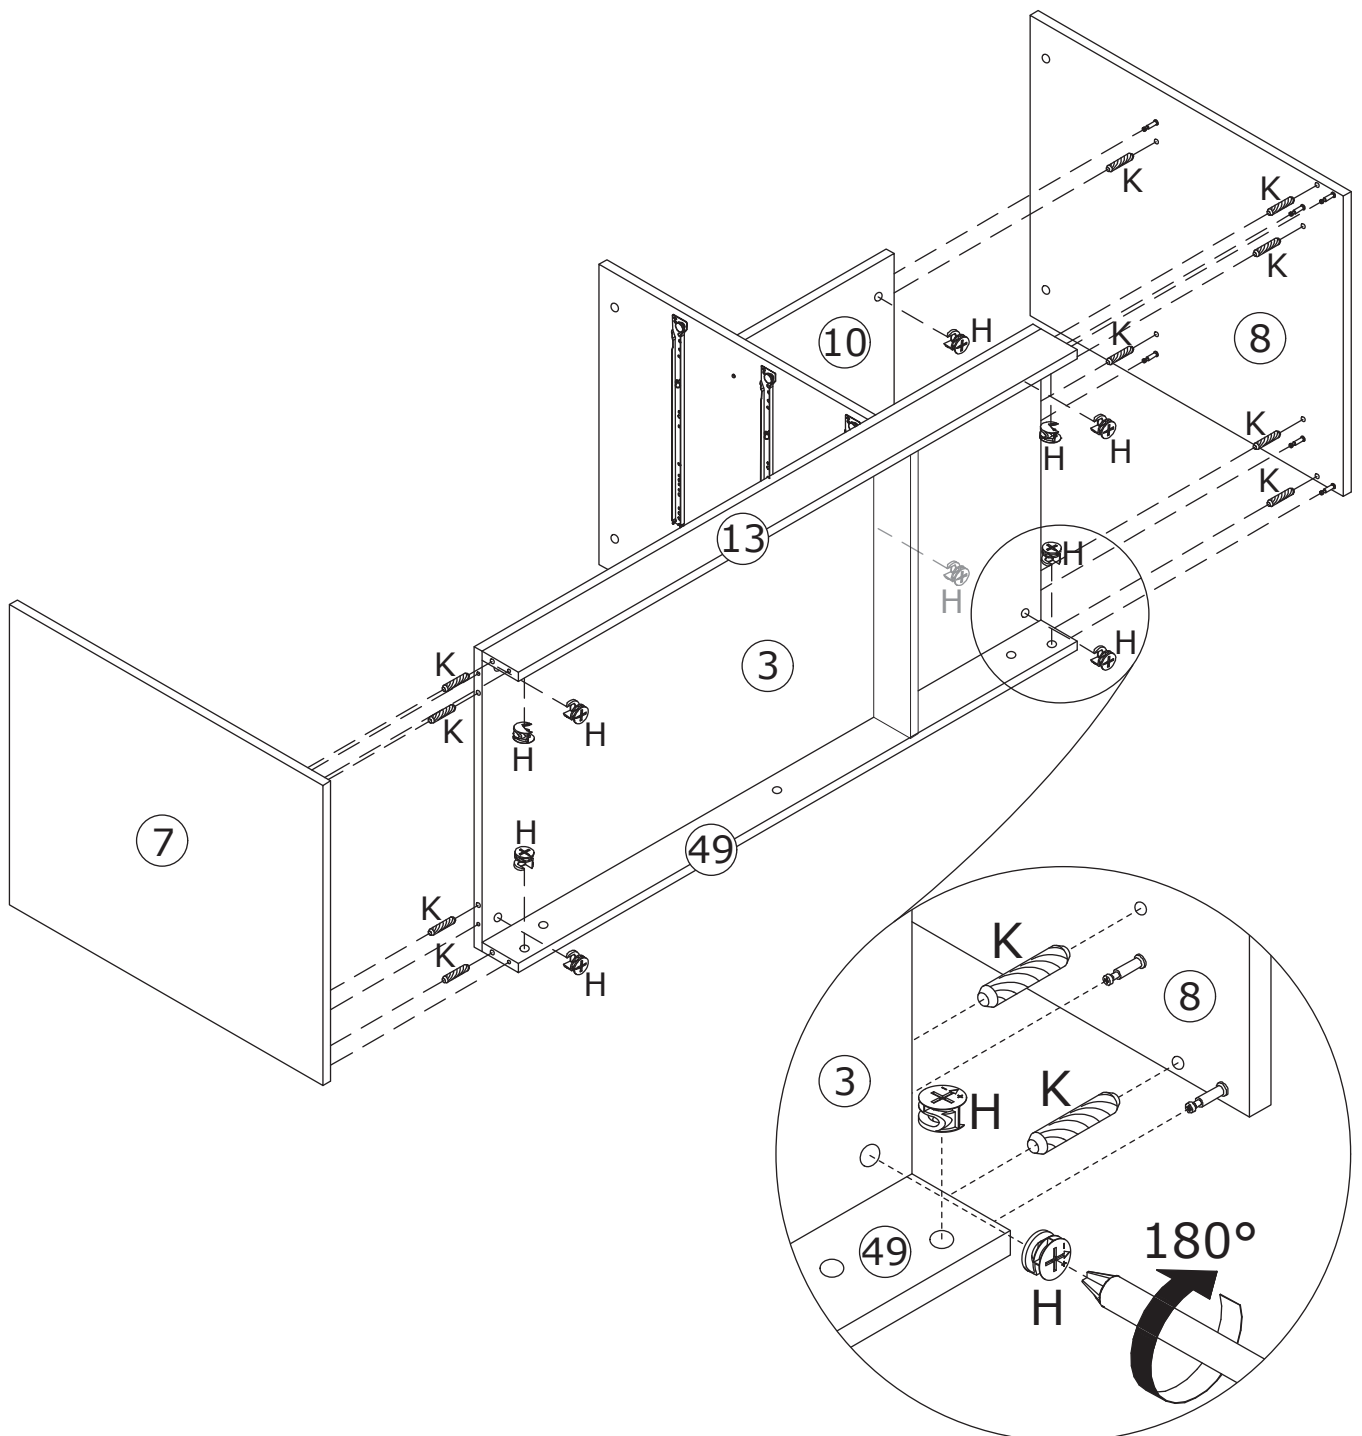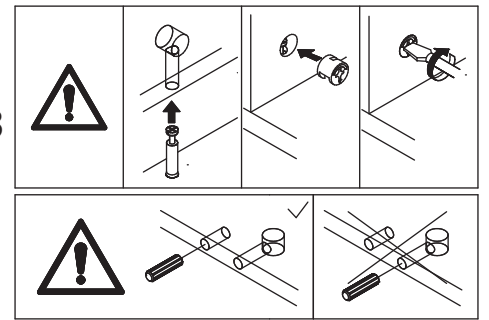



10

 E x 7  Ø3 x 12 mm	F x 17  Ø6 x 35 mm	N x 2 	CL x 1  L = 350 mm	
--	---	--	--	---



Screw eccentric rod(F) into panel 4, 5 and 6 at first.

Fix part(N) to panel 4 and 6 with screw(E) as shown.


 
 
Flip panel 5 to back, fix rail(CL) and screw eccentric rod(F) into as shown.

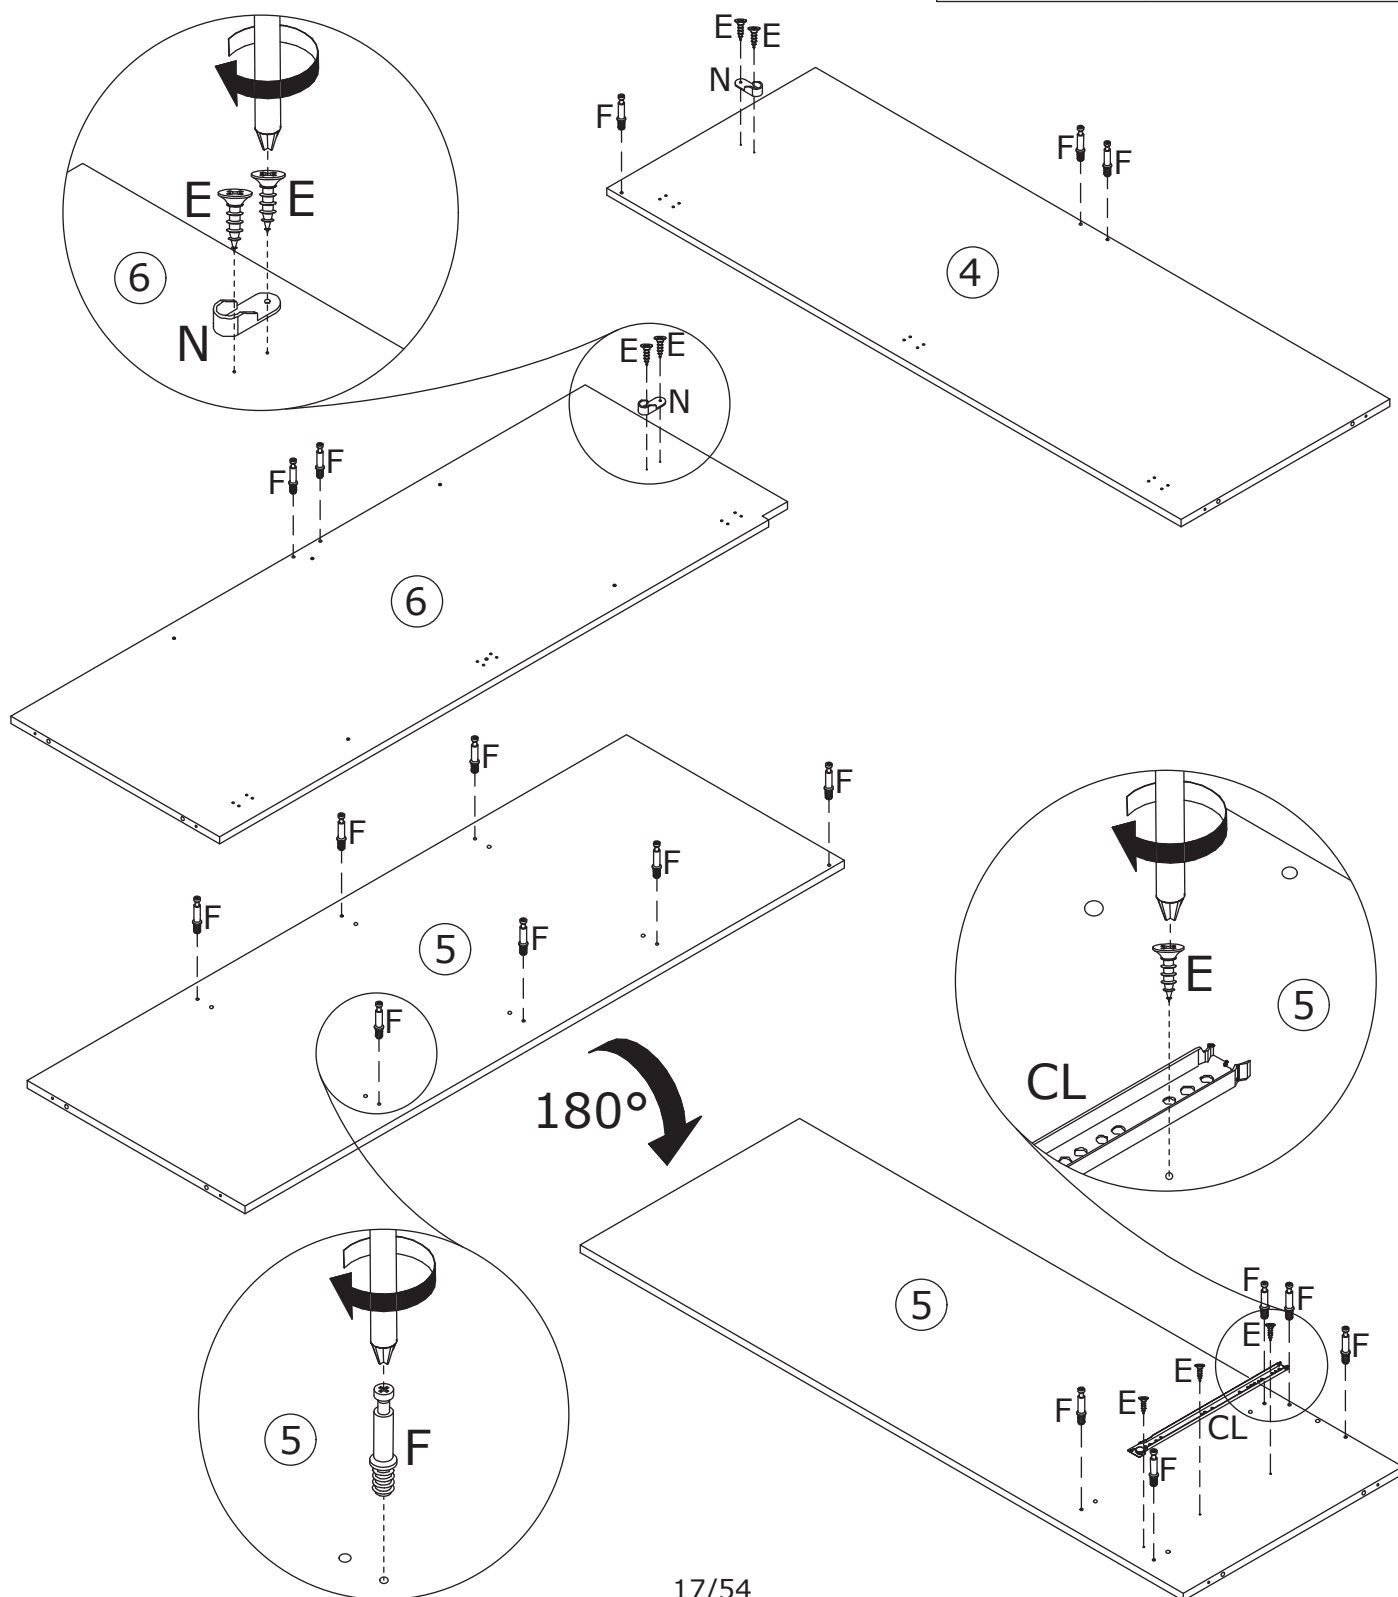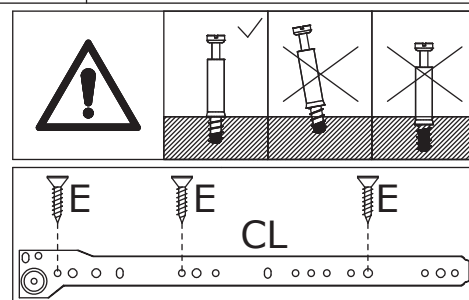



11

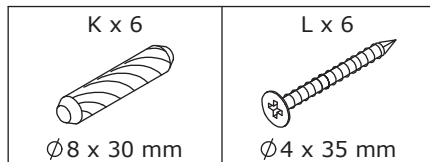  

 
 
 
Attach panel 10 to panel 6 using wooden dowel(K), and fix with screw(L) as shown.

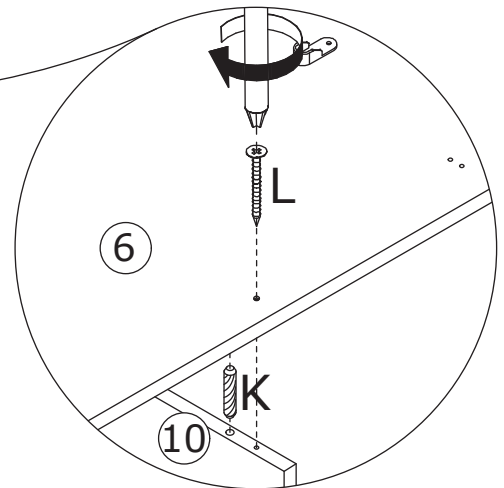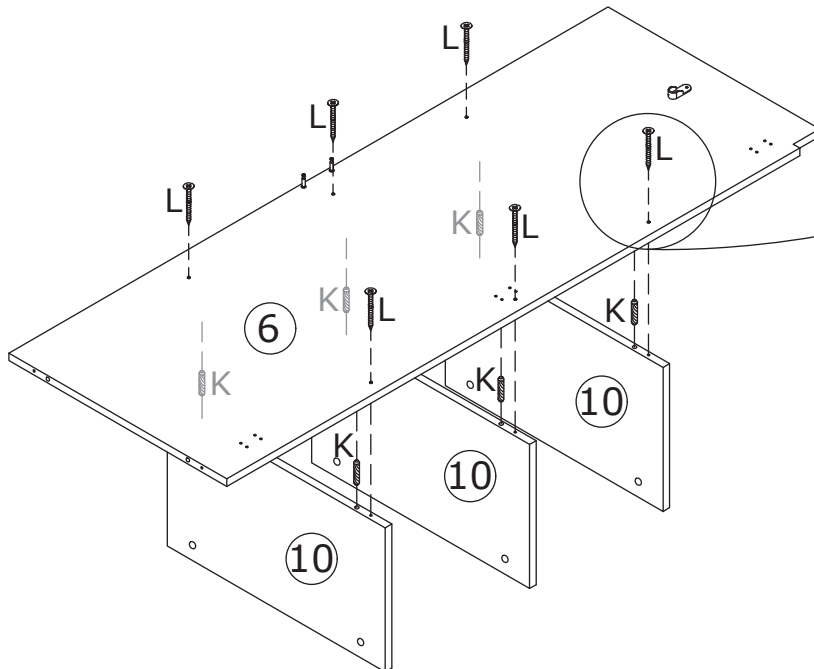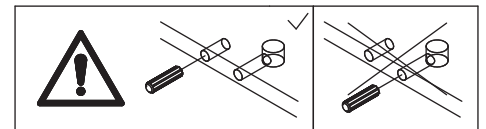




12

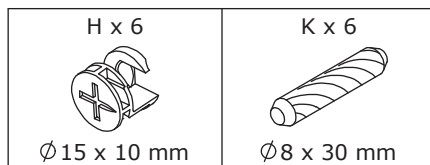  

   
Attach panel 5 to panel 10 using wooden dowel(K), add cam lock(H) into panel 10 and turn clockwise to tighten as shown.

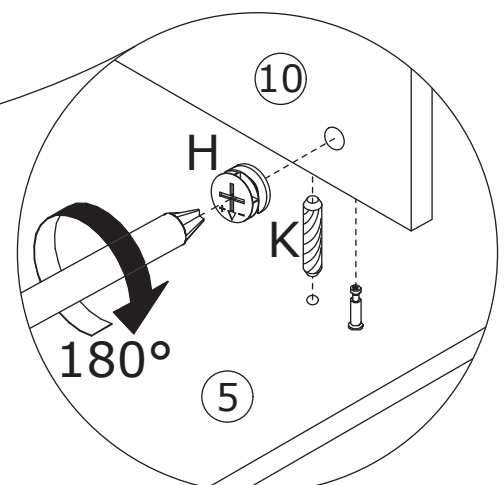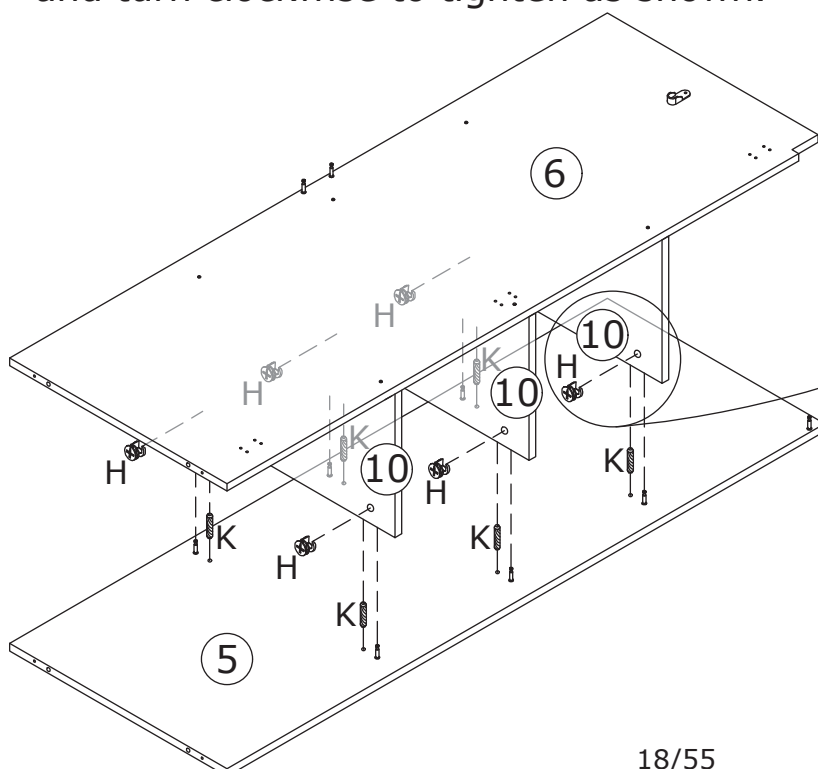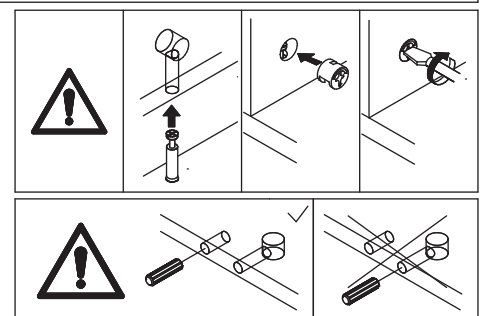



13

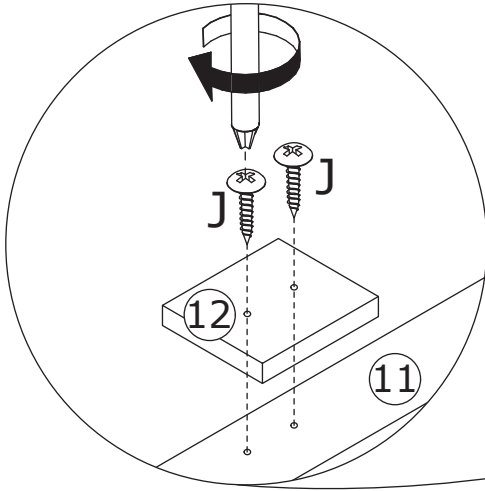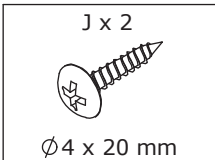   

 
Fix panel 11 to panel 12 with screw(J) as shown.

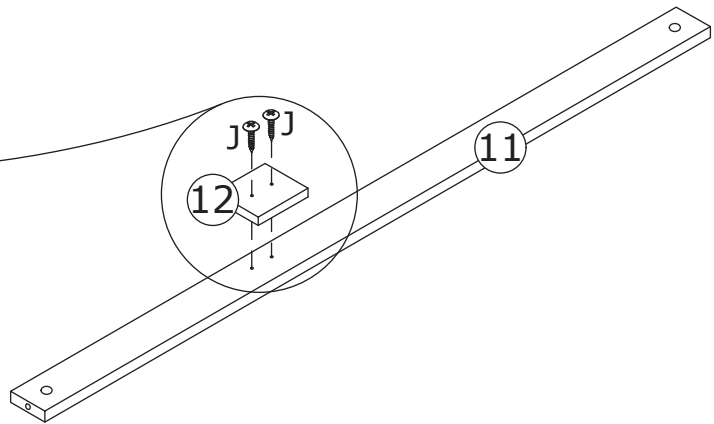

14

 
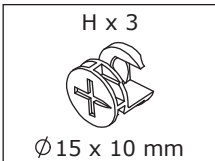 


 Attach panel 11 and 17 to panel 6, add cam lock(H) into and turn clockwise to tighten as shown.

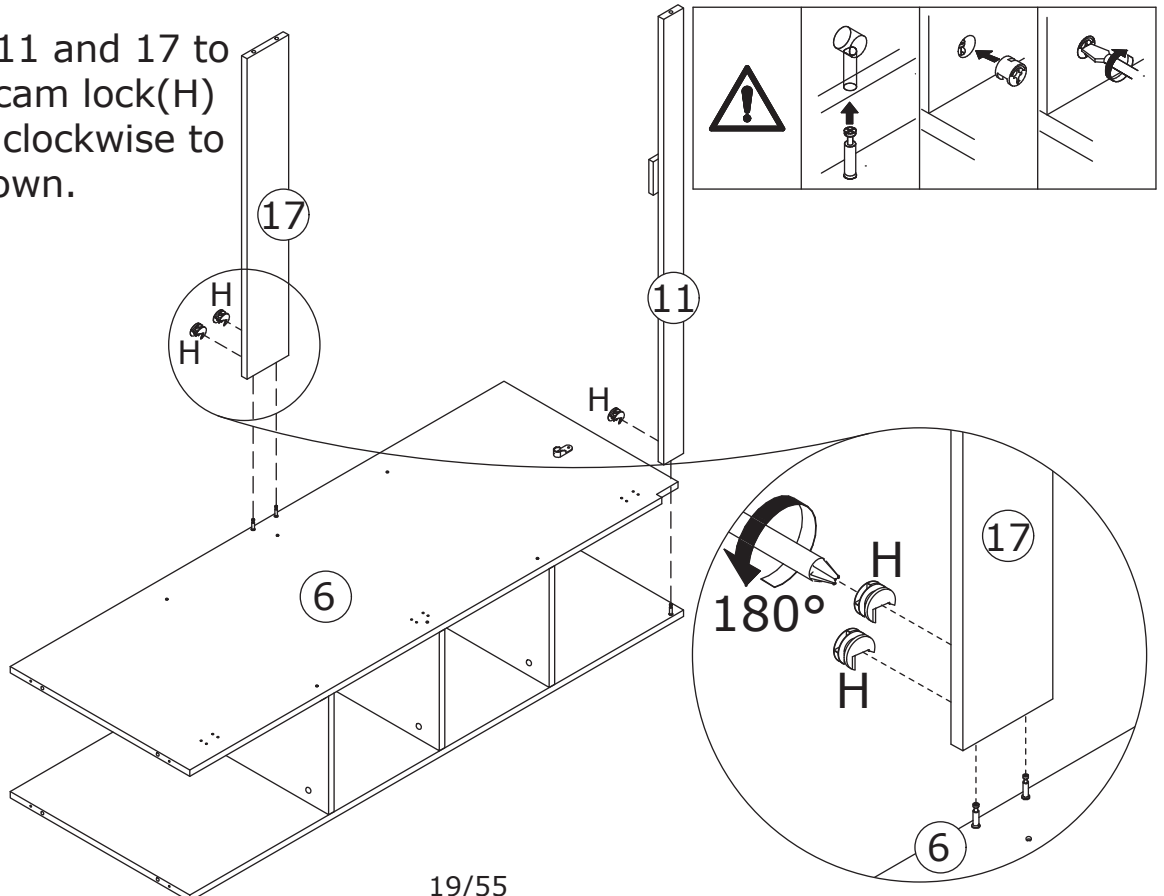


15


 
 
H x 3
Ø 15 x 10 mm

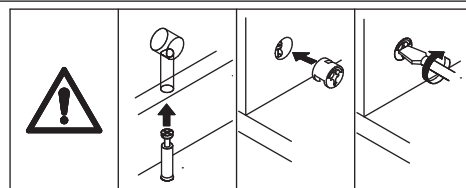


 
Attach panel 4 to panel 11 and 17,
add cam lock(H) into and turn clockwise
to tighten as shown.

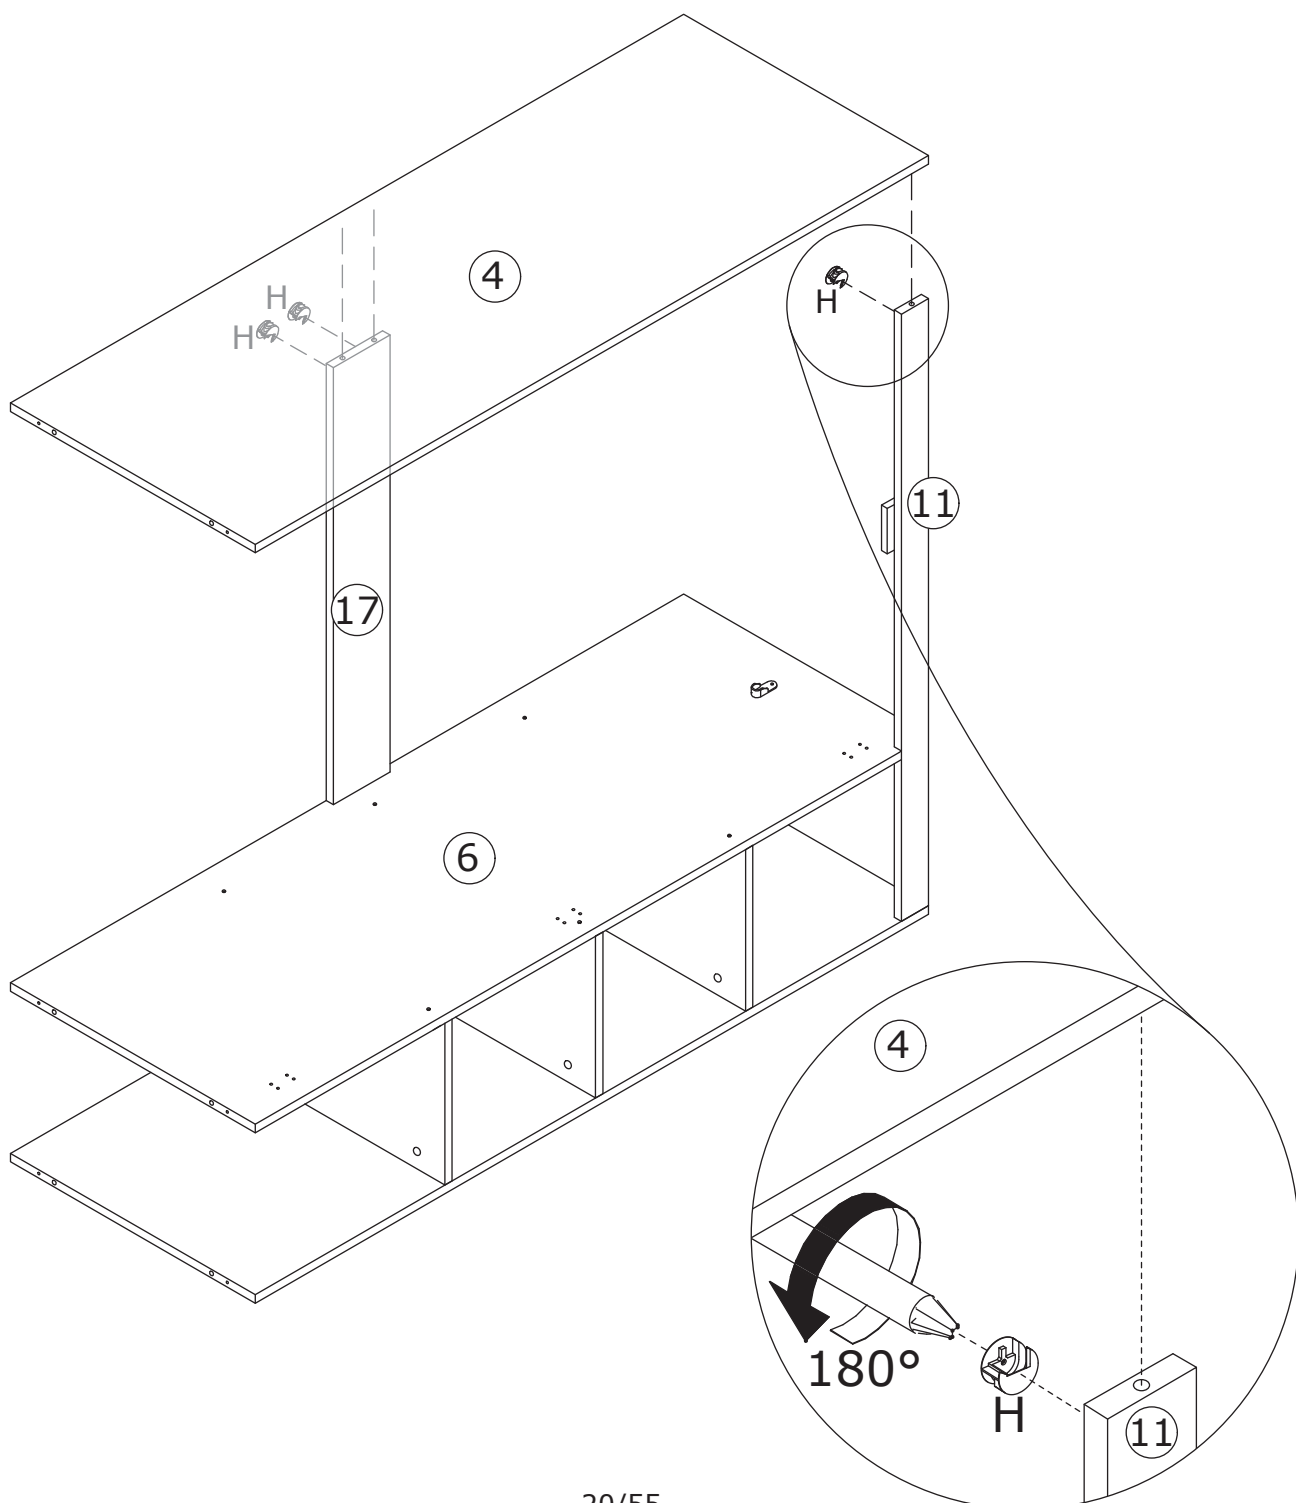


16

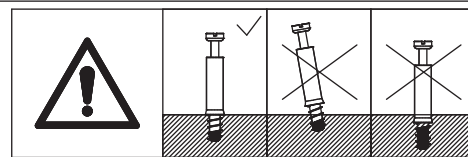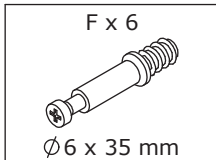   

  
Screw eccentric rod(F) into panel 2 at first.

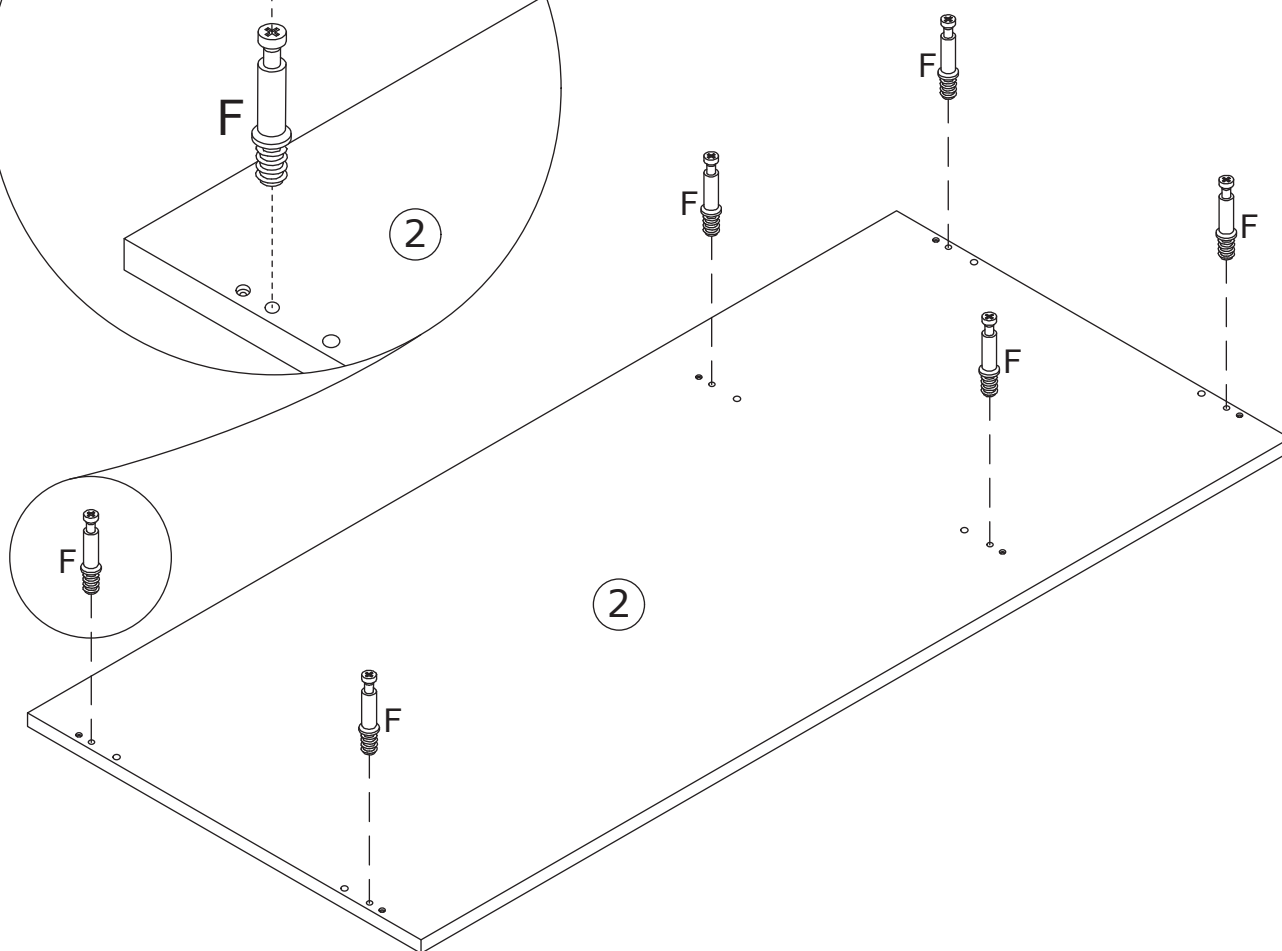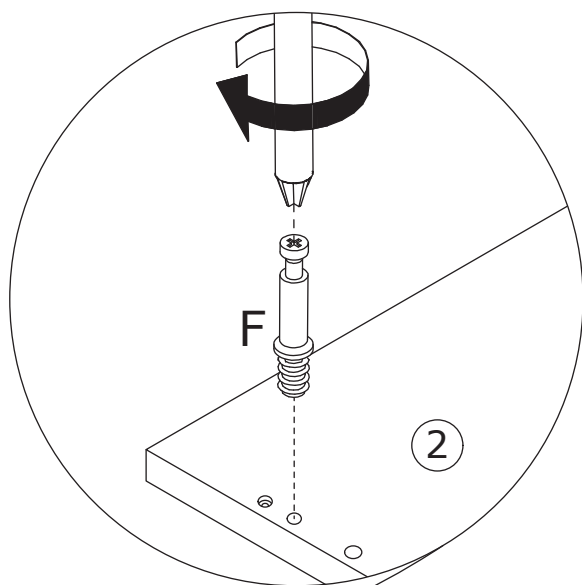

17

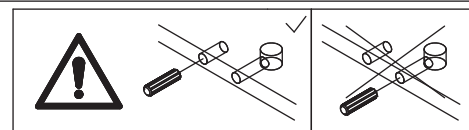 


 Attach panel 2 to panel 4, 6 and 5 using wooden dowel(K), and fix with screw(L) as shown.




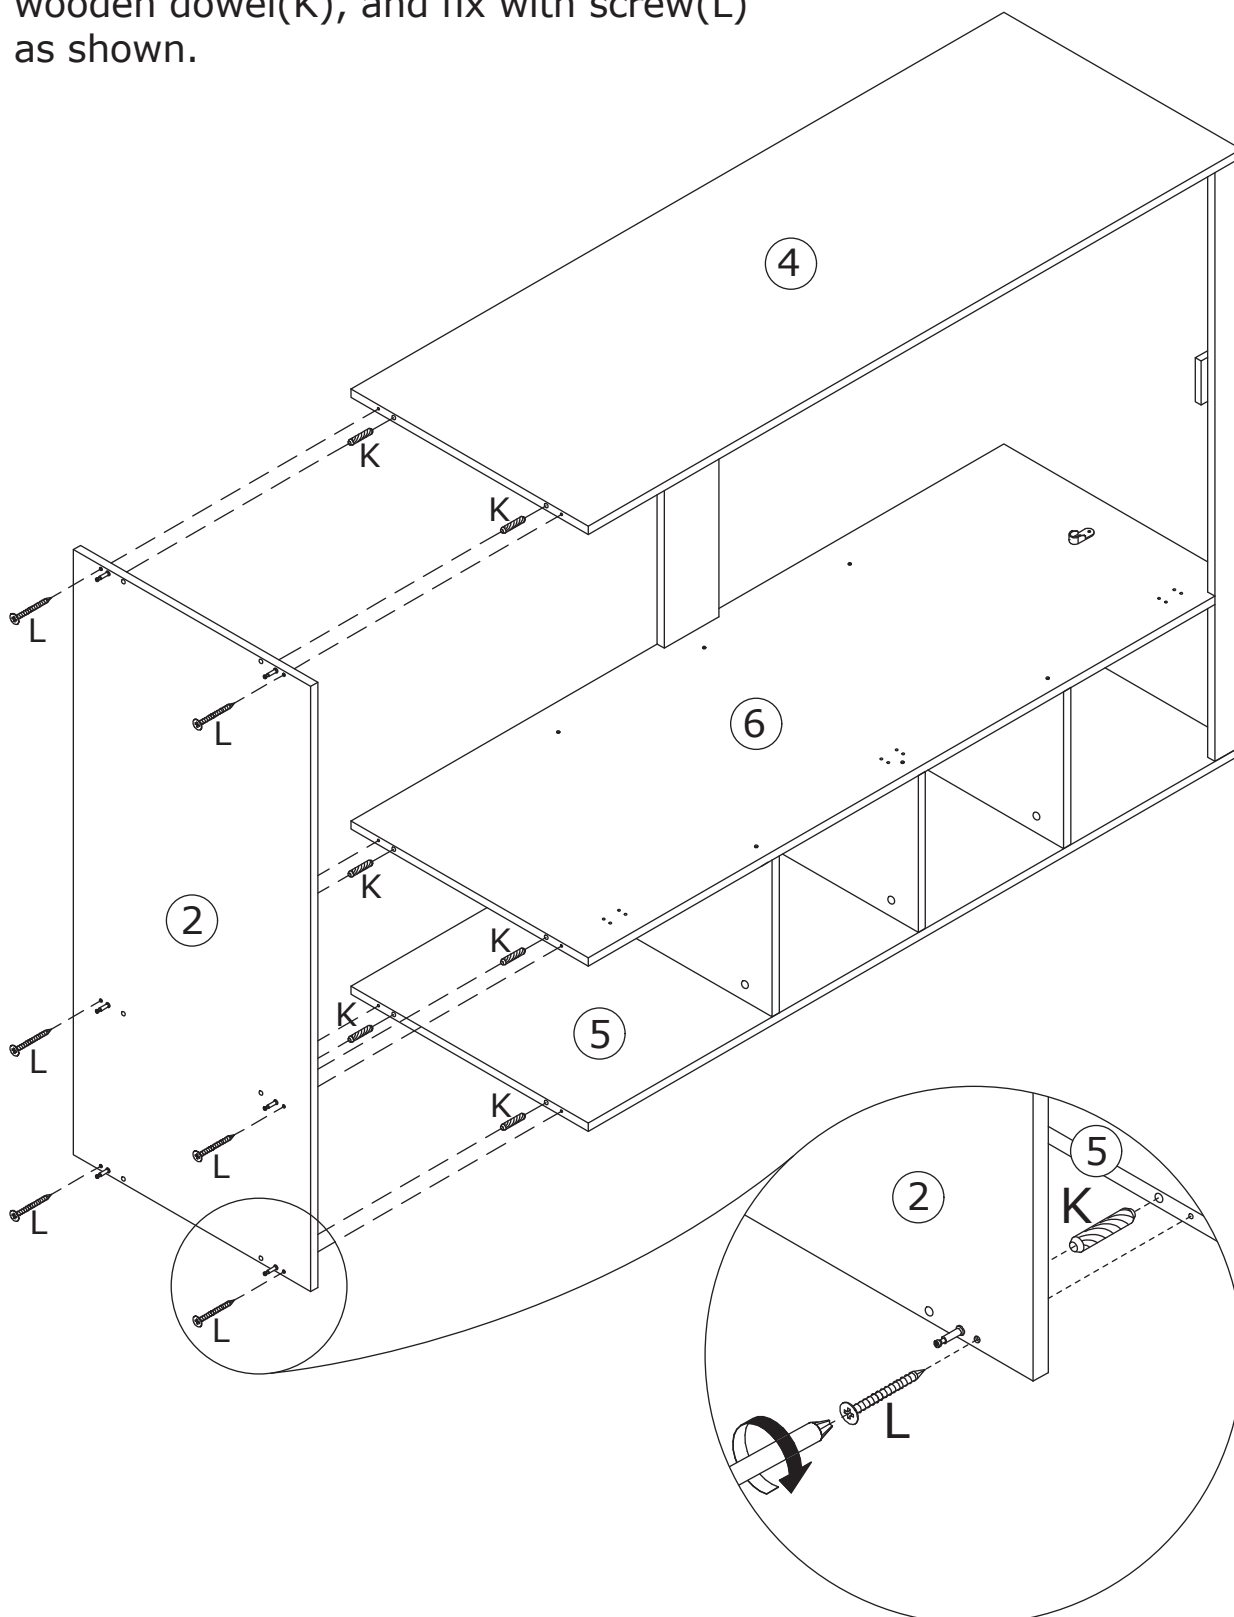


18

 
K x 6

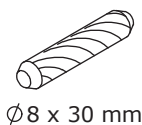



L x 6

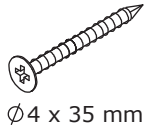    




 
Attach panel 1 to panel 4, 6 and 5 using wooden dowel(K), and fix with screw(L) as shown.

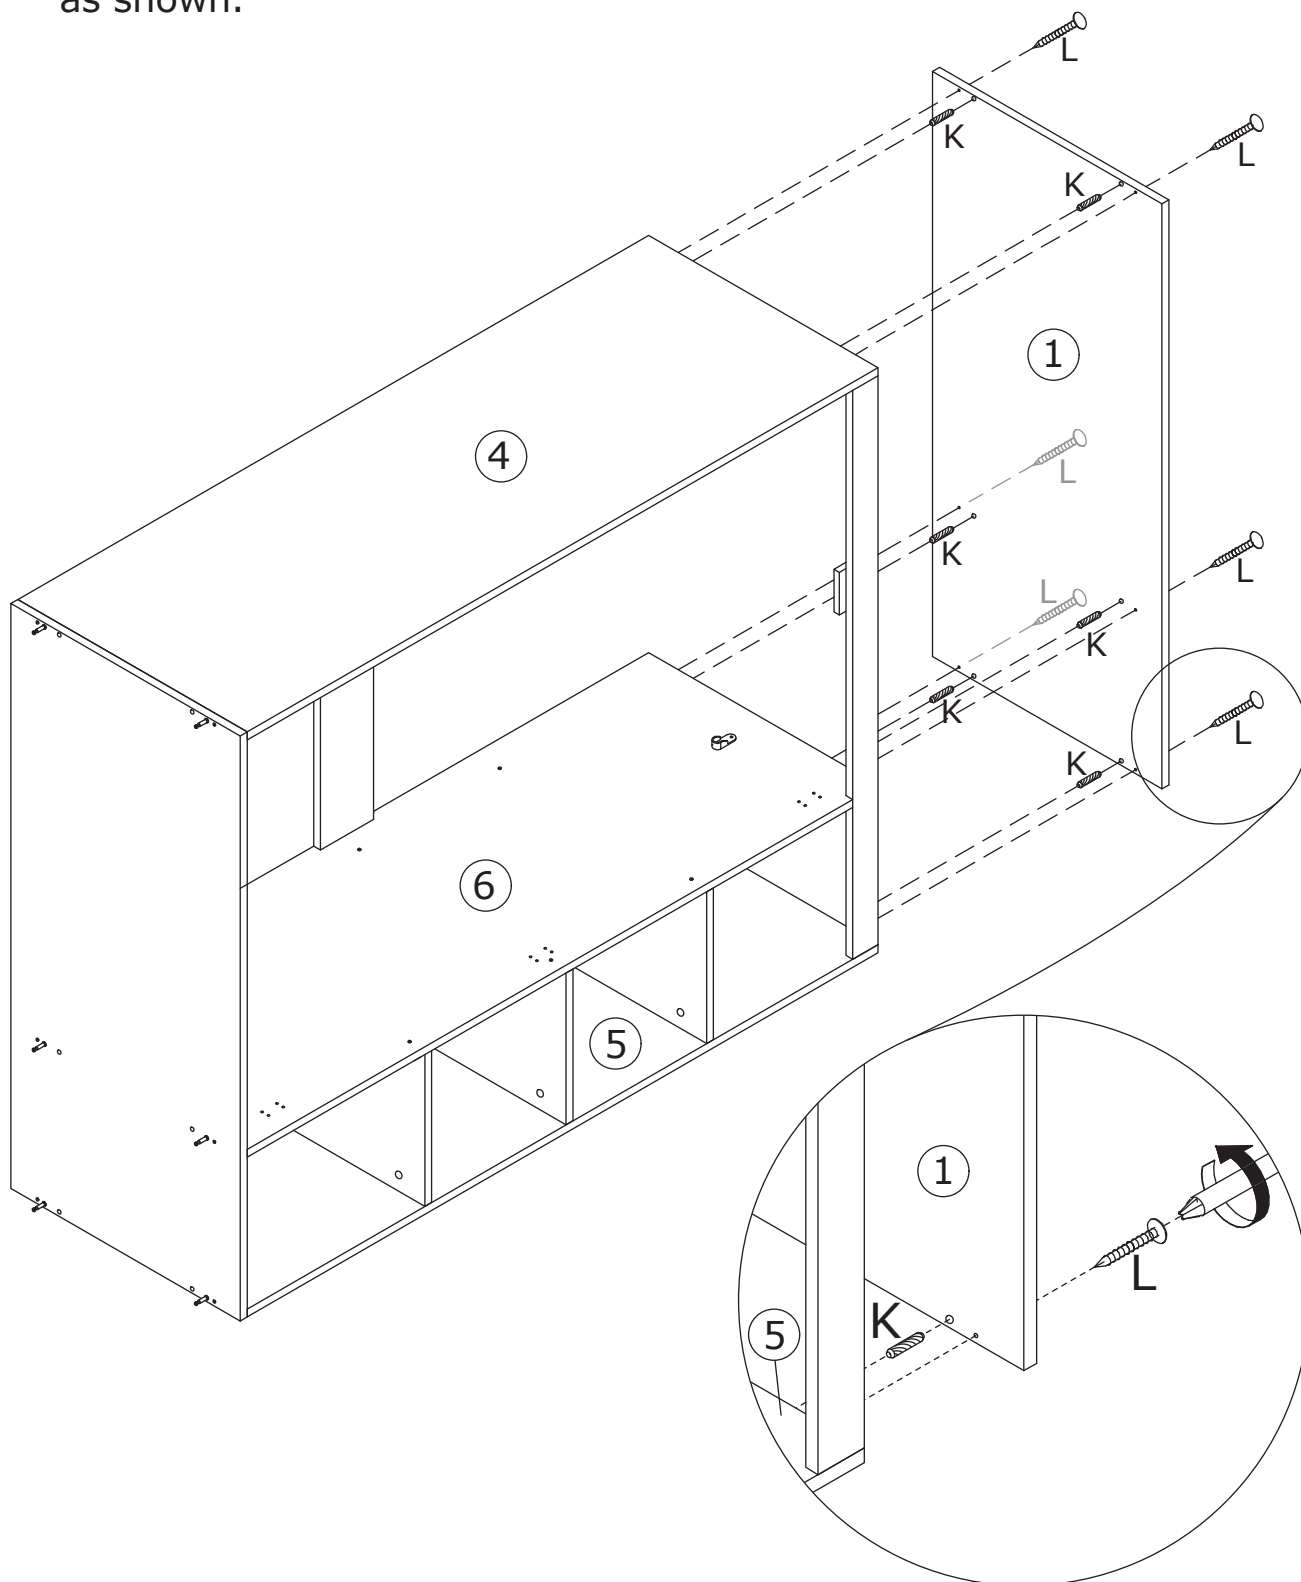

19

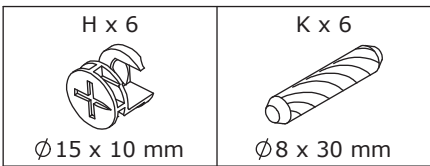  


    Connect the two components using wooden dowel(K), add cam lock(H) into and turn clockwise to tighten as shown.

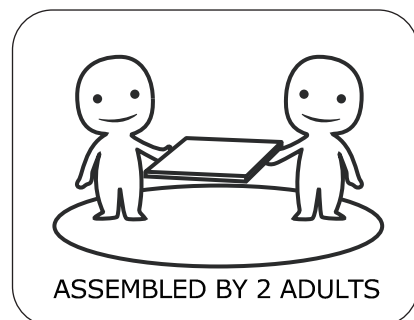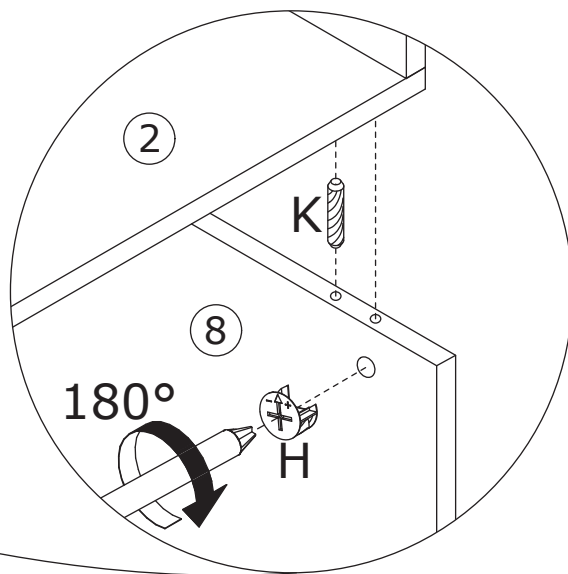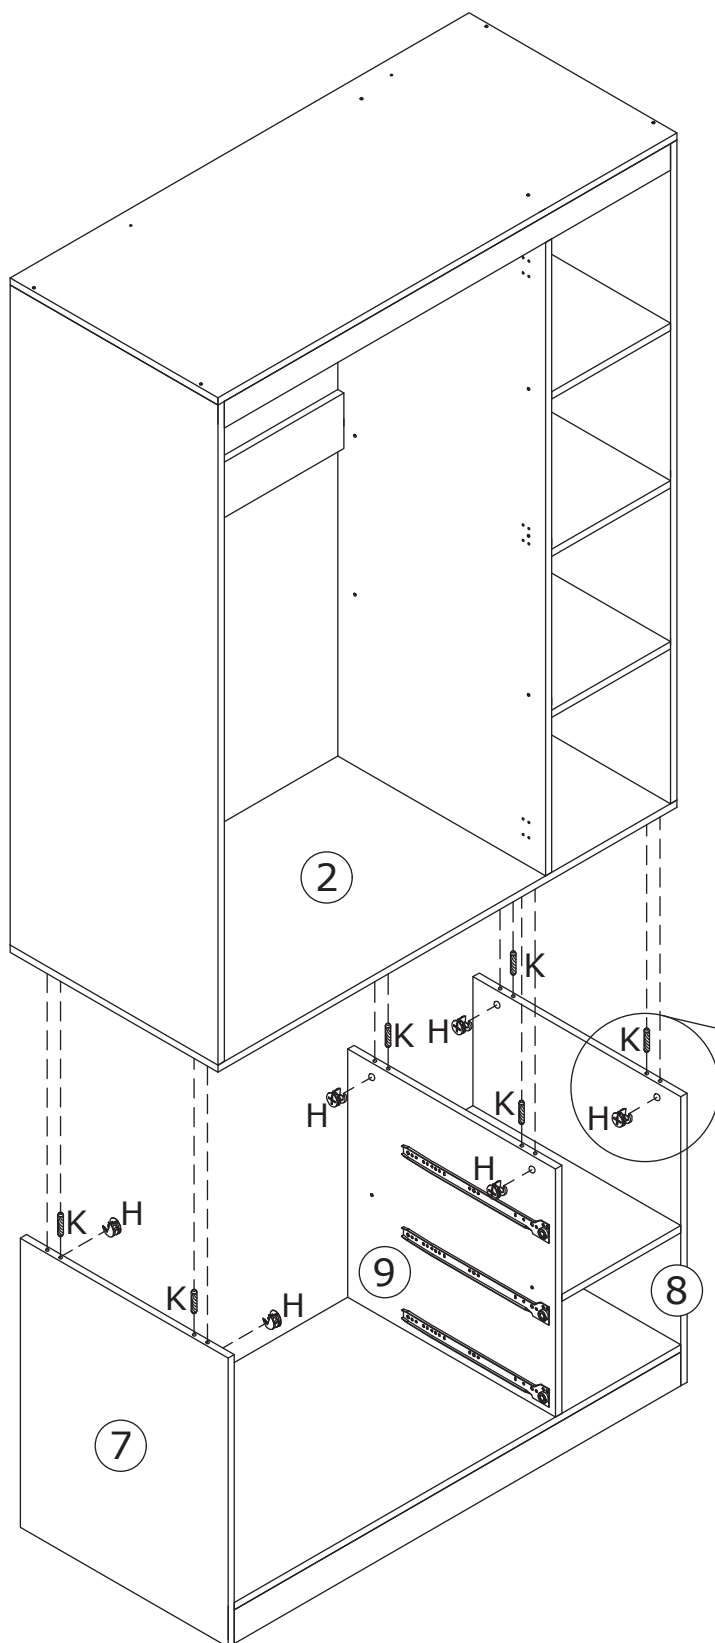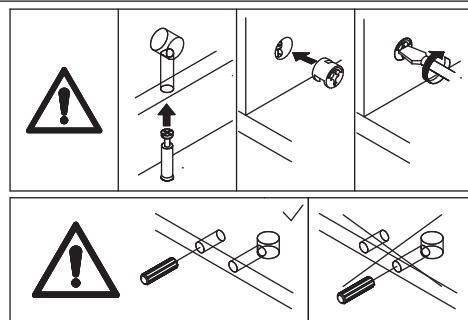


20

 Connect panels 14 and 15 to plank 16 at first.


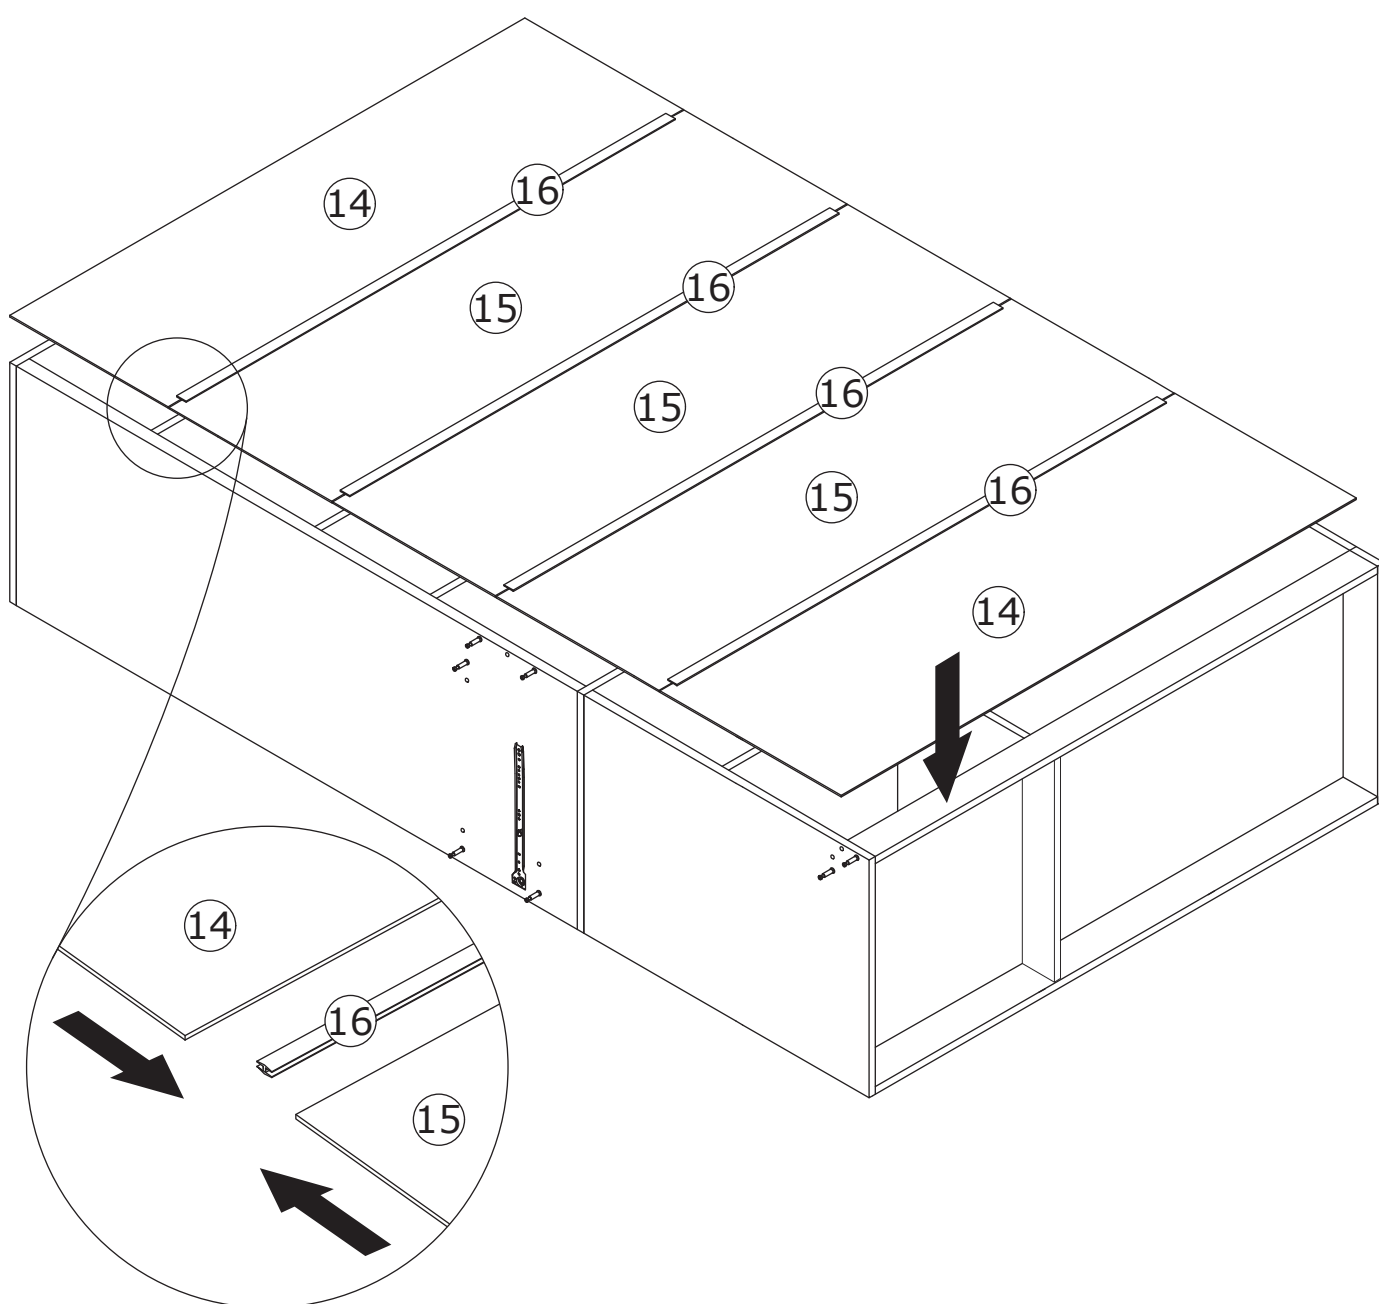


21

 
X x 28




Ø2 x 20 mm

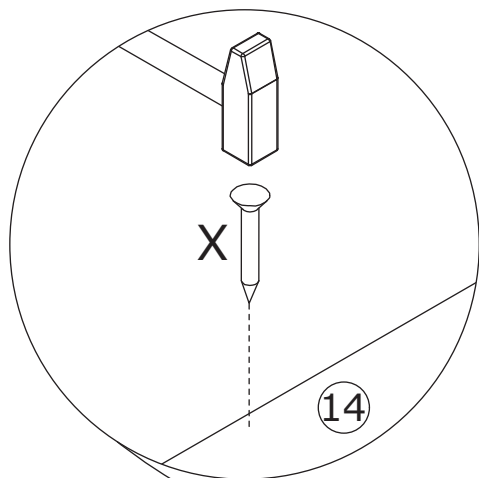  


 
Fix back panels to the unit using nail(X) as shown.

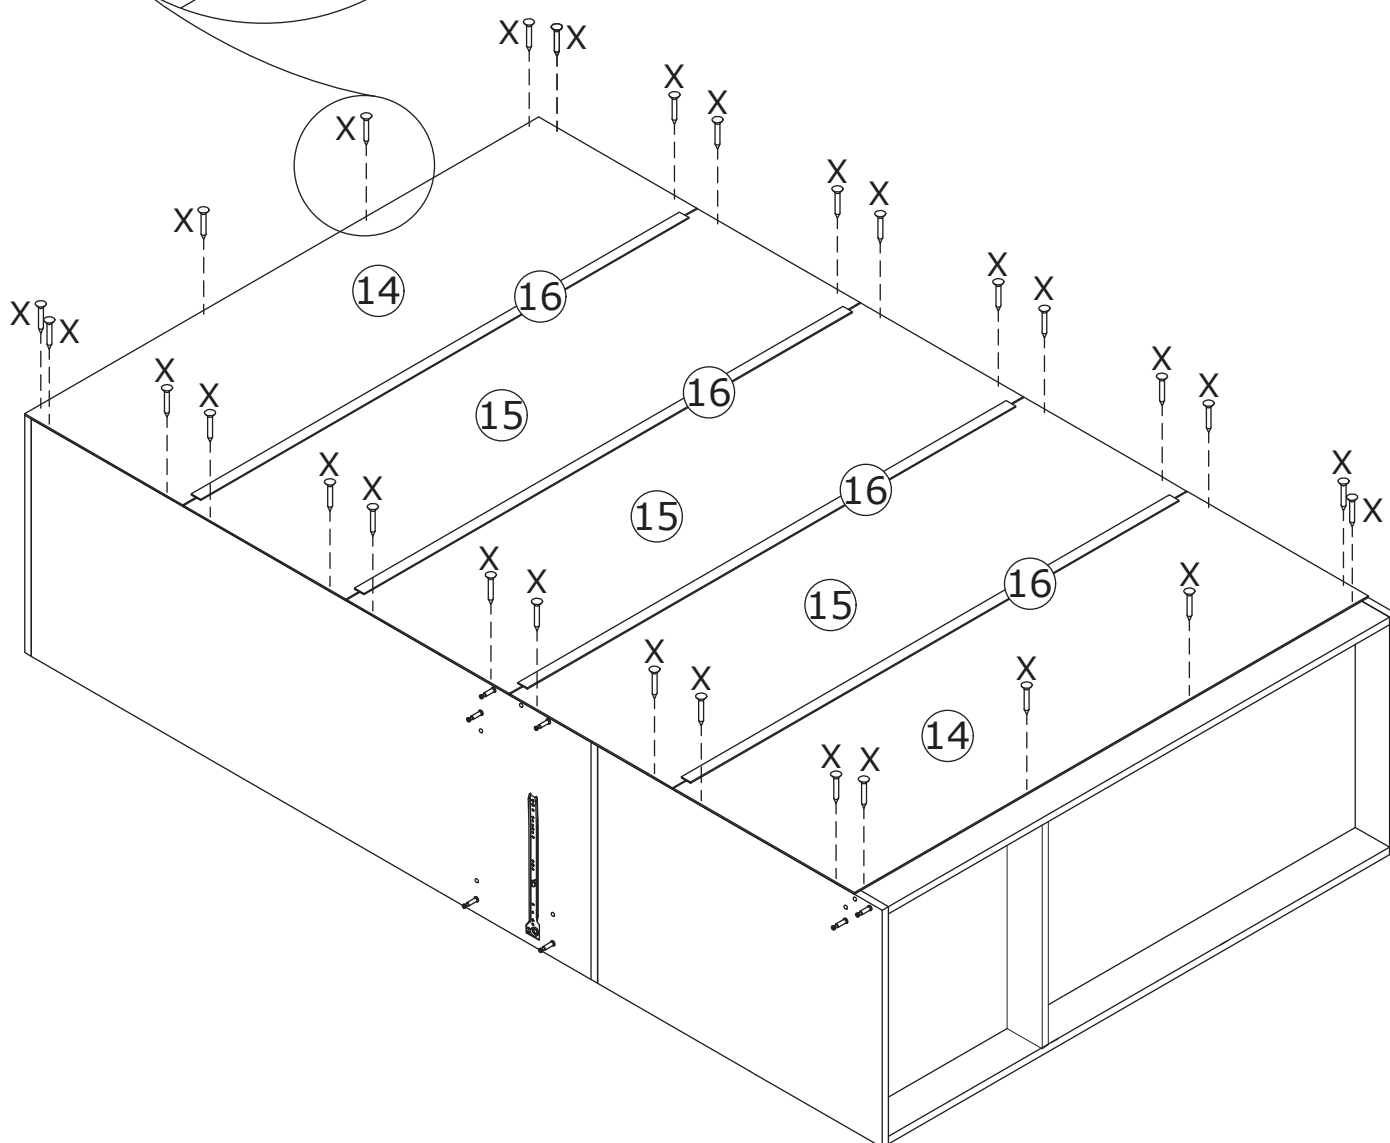




22

 E x 9  Ø 3 x 12 mm	CL x 1  L = 350 mm	CR x 2  L = 350 mm	
---	---	---	---

  
Fix rail(CR) to panel 21 with screw(E) at first.
Flip to back, fix rail(CL) as shown.
 Fix rail(CR) to panel 19 with screw(E) as shown.

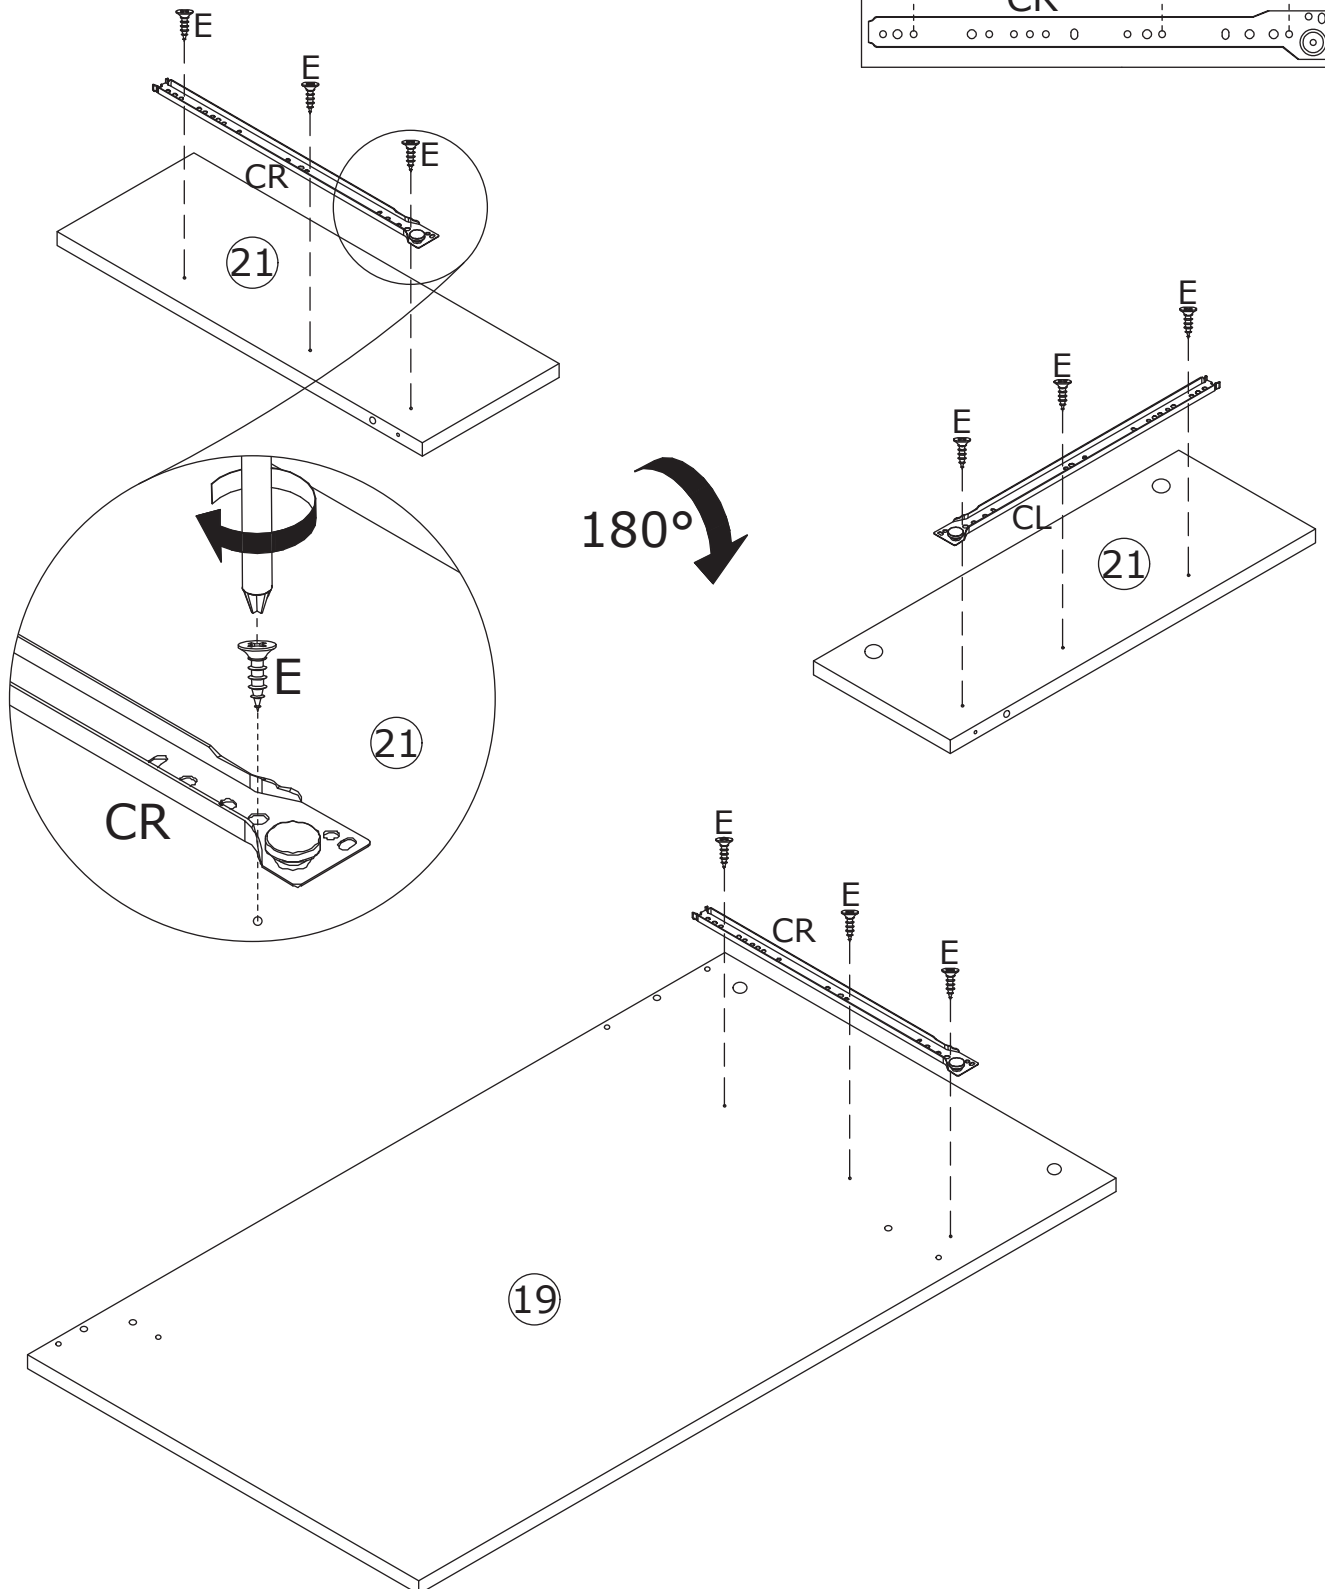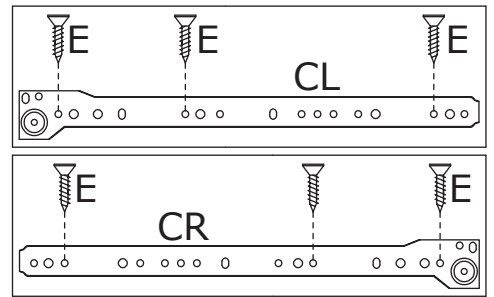





23

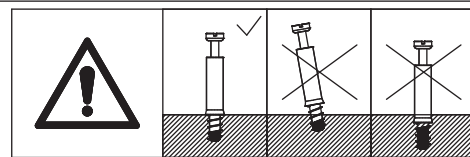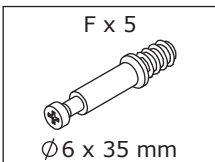   

 
Screw eccentric rod(F) into panel 19 at first.

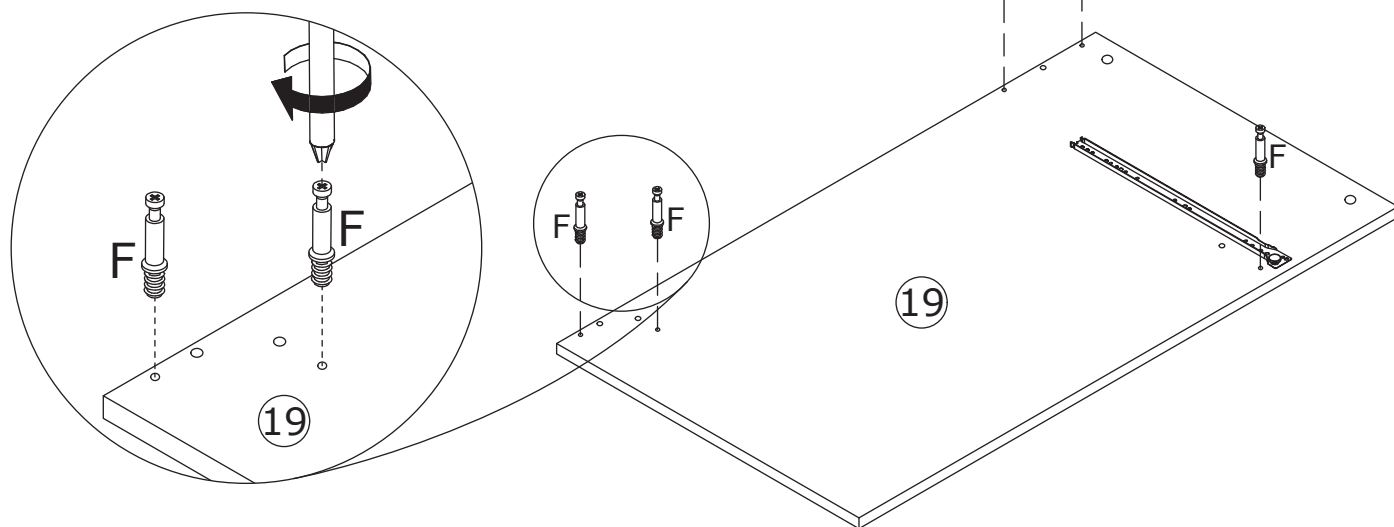

24

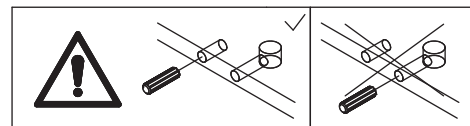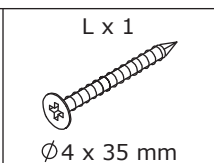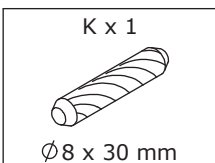    


 Attach panel 22 to panel 21 using wooden dowel(K), and fix with screw(L) as shown.







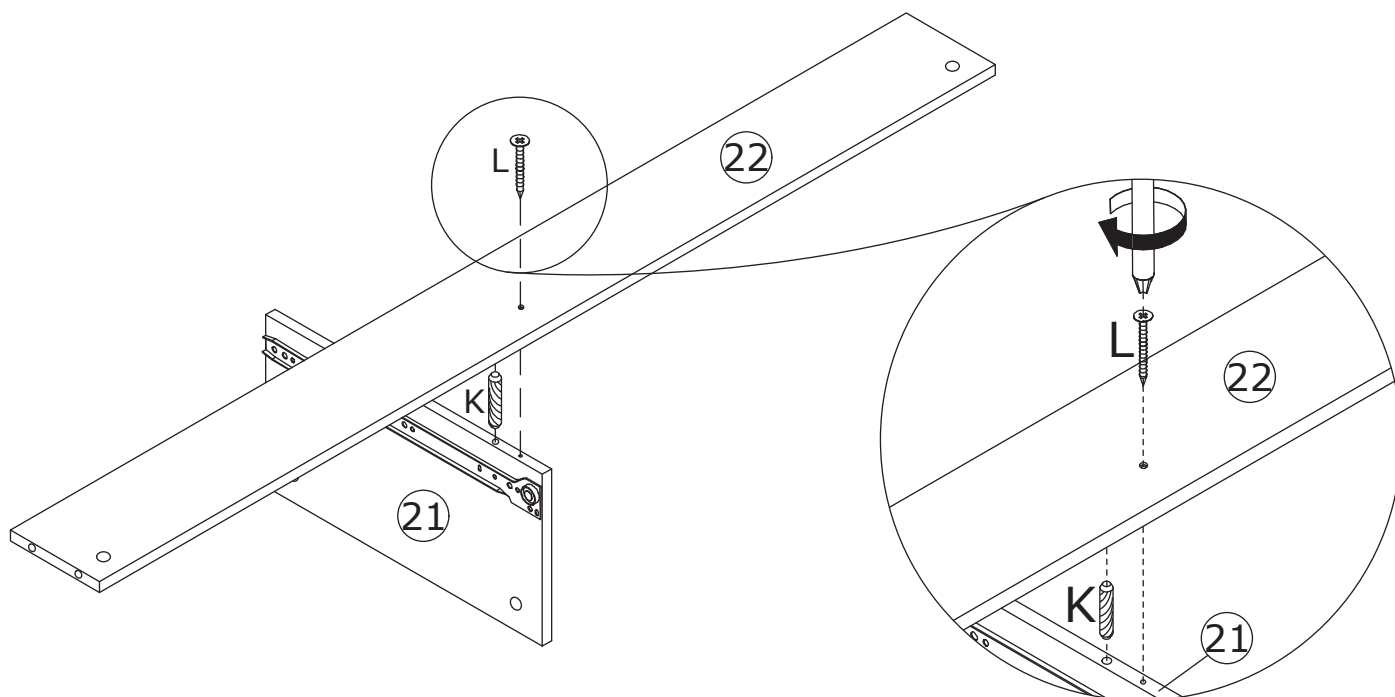


25

 K x 2

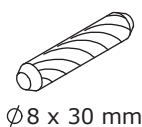


L x 1

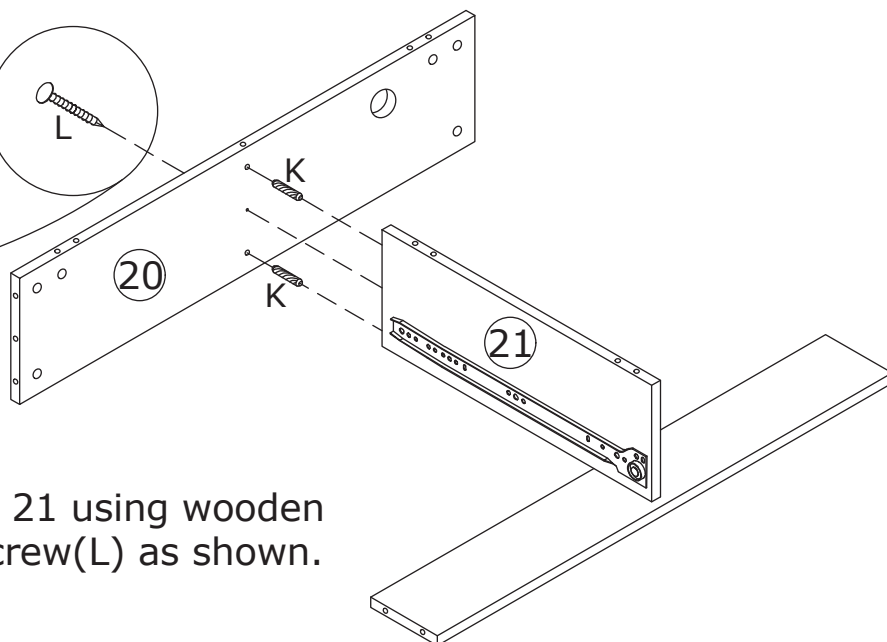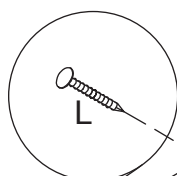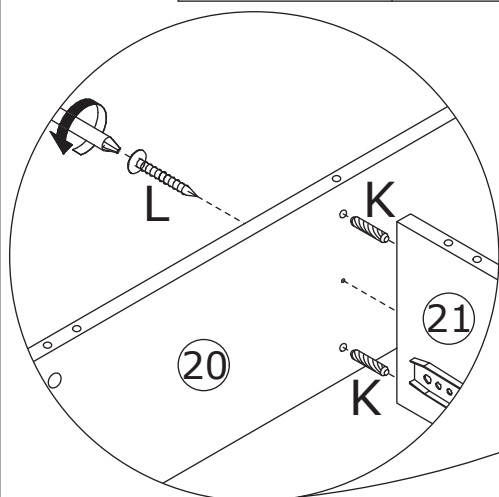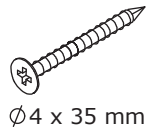       






Attach panel 20 to panel 21 using wooden dowel(K), and fix with screw(L) as shown.

26

 K x 2

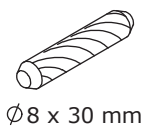

L x 2

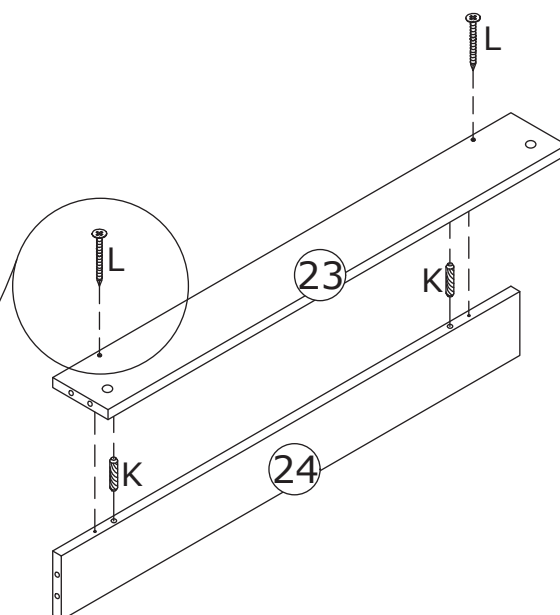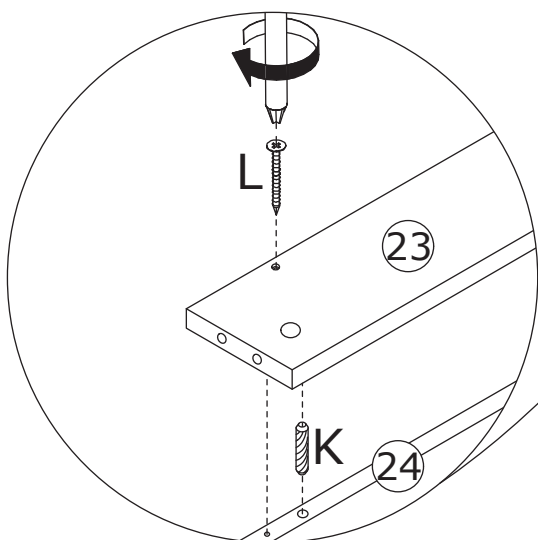     

Attach panel 23 to panel 24 using wooden dowel(K), and fix with screw(L) as shown.

 
27

H x 5






Ø 15 x 10 mm

K x 4








Ø 8 x 30 mm

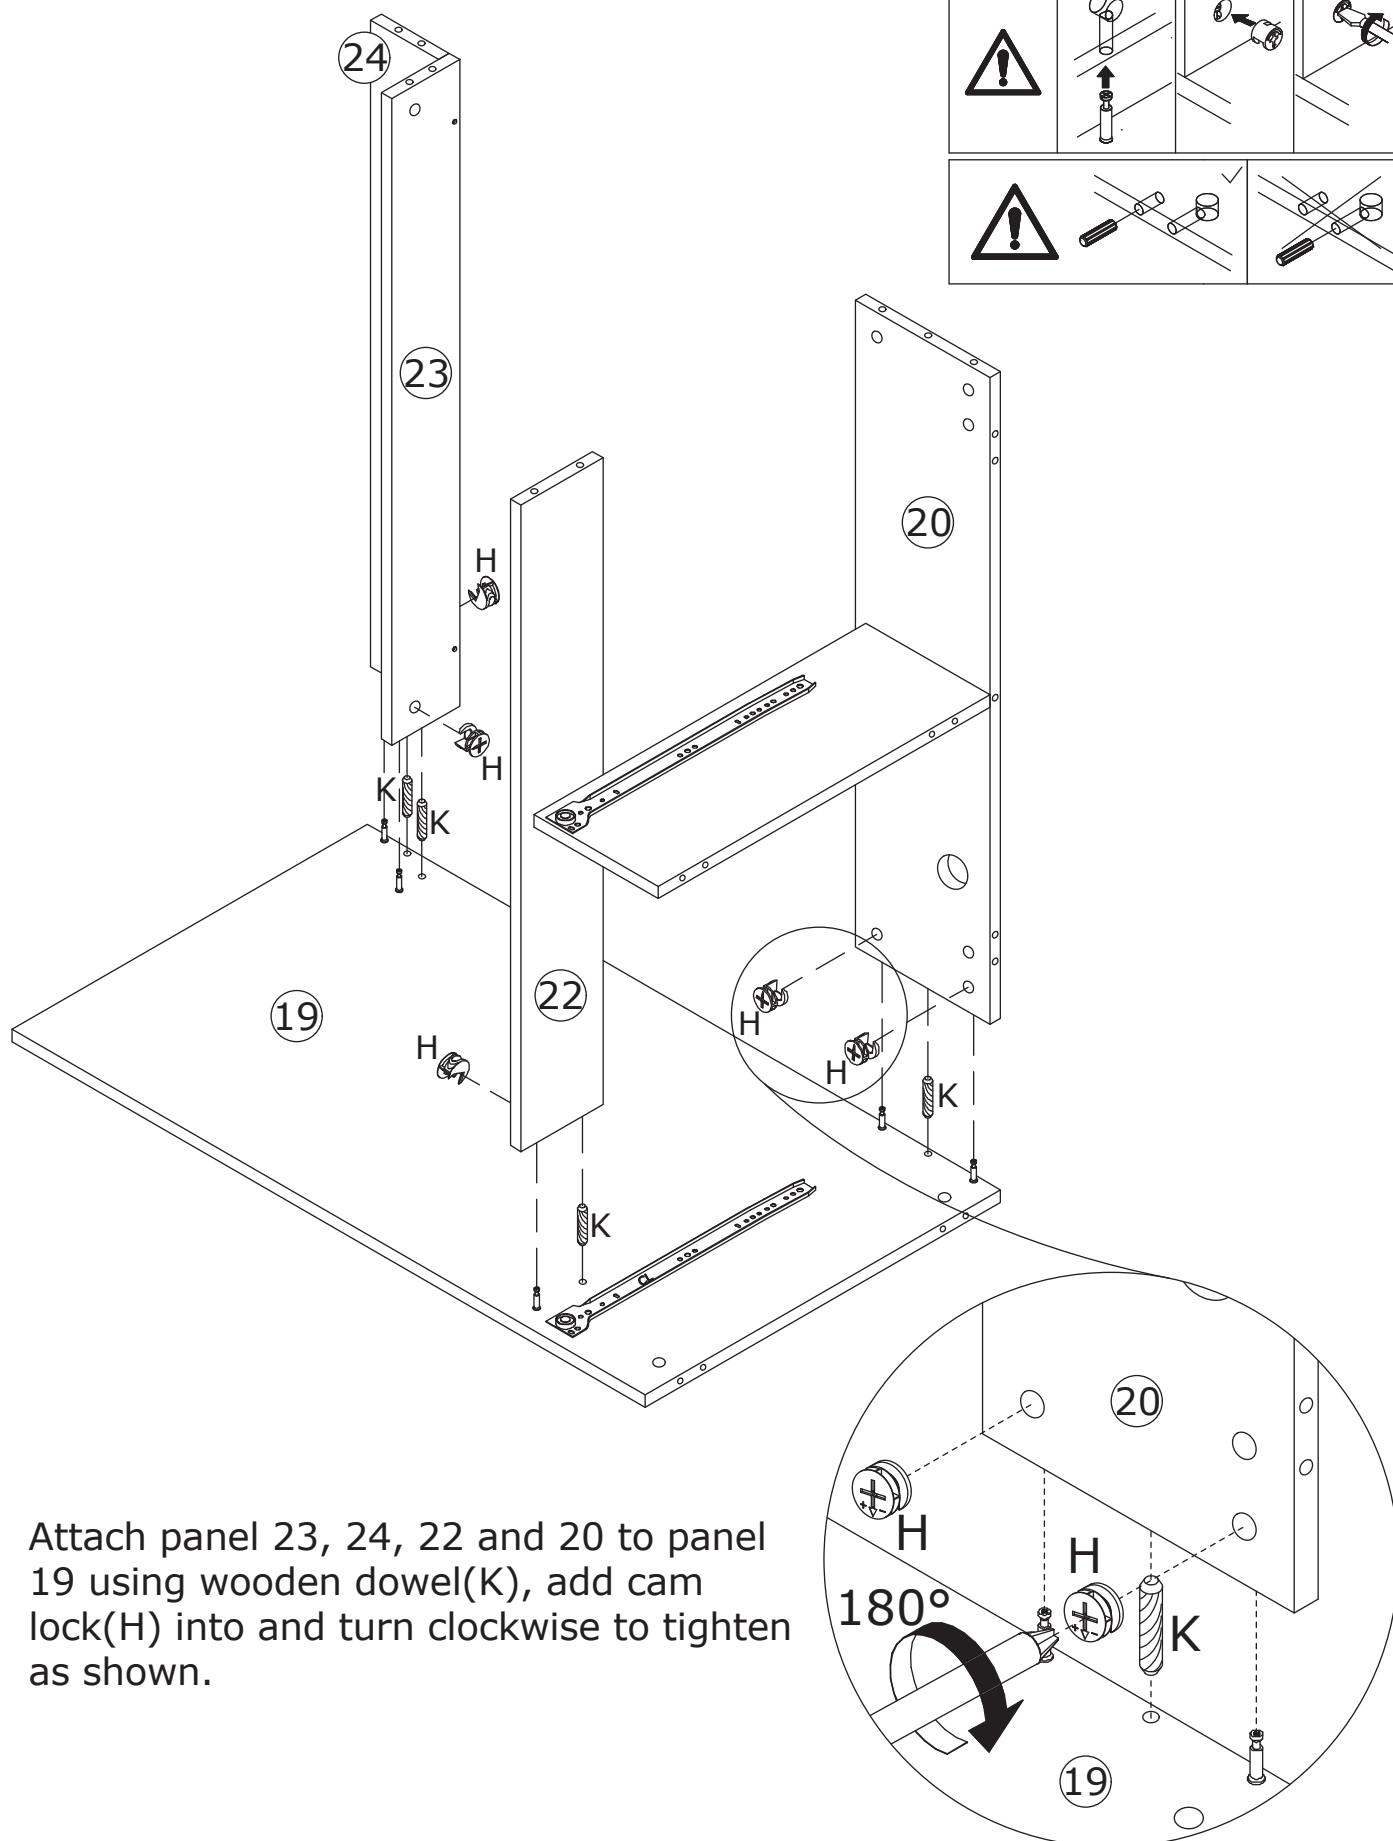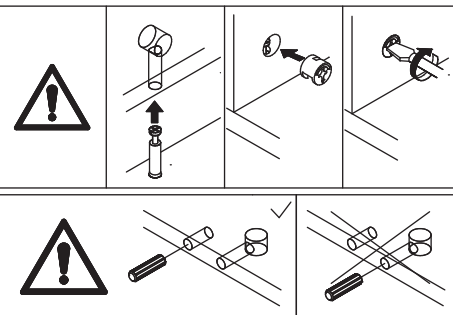   

Attach panel 23, 24, 22 and 20 to panel 19 using wooden dowel(K), add cam lock(H) into and turn clockwise to tighten as shown.

28

     F x 6
Ø6 x 35 mm

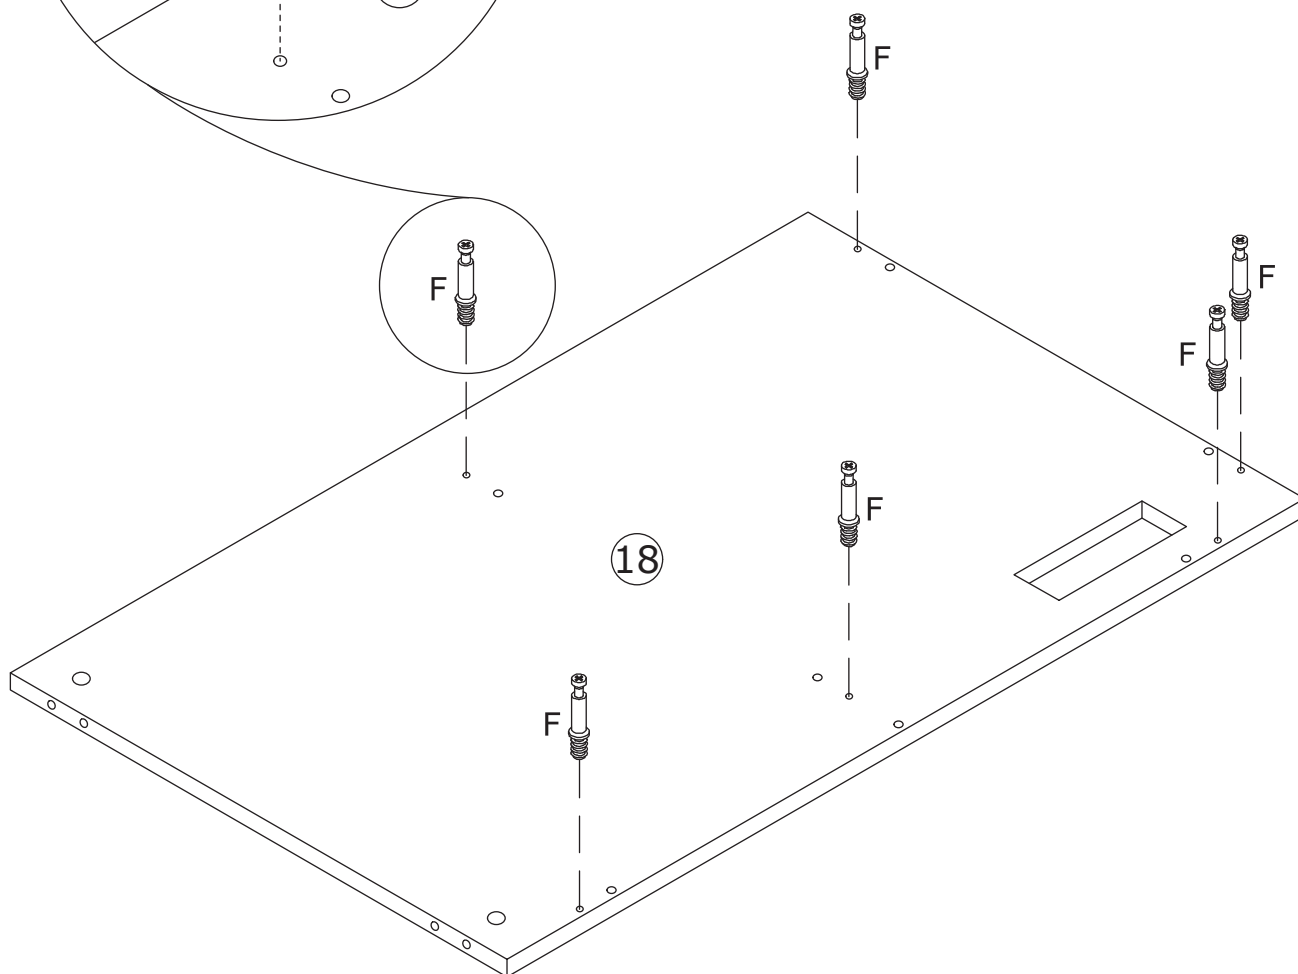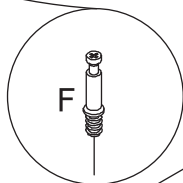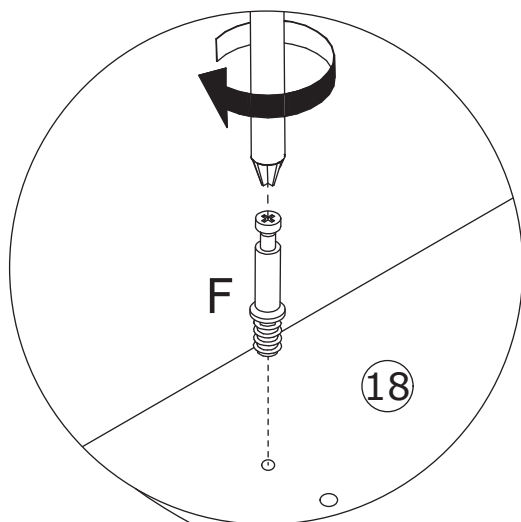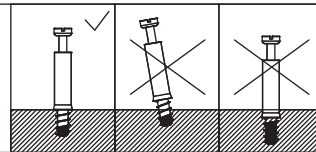

Screw eccentric rod(F) into panel 18 at first.

 
29

H x 6




Ø 15 x 10 mm



K x 7



Ø 8 x 30 mm

 

  Attach panel 18 to panel 19, 21 and 20 using wooden dowel(K), add cam lock(H) into and turn clockwise to tighten as shown.

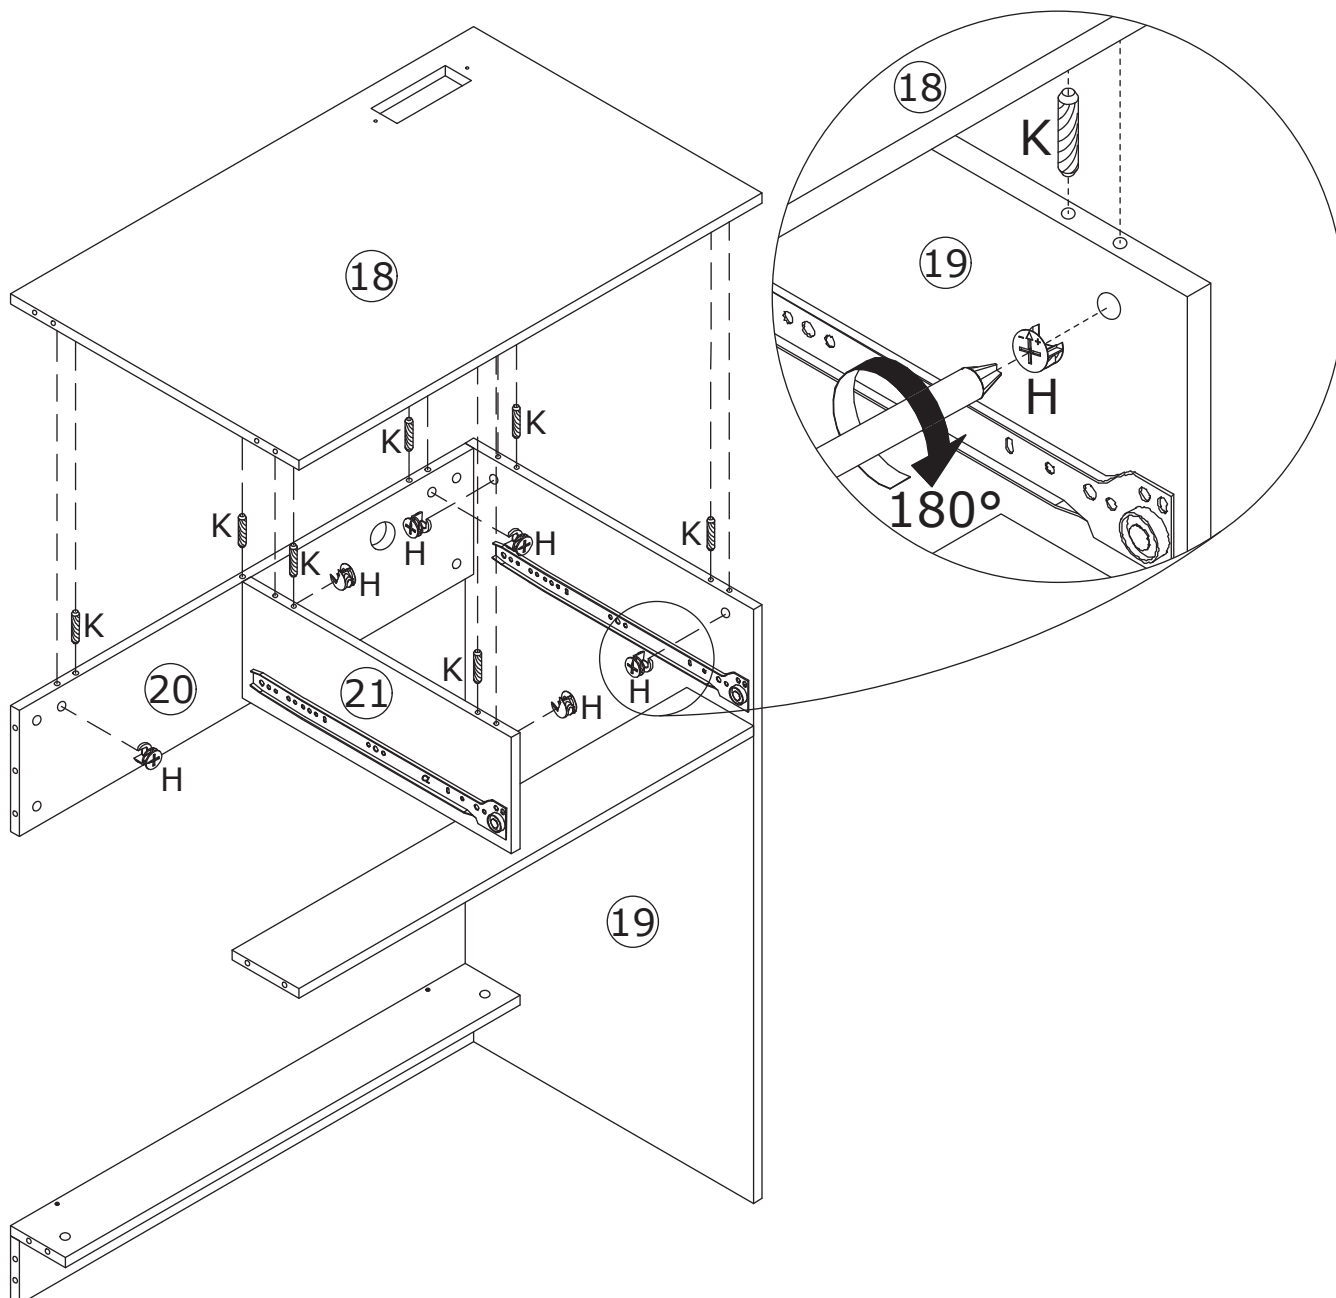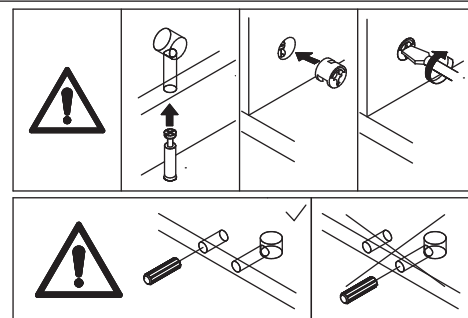


30

H x 7




Ø 15 x 10 mm



 
K x 6





Ø 8 x 30 mm

 

   
Attach the component to the unit using wooden dowel(K), add cam lock(H) into and turn clockwise to tighten as shown.

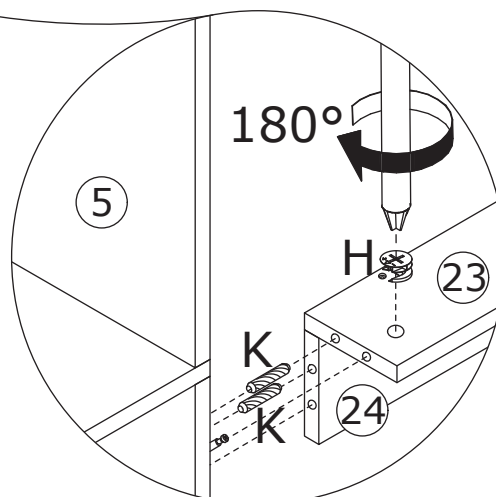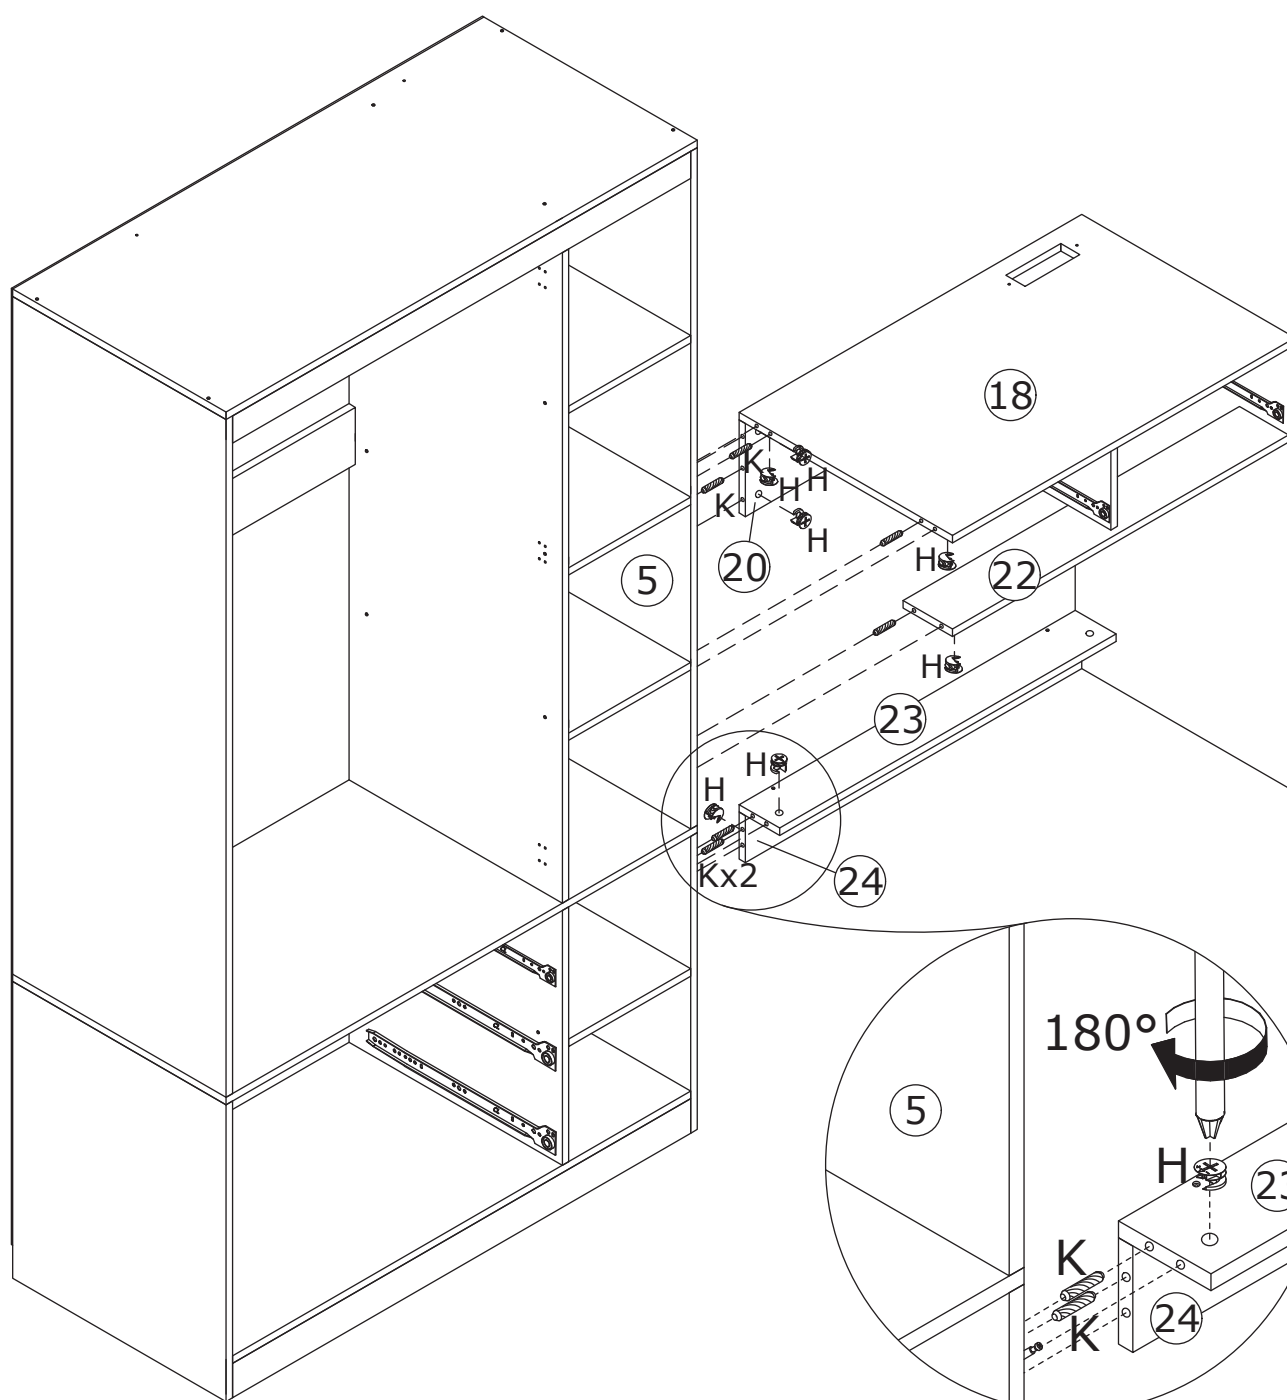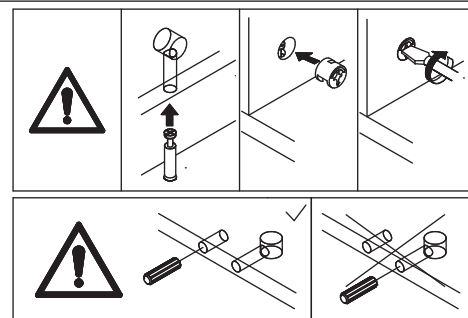

31

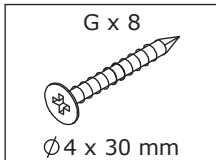  


 Fix panel 40 and 41 to panel 43 with screw(G) as shown.

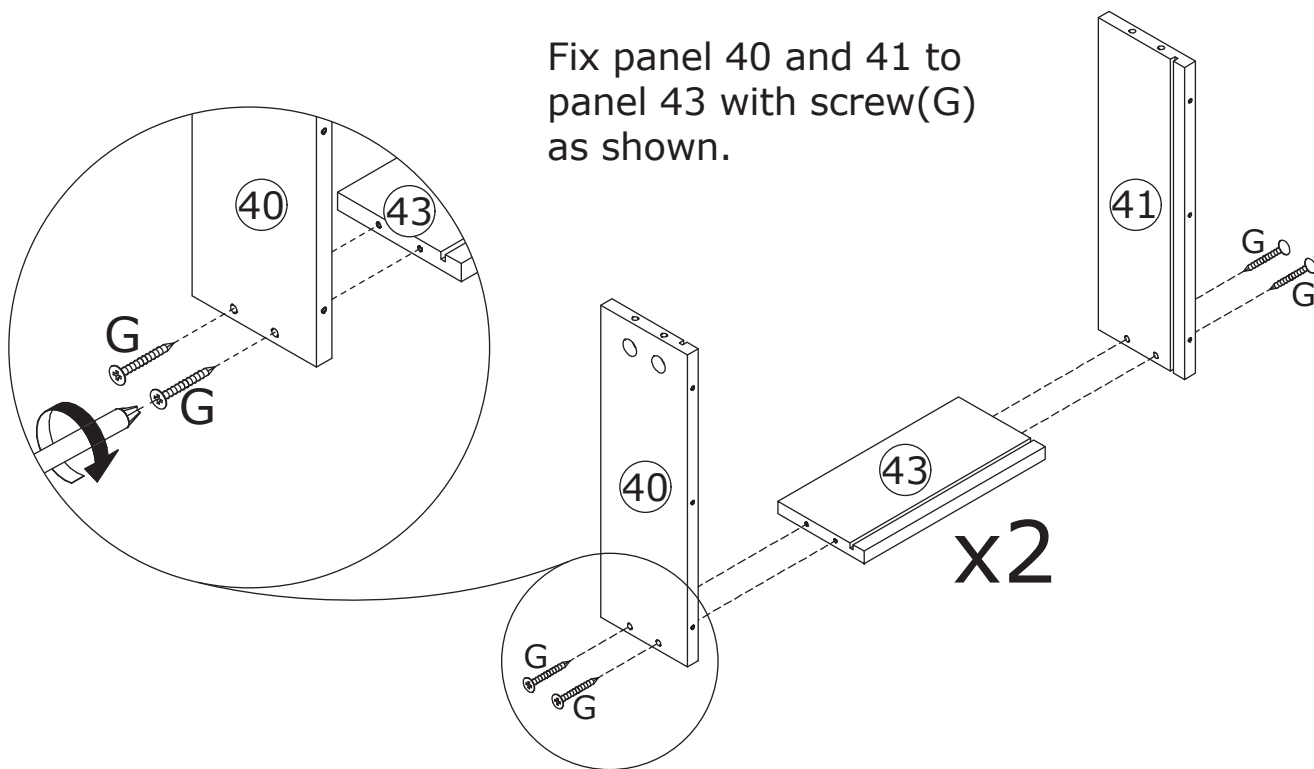

32

 Insert panel 45 along available grooves as shown.

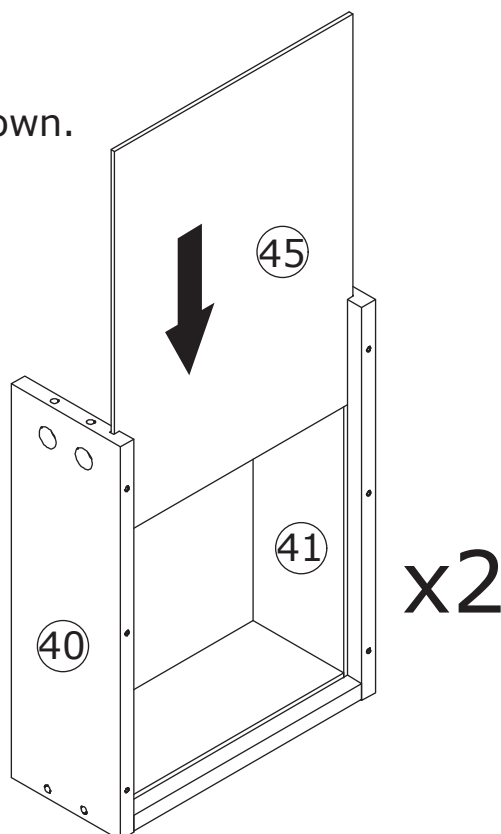


33



F x 8



 Ø6 x 35 mm



  Screw eccentric rod(F) into panel 38 and 39 at first.

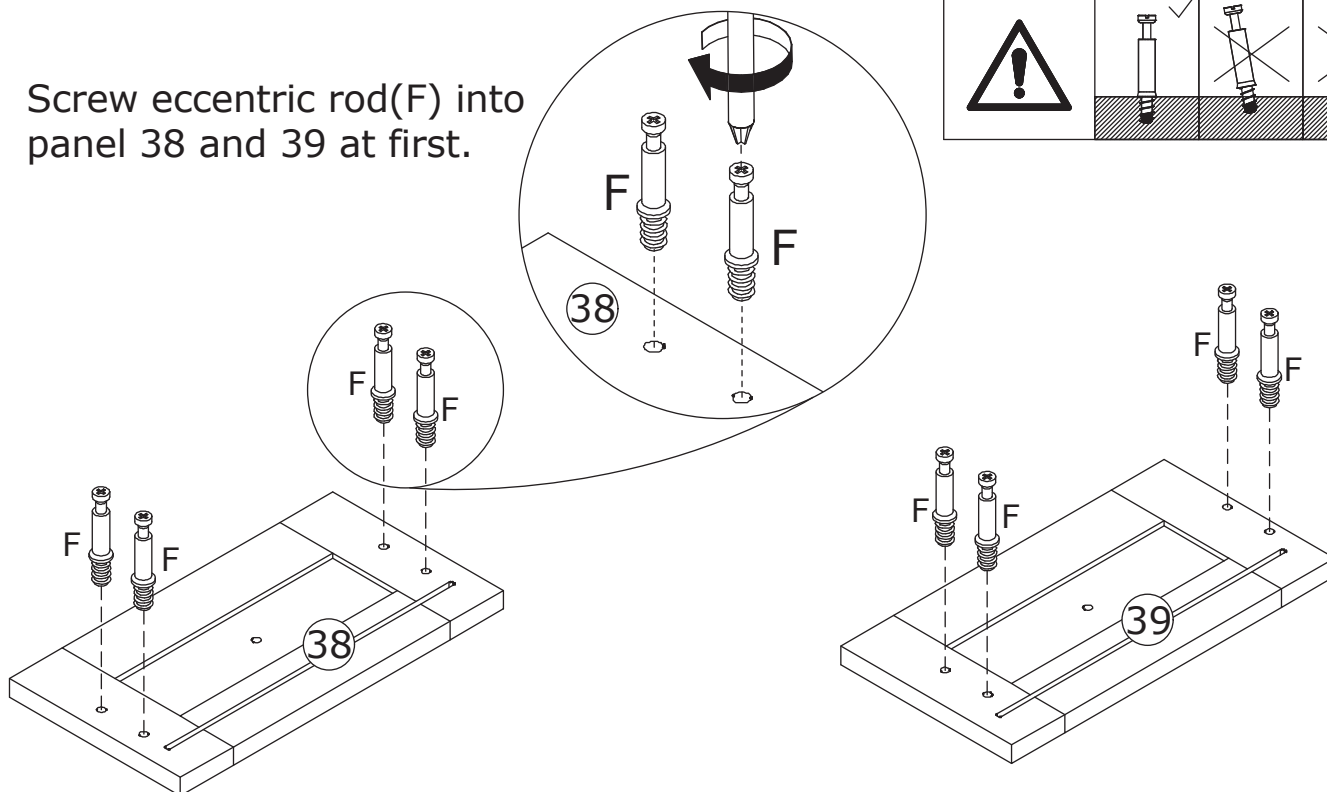
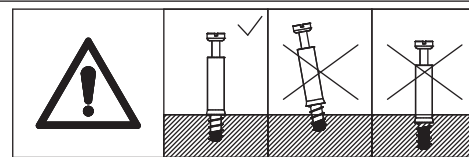


34

H x 8



  Ø15 x 10 mm

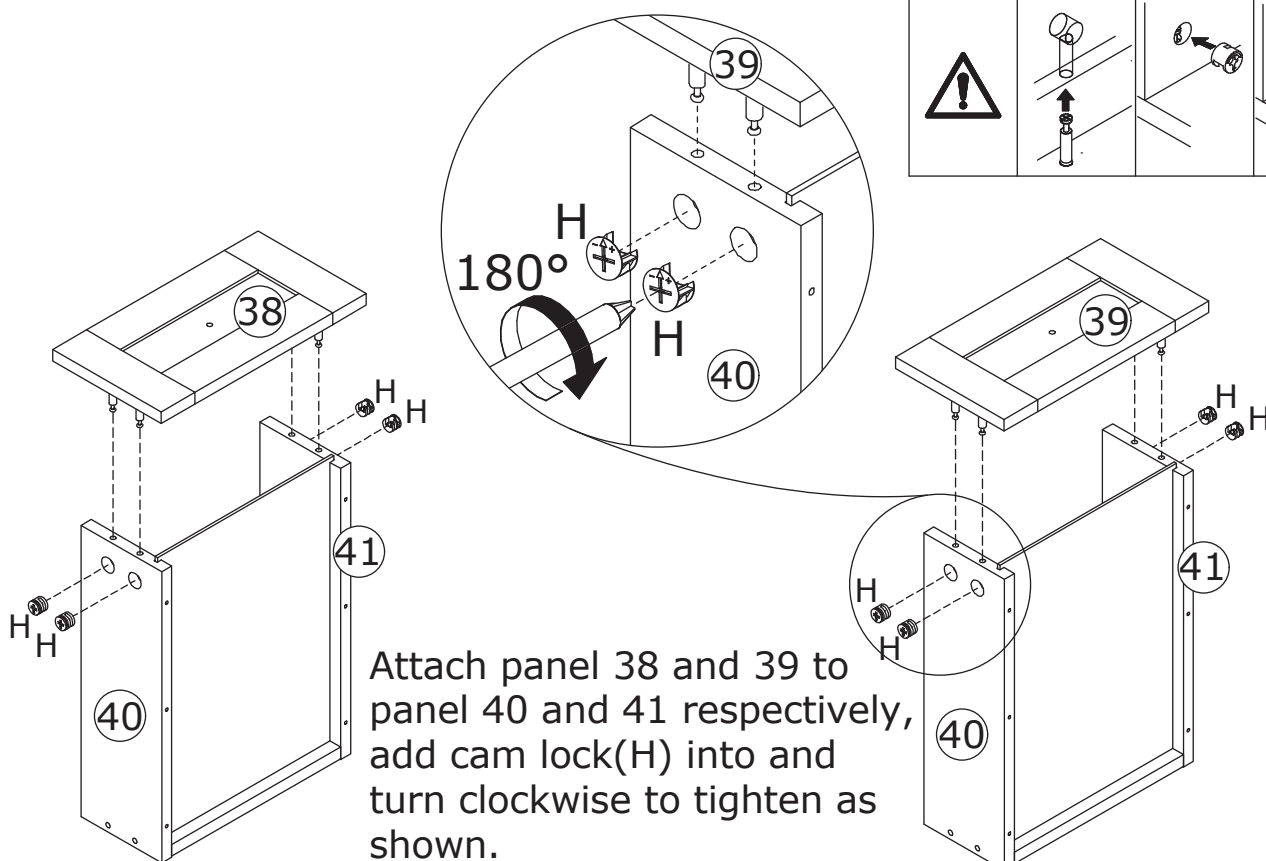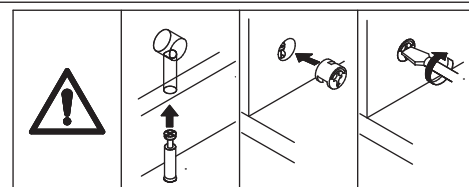

Attach panel 38 and 39 to panel 40 and 41 respectively, add cam lock(H) into and turn clockwise to tighten as shown.

35

 
 
 
R x 2



T x 2



Ø4 x 8 mm

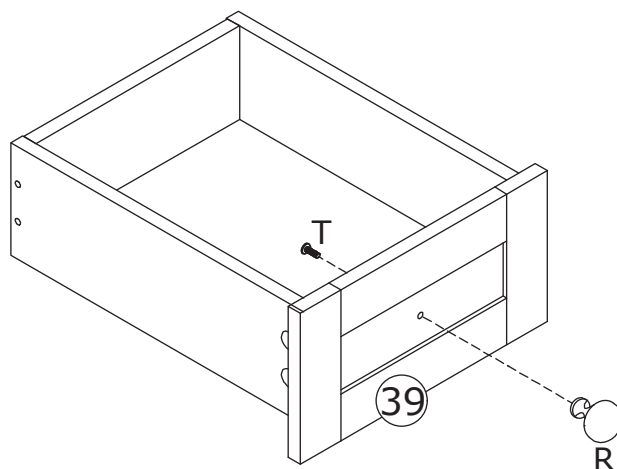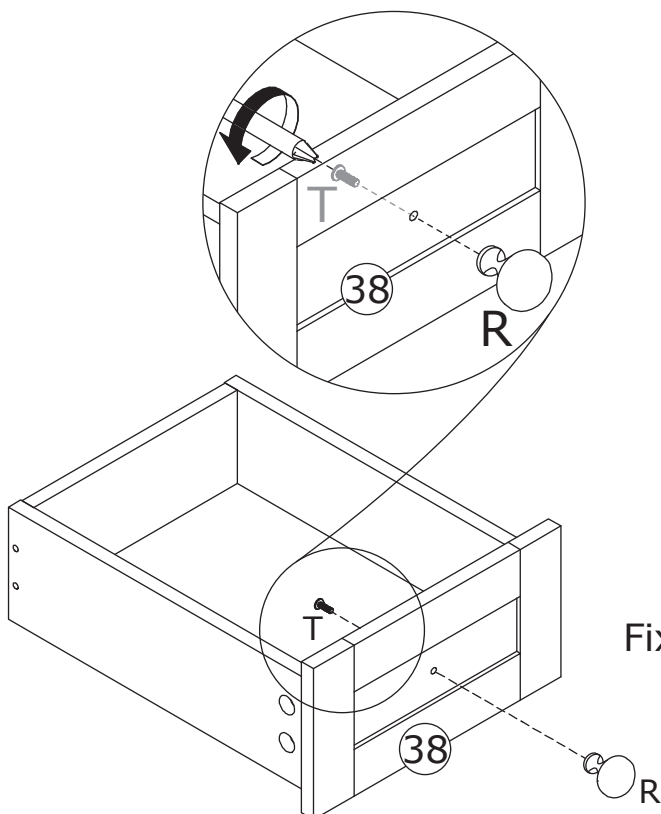



Fix knob(R) with screw(T) as shown.

36


G x 15



  Ø4 x 30 mm

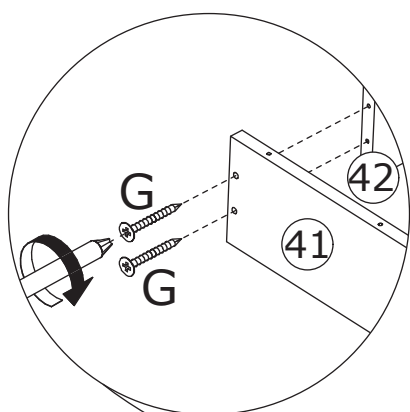


 Fix panel 40, 46 and 41 to panel 42 with screw(G) as shown.





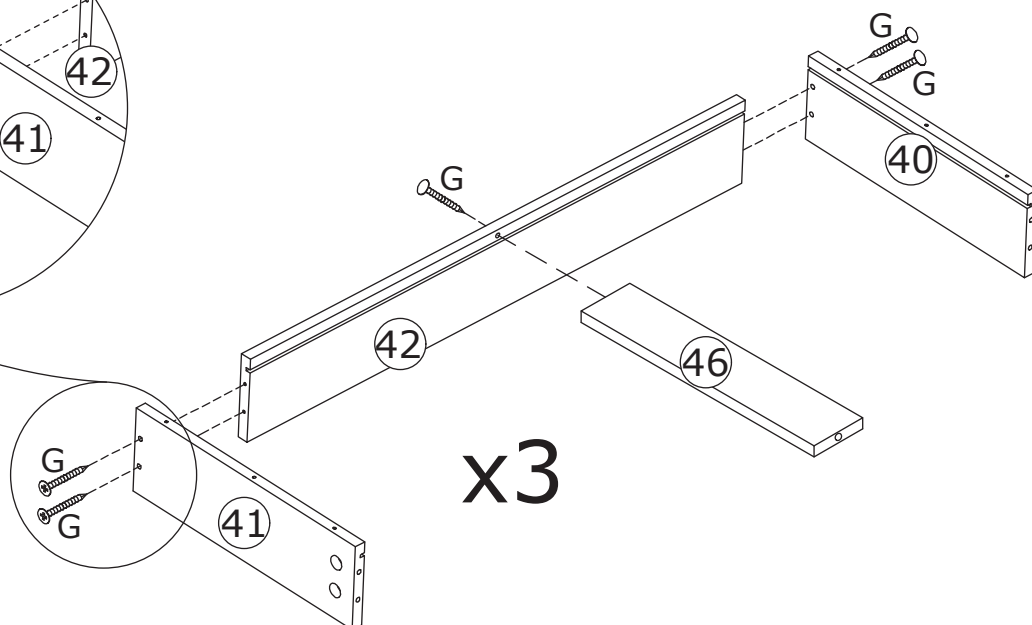


37

 Insert panel 44 along available grooves as shown.


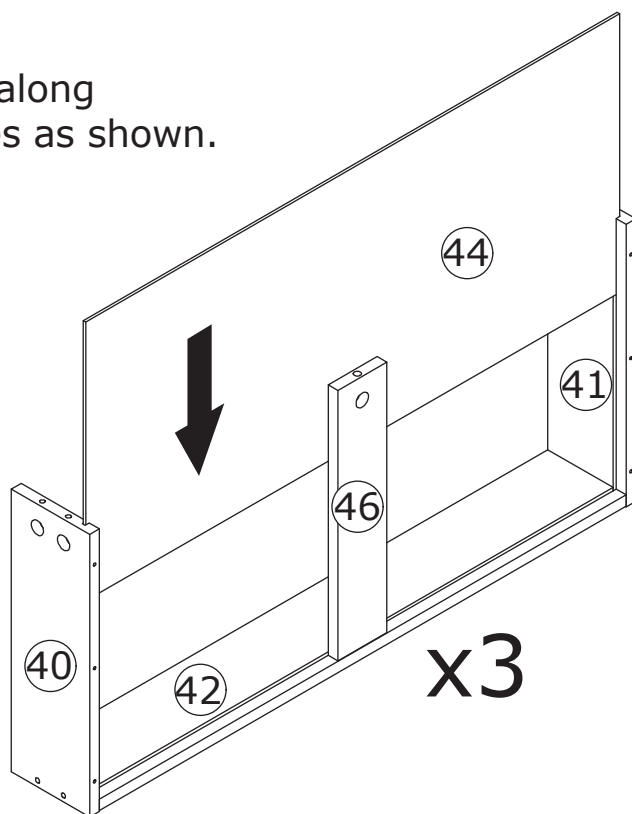


38

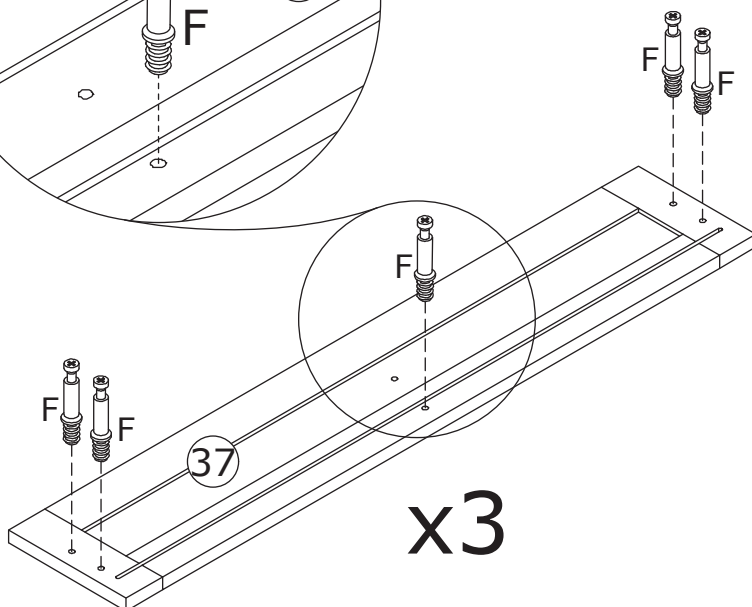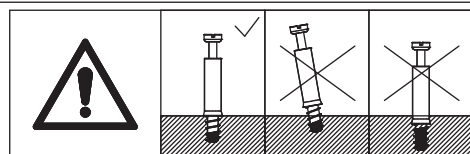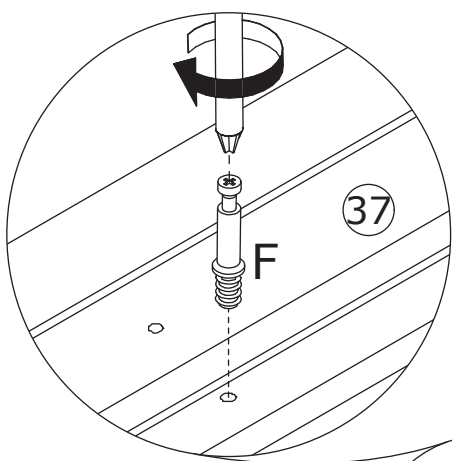   
 
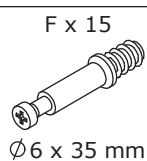 


Screw eccentric rod(F) into panel 37 at first.


 
 
39

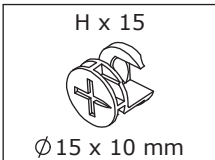

  
 
Attach panel 37 to panel 40, 46 and 41 respectively, add cam lock(H) into and turn clockwise to tighten as shown.

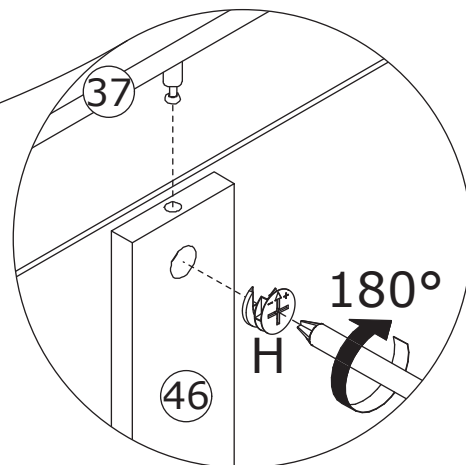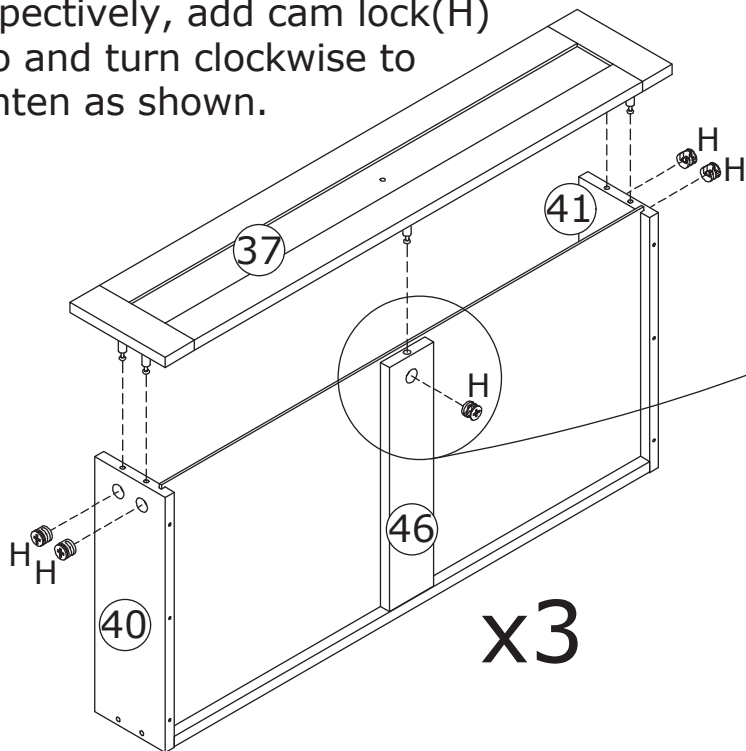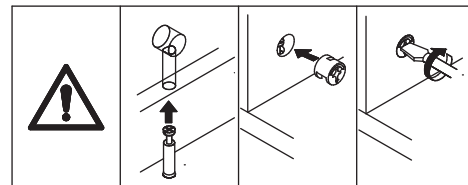

40

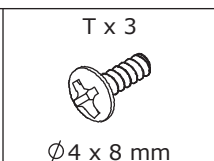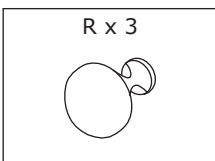   

Fix knob(R) with screw(T) as shown.

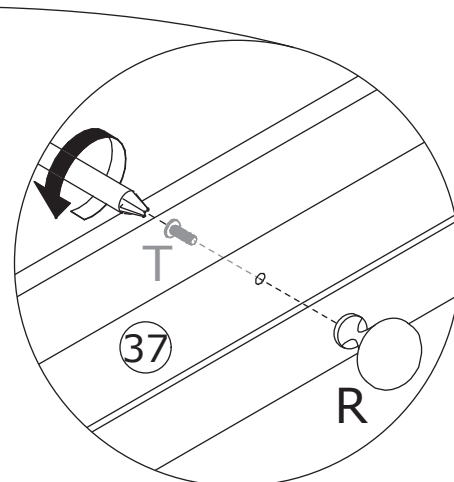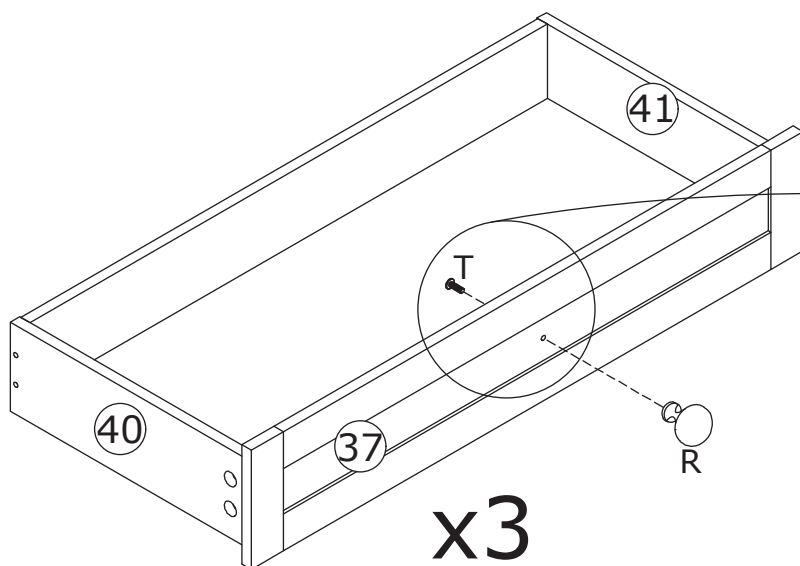  

41

E x 30



Ø 3 x 12 mm

DL x 3




L = 350 mm

Technical drawing of a 100x50x5 mm L-shaped aluminum extrusion profile. The drawing shows the profile from a perspective view, highlighting its L-shape and the internal reinforcement structure. The dimensions 100x50x5 are indicated at the top right.




DR x 3




 L = 350 mm


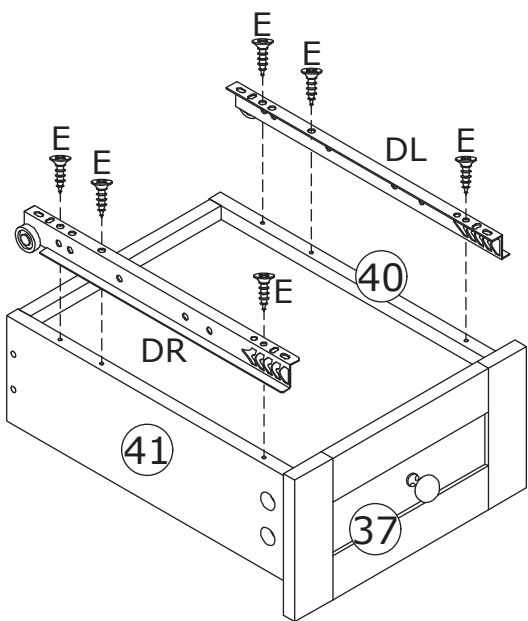


    Fix track(DL) and (DR) to panel 40 and 41 with screw(E) as shown.

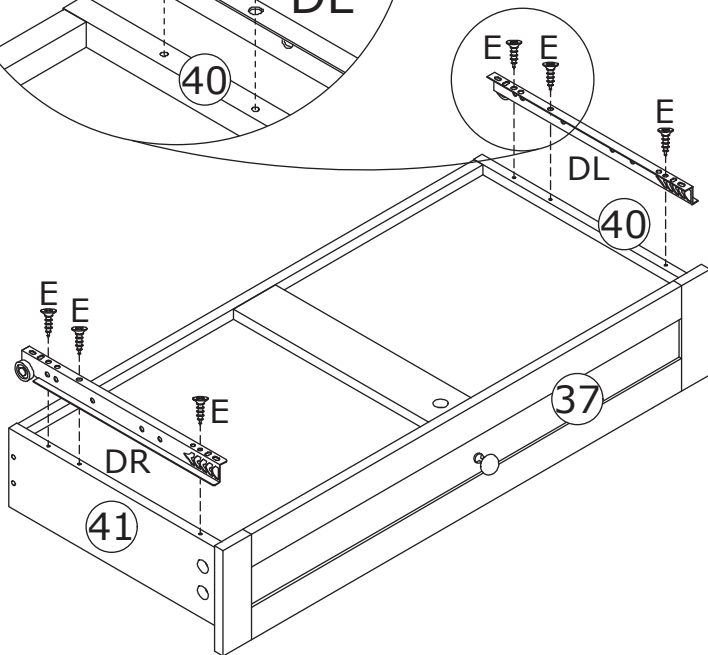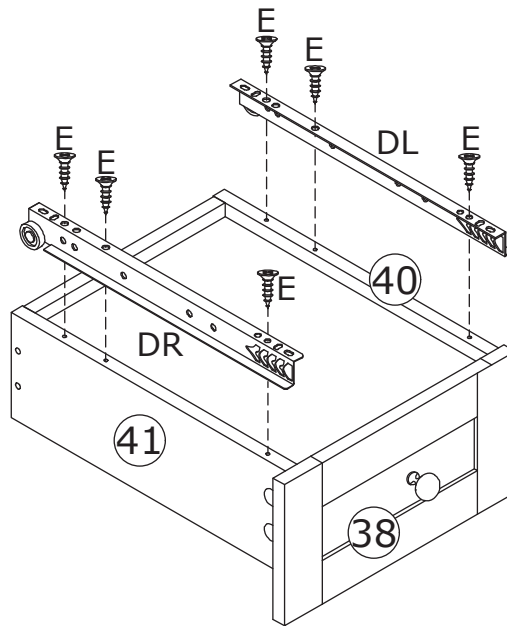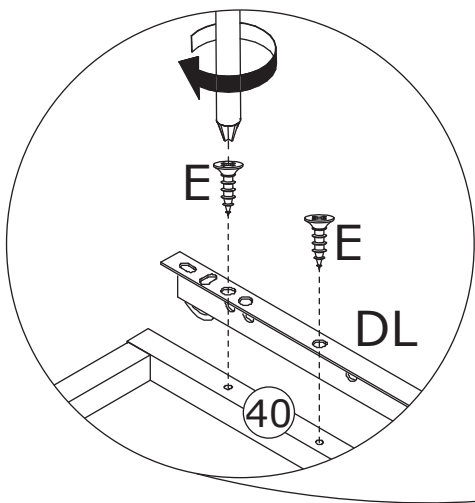


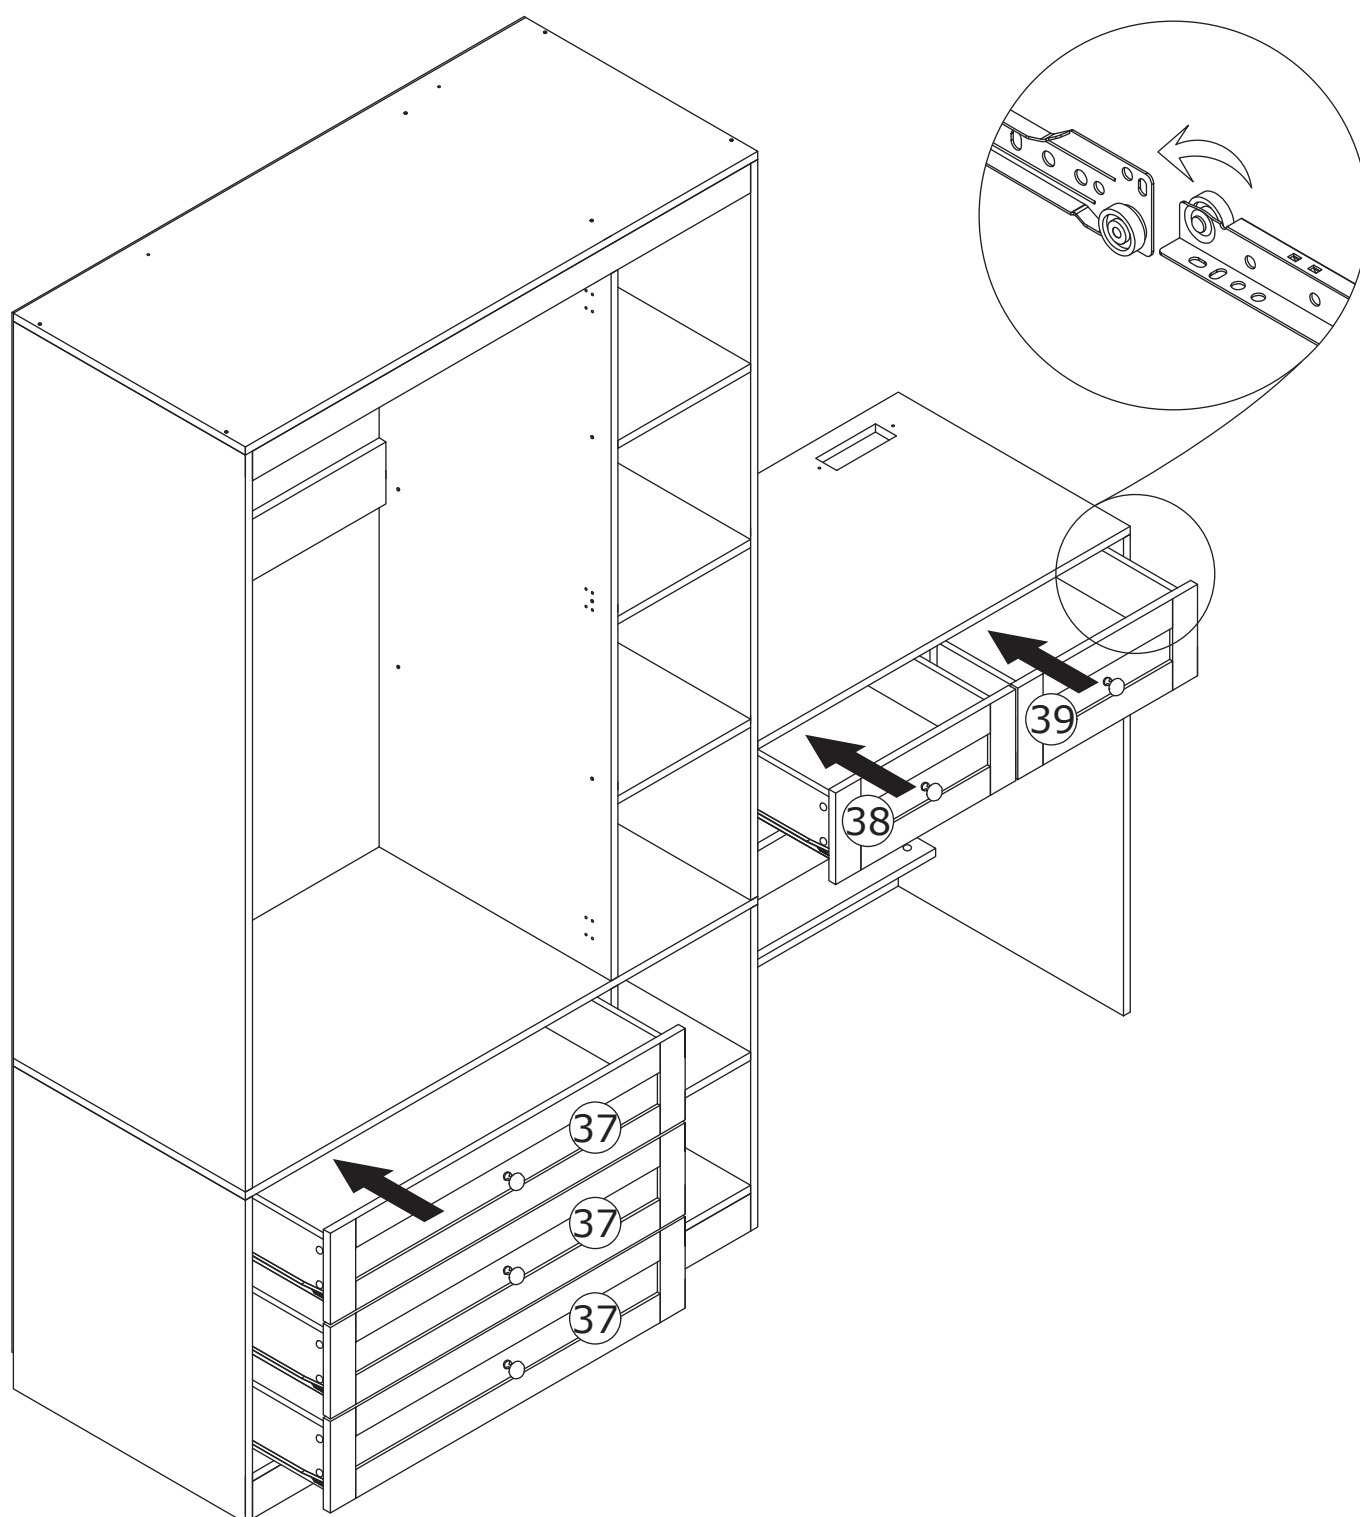

43

  
P x 6 	Q x 12  Ø4 x 14 mm	S x 4  Ø4 x 16 mm	W x 2  L = 128 mm	
--	---	--	---	---

 Fix hinge(P) to panel 33 and 34 with screw(Q) as shown.
Fix handle(W) with screw(S) as shown.

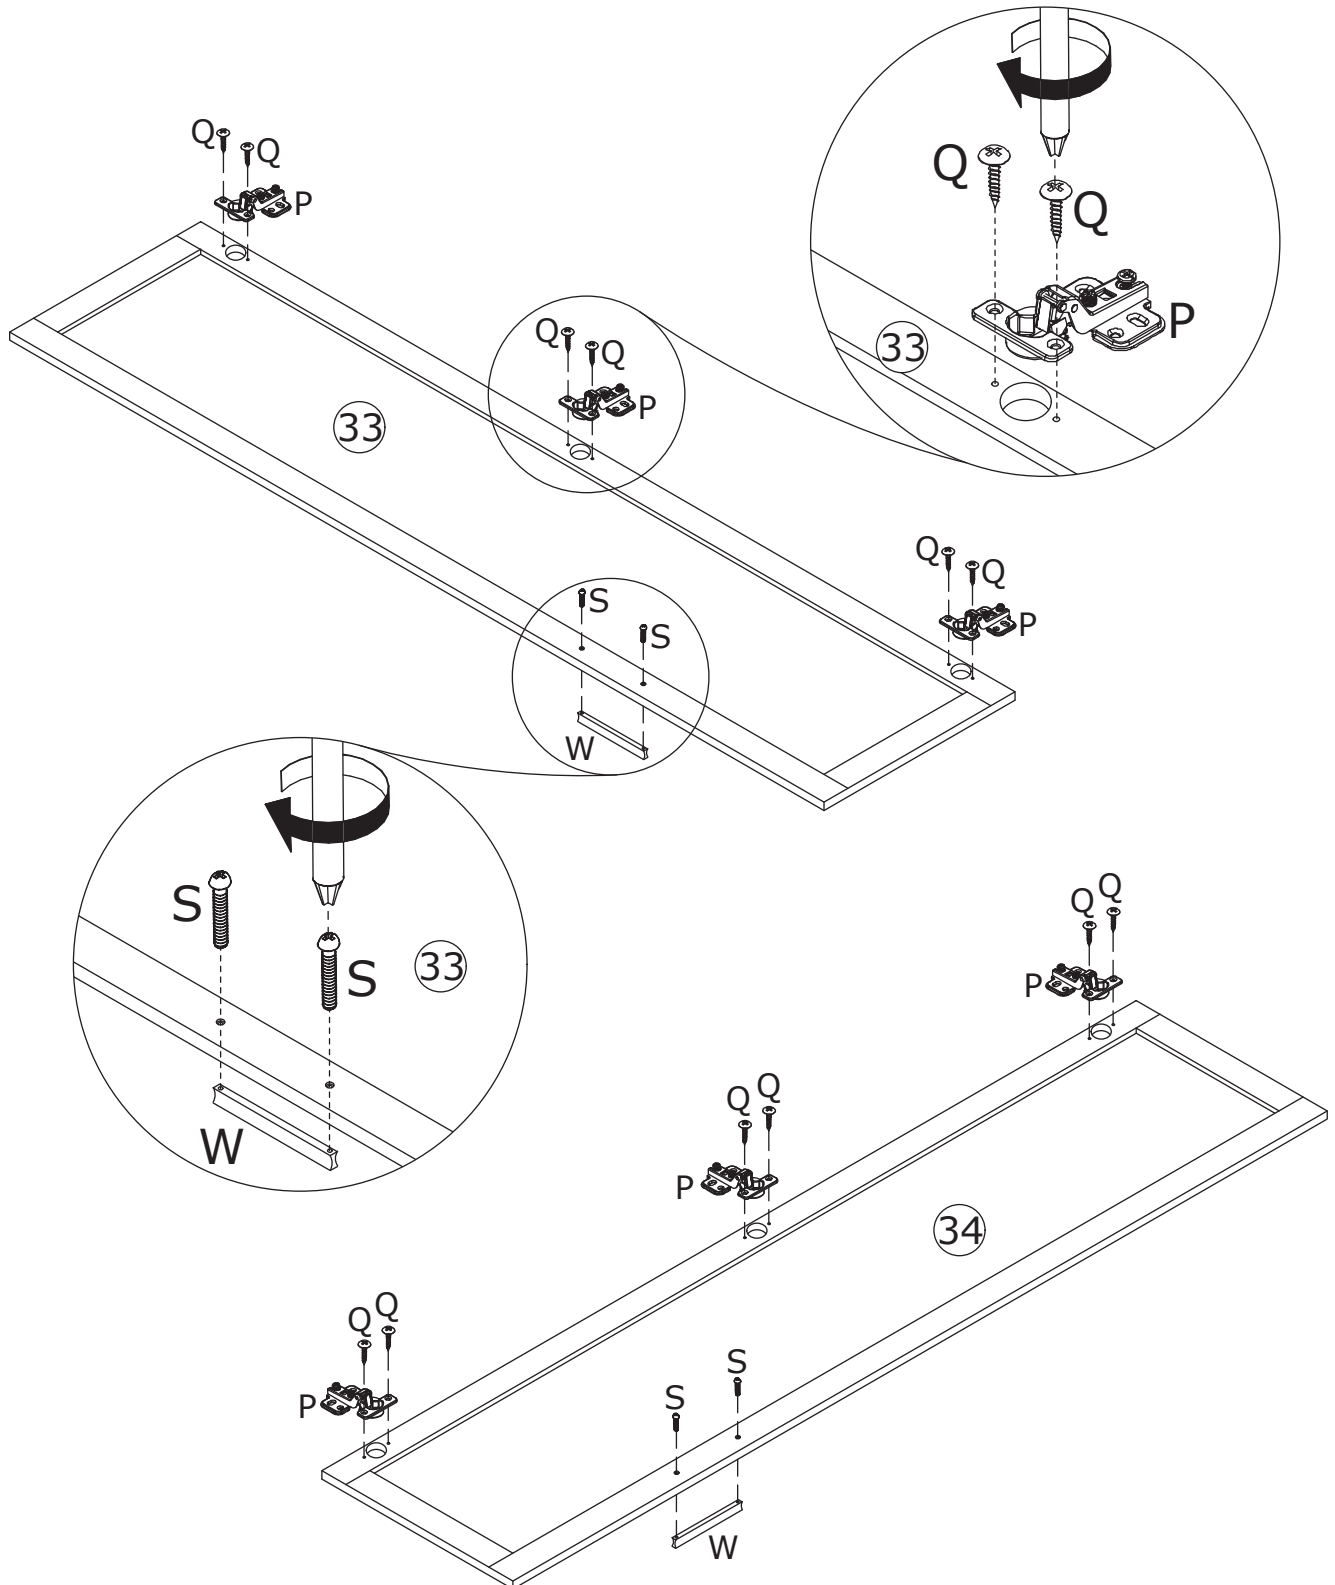


44


 
Q x 24




Ø4 x 14 mm

 

  Assemble door panel 33 and 34 to the unit by fixing hinge with screw(Q) as shown.

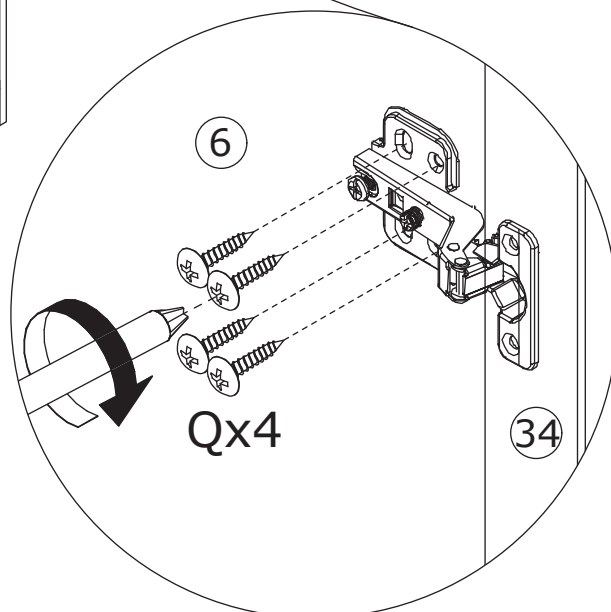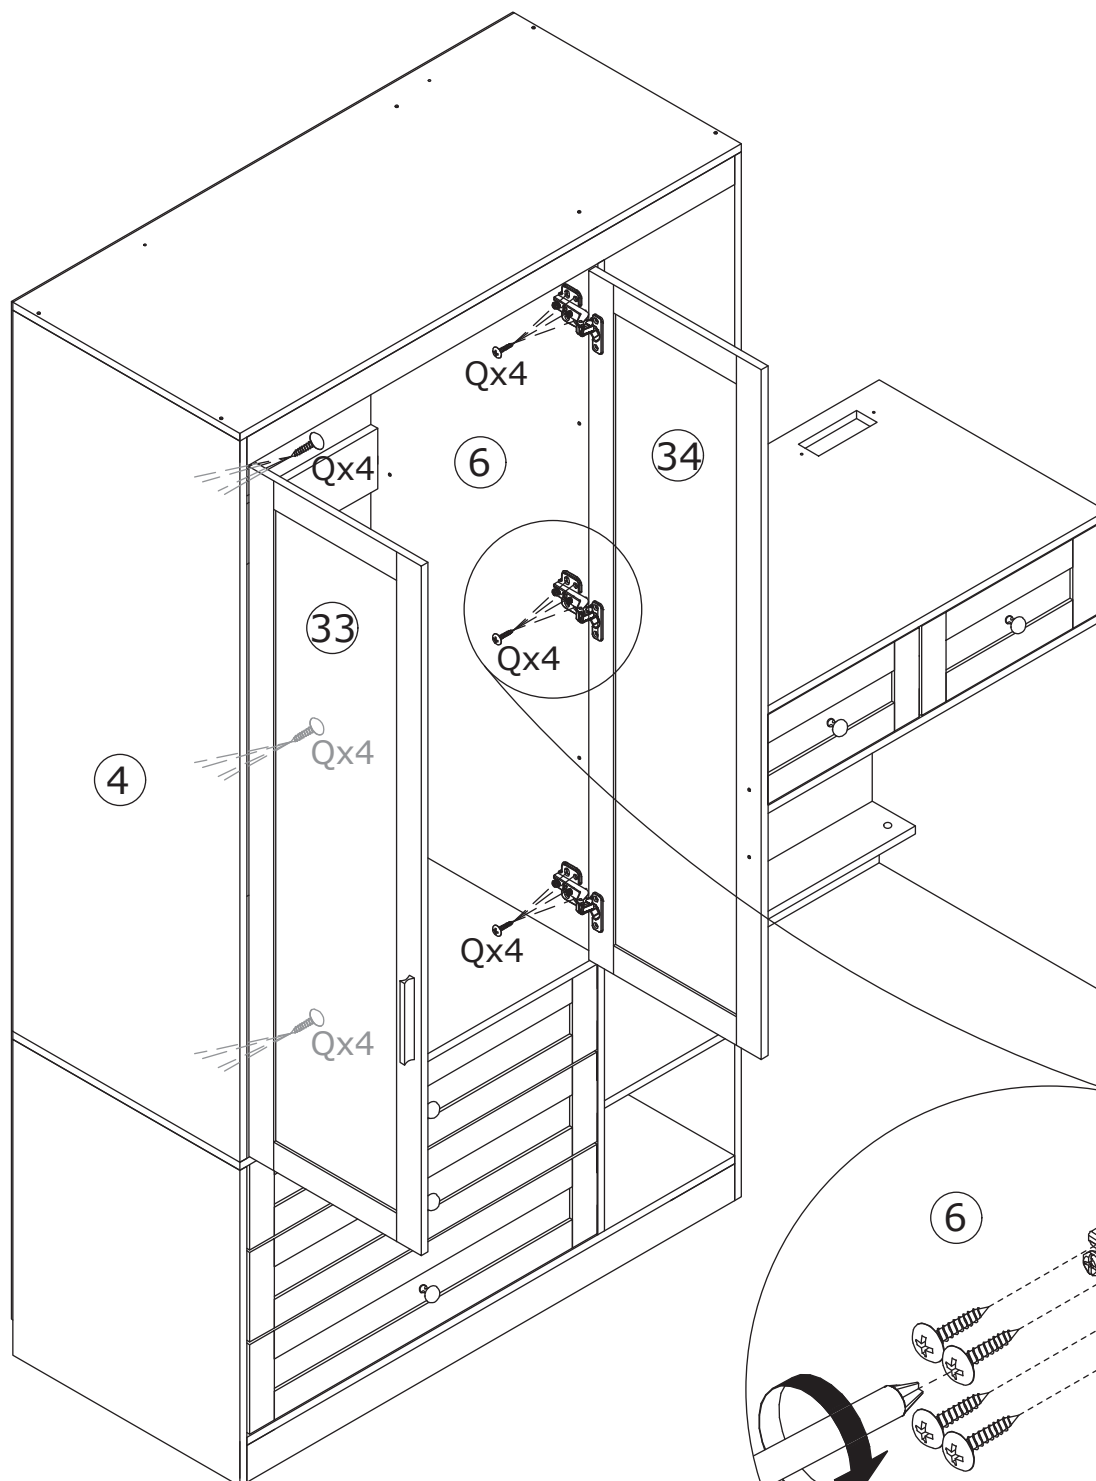


45

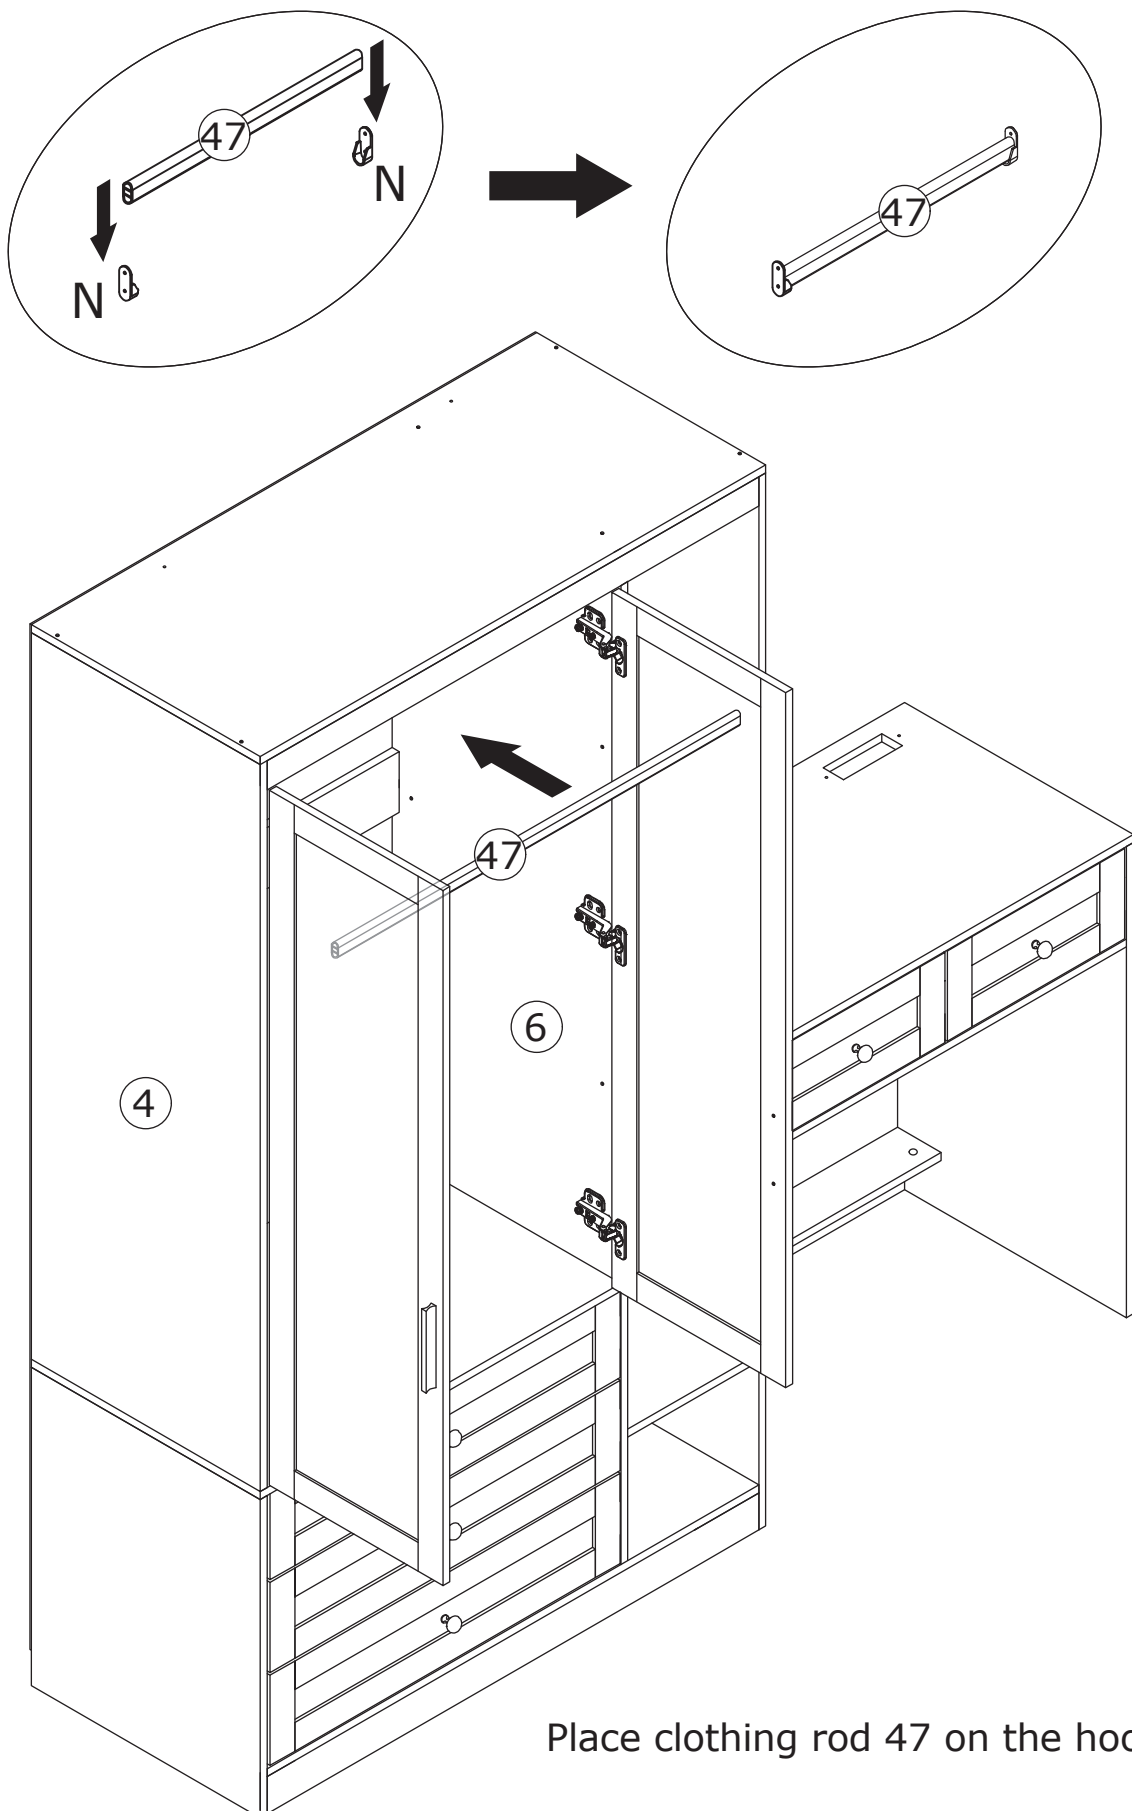 


Place clothing rod 47 on the hooks.

46

 V x 2





Fix part(V) to panel 1 as shown.

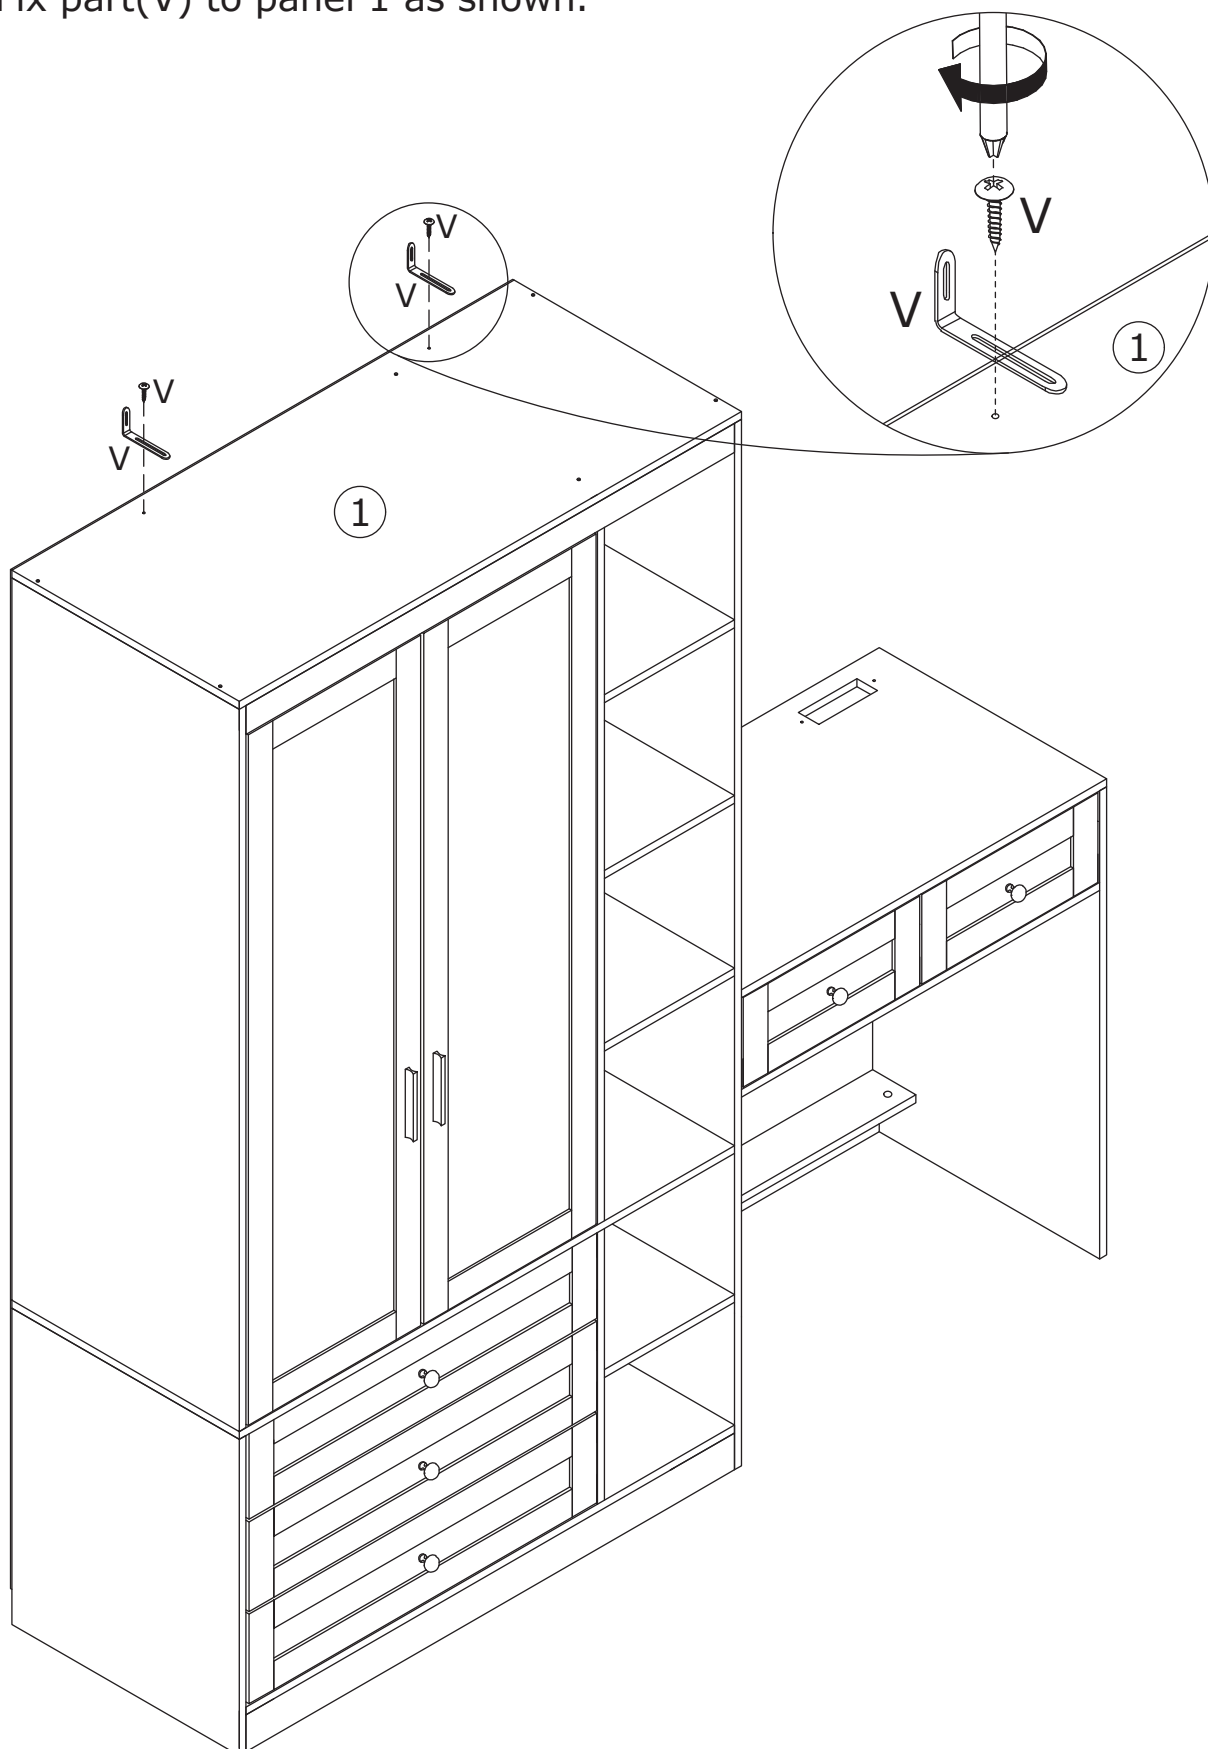 



47

  V x 2

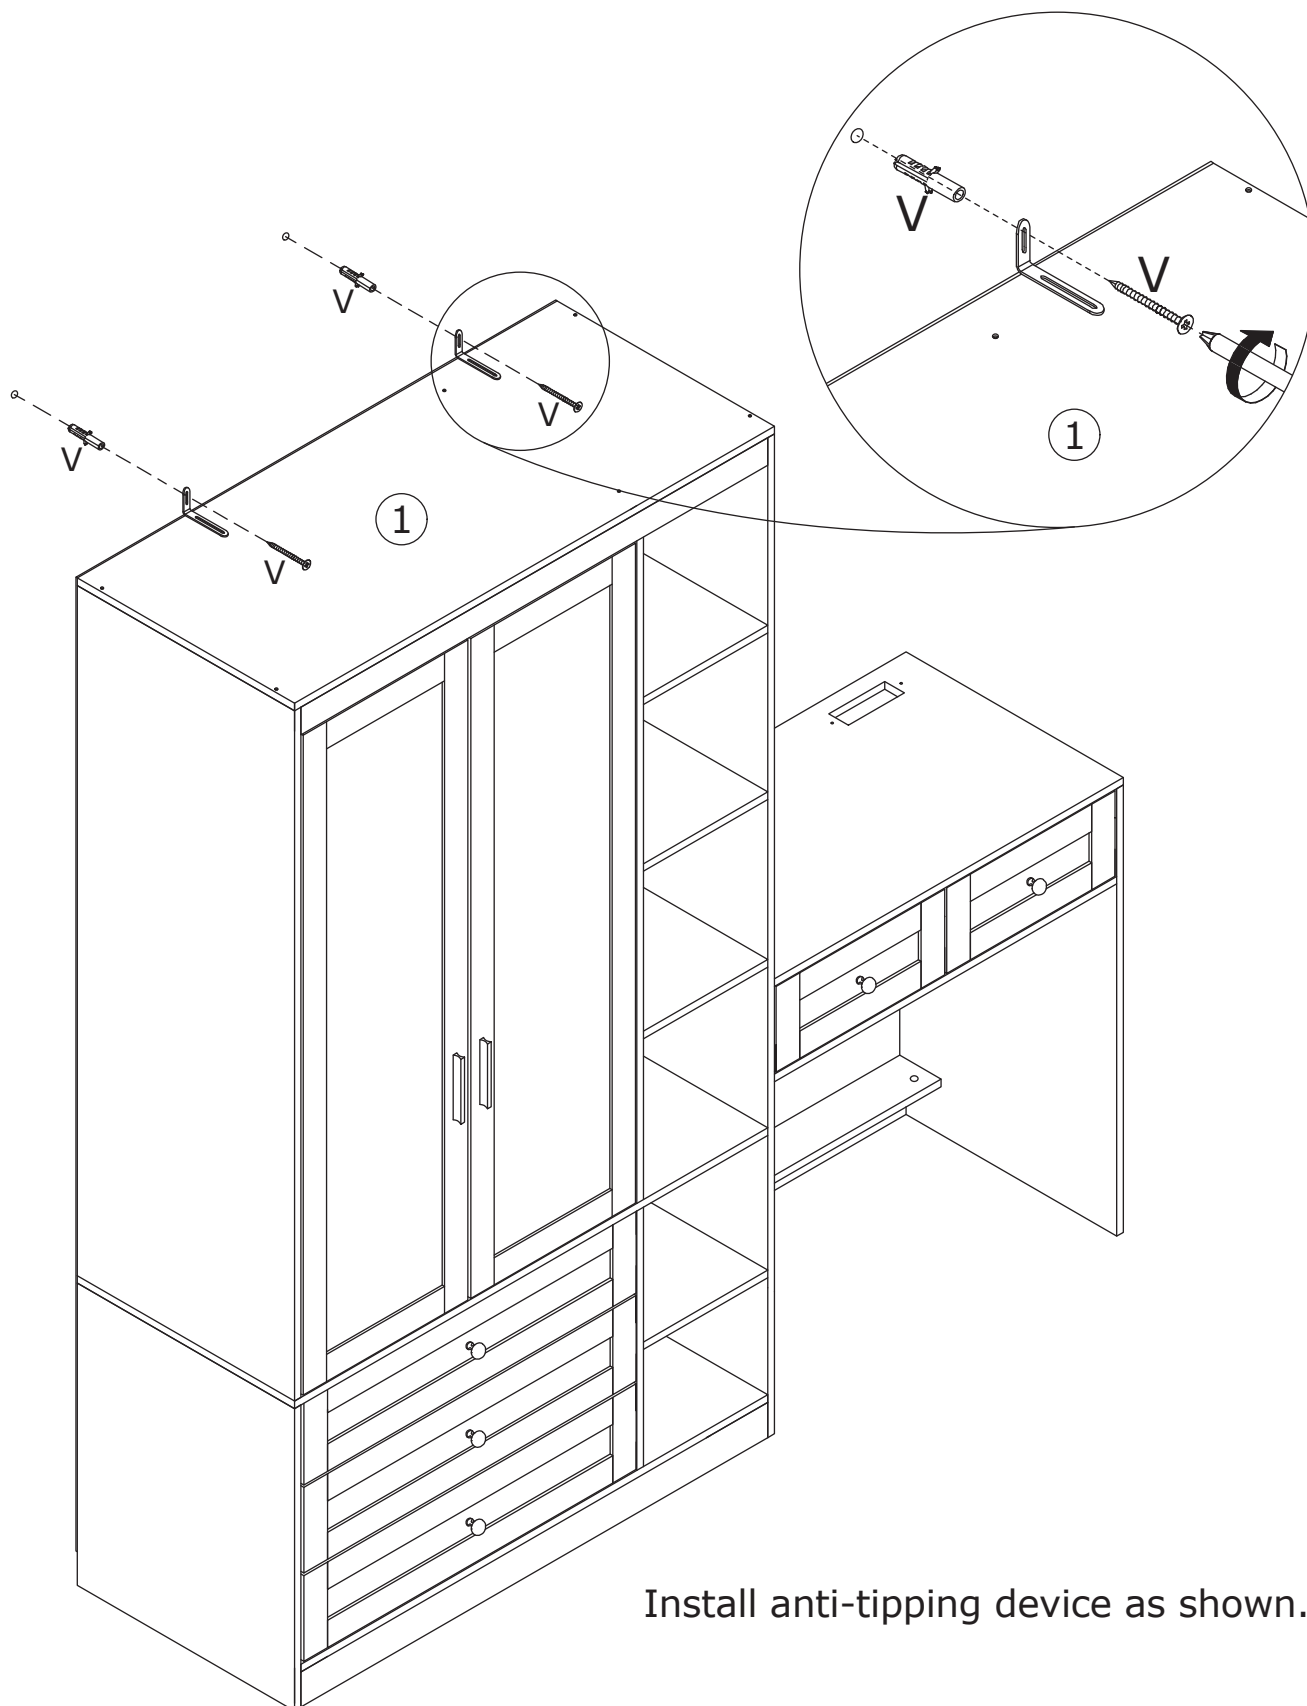



Install anti-tipping device as shown.

 
 
48

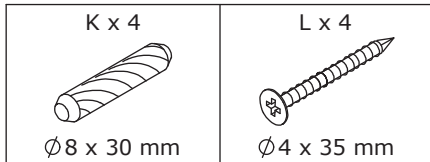

 
 
Attach panel 27 and 28 to panel 26 using wooden dowel(K), and fix with screw(L) as shown.

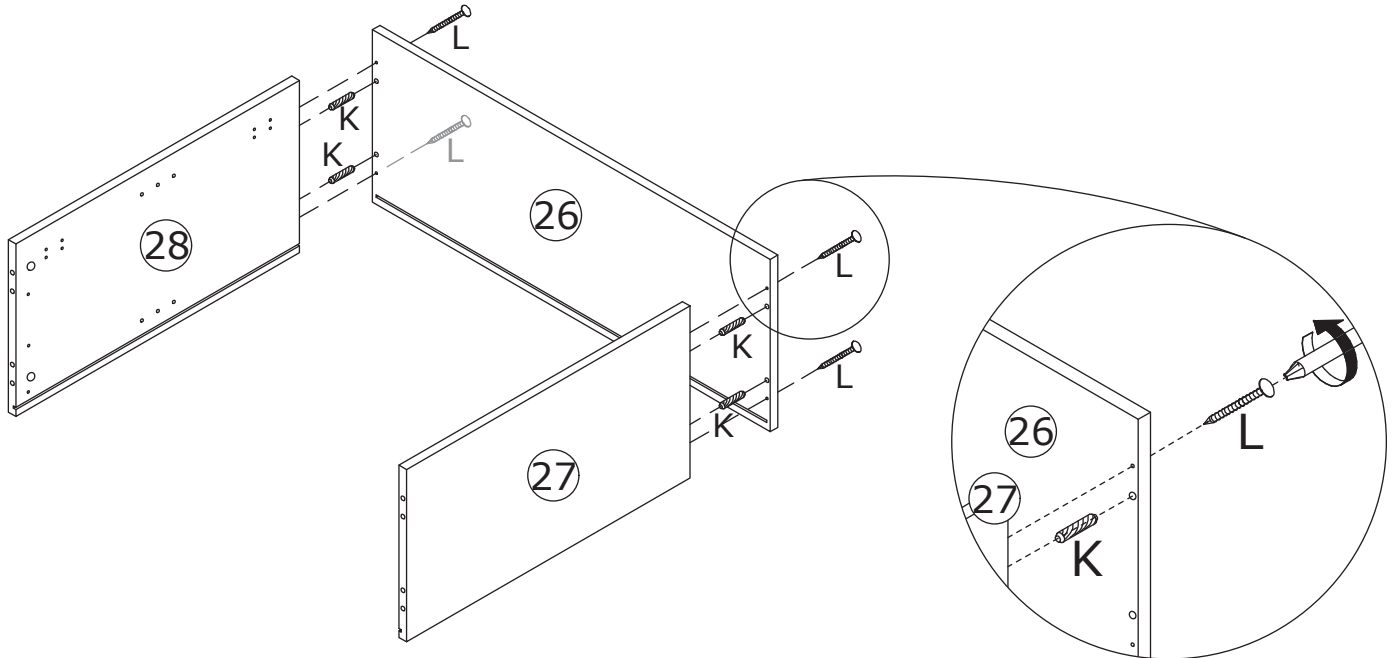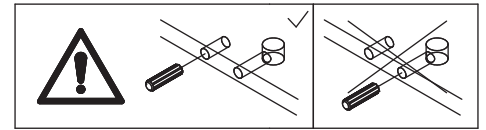

49

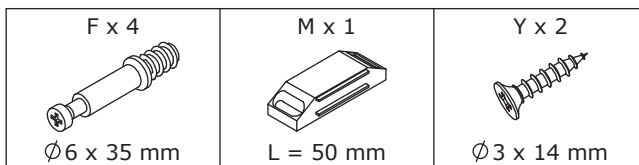  


  Screw eccentric rod(F) into panel 25 at first.
Fix part(M) with screw(Y) as shown.

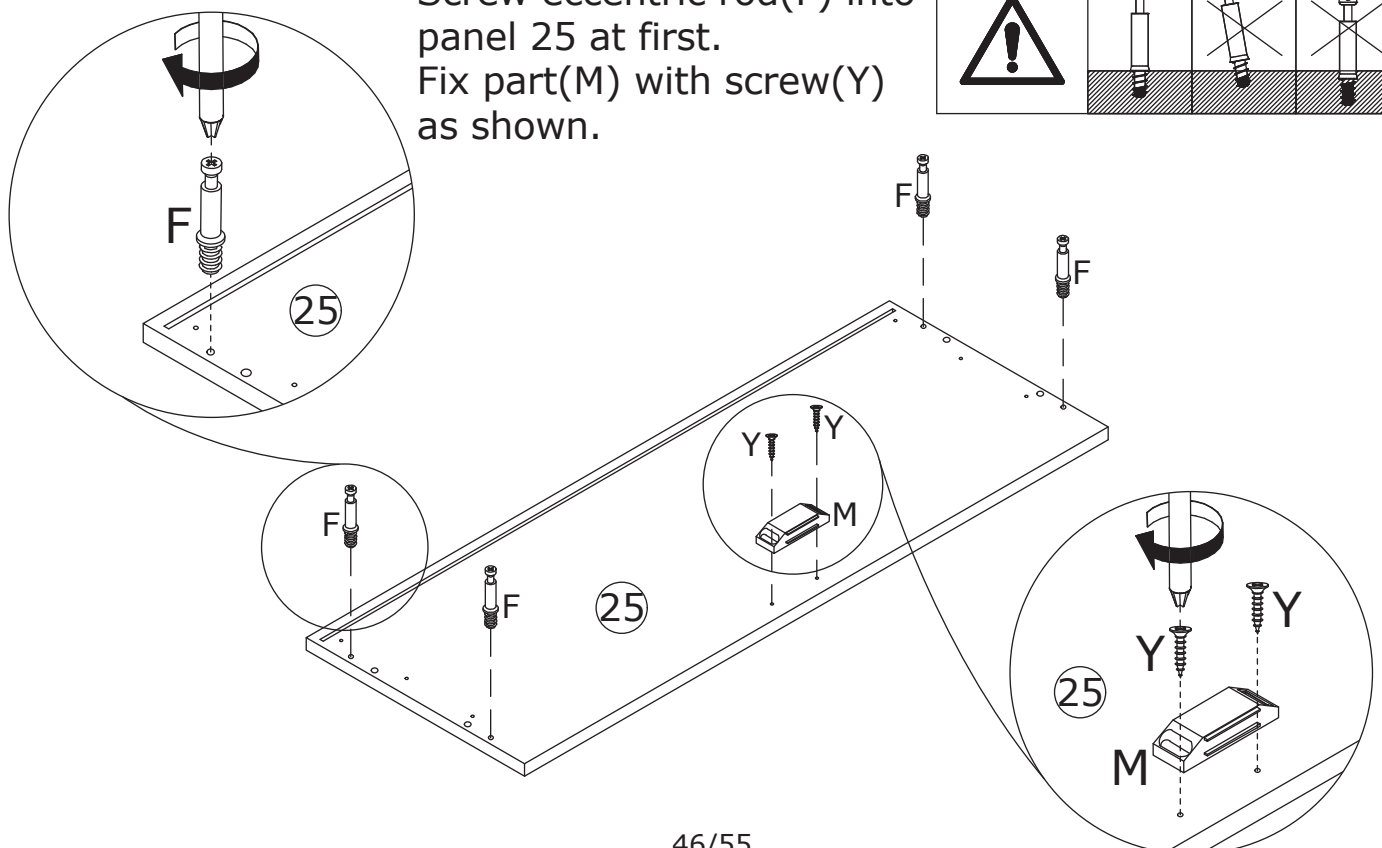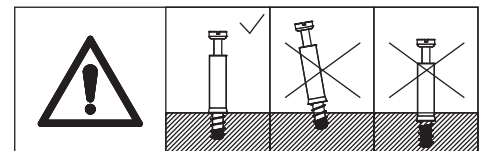


50



 
Insert panel 29, 30 and plank 31 along available grooves as shown.

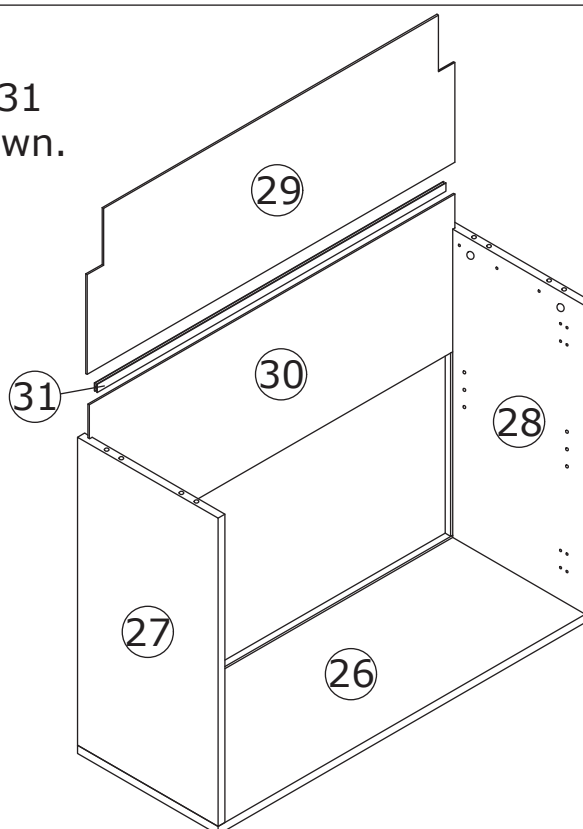

51

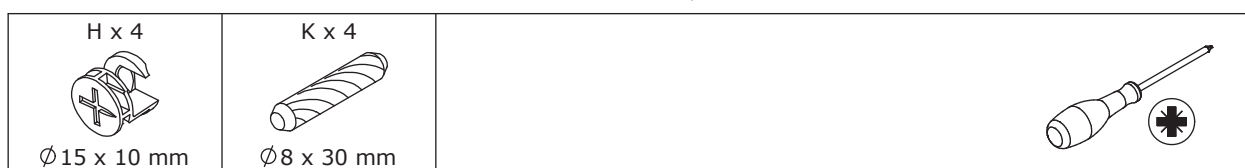 


   Attach panel 25 to panel 27 and 28 using wooden dowel(K), add cam lock(H) into and turn clockwise to tighten as shown.

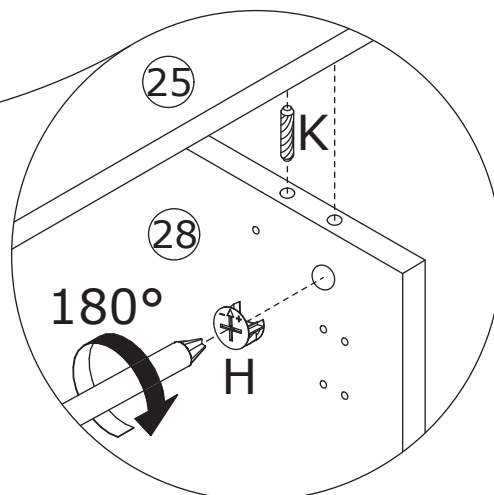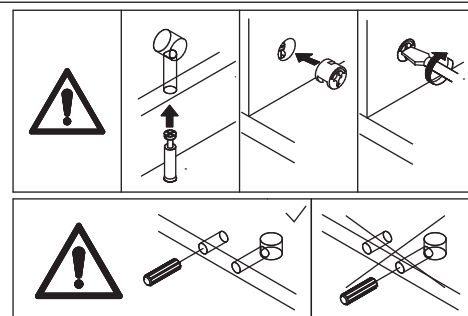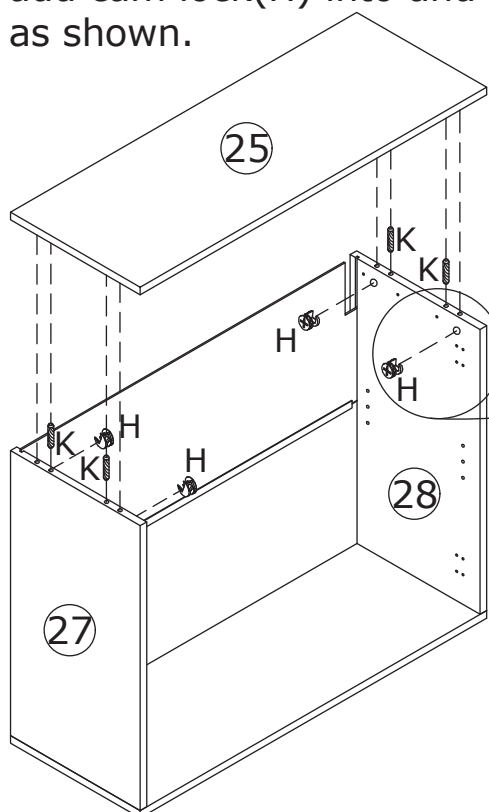


52

 Y x 4





Ø3 x 14 mm

 Z x 4



  Insert buckle(Z) into back slots and fix with screw(Y) as shown.

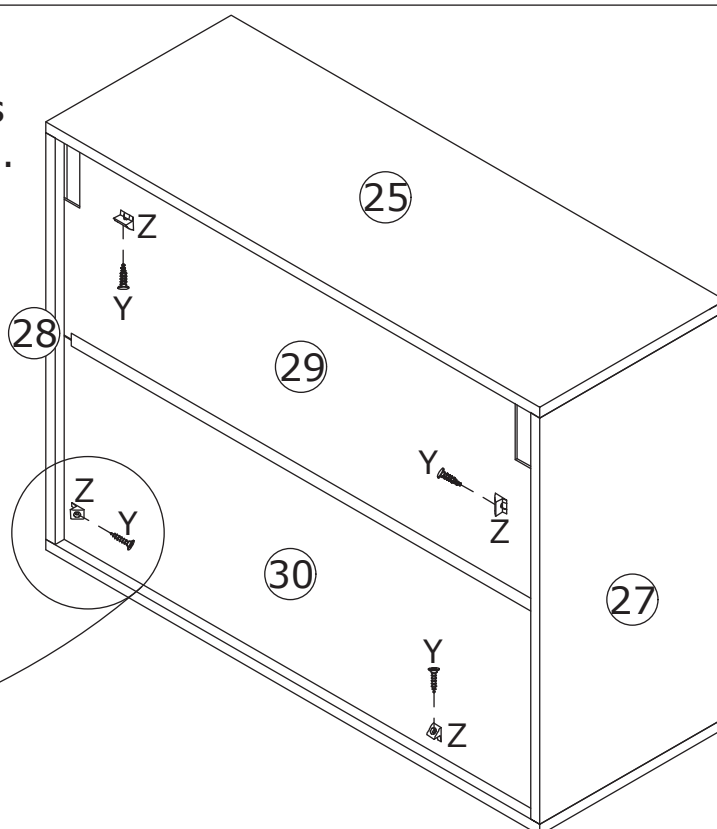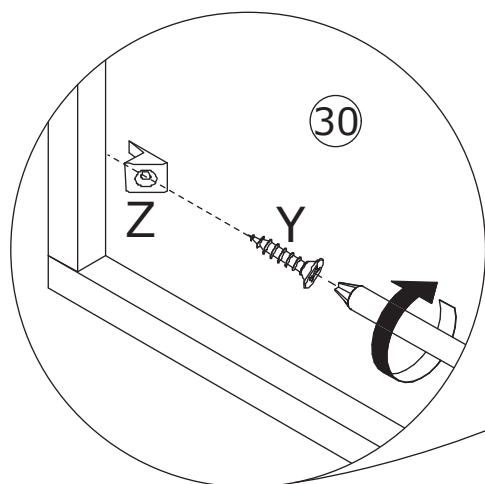


53




B x 1



 Q x 12








Ø4 x 14 mm

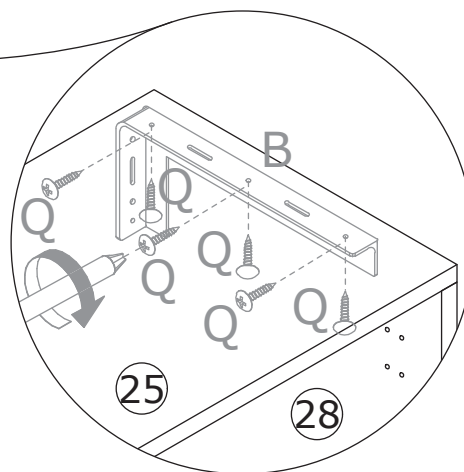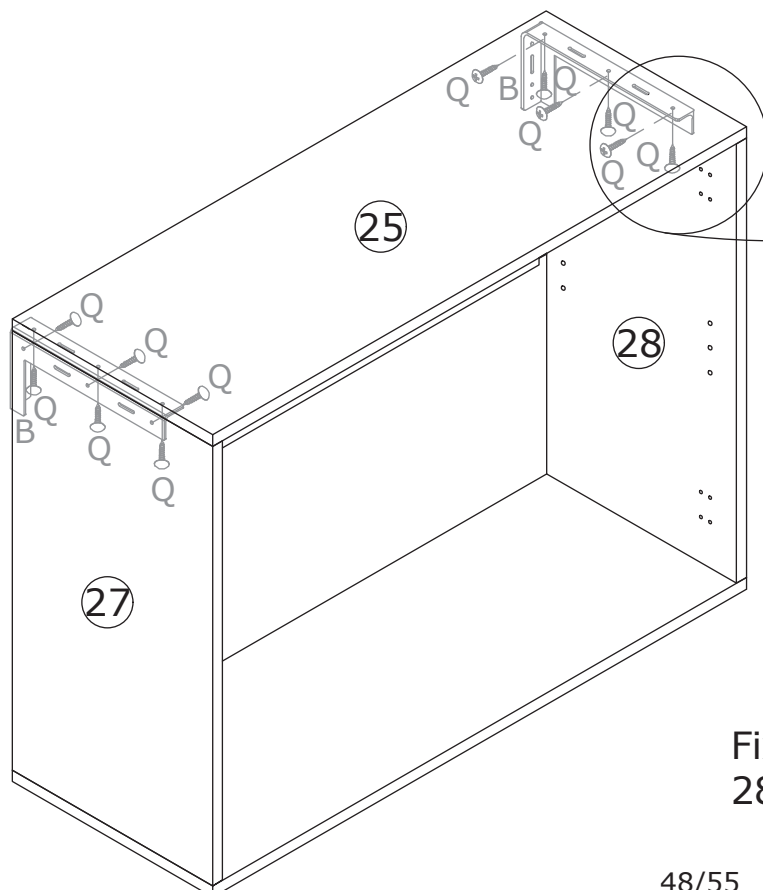   



Fix part(B) to panel 25, 27 and 28 with screw(Q) as shown.

     54

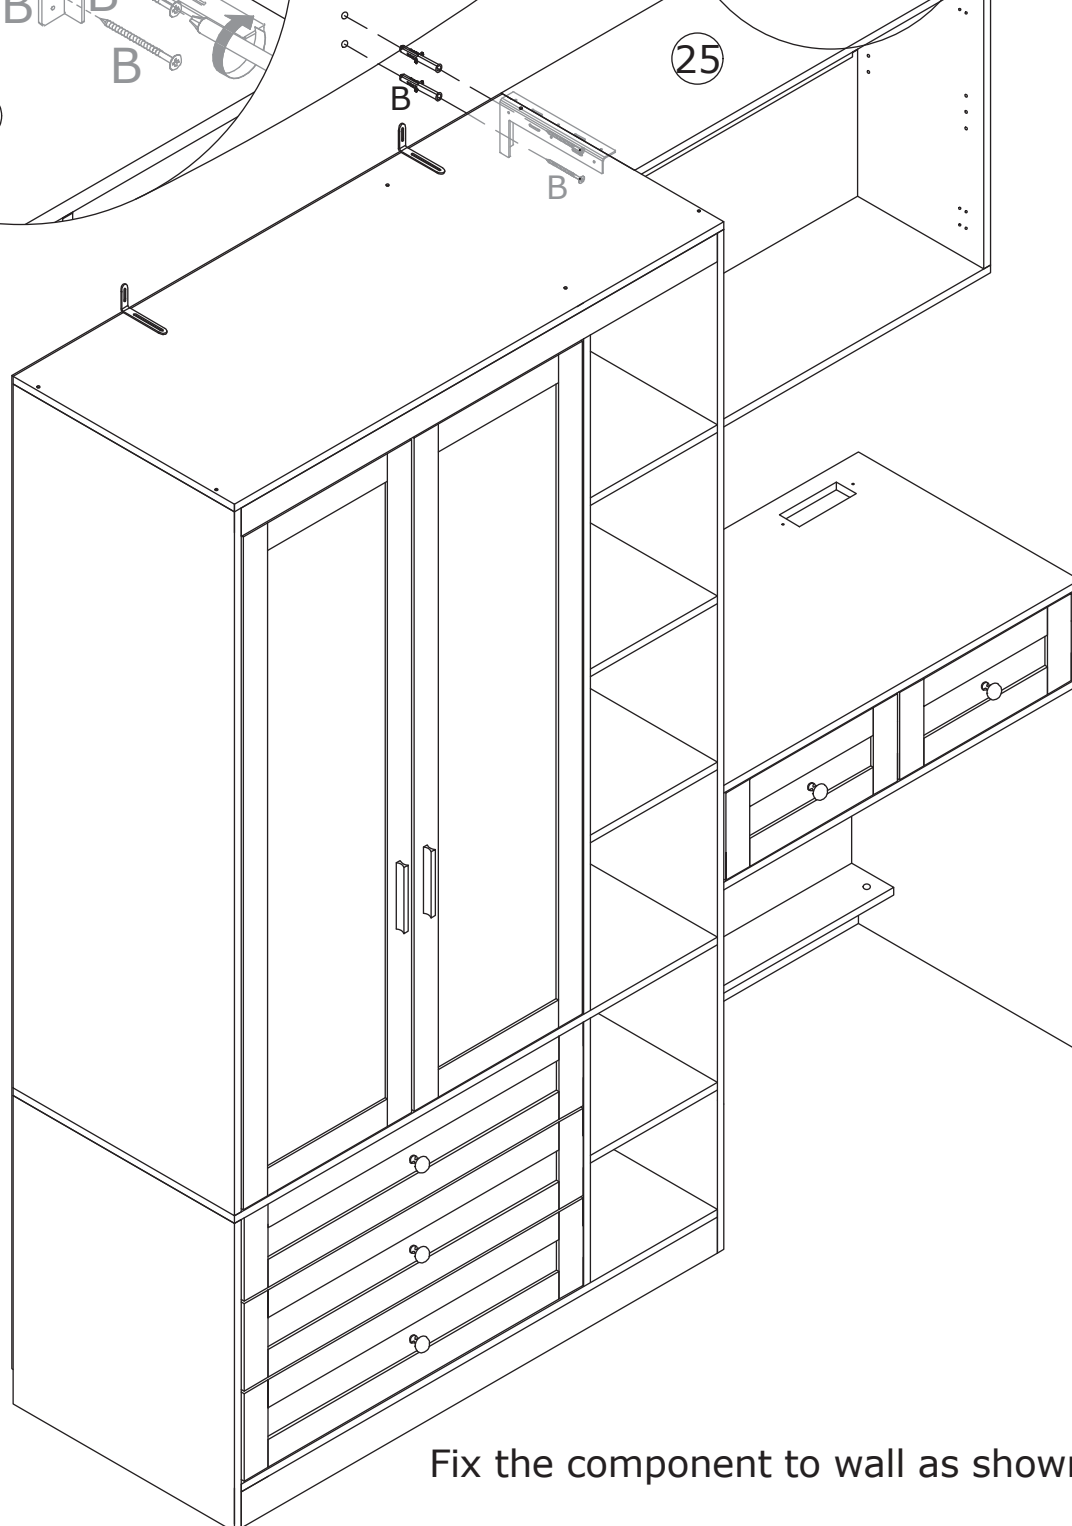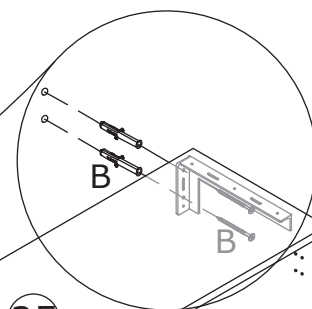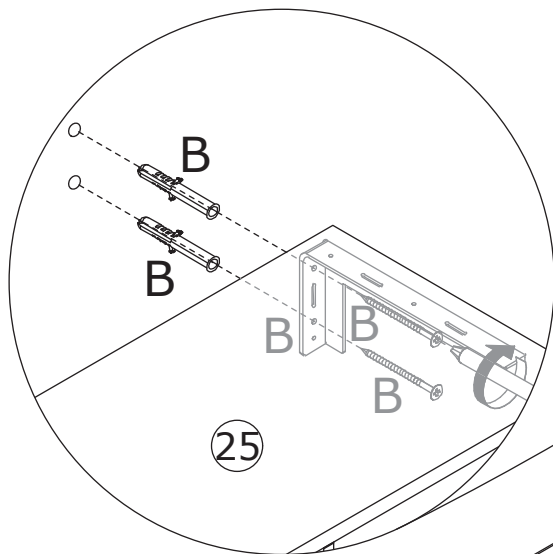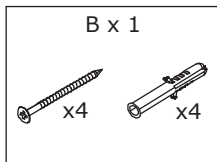


Fix the component to wall as shown.

  55

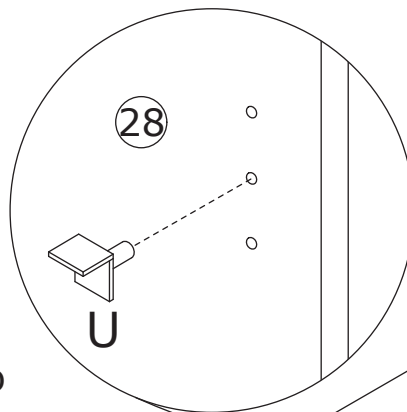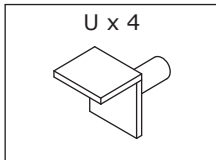


 Insert layer pin(U) into panel 27 and 28, and place shelf panel 32 on.

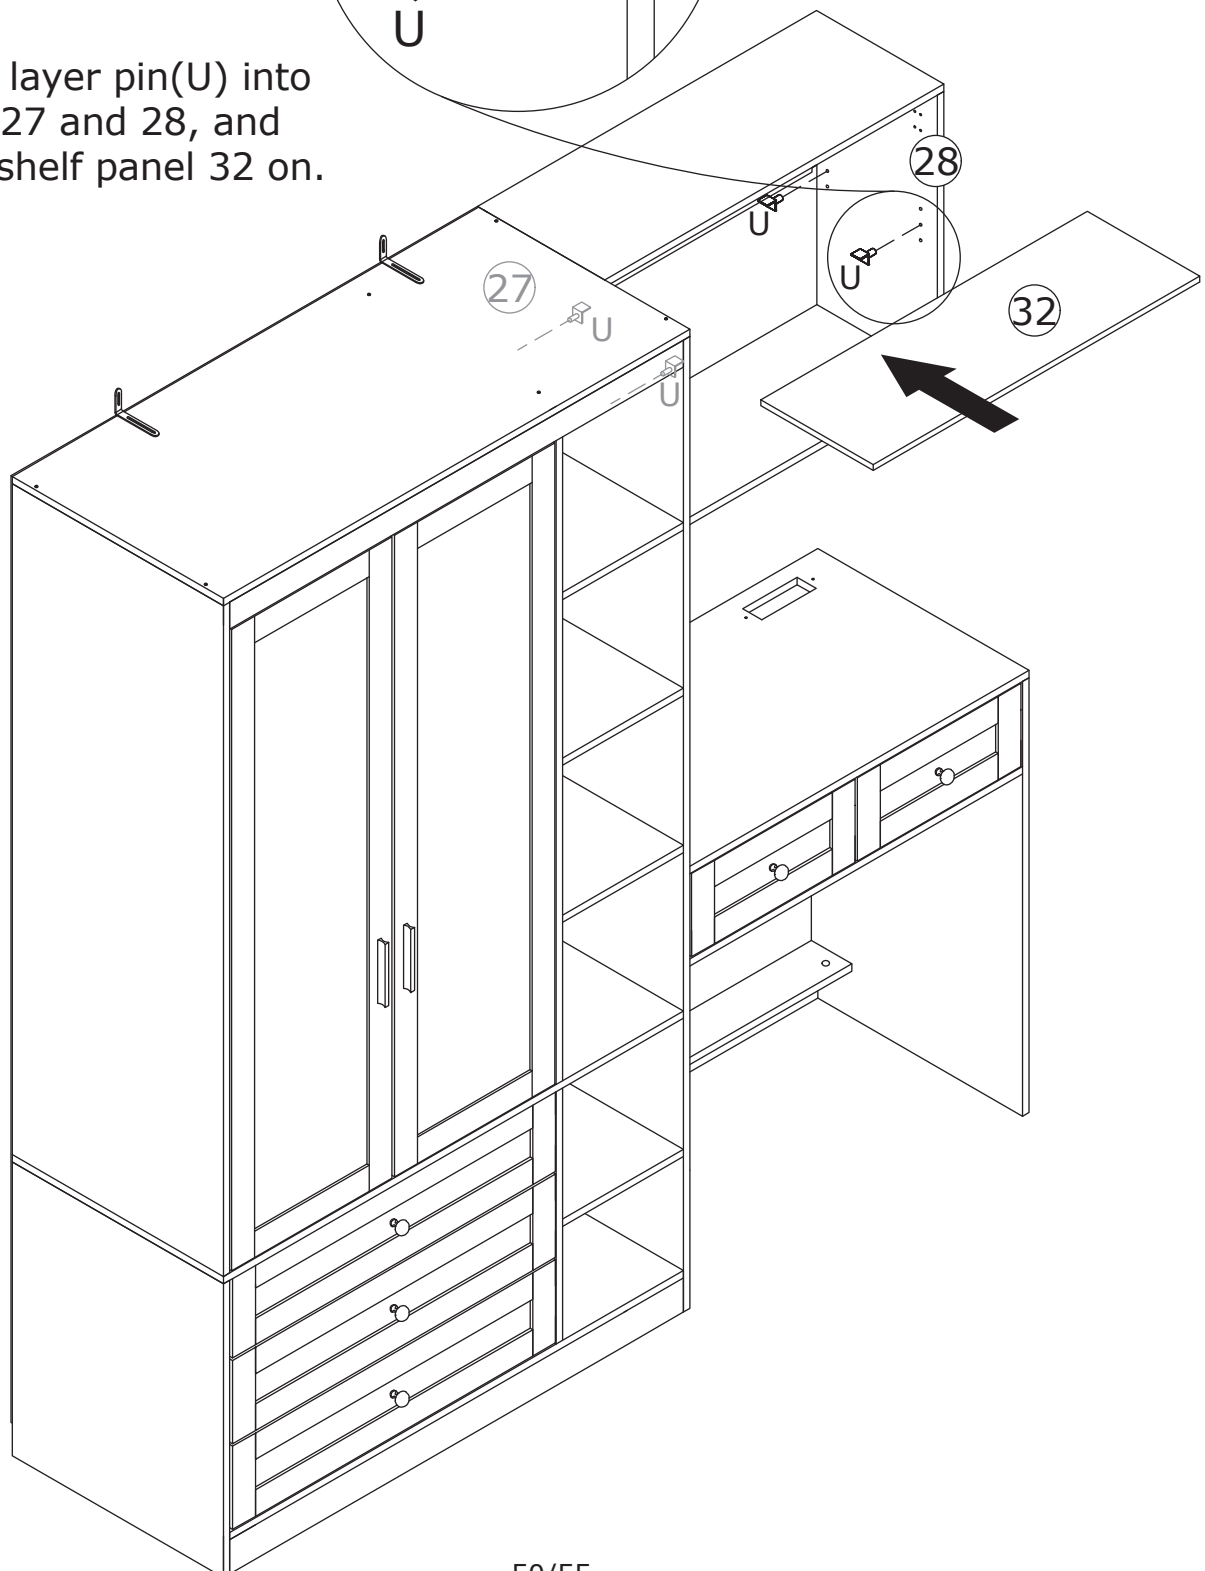


56

 
P x 4




Q x 8

 

Ø4 x 14 mm

 


 Fix hinge(P) to panel 35 and 36 with screw(Q) as shown.

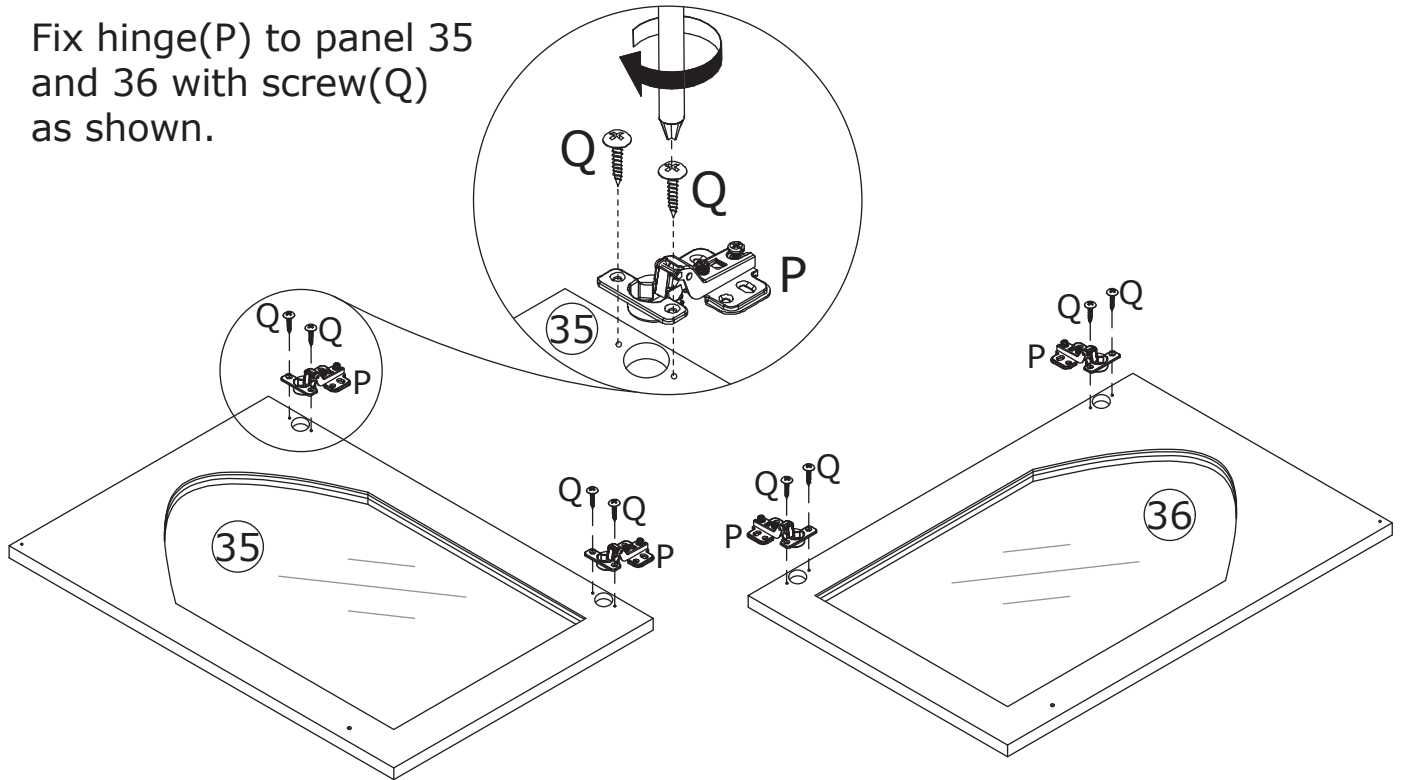

57

 A x 2



E x 2



Ø3 x 12 mm

 
R x 2




S x 2



Ø4 x 16 mm




 Fix part(A) and knob(R) with screw(E) and (S) as shown.



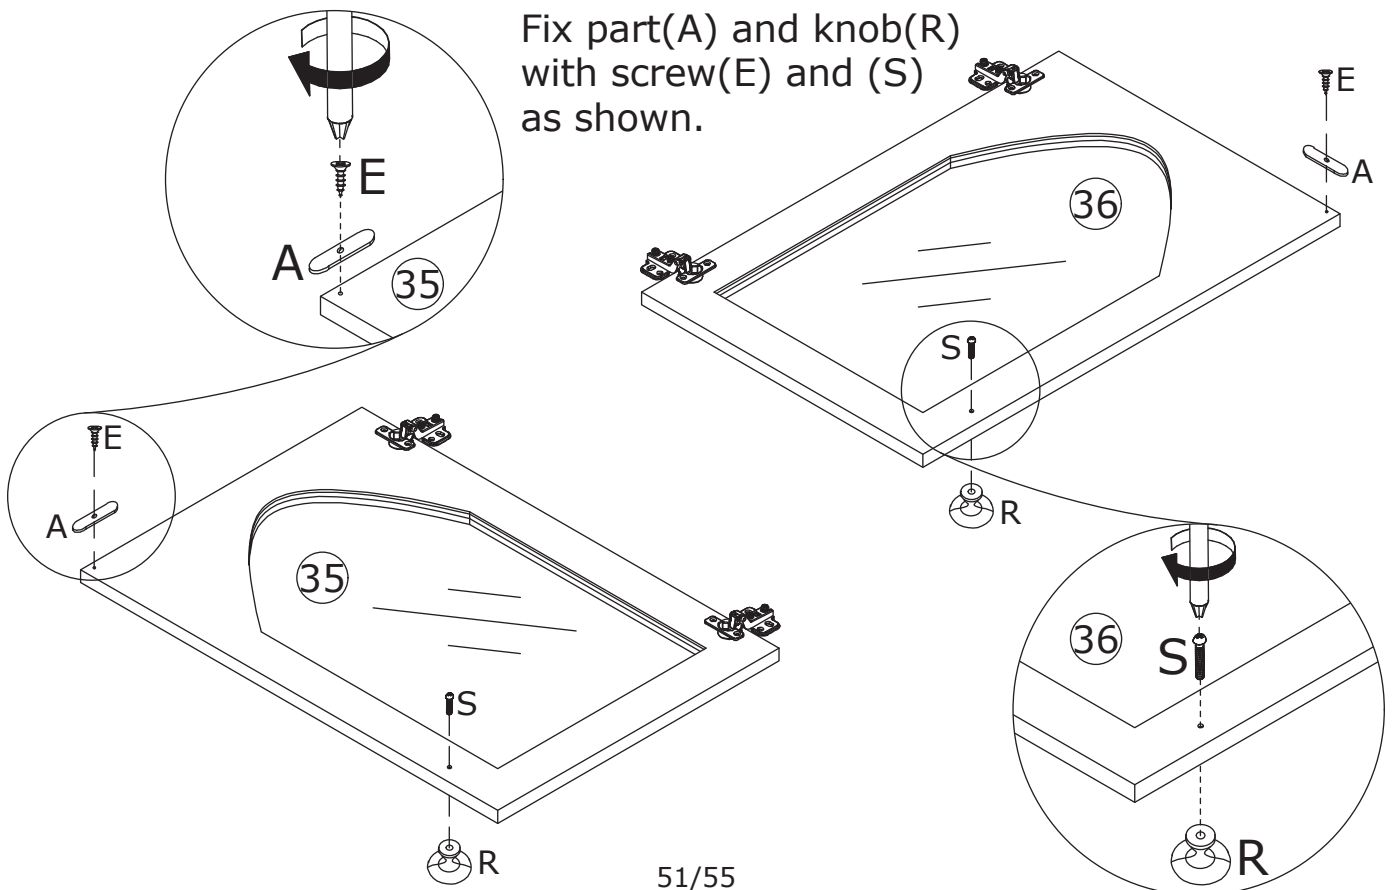


58

 Q x 16




Ø4 x 14 mm

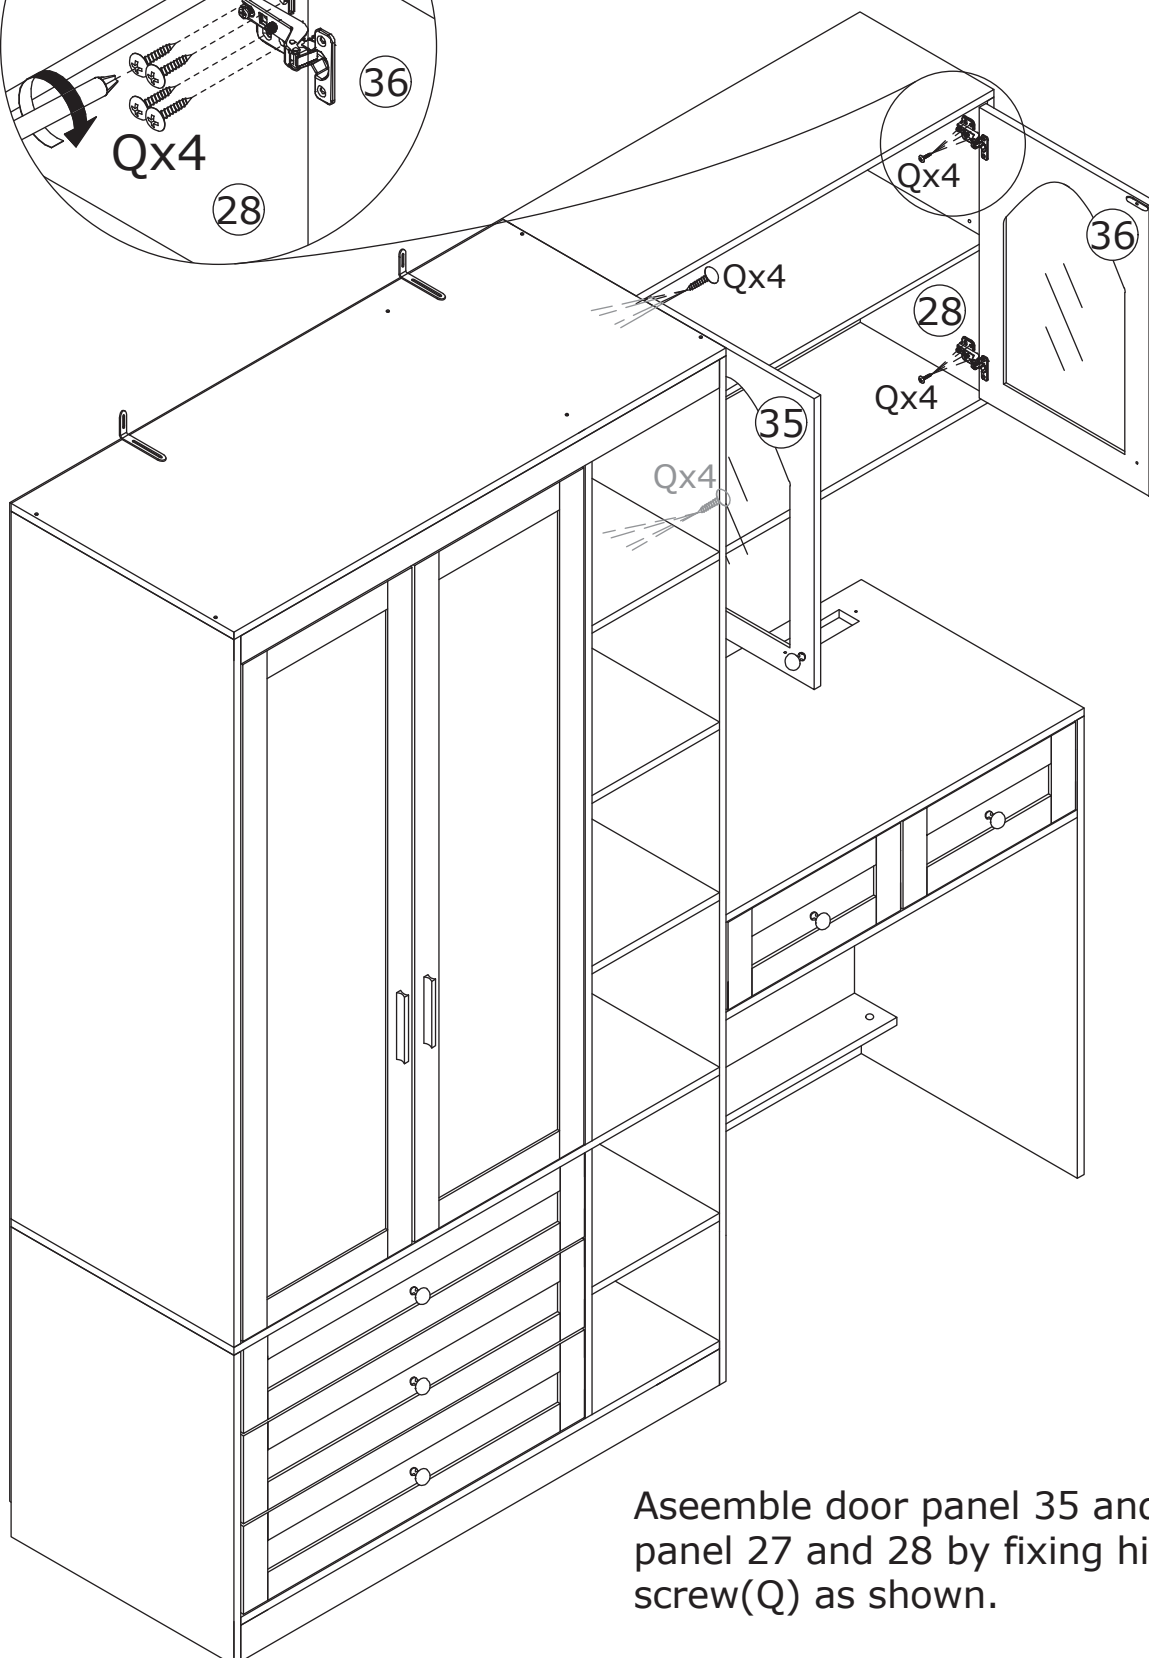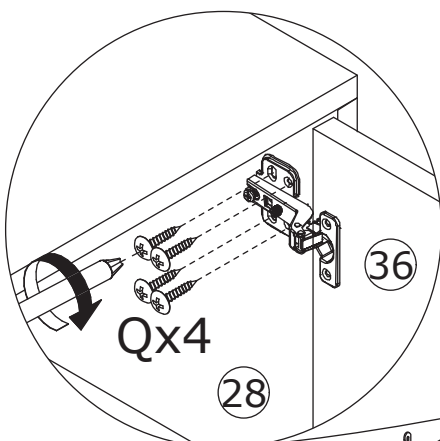   


Assemble door panel 35 and 36 to panel 27 and 28 by fixing hinge with screw(Q) as shown.

59




 
C x 1




E x 2

 

    
 
Fix part(C) to panel 18 with screw(E) as shown.

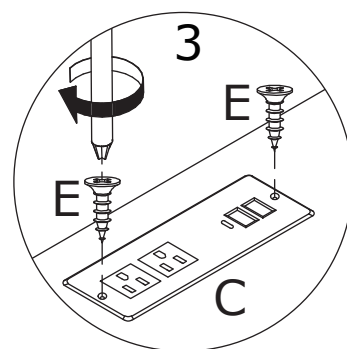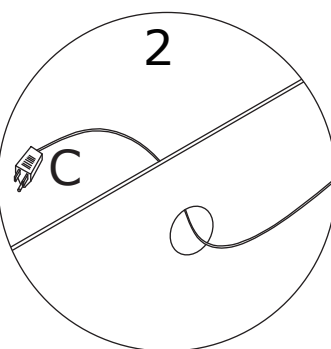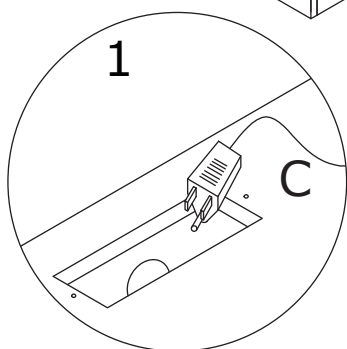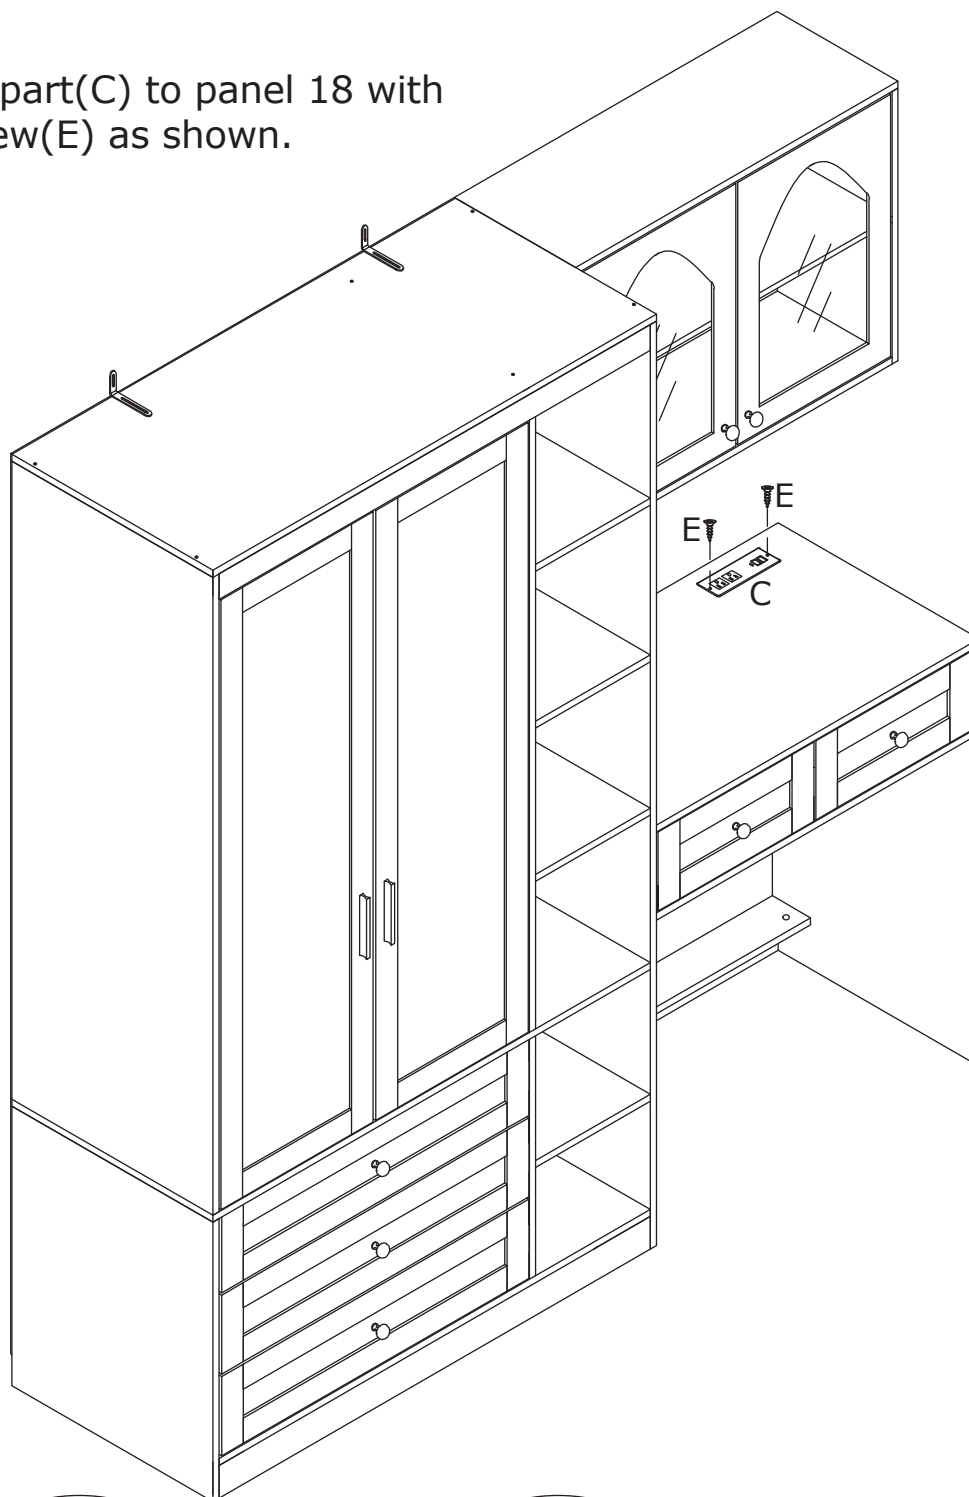




If doors are still not aligned if the hinges are properly correctly, please watch the video.

  
<https://youtu.be/n0Lb36SoODM>

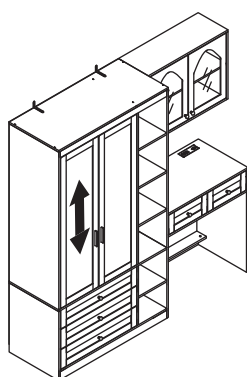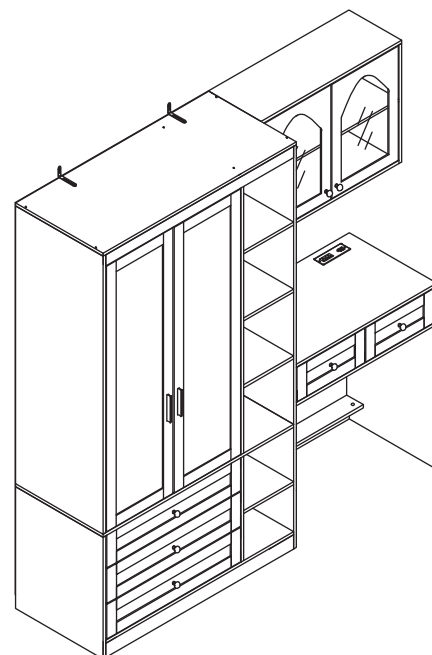



I

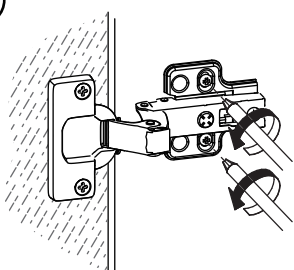 


II

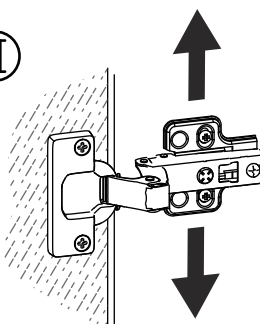 


III

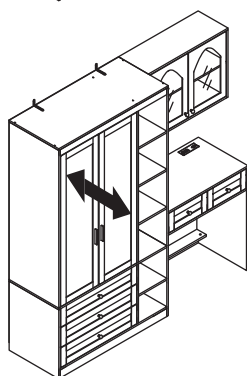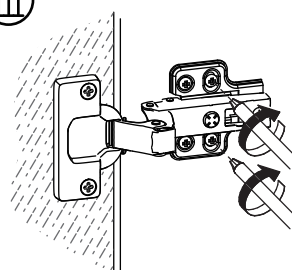  



I

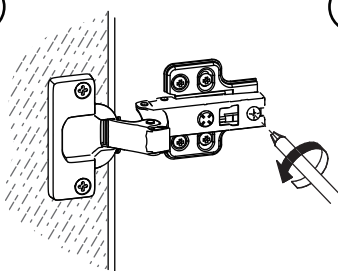 


II

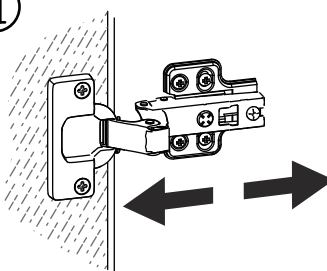 


III

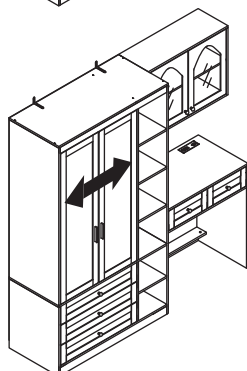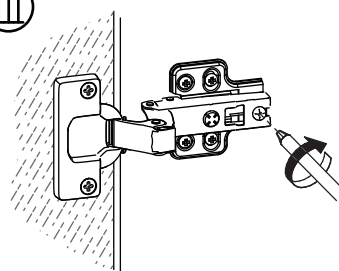  


I

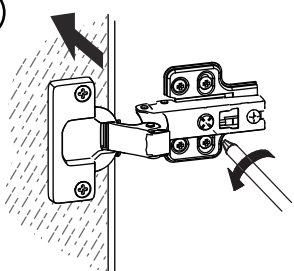 



II

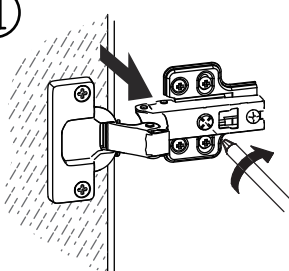 

61

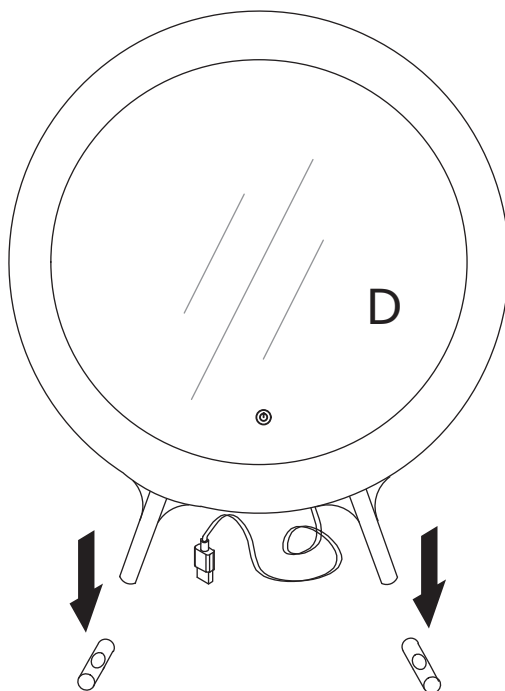 

62

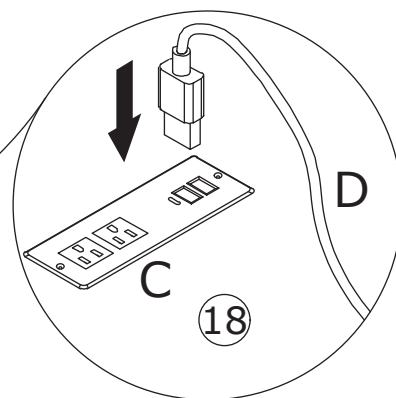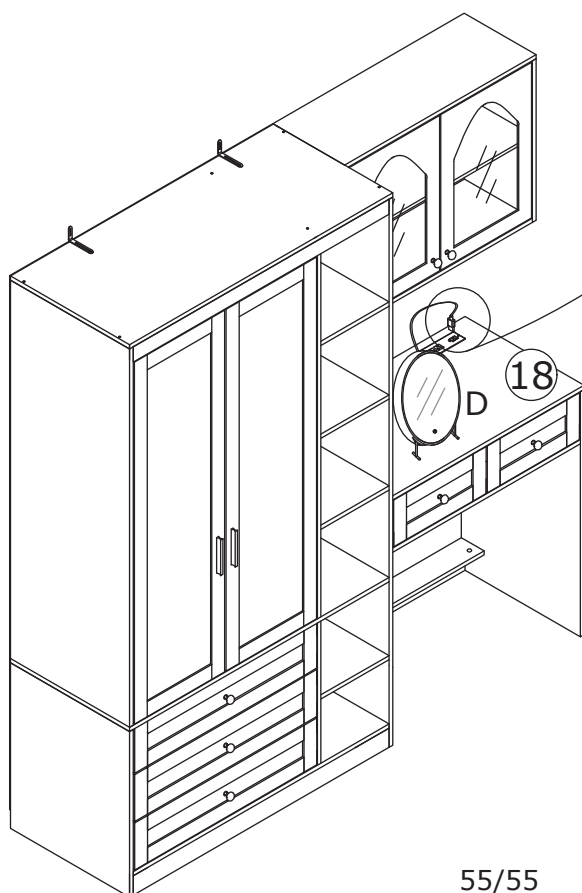  

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068