 
 


INSTRUCTION MANUAL

FOR WINE COOLER / BEVERAGE COOLER

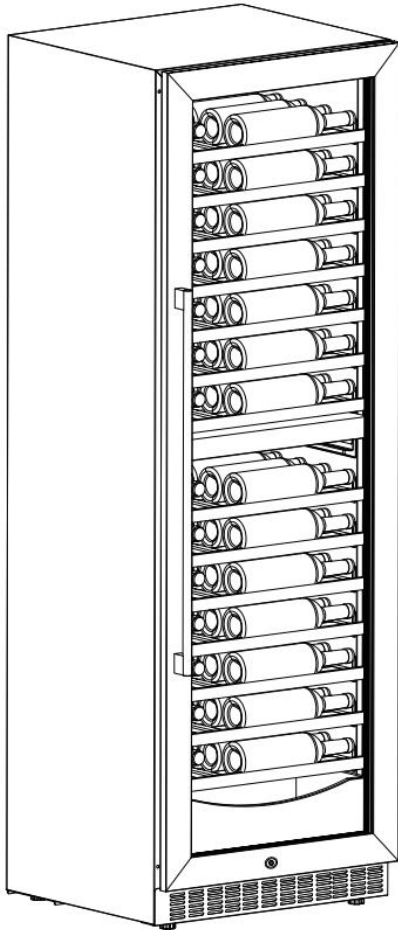

MODEL NO: JC-318B
ITEM NO: W51318

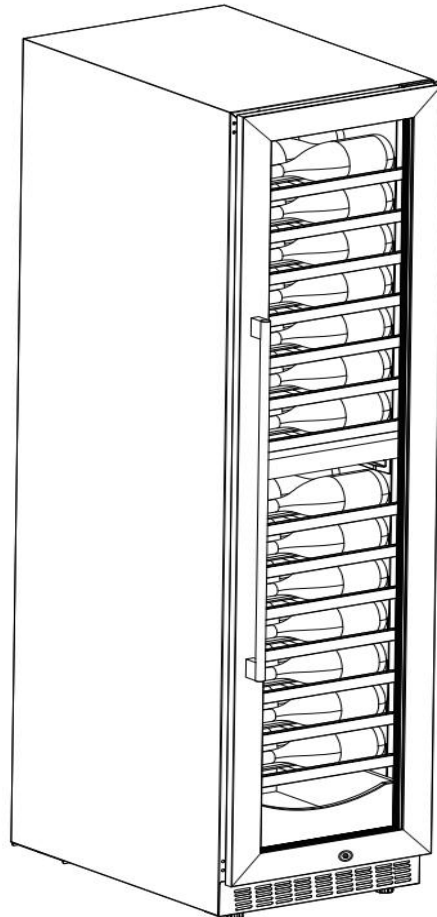

MODEL NO: JC-385B
ITEM NO: W51385

Thanks for buying our Wine Cooler/Beverage Cooler. Hope our advanced product will give your wine a different joyful taste. Before use, please read and follow all safety rules and operating instructions.

WARNING

- To prevent damaging the door gasket, make sure that the door is all the way open when pulling shelves out of the rail compartment.
- The appliance must be positioned so that the plug is accessible. Release the electric cord. Move your cabinet to its final location. Do not move your Cabinet while loaded with wine. You might distort the body. The wine cellar should be installed in a suitable place in order to avoid touching the compressor with a hand.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- If the supply cord is damaged, it must be replaced by the manufacturer or its Service agent or a similarly qualified person in order to avoid a hazard.

PLEASE DON'T TRY TO PLUG INTO OR EXTENSION THE CABLE IN ANY CASE.

IMPORTANT SAFETY INSTRUCTIONS

⚡WARNING⚡	To reduce the risk of fire, electrical shock, or injury when using your appliance, follow these basic precautions:
• Read all instructions before using the Wine cooler. • DANGER or WARNING: Risk of child entrapment. Child entrapment and suffocation are not problems of the past. Junked or abandoned appliances are still dangerous even if they will "just sit in the garage a few days". • Before you throw away your old Wine cooler/Beverage Cooler: Take off the door. Leave the shelves in place so that children may not easily climb inside. • Never allow children to operate, play with, or crawl inside the appliance. • Never clean appliance parts with flammable fluids. The fumes can create a fire hazard or explosion. • Do not store or use gasoline or any other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create • a fire hazard or explosion. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance. • WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction; • WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those Recommended by the manufacturer; • To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions. • WARNING: Do not damage the refrigerant circuit; • WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are the type recommended by the manufacturer. • If the refrigerant of these appliances are R600a , Flammable and explosive articles should not be put in or near the cabinet, to avoid the fire or explosion caused.	
-Save these instructions-	

INSTALLATION INSTRUCTIONS

➤ **Before Using Your Wine cooler/Beverage cooler**

- Remove the exterior and interior packing.
- Before connecting the Wine cooler/Beverage cooler to the power source, let it stand upright for approximately 2 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- Clean the interior surface with lukewarm water using a soft cloth.
- This appliance is intended to be used in household and similar applications such as
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses and by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - catering and similar non-retail applications.
- When disposing of your appliance, please choose an authorized disposal site.

➤ **Installation of Your Wine Cooler/Beverage cooler**

- This appliance is designed to be for free-standing installation or built-in (fully recessed) (Refer to sticker location on the back of this appliance).
- **This appliance is intended to be used exclusively for the storage of wine or beverages.**
- Place your Wine cooler/Beverage cooler on a floor that is strong enough to support it when it is fully loaded. To level your Wine cooler/Beverage cooler, adjust the front leveling leg at the bottom of the Wine cooler/Beverage cooler.
- This appliance uses flammability refrigerant. So never damage the cooling pipework during transportation. Locate the Wine cooler/Beverage cooler away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extreme cold ambient temperatures may also cause the unit not to perform properly.
- Avoid locating the unit in moist areas.
- Plug the Wine cooler/Beverage cooler into an exclusive, properly installed ground wall outlet. Do not under any circumstances cut or remove the third (ground) prong from the power cord. Any questions concerning power and/or grounding should be directed toward a certified electrician or an authorized products service center.

➤ **Attention**

- Store wine in sealed bottles;
- Do not overload the cabinet;
- Do not open the door unless necessary;
- Do not cover shelves with aluminum foil or any other shelf material which may prevent air circulation;
- Should the Wine cooler/Beverage cooler be stored without use for long periods it is suggested, after a careful cleaning, to leave the door ajar to allow air to circulate inside the cabinet in order to avoid possible formations of condensation, mold or odors.

➤ **Ambient Room Temperature Limits**

This appliance is designed to operate in ambient temperatures specified by its temperature class marked on the rating plate.

Class	Symbol	Ambient Temperatures range (°C / °F)
Extended Temperate	SN	+ 10°C/ 50 °F to + 32°C / 90°F
Temperate	N	+ 16°C / 61°F to + 32°C / 90°F
Subtropical	ST	+ 16°C / 61°F to + 38°C / 100°F
Tropical	T	+ 16°C / 61°F to + 43°C / 109°F

OPERATING YOUR WINE COOLER/BEVERAGE COOLER AND SETTING THE TEMPERATURE CONTROL

FOR JC-318B/C385B

➤ Control System Instruction



- Power switch : After the unit is power on, press  for 3 seconds to turn on or off the unit.
- °C/°F switch: Press °C/°F button to change the temperature unit between Celsius and Fahrenheit.
- Temperature setting button : Press  before adjusting temperature. When press it first time, the display flashes and shows the setting temperature. After 5 seconds it shows the measured interior temperature. Press  to increase the setting temperature and press  to decrease the setting temperature.
- 2 Display window: 2-digit LED display for each to show setting temperature or actual interior temperature.
- Light button : Press  to turn on or off. When open door, the light will be switched on automatically.
- Key lock function: If there is no any operation with digital control for 3 minutes, it will be locked automatically. Press  and  in the same time for 3 seconds to unlock.

➤ Setting The Temperature Controls

- When pressing the temperature setting button “+” or “-“, the system will enter the set up mode of the upper or lower compartment automatically. The LED display will flash and show the setting temperature. After 5 seconds the flash will stop and it will show the actual measured interior temperature.
- Press the button once, the temperature will decrease or increase by 1 °C/34 °F . After stopping pressing the button for 5 seconds, the LED figure will stop flashing, and then revert back to display the setting temperature of the upper or lower compartment.
- After the unit is unplugged, the system will return to default setting temperature, which the factory sets. The default setting temperatures are as below:
- Upper compartment: 6 °C/43°F
- Lower compartment: 12 °C/54°F
- **Upper compartment:** The temperature setting can be adjusted from 5°C/41°F to 12°C/54°F.
- **Lower compartment:** The temperature setting can be adjusted from 12°C/54°F to 20°C/68°F.

➤ **Attention**

 
- If the unit is unplugged, power lost, or turned off, you must wait 3 to 5 minutes before restarting the unit. If you attempt to restart it before this time delay, the Wine Cooler/Beverage Cooler will not start. If first-time use or long-absence of use, the setting temperature will be different from the LED display temperature. After running a period, the temperature will revert back to normal.

➤ **Shelves**

- To prevent damaging the door gasket, make sure to have the door all the way open when pulling shelves out of the rail compartment.
- For easy access to the storage content, you must pull the shelves approximately 1/3 out of the rail compartment, however, this unit was designed with a notch on each sides of the shelf tracks to prevent bottles from falling.
Please refer to the following instructions for replacing the shelf with different methods.


Type A

- If need to take out any shelf, move the shelf towards the gap on both sides and align it with shelf support A. Then lift the shelf and pull it out from the cabinet once the shelf support disengaged from the gap.

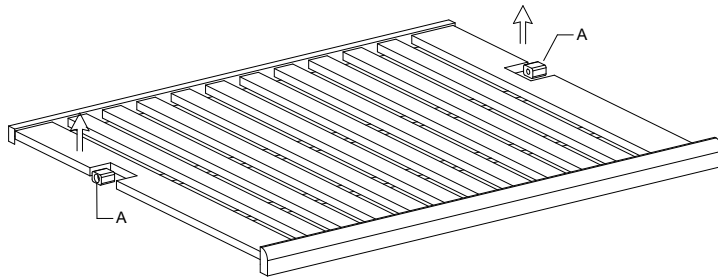


Type B

 When removing any of these shelves out of the rail compartment, to fit or remove the shelf, tilt the shelf as the diagram and simply pull it out, or push in the shelf until it sits on the support brackets securely.

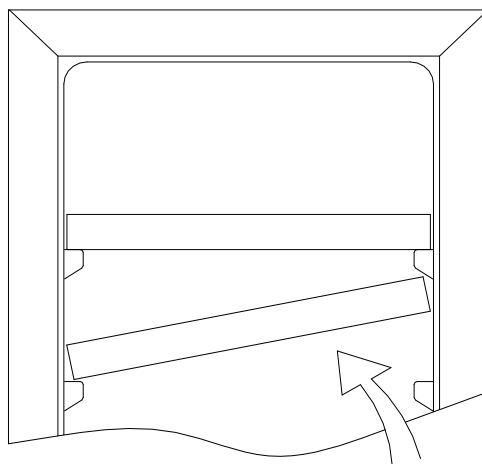


➤ Installation specifications for built-in purposes

 JC-318B

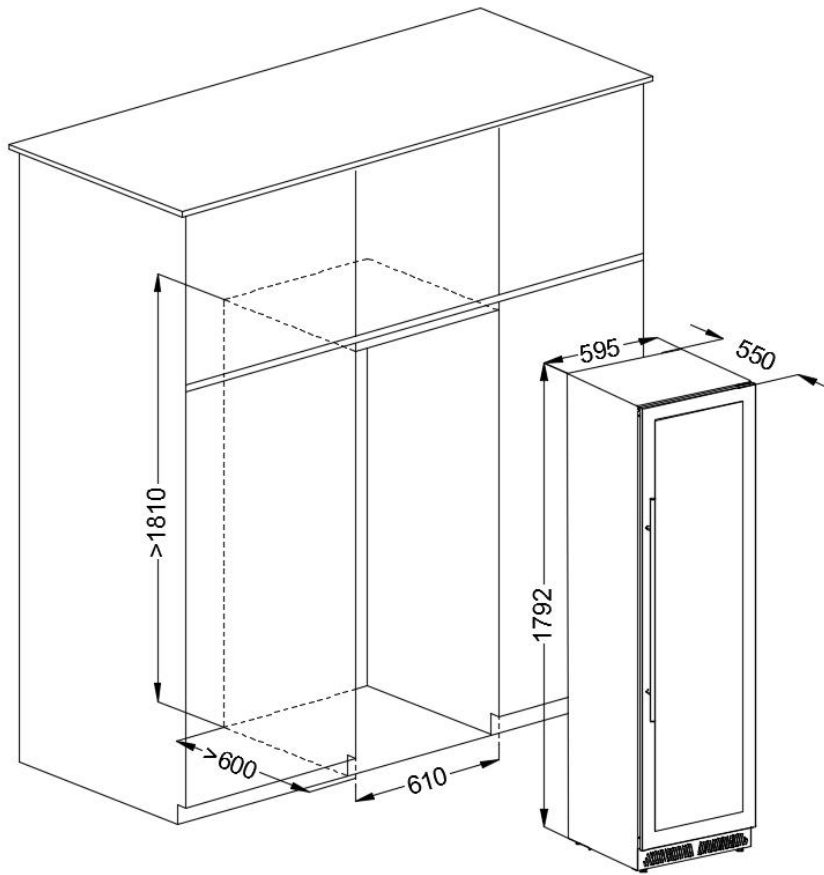

JC-385B

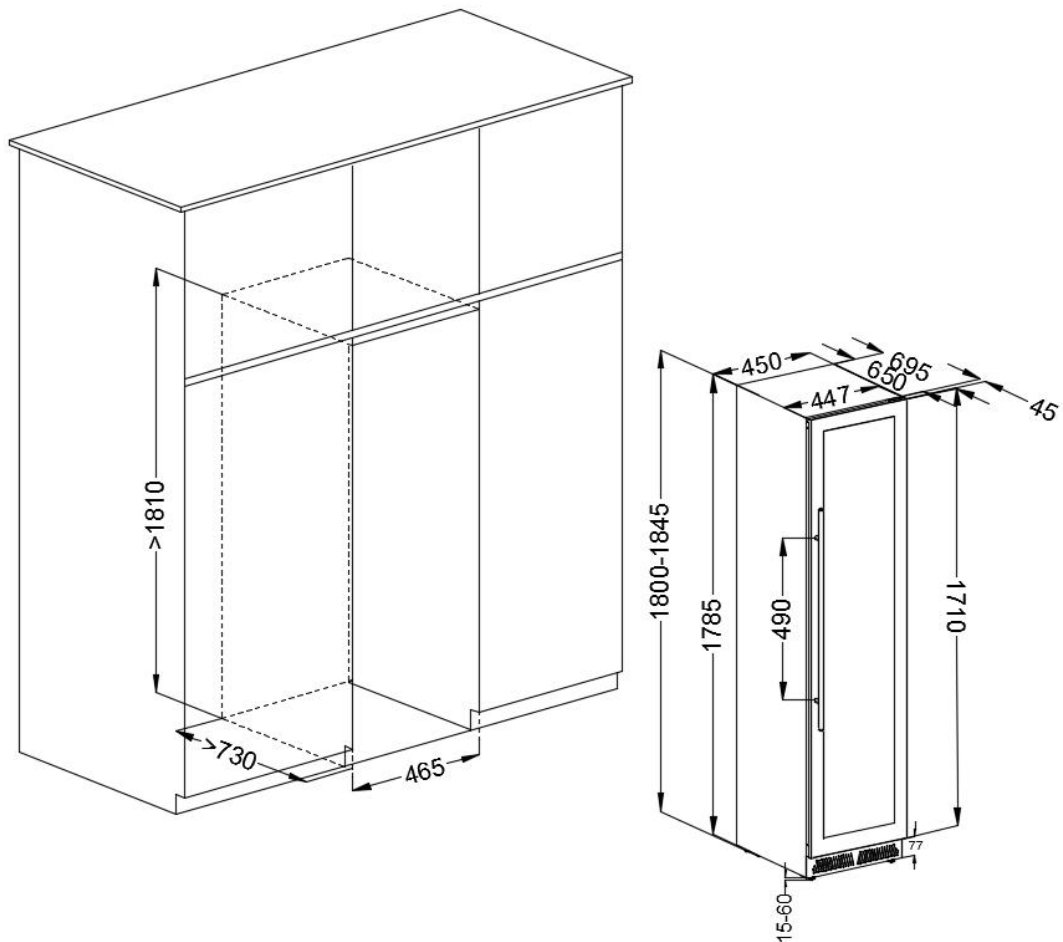 

UNPACKING AND CLEANING THE WINE COOLER

Remove the exterior and interior packing materials.

Let the appliance stand upright for approximately 4 hours before connecting it to the power source, which helps to reduce the possibility of a cooling-system malfunction from handling during transportation.

 
Use a soft cloth to clean the interior surface with lukewarm water.

Install the door handle provided with the appliance by following these steps:

Step 1 — Remove the gasket at the inner side of the door to expose the two screw holes.

Step 2 — Install the handle tightly with the screws and washers provided.

Step 3 — Tidy and restore the gasket.

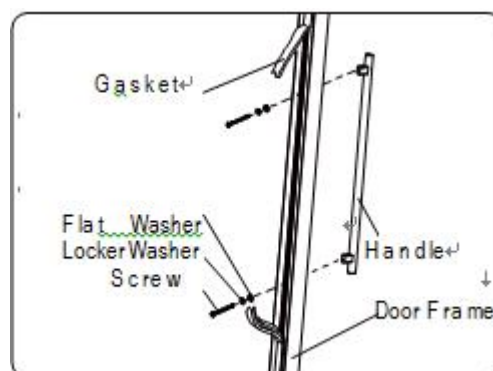

LOCK & UNLOCK THE DOOR (FOR OPTION)

Lock is an optional function. If your Wine Cooler has such a function, a key should be included inside the packing of this Manual.

 
Insert the key into the lock and turn it counter-clockwise to unlock the door. To lock it, please follow the reversed operation. Please save the key well.

CHARCOAL FILTRATION SYSTEM

Your wine is a living object that breathes through the cork of its bottle. In order to preserve the quality and taste of your fine wines, they must be stored at the ideal temperature and ambient conditions. Your cellar is equipped with an active charcoal filtration system to ensure air purity, cooling efficiency, and to maintain an odor-free cabinet for the storage of your fine wines. The filter assembly is located at the rear panel inside your cellar.

Keep in mind, that this filter must be changed every 12 months.

To replace your filter:

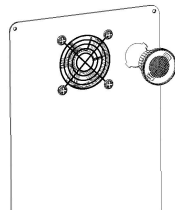1	Remove the bottles of wine stored on the two (2) shelves in front of the filter.	 Turn Left to remove filter.
2	Remove the shelves and set aside to be replaced once you have changed the filter	
3	Hold the filter and turn it at 45 degrees in the counter-clockwise direction and then pull it out.	
4	Remove the existing filter and replace it with a new one.	
5	Put the new filter into the hole and then turn the filter at 45 degrees in the clockwise direction.	

CARE & MAINTENANCE

➤ **Clean your Wine Cooler/Beverage Cooler**

Turn off the power, unplug the appliance, and remove all items including shelves and rack. Wash the inside surfaces with warm water and a mild solution.

Wash the shelves with a mild detergent solution.

Wring excess water out of the sponge or cloth when cleaning area of the controls, or any electrical parts.

Wash the outside cabinet with warm water and mild liquid detergent. Rinse well and wipe dry with a clean soft cloth.

➤ **Power failure**

Most power failures are corrected within a few hours and should not affect the temperature of your appliance if you minimize the number of times the door is opened. If the power is going to be off for a long period of time, you need to take the proper steps to protect your contents.

➤ **Vacation Time**

Short vacations: Leave the Wine Cooler/Beverage Cooler operating during vacations of less than three weeks.

If the appliance will not be used for several months, remove all items and turn off the appliance. Clean and dry the interior thoroughly. To prevent odor and mold growth, leave the door open slightly: blocking it open if necessary.

➤ **Moving your Wine Cooler/Beverage Cooler:**

Remove all items.

Take out the loose items inside the wine cooler/Beverage Cooler (such as the shelf), or fix the loose items with the foam.

Turn the adjustable leg up to the base to avoid damage.

Tape the door shut.

Be sure the appliance stays secure in an upright position during transportation. Also protect the outside of the appliance with a blanket or similar items.

➤ **Energy saving tips**

The Wine Cooler/Beverage Cooler should be located in the coolest area of the room, away from producing appliances, and out of direct sunlight.

PROBLEMS WITH YOUR WINE COOLER/BEVERAGE COOLER

You can solve many common Wine Cooler/Beverage Cooler problems easily, and save you the cost of a possible service call. Try the suggestions below to see if you solve the problem before calling the servicer.

Troubleshooting Guide

Problem	Possible Cause
Wine Cooler/Beverage Cooler does not operate	Not plugged in. The appliance is turned off. The circuit breaker tripped or a blown fuse.
Wine Cooler/Beverage Cooler is not cold enough	Check the temperature control setting. External environment may require a higher setting. The door is opened too often. The door is not closed completely. The door gasket does not seal properly.
Turns on and off frequently	The room temperature is hotter than normal. Overload of the cabinet The door is opened too often. The door is not closed completely. The temperature control is not set correctly. The door gasket does not seal properly.
The light does not work	Not plugged in. The circuit breaker tripped or a blown fuse. The bulb has burned out. The light button is "OFF"
Vibrations	Check to make sure that the Wine Cooler/Beverage Cooler is on level ground.
Too much noise	The rattling noise may come from the flow of the refrigerant, which is normal. As each cycle ends, you may hear gurgling. Contraction and expansion of the inside walls may cause popping and crackling noises. The Wine Cooler/Beverage Cooler is not level.
The door will not close properly	The Wine Cooler/Beverage Cooler is not level. The door was reversed and not properly installed. The gasket is dirty. The shelves are out of position.

Before disposal of the appliance.

1. Disconnect the main plug from the main socket.
2. Cut off the main cable and discard it.

	Correct disposal of this product
	This symbol on the product, or in its packaging, indicates that this product may not be treated as household waste. Instead, it should be taken to the appropriate waste collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by the inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council, your household waste disposal service, or the shop where you purchased the product.

Thank you for purchasing this product! If you have any questions about the product, such as missing parts, damaged products, product assembling, and operation, please contact us via **Amazon Message** or customer service number: **213-4467172 or 661-4358826.**

IMPORTANT

Please call our customer service department for any consulting:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

DATED PROOF OF PURCHASE IS REQUIRED FOR WARRANTY SERVICE.

AVIS

Veuillez appeler le service à la clientèle pour toutes questions au:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

PREUVE D'ACHAT ORIGINALE REQUISE POUR SERVICE DE GARANTIE.

IMPORTANTE

Sólo hay que llamar nuestro departamento de servicio al cliente en caso de tener preguntas o inquietudes:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

SE REQUIERE PRUEBA DE COMPRA CON FECHA PARA SERVICIO BAJO GARANTÍA.

Address: ROWAN ELECTRIC APPLIANCE LLC

28407 Ascent Way, Santa Clarita, CA 91350

Phone: 213-4467172 or 661-4358826