


OPERATION INSTRUCTIONS

**PLEASE READ ALL OPERATION INSTRUCTIONS
BEFORE ATTEMPTING TO OPERATE**


- Open or close the blind (A) slats by turning the wand (B) until the slats are opened or closed to the desired amount.

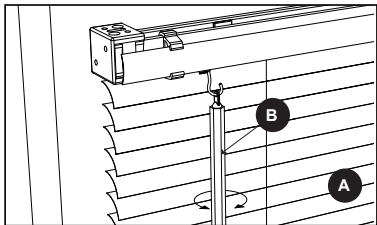

- Press and hold the center LiftLock (LL) button on the bottom rail to raise or lower the blind (A) before lifting or lowering the bottom rail to the desired height.

**NOTE: DO NOT ATTEMPT TO RAISE OR LOWER
WITHOUT PRESSING AND HOLDING THE CENTER
LiftLock (LL) BUTTON.**


DOING SO COULD DAMAGE THE BLIND.

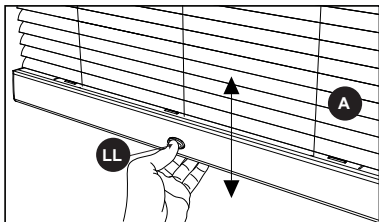

INSTRUCCIONES DE OPERACIÓN

**POR FAVOR LEA TODAS LAS INSTRUCCIONES DE
OPERACIÓN ANTES DE PONER EN
FUNCIONAMIENTO**

- Abrir o cerrar las tablillas (A) de la persiana girando la varita (B) hasta que las tablillas se abran o se cierran a la cantidad deseada.

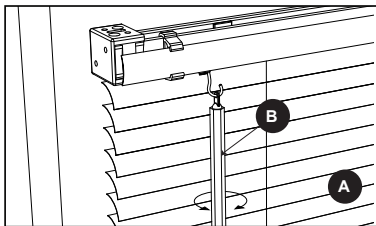

- Presione y mantenga el botón central Liftlock en el riel inferior para subir o bajar la persiana antes de levantar o bajar el riel inferior a la altura deseada.

**NOTA : NO INTENTE subir o bajar la persiana sin
presionar el botón central Liftlock.
Al hacerlo, dañará la persiana.**

