## 7.3 in / 186 mm

4.9 in / 125 mm

◆ If do not operate as request,may cause,death,severely injured or serious property loss.

Before wring please make sure to cut off the power.

Forbid to connect UNIVW output end to AC power supply, otherwise caus the totally damage of the inverter.

The inverter is forbidden to install on flammables, otherwise have the

The ground tenninal of the inverter must be grounded well.

The ground tenninal of the inverter must be grounded well.

Don, Install it in the environment with explosive gas, otherwise have the risk of explosion.

Only professional people may carry on the wining converter intermal has high pressure, and prohibits secretly opening the shell.

Power Run Stop FWD REV r/min

FWD REV

DISP

PROG

FUNC DATA

Sin