M MODERN EMBER



Fire Crackler Sound System

Model: ME-FCSB

OWNER'S MANUAL

Important Safety Information

To ensure safe use and avoid potential hazards, please read the following safety instructions carefully before operating the product:

. Keep Away from Heat Sources and Open Flames Do not place the product near heat-emitting appliances such as heaters, microwave ovens, rice cookers, or high-voltage cookers. Do not place on or near open flames. Excessive heat may cause the product to

overheat or catch fire.

2. Avoid Impact or Dropping

Do not drop, strike, or subject the product to strong impact, as this may result in battery damage or explosion. 3 Supervise Child Use

If the product is used by children, adult supervision is required to ensure safe and proper operation.

4. Use in Appropriate Environment

Do not use the product in extremely low temperatures or in environments with high humidity. Always keep the product dry, as exposure to rain or moisture may cause fire or electric shock. Not recommended for outdoor use. Recommended Temperature Range for Use: 18°C to 30°C / 64°F to 86°F.

5. Keep Away From Liquids

Do not expose the product to dripping or splashing. Avoid placing containers filled with liquids, such as vases, on or near the device. Spilling liquids into the product may cause malfunction, electric shock, or

6. Do Not Disassemble or Repair

Unauthorized disassembly or repair may cause malfunction or injury. Contact qualified service personnel for support.

7. Maintain Safe Distance from Medical Equipment Keep the product at least 20 cm / 8 in. away from medical devices to

prevent potential interference. 8. Cleaning Instructions

To clean the device, gently wipe it with a soft cloth moistened with warm water or a mild detergent. Then, dry thoroughly with a soft, dry cloth. Do NOT use harsh chemicals, solvents, or abrasive cleaners.





Operating Instructions

- 1. The battery must be charged before the first use.
- Use the provided charging cable to charge the crackler sound box. The LED battery charge display will illuminate red while charging. Once fully charged, the battery charge display will turn green. If the product has been stored for a long time, you will need to recharge the
- 3. Power on the unit and enjoy the relaxing sound of a
- 4. Adjust the volume and sound settings to suit your preferences.
- 5. The crackler sound box features a built-in timer that automatically turns off the device after 3 hours of use.
- 6. Memory feature stores the last sound and volume settings for your convenience. To reset the device, press and hold the power button for 5 seconds. This will erase all saved settings and restore the device to its default

Low Battery Warning

- 1. A low battery alert will activate every 30 seconds once the battery voltage reaches 3.4V.
- 2. If the battery voltage drops to 3.3V, the device will emit a 5-tone warning sound and then shut down automatically to protect the battery.

Rechargeable: 5V === 0.65A 2000mAH



Thank you for purchasingour Fire Crackler Sound System

Each unit has been manufactured to ensure safety and reliability Before first use, read the instructions carefully and keep them for further reference.

Questions, problems, missing parts? Before returning to store, call Customer Service:

8am-5pm CST, Monday - Friday

Phone: 877-430-0703

Email: info@modernember.com


Retain this manual for future use.




Contents

- 1. Crackler Sound Box System
- 2. USB Charging Cable
- 3. User Manual

Kev Buttons & Features

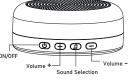

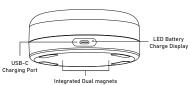

Button	Description
Ů	Turn the device on. Press and hold the power button for another 3 seconds to turn the device off.
13	Press the sound selection button to start playing the sound. Press again to change the sound. There are 3 different sound effects.
+	Press the + button to increase the volume. There are 5 volume levels.
_	Press the - button to decrease the volume.

- * Unique identifier Model: ME-FCSB
- Responsible Party U.S. Contact Information
- *Company Name: Net Direct Merchants
 *Street Address: 217 N. Seminary Street City
- State: Florence, Alabama Zip Code AL 35630
- * Telephone number: 877 430 0703
- * Customer Service: info@modernember.com
- * Website: www.modernember.com
- * FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired