



100x100	400x100
200x100	400x200
200x200	400x300
300x200	400x400
300x300	600x400




CAUTION: DO NOT EXCEED  
RATED LISTED WEIGHT. SERIOUS  
INJURY OR PROPERTY DAMAGE  
MAY OCCUR!

**ATMSS6401-02**

 
 
## PART LIST








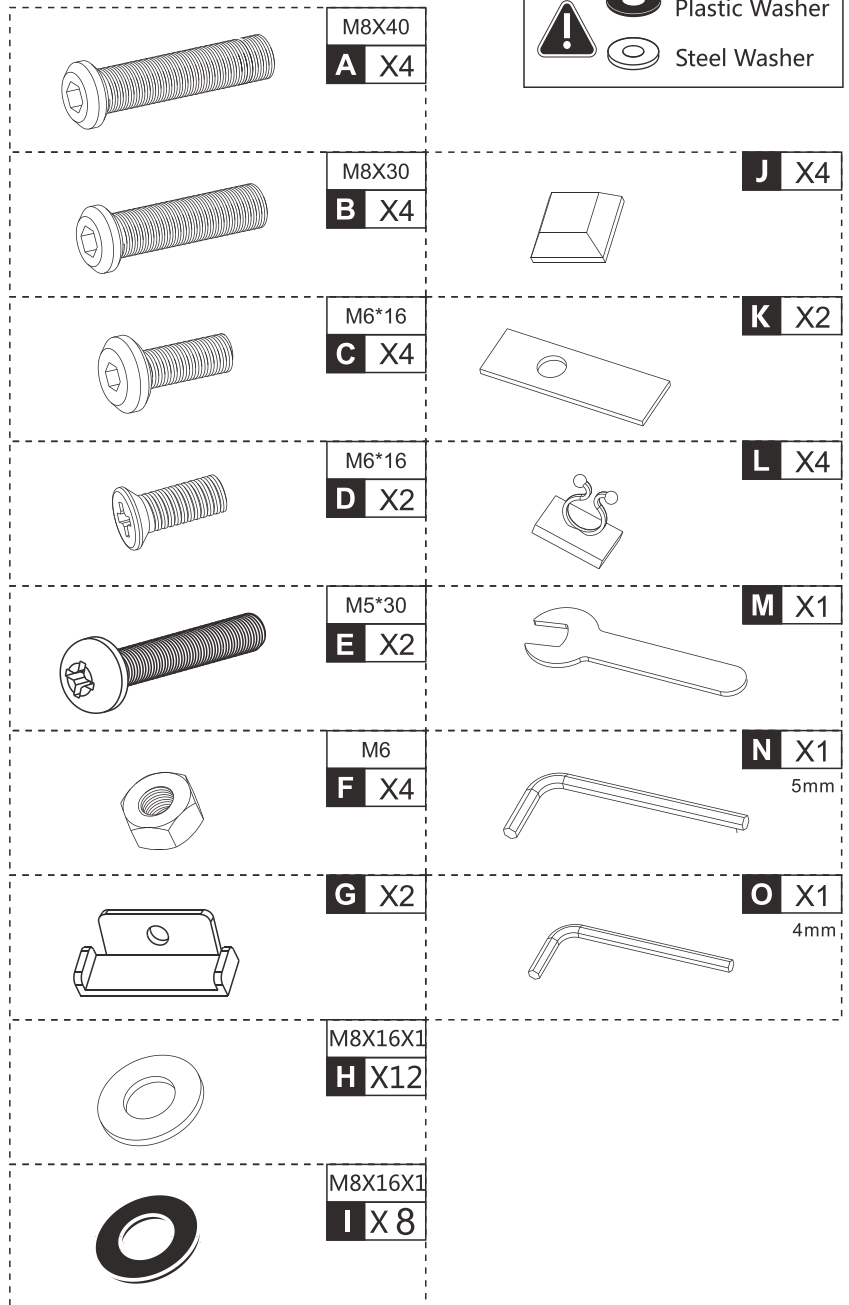
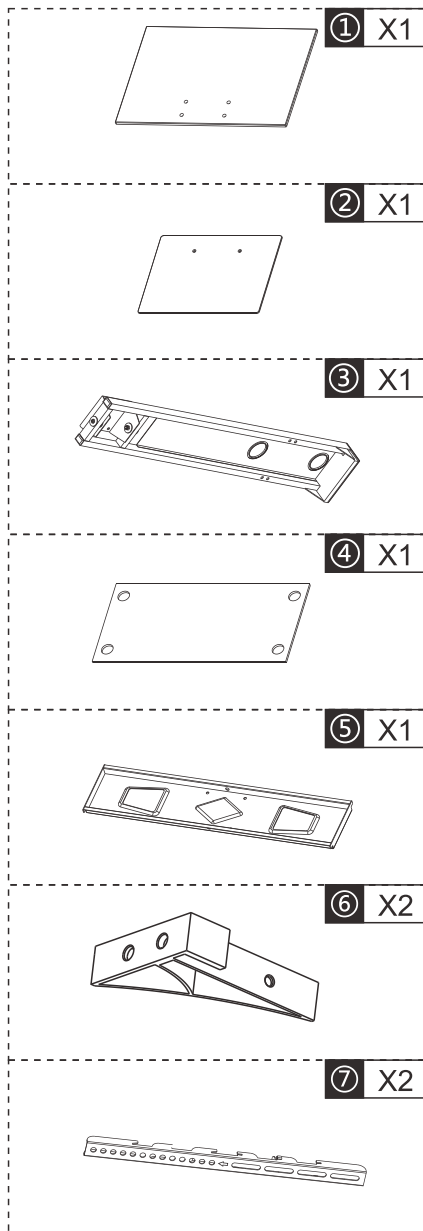


## FOR TV INSTALLATION


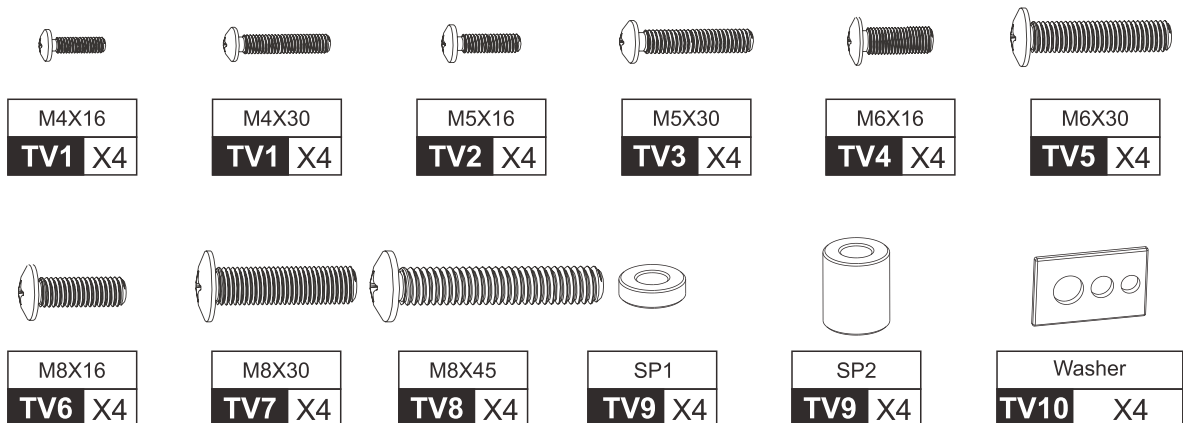 


# 3

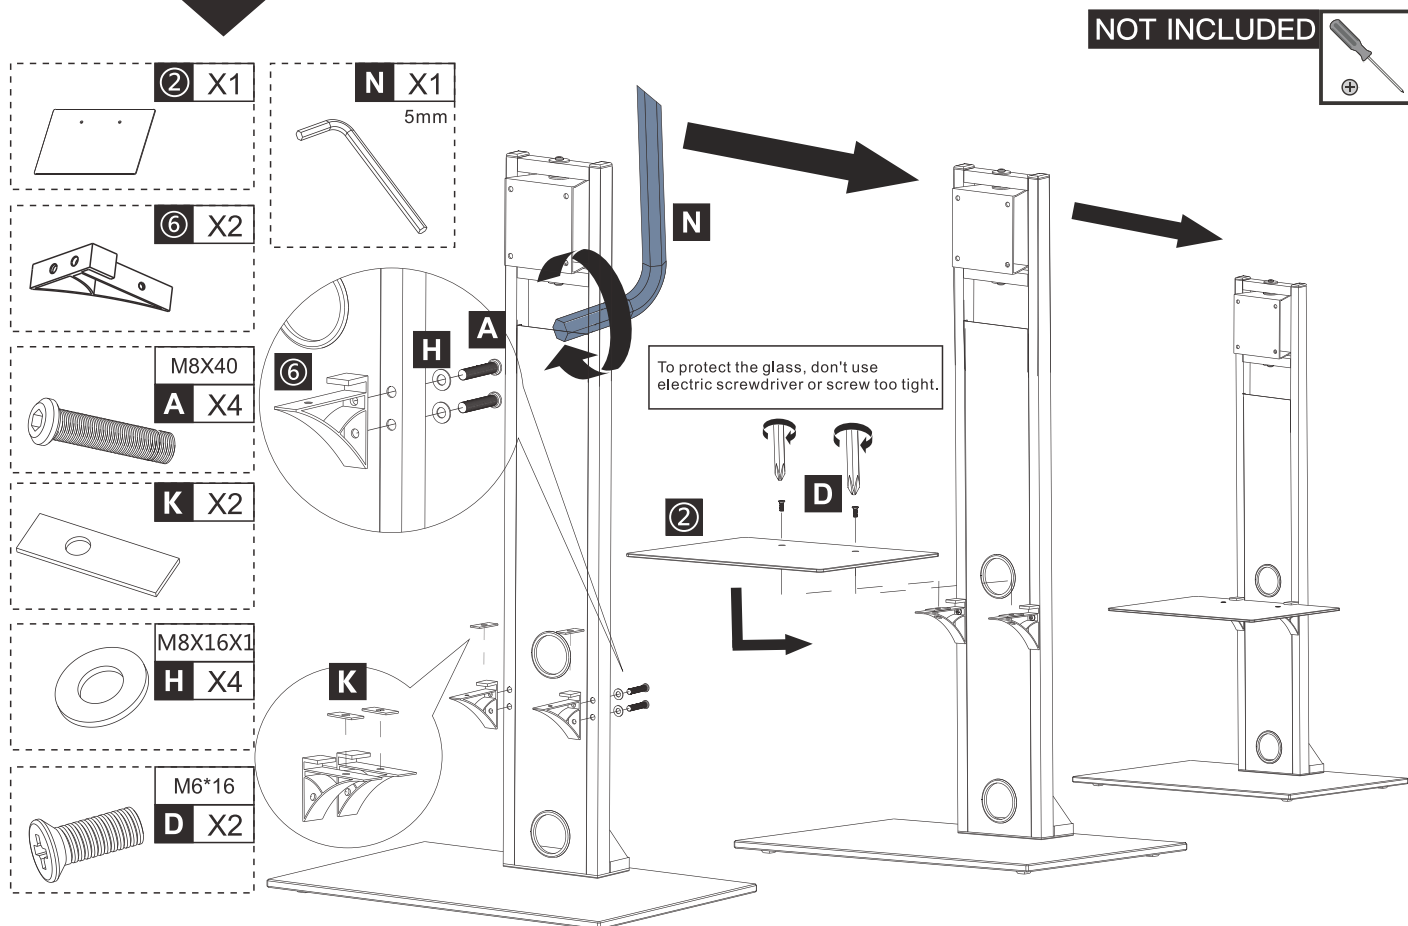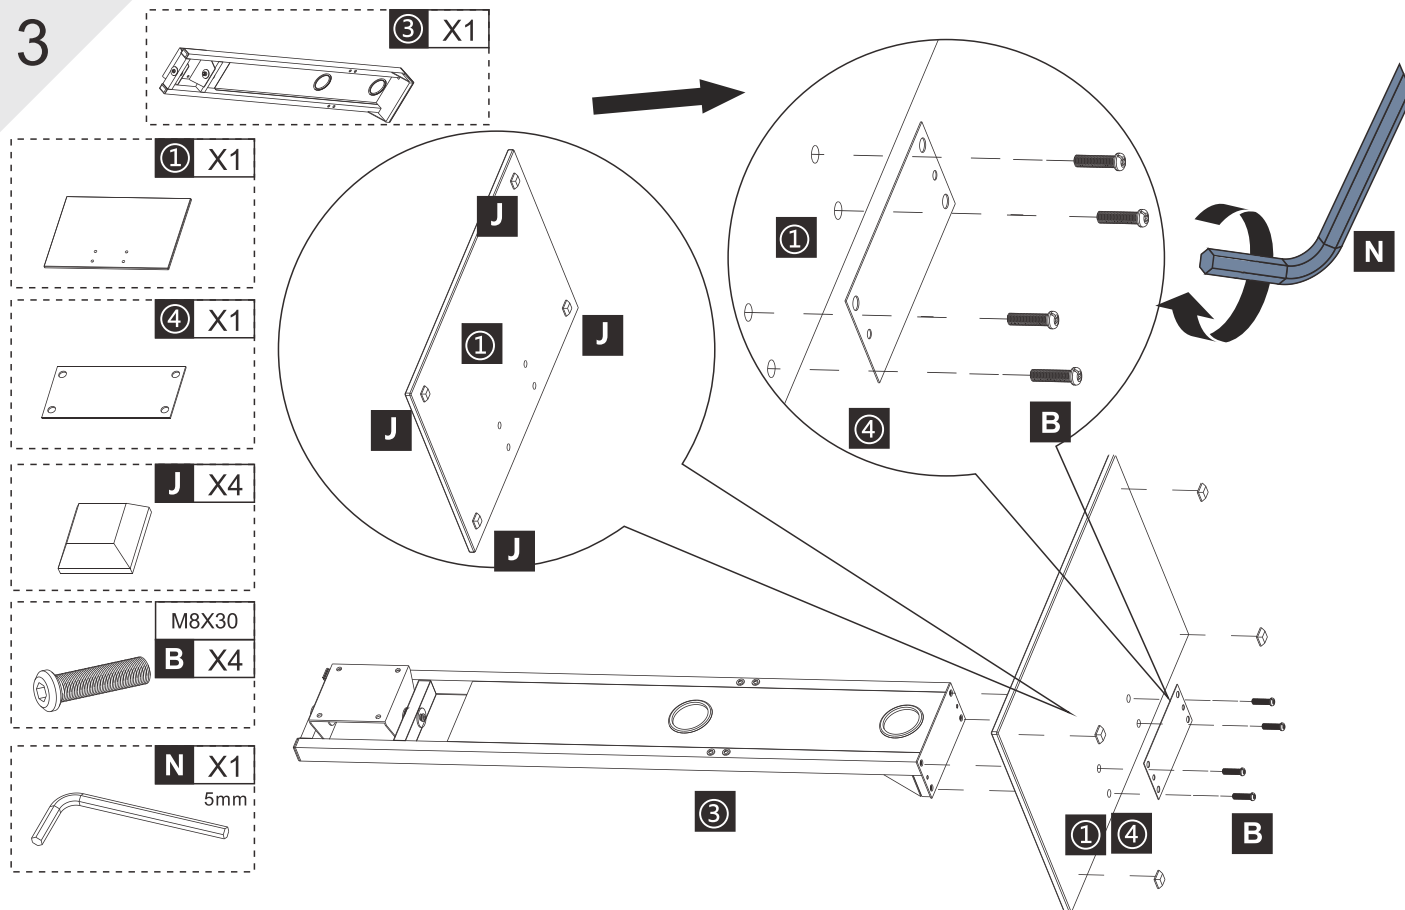  

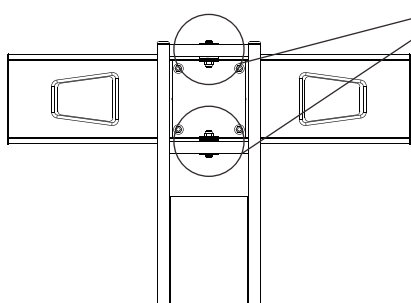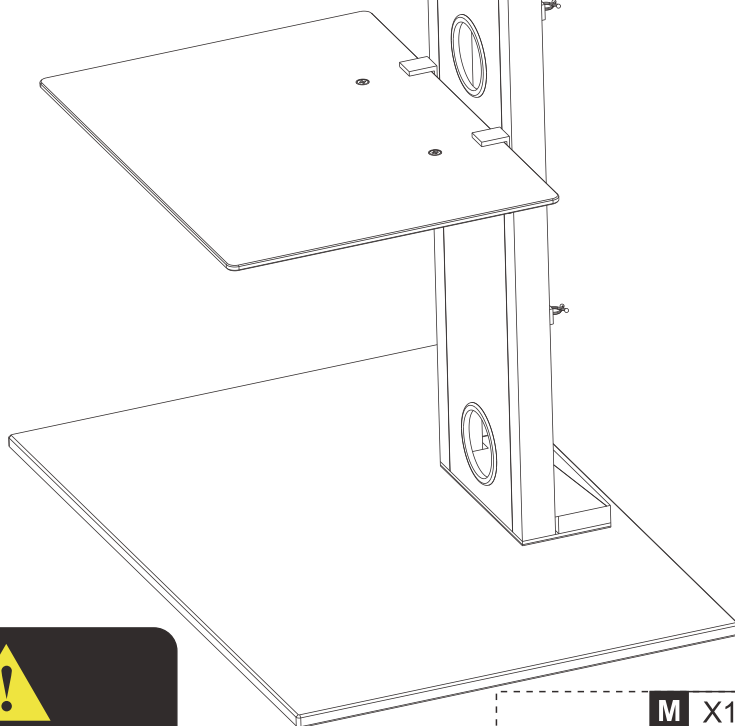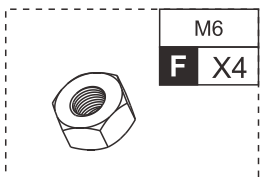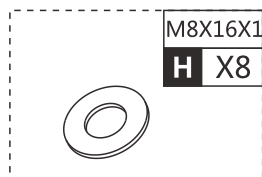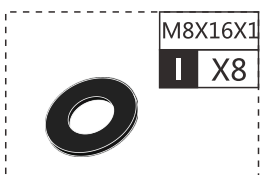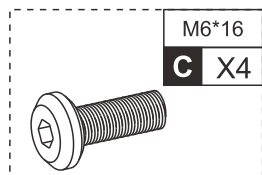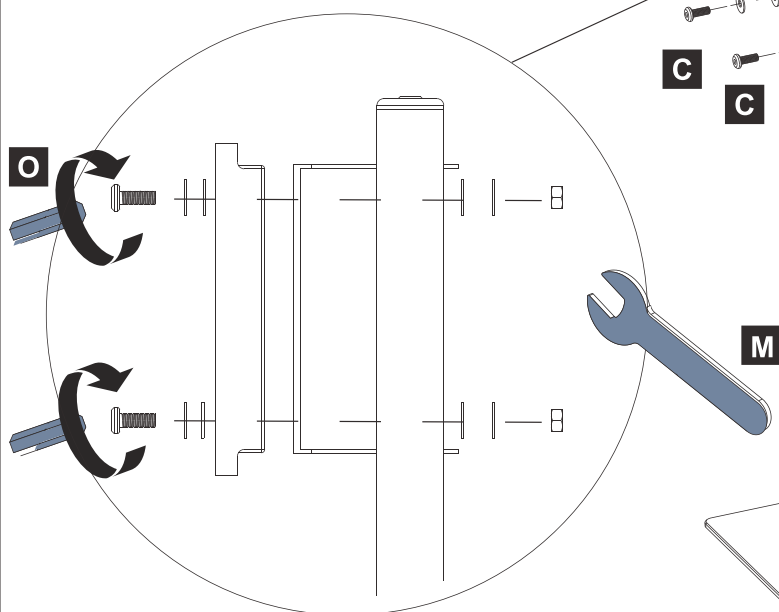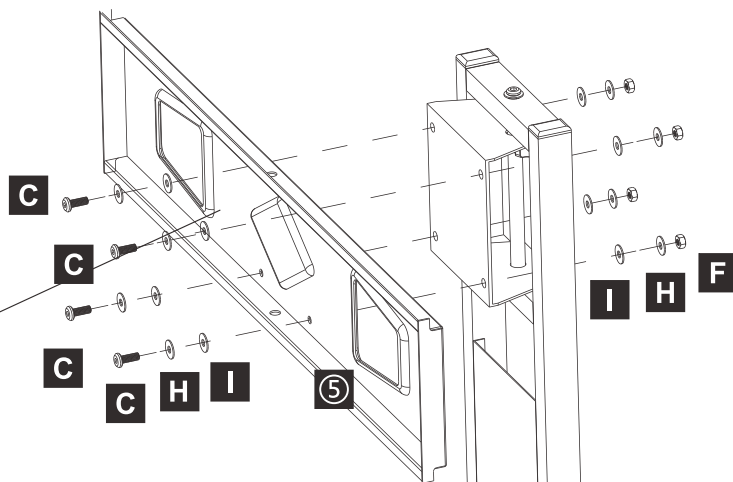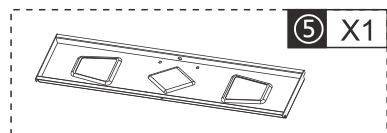         


    
Please securely fasten  
the pre-fitted bolts before  
attaching the TV

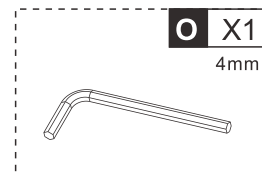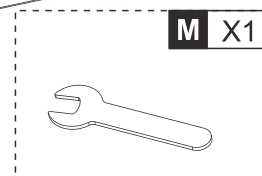


5

## Measure the TV fixing holes Width and Height

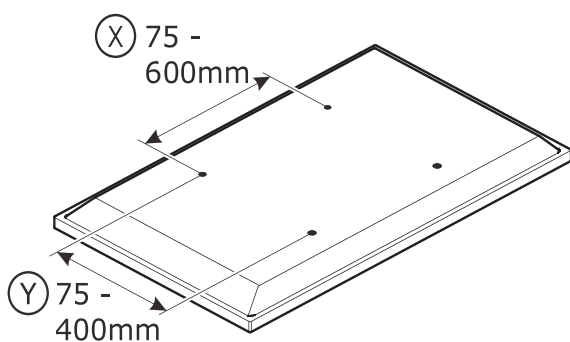 

 If width (X) is greater than 600mm or height (Y) greater than 400mm STOP installation now and contact the customer help line

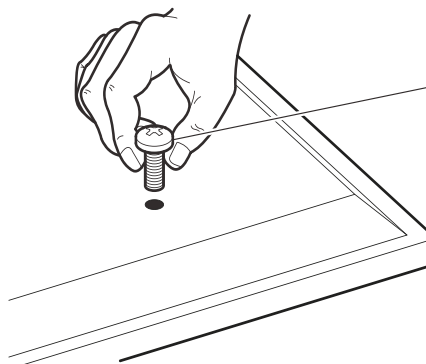

M4 = TV1

M5 = TV2-3

M6 = TV4-5

M8 = TV6-8




You are provided with 4 diameters of TV fixing screws, **M4**, **M5**, **M6** and **M8**. Determine the screw diameter that fits.

Spacers

SP1


SP2

   For TVs with irregular/obstructed back

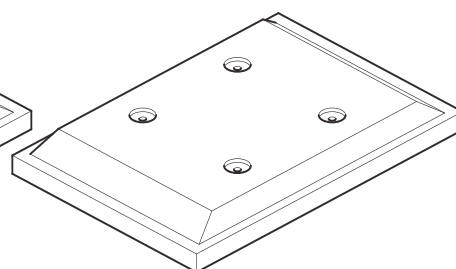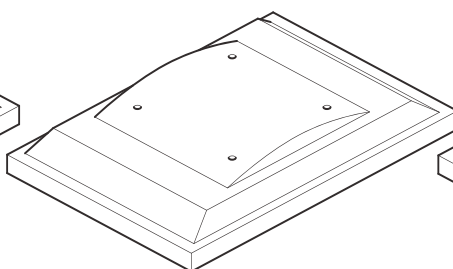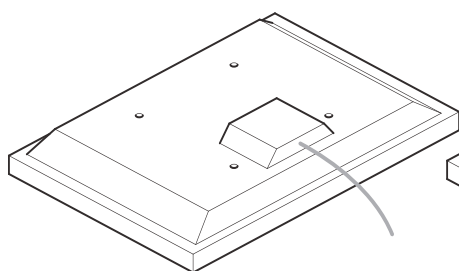


No Spacers

 For TVs with flat/unobstructed back

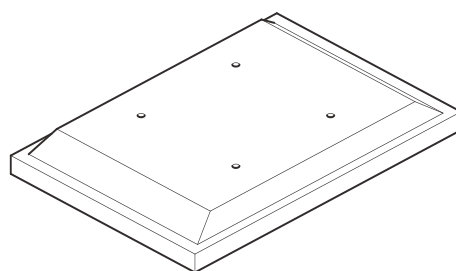


WARNING

 please keep for future reference.

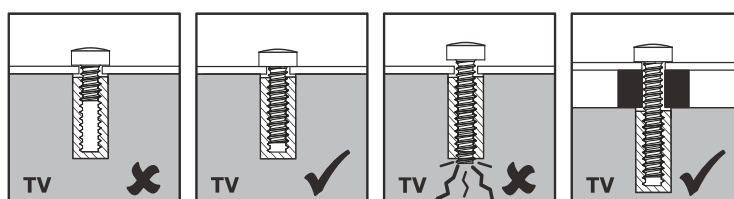

6

 NOT INCLUDED



TV1  
TV2-3  
TV4-5  
TV6-8

TV10

TV9

Top

⑦ X2



M4

TV1 X4



M5

TV2-3 X4



M6

TV4-5 X4



M8

TV6-7 X4

+

+

+

+



Washer

TV10 X4



Washer

TV10 X4



Washer

TV10 X4



Washer

 
 
 
 
 
TV10 X4

+

+

+

+




SP1 - SP2

TV9 X4




SP1 - SP2

 TV9 X4



SP1 - SP2

 TV9 X4




SP1 - SP2

TV9 X4

Attach the bracket to the back of your TV using suitable screw, reducer and spacer combinations.

7

 NOT INCLUDED

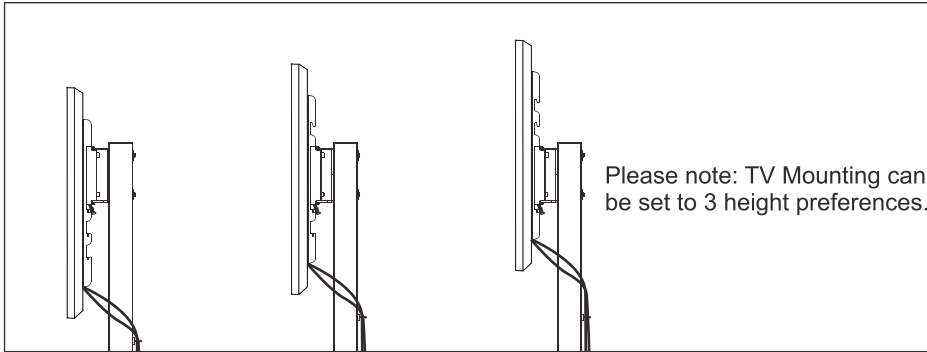

Please note: TV Mounting can be set to 3 height preferences.

