


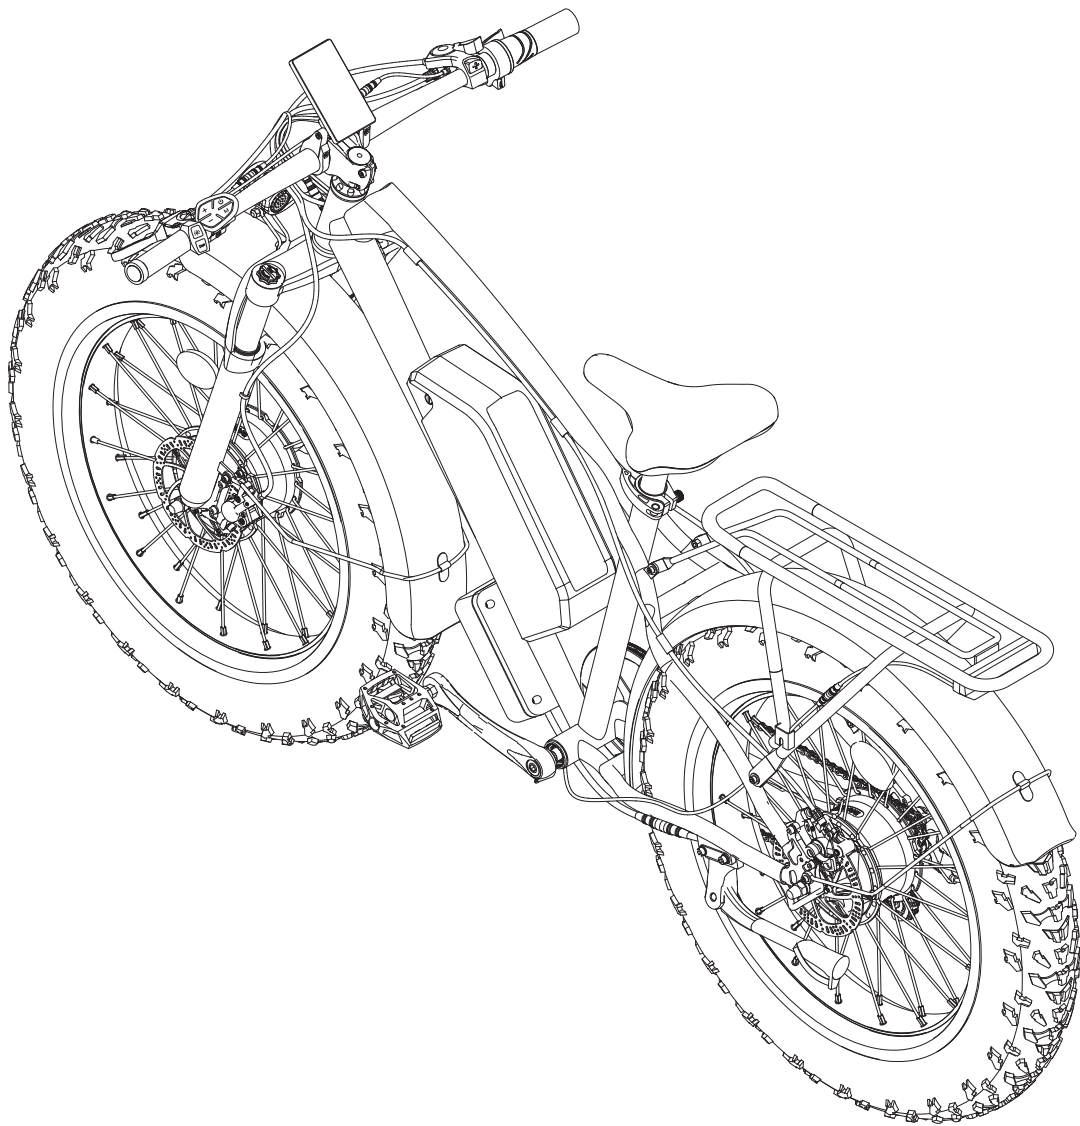

USER MANUAL

Electric bicycle

Please note before use

1. Before the first time of driving, please read this user manual carefully about the cautions and safety specification. Or you can ask a director (coach) of driving experience for instruction.
2. The first charging shall be of 6-8 hrs. When the indicator of charger turns from red to green, it means the battery is in full charged.
3. When all preparation works are done, in order to ensure safety and prevent from injury, please wear the safety helmet and protective gear.

Maintenance

1. If there are stains on the surface of the electric bicycle, wipe it with a soft cloth dipped in a small amount of water. If there are stubborn stains, use a toothbrush dipped in a small amount of toothpaste to scrub repeatedly, and then wipe it with a soft cloth dipped in water.
2. Do not use alcohol, kerosene, or other corrosive volatile solvent cleaning, otherwise it will damage the appearance and internal structure of the product.
3. Prohibit the use of pressure water gun spray rinse, and ensure that the bicycle is closed when cleaning, charging port rubber cap tightly, otherwise it may lead to serious consequences.
4. If you do not use the electric bicycle for a long time, please place the electric bicycle indoors in a dry and cool place, and try to avoid outdoor exposure to the sun. Otherwise, the appearance and tires of the electric bicycle will accelerate aging, and the life of the battery pack will be significantly reduced.
5. Do not use battery packs that are not original. Otherwise, risks may arise.
6. Do not open or Pierce the shell of the bicycle. Avoid direct contact of metal objects with the battery contact points, to avoid battery damage or casualties.
7. When disposing of the battery string, follow the local laws and regulations. Do not dispose of the battery string at will and protect the natural environment.
8. If not used for a long time, please charge the battery pack for 3 hours every 3 months.

Read all precautions and instructions in this manual before using this equipment

Assembly Caution	3
Part List	4
Part List	5
Front Wheel Installation	6
Front Wheel Plug Connection	7
Front Fender And Headlight Installation	8
Rear Shelves And Cushion Installation	9
Pedal Installation	10
Handlebar Installation	11
Battery Installation	12
Part Name	13
Function Introduction	14-16
After-Sale Information	17-18

ASSEMBLY CAUTION

Please carefully read the following information before installation

Assembling requires at least two people

Do not tighten all screws before assembly is complete

Ensure that all accessories are complete. If not, please contact us via email



If you are missing any parts, or otherwise have any warranty issues, please contact us first.

Shortcut: A Lot of People Doing That Way

To enhance your installation process for both speed and convenience, consider removing all accessories from the box, carefully opening the packaging, and arranging everything neatly on the floor. This preparation can streamline your setup experience.

WARNING



Choking hazard. Small parts-Please exercise caution if small children or pets are present.












Sharp objects may be involved. Use precaution and protection.











Heavy object. Use lifting aids and proper lifting techniques when moving

Part List

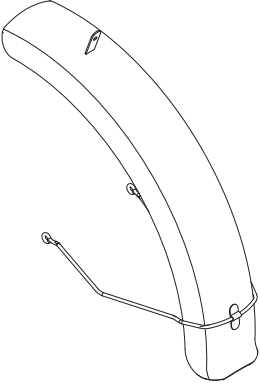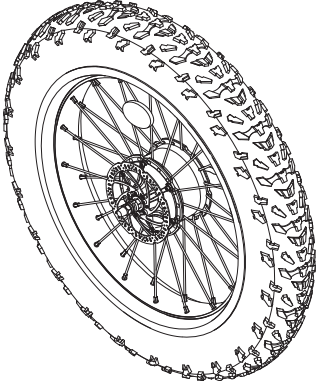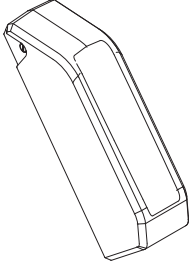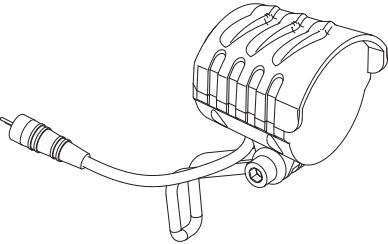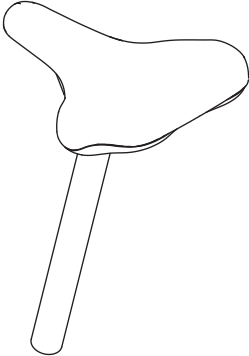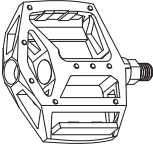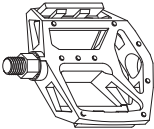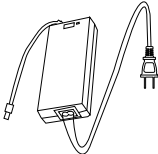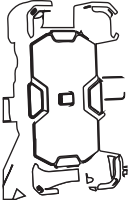A1 .Front Fender1PC	A2 .Front Wheel1PC	A3 .Battery1PC
		
A4 .Headlight1PC	A5 .Seated Cushion1PC	A6 .Pedal Left1PC
		
A7 .Pedal Right1PC	A8 .Charger1PC	A9 ..Phone stand1PC
		

Part List

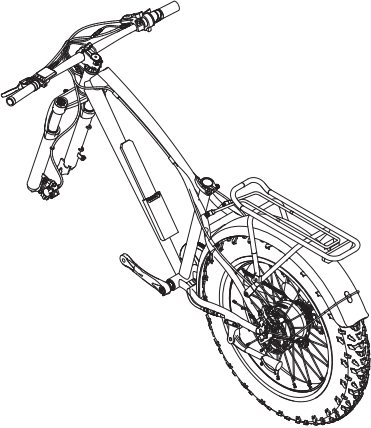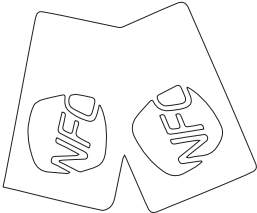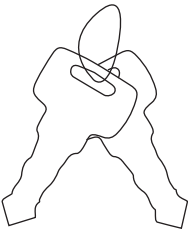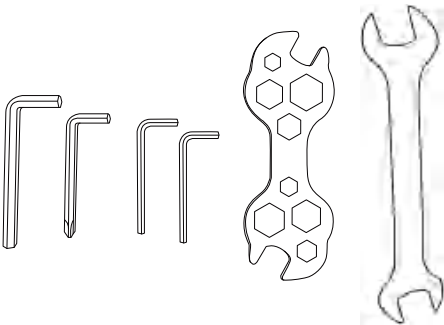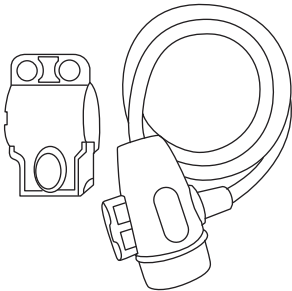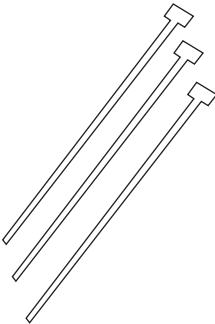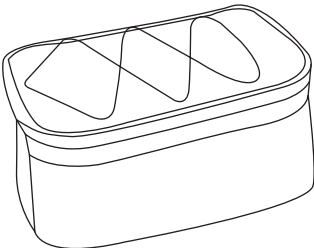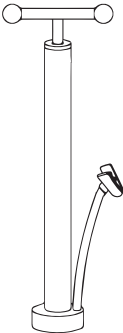A10 .Frame assembly 1PC		A11 .NFC card(Pay attention to save) 1PC	A12 .Key (Pay attention to save) 1PC
			
A13 .Tools		A14 .Lock 1PC	A15 .Nylon cable tie 3PC
			
A16 .Storage Bag 1PC		A17.Inflator 1PC	
			


Front Wheel Installation

Part No. 5.6.7.8 in the figure has been preinstalled on the front axle. Please remove it before installation.

Install the front wheel on the inverted front fork as shown in the figure:

Install the front wheel in place, making sure axle (1) is in front fork hole (2),
Brake disc (3) is installed in brake caliper (4).

Note: Before inserting the fork, insert the anti-rotation plate (5).


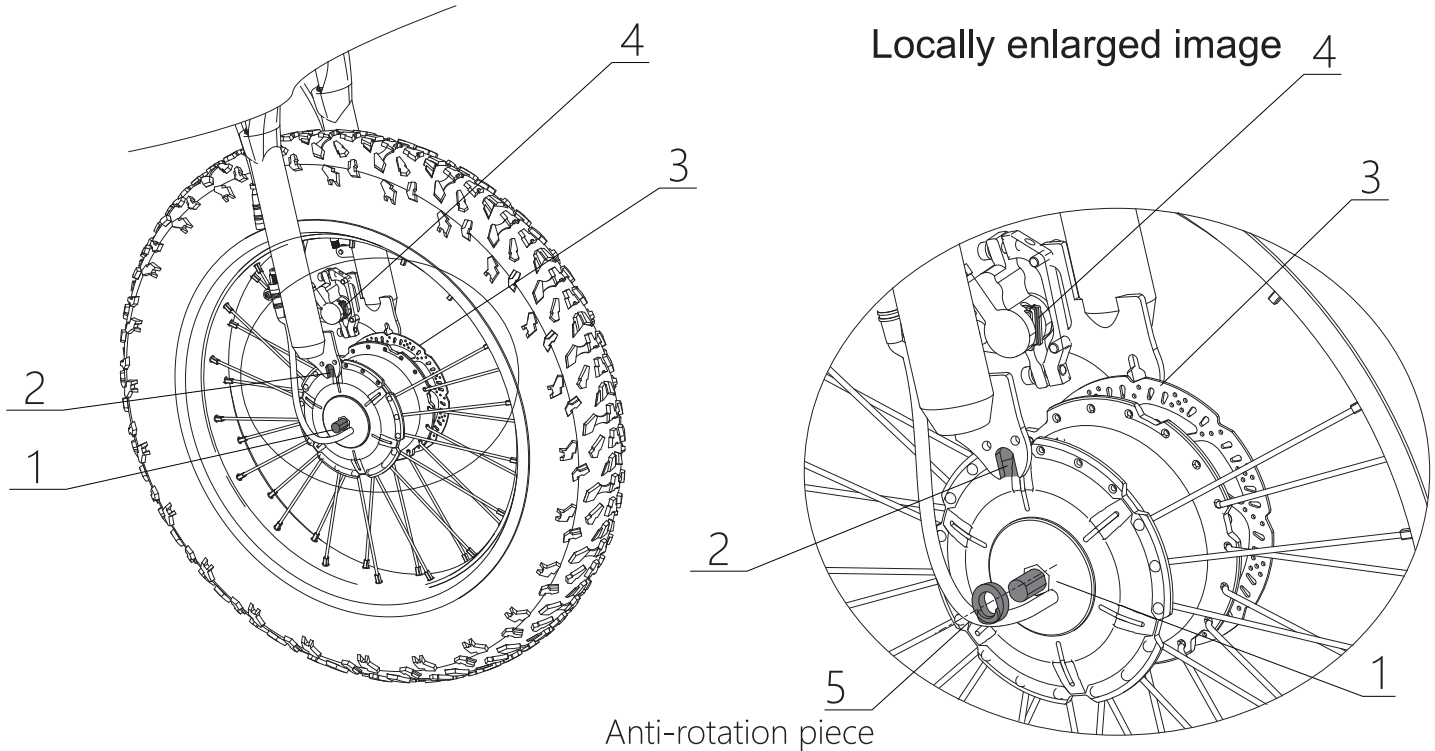


-Make sure the tab of each security washer (7) is in the hole of the fork.

-Using the two axle nuts (5) tighten the axle nuts and secure the front wheel.

NOTE: the recommended torque of 25-35 Nm.


Locally enlarged image

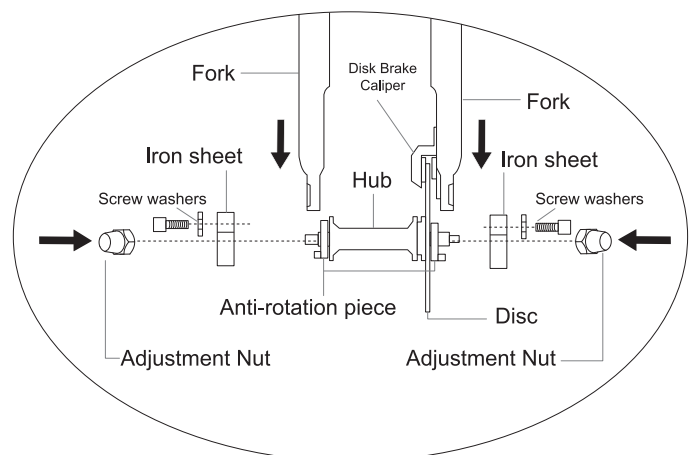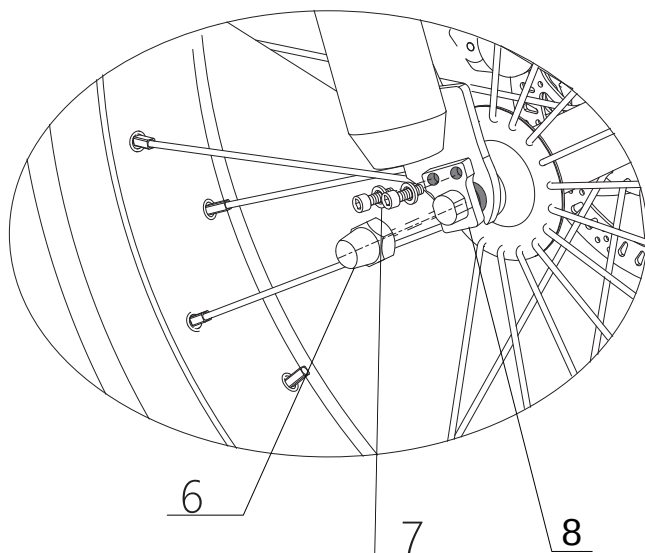


Locally enlarged image

Front Wheel Plug Connection

Note: The arrows of the two plugs must be aligned before insertion, otherwise the plug will be damaged.

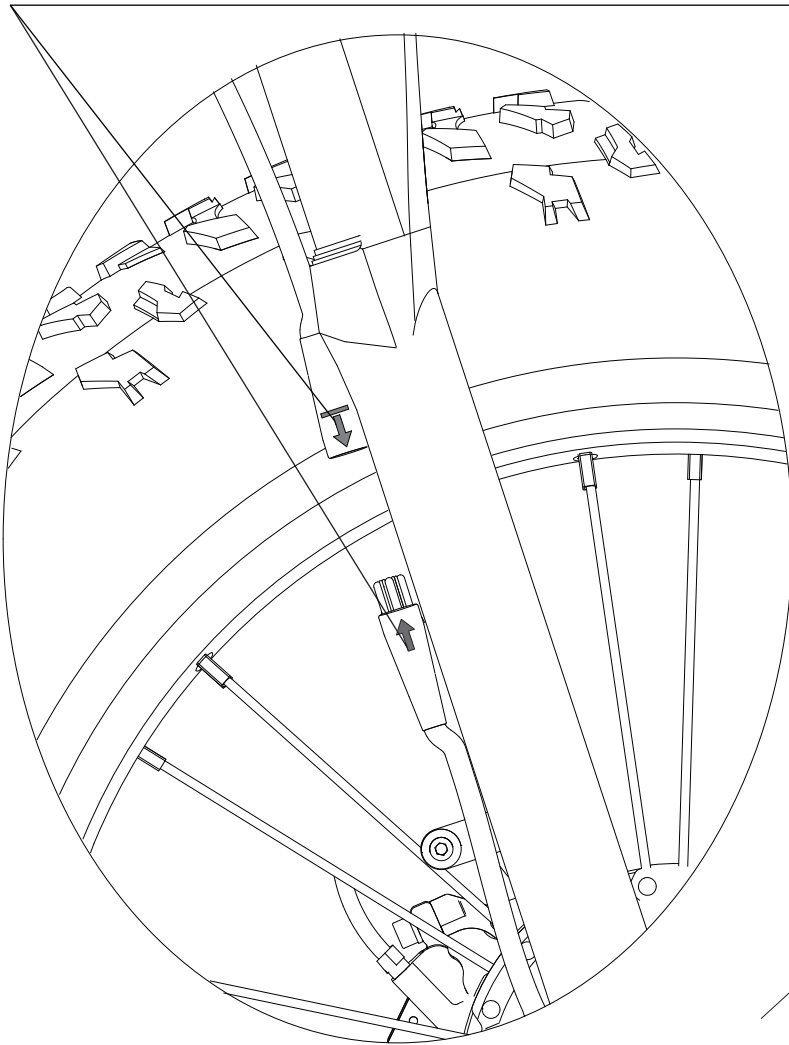


Secure the paired joints with nylon cable ties.

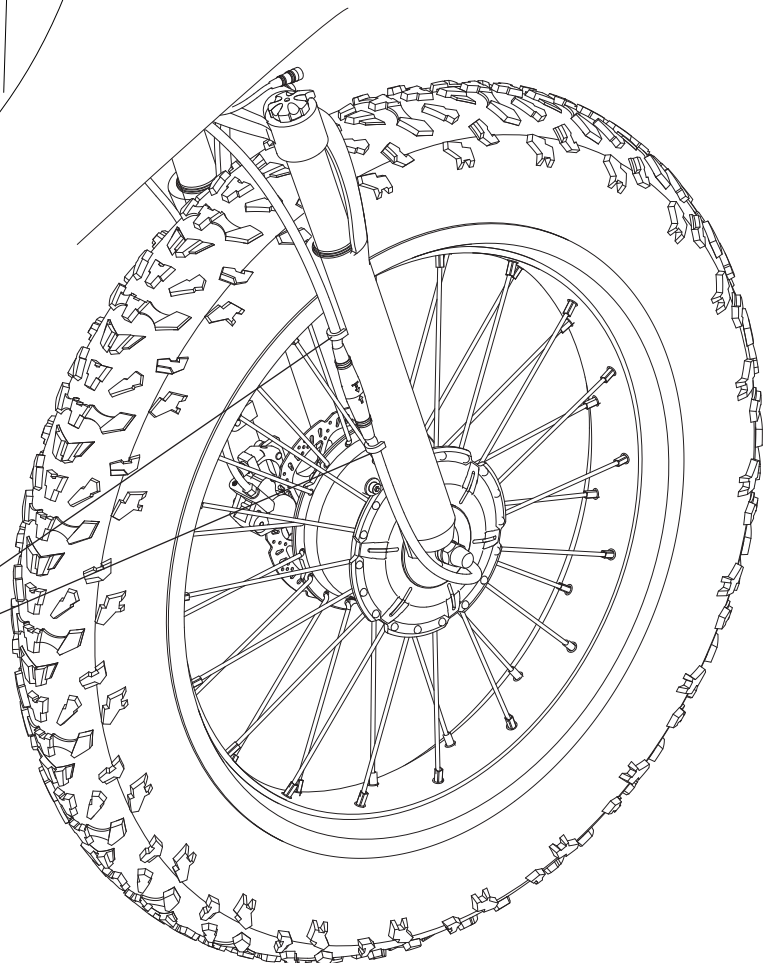


Front Fender And Headlight Installation

Remove the premounting screw for the fender first, then install the fender in the corresponding position, lock the screw (9) first, install the headlight in the corresponding position, and lock the screw (10).

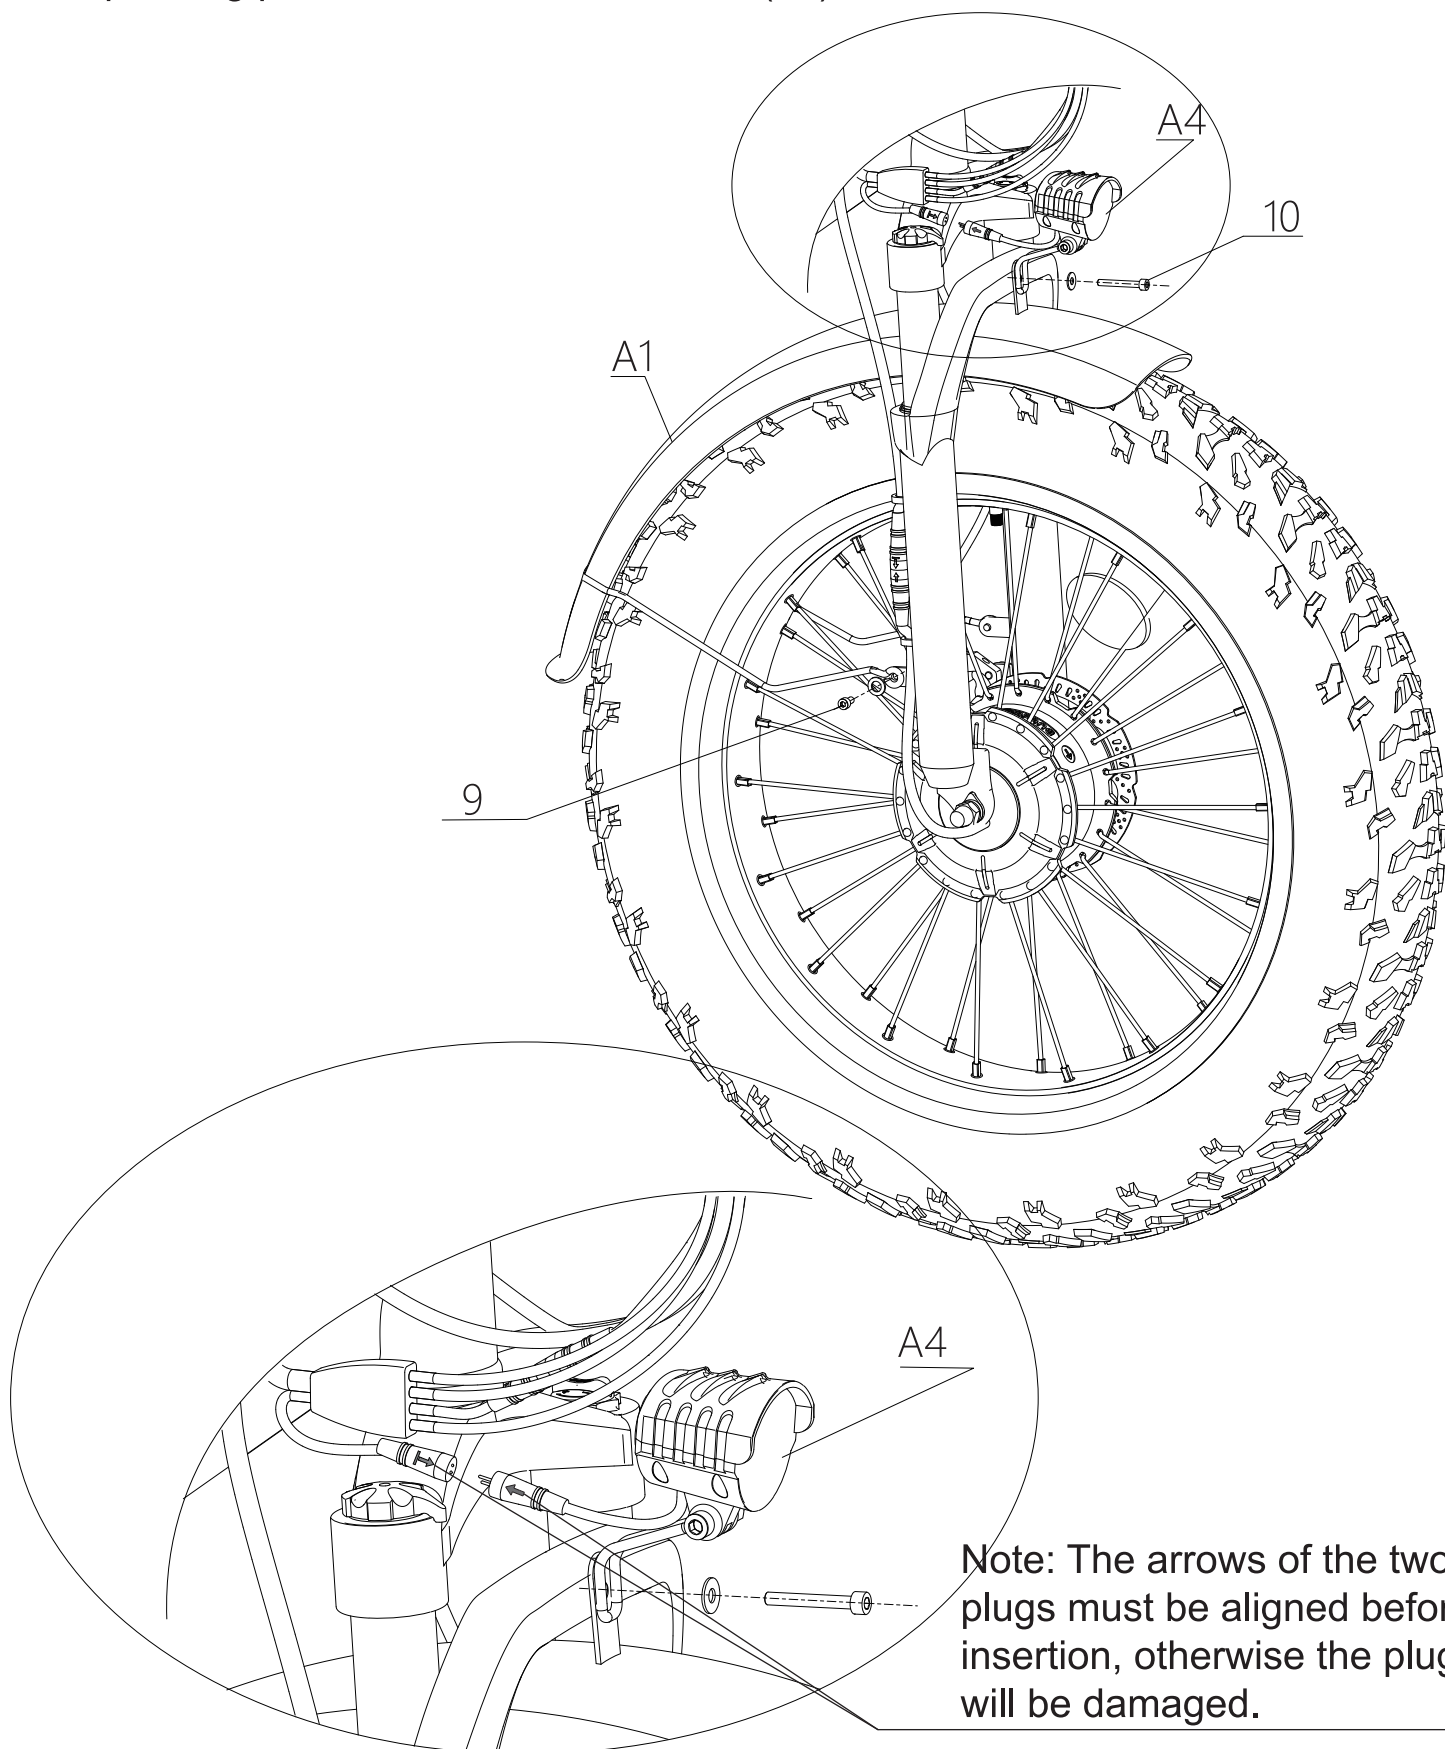

Rear Shelves And Cushion Installation

Install A5 into inverted tube.

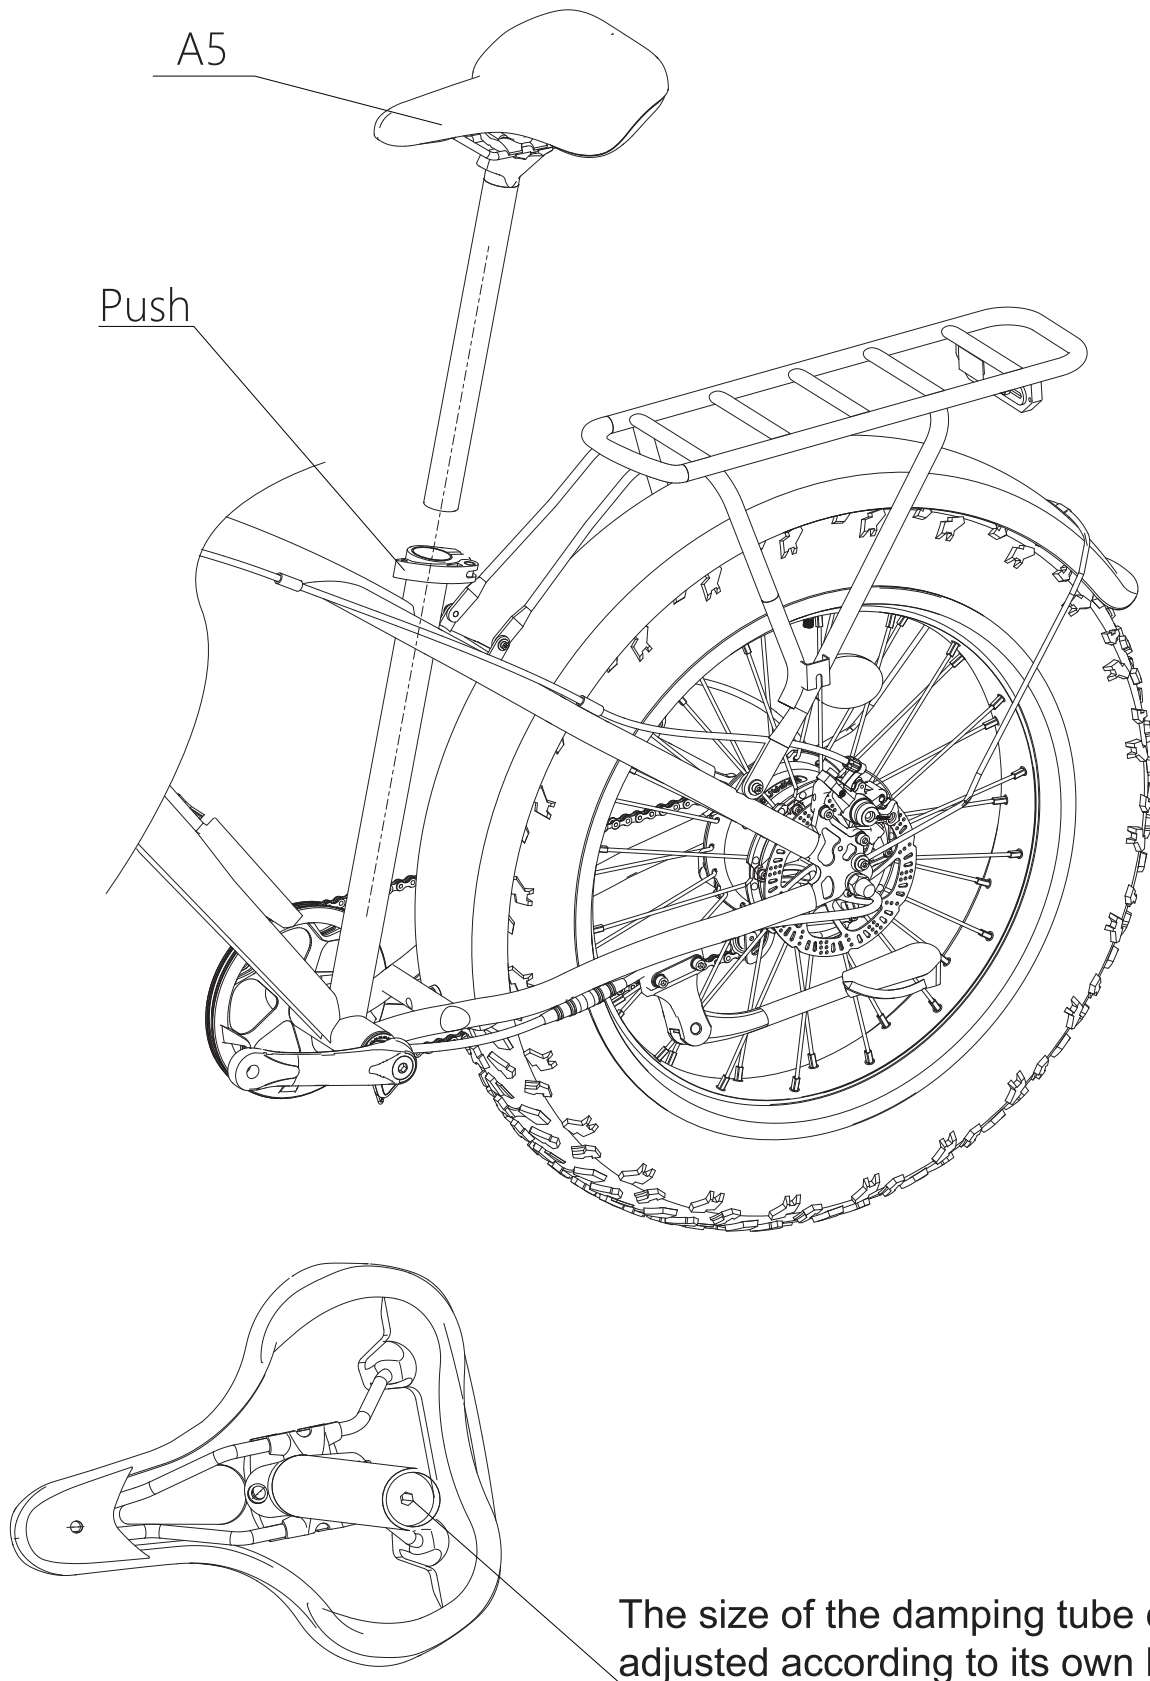


Pedal Installation

Warning: Face front, distinguish left and right;

1. The pedal left can only be installed on the left crank, and the pedal right foot can only be installed on the right crank;
2. Pedal need to be tightened with (15mm) wrench (be sure to tighten to avoid loose pedal);


Front

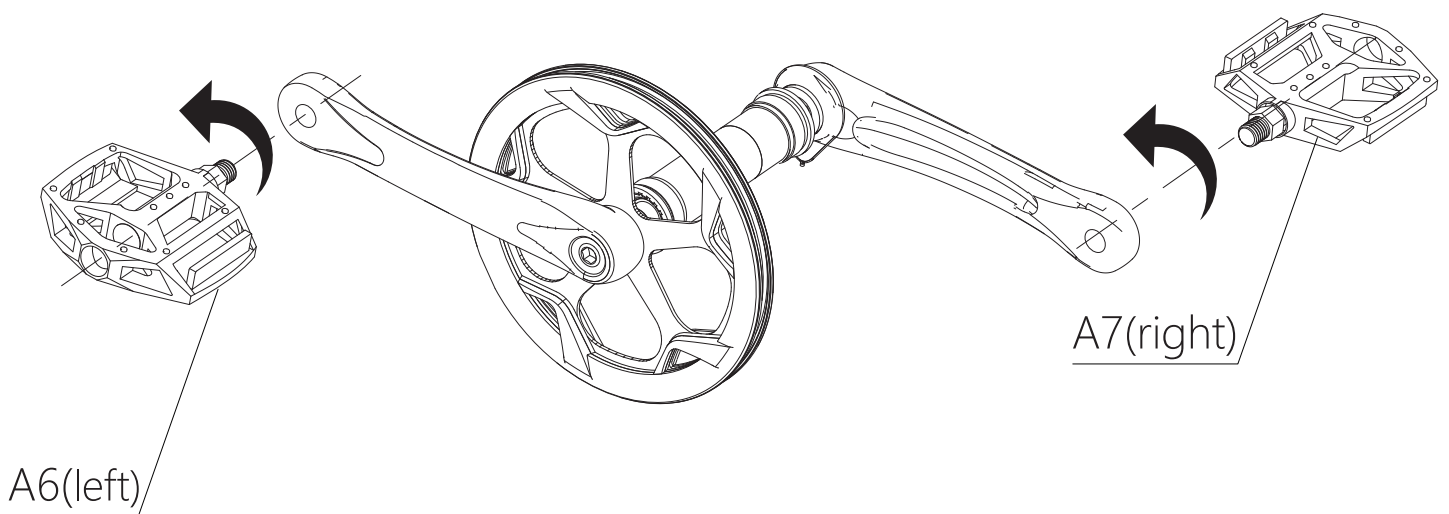

Real

Handlebar Installation




1. Remove the screws on the vertical handlebar to install the handlebar first;
2. Then straighten the front wheel, center the handlebar on the handstand, lock the screws;
3. Adjust the display angle to suitable view and tighten the display screws.

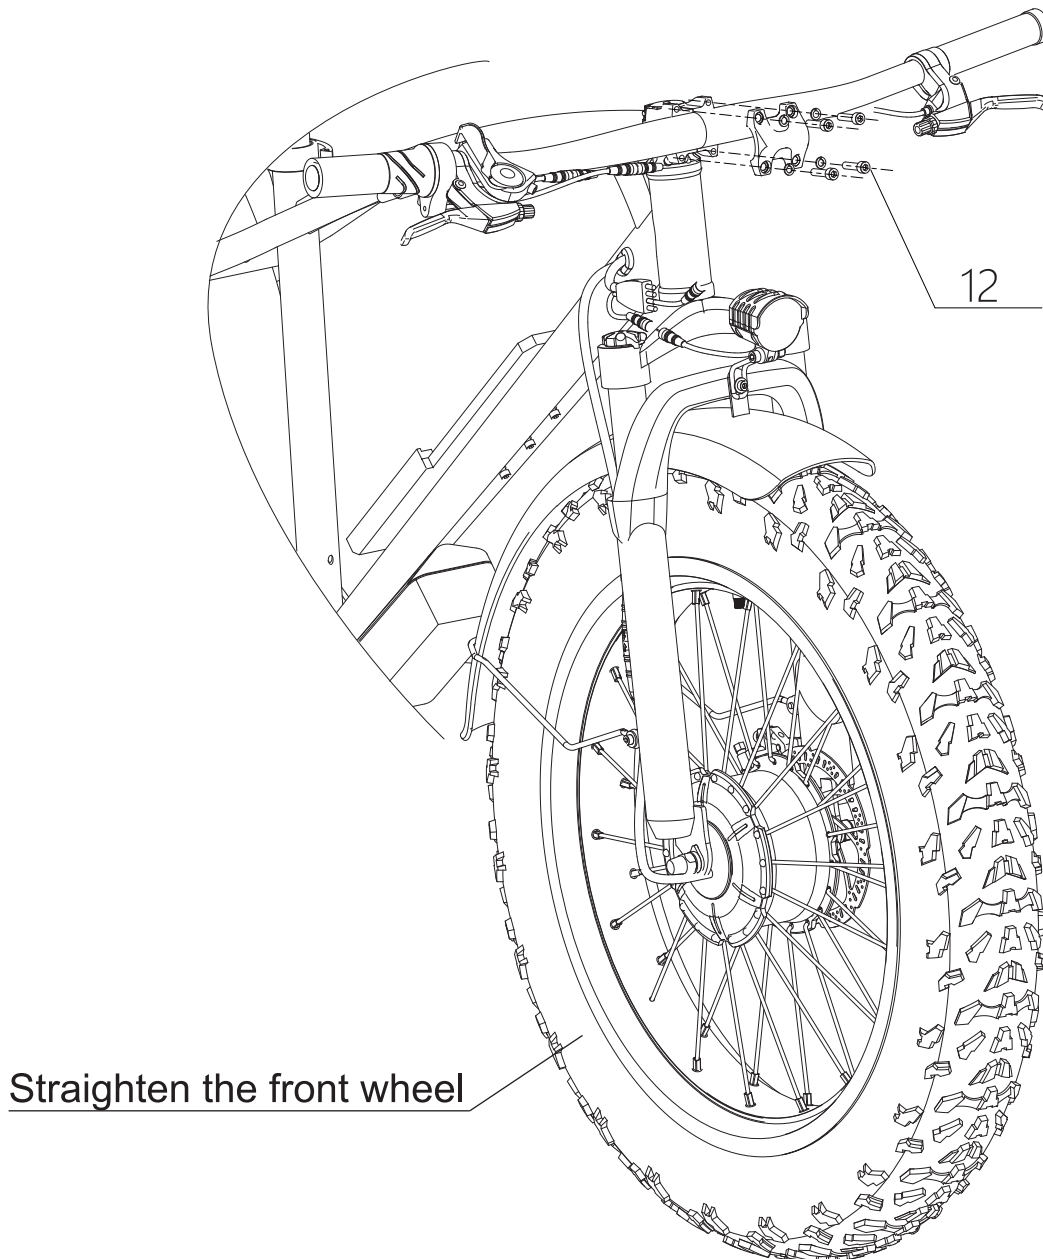

Battery Installation



1. Insert the battery pack into the oblique rear as shown in the picture. After hearing the click sound, the battery is installed in place; Rotate the key clockwise 180 ° to lock the battery.
2. Insert the key into the lock hole, turn to the unlocking position, rotate counterclockwise 180° to unlock the battery. and exert upward force on the Angle (in the opposite direction to the installation of the battery) to remove the battery
3. Please keep the key safe.



A key is required to remove the battery

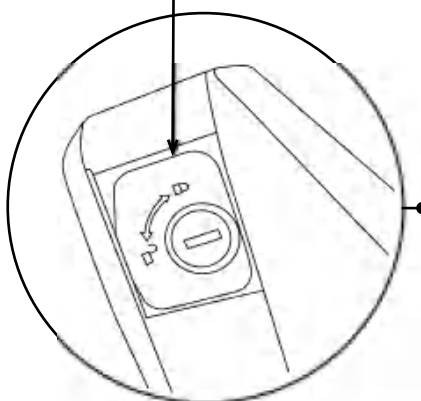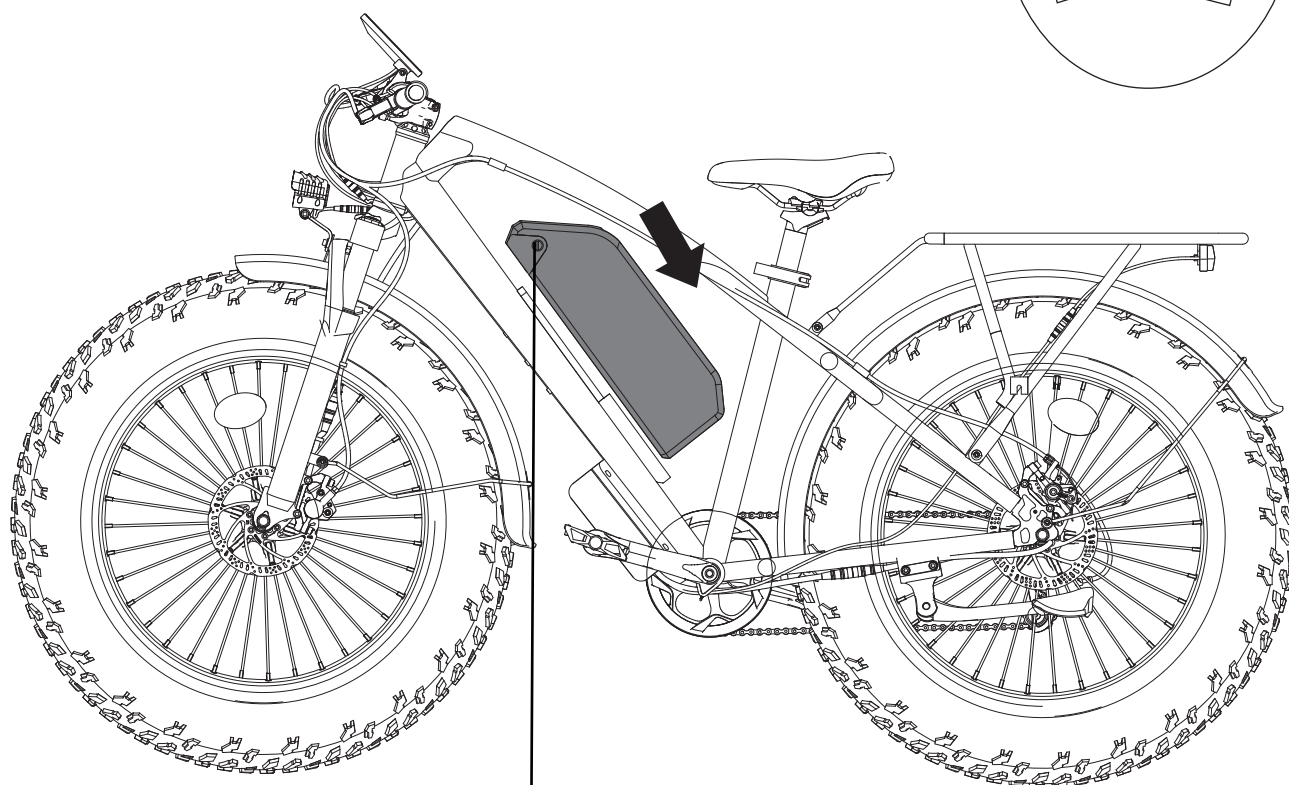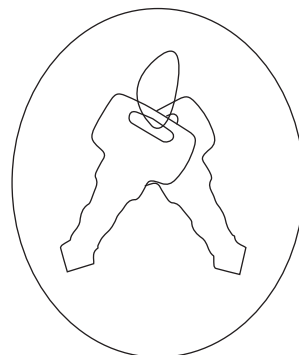


180° clockwise to lock
180° counterclockwise to unlock

Part Name

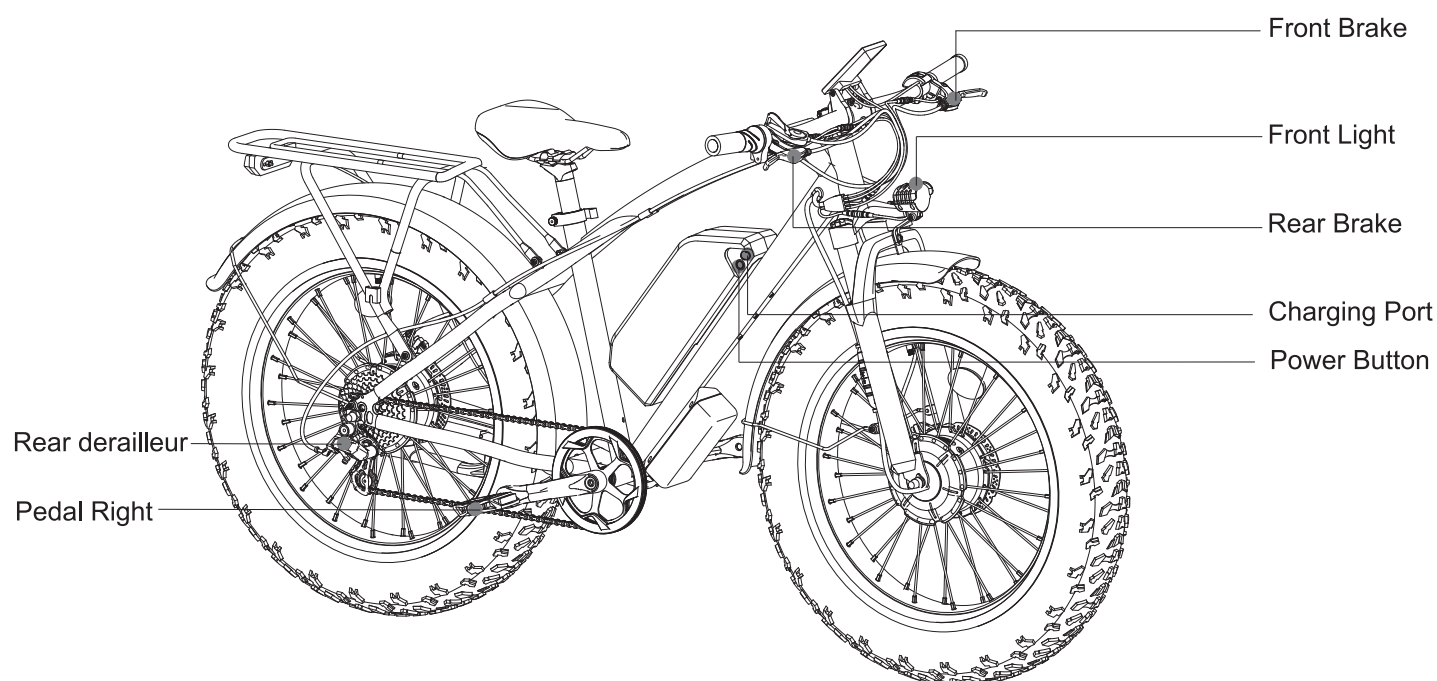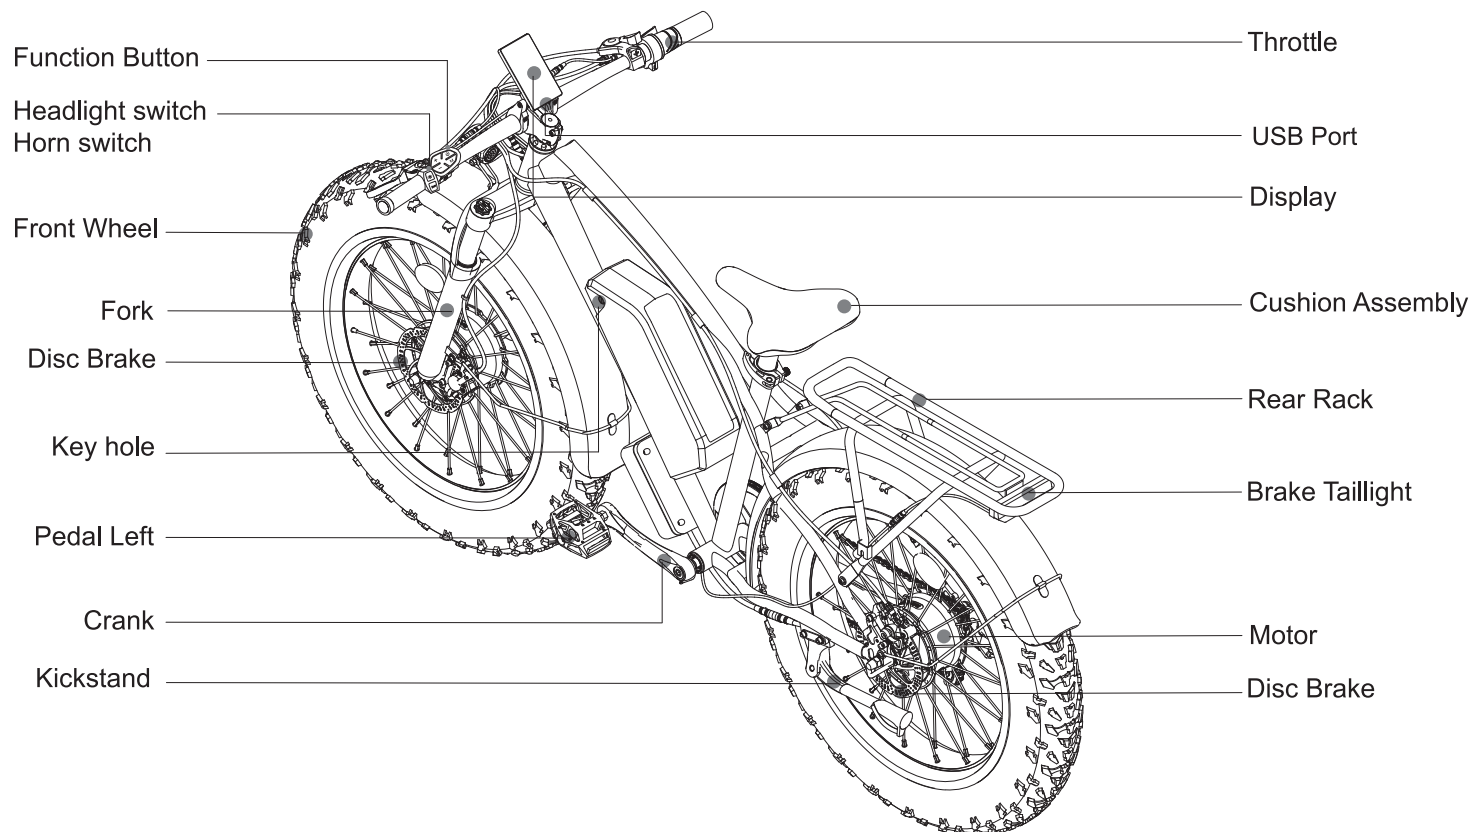

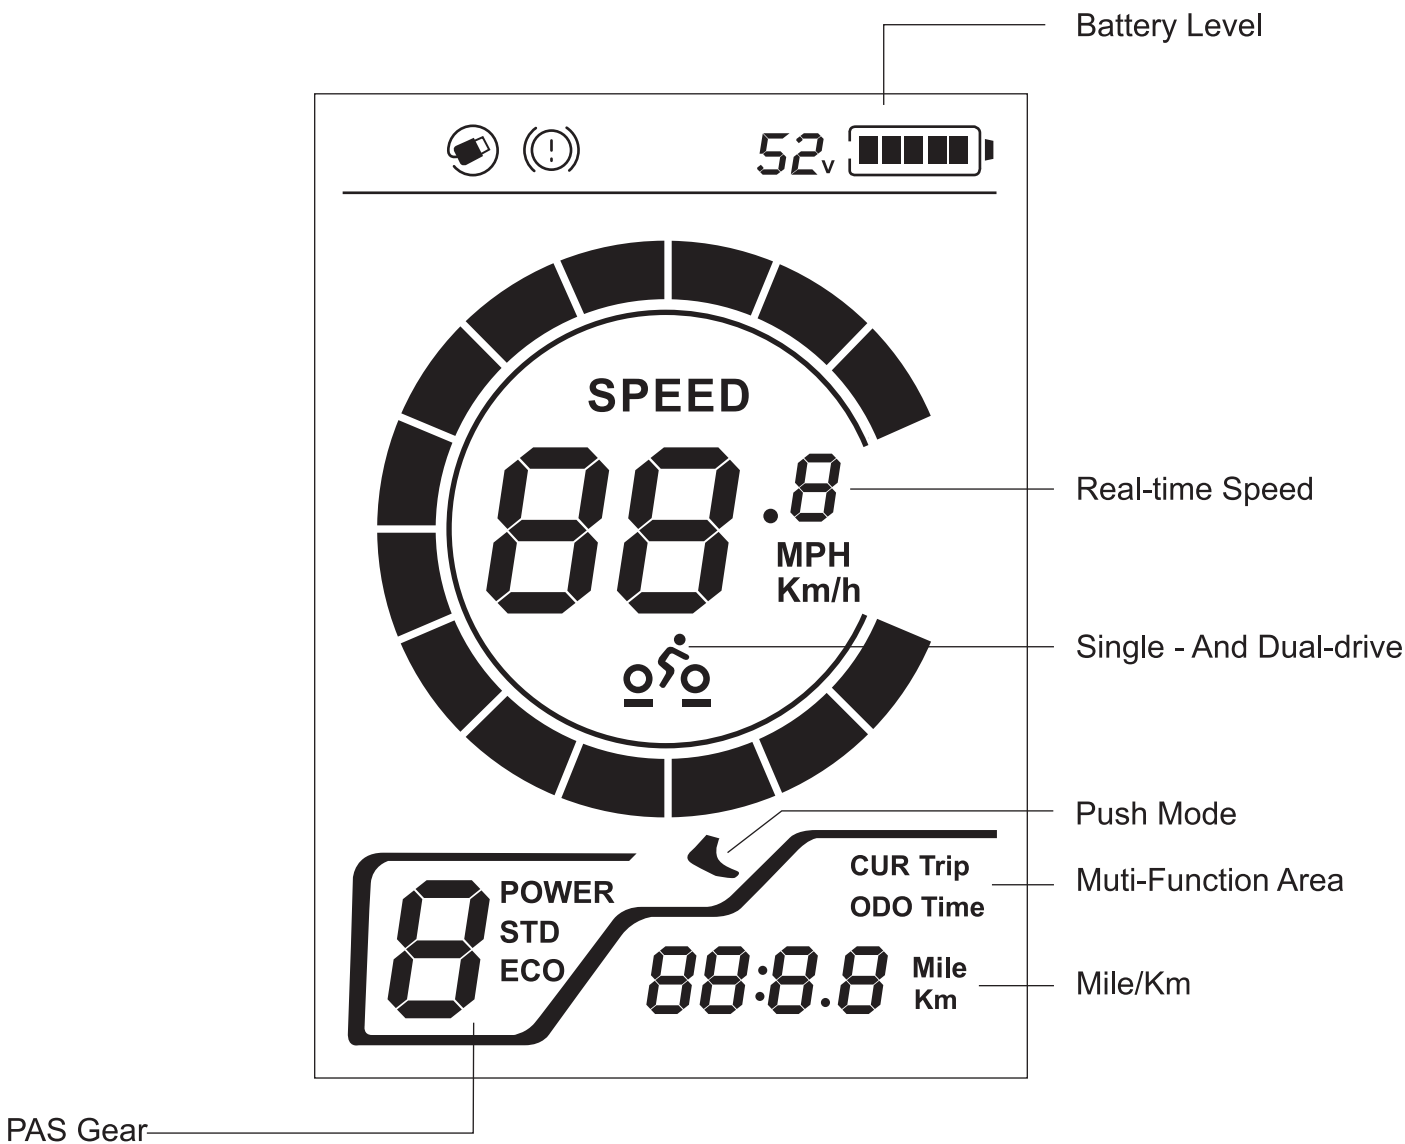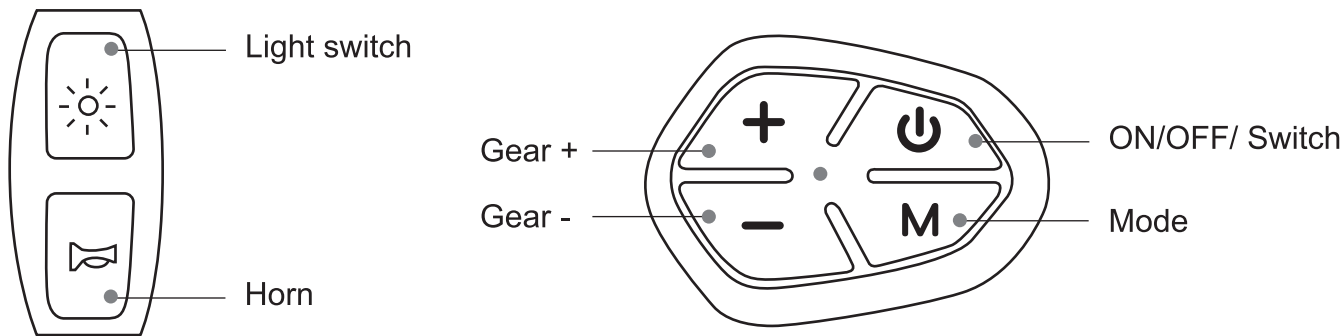



1. Tap the power button to power on the device.

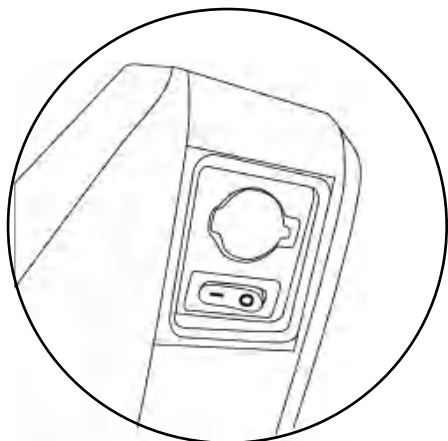

Power ON: ○ symbol upright

Power OFF: - symbol upright

2. Stick the NFC card in the NFC card sensing position and open the display;

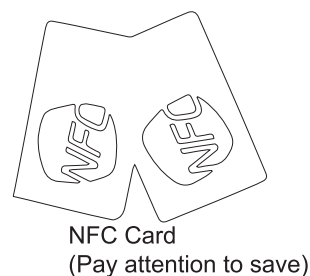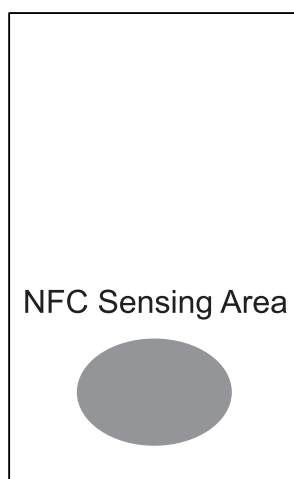

3. Short-press the  to turn it on, then press and hold the "—" button for 8 seconds to enter the password input interface.

Clicking "+" shows 0. Clicking "—" shows 9.

The default password is: 0000

Steps:


Click "+", then shortly press the  button to switch.

Click "+", then shortly press the  button to switch.

Click "+", then shortly press the  button to switch.

Click "+", then press and hold the  button to enter boot mode.

4. Press the Gear +/- key to adjust the power gear
5. Keep pressing the Gear - key to enter Push mode;

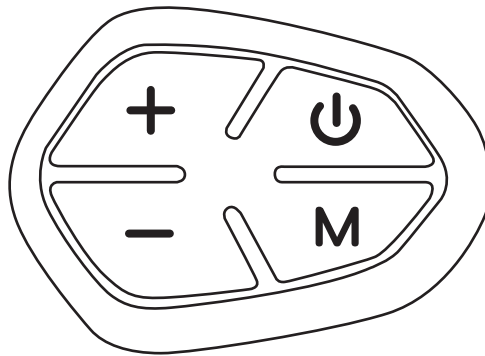

6. Long press the **M** key to adjust the motor drive form,
Rear-drive → Front-drive → Dual-drive.

7. When the product is not operated for more than 20 minutes, the display will automatically turn off, but the battery pack will not turn off. It is recommended to press the switch button of the battery pack after each ride to turn off the battery.