



Automatic Sanitizer Dispenser Installation

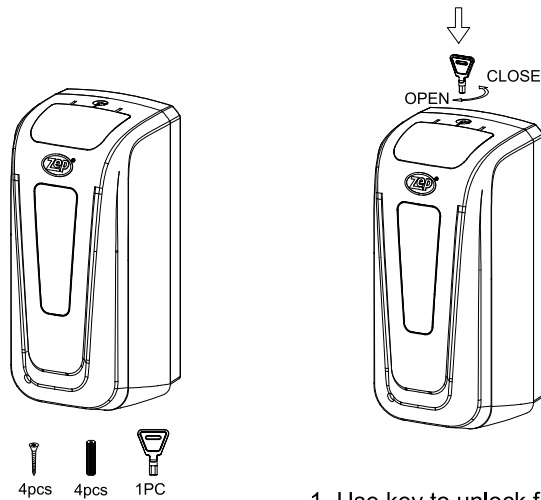


SIZE:15X14.6X32.4cm


1. Use key to unlock front cover

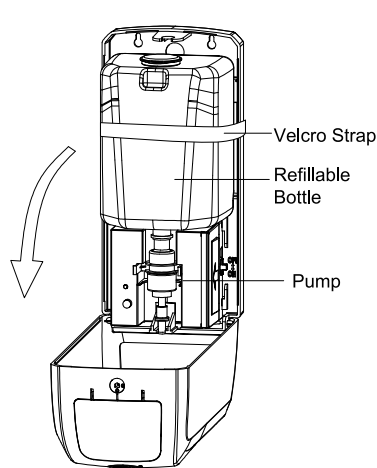


2. Open front cover

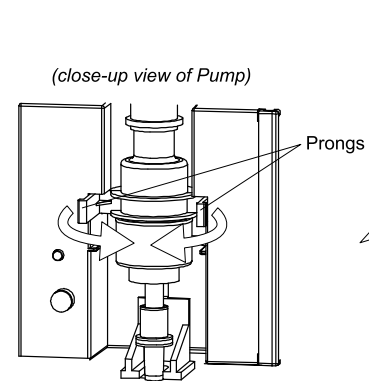


3. To remove bottle, squeeze "prongs" together to release from dispenser

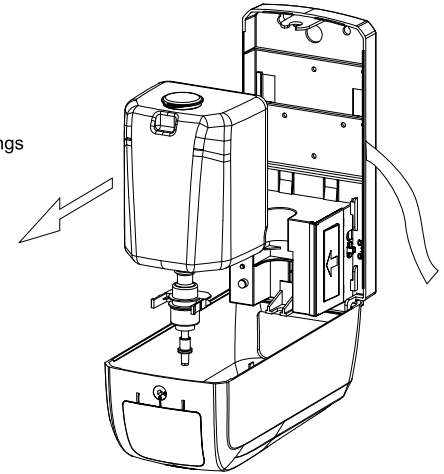


4. Remove refillable bottle and pump

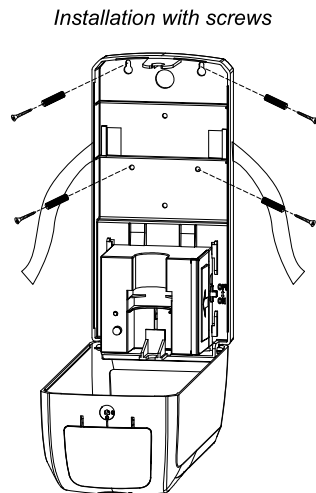

5. Install the dispenser on the wall

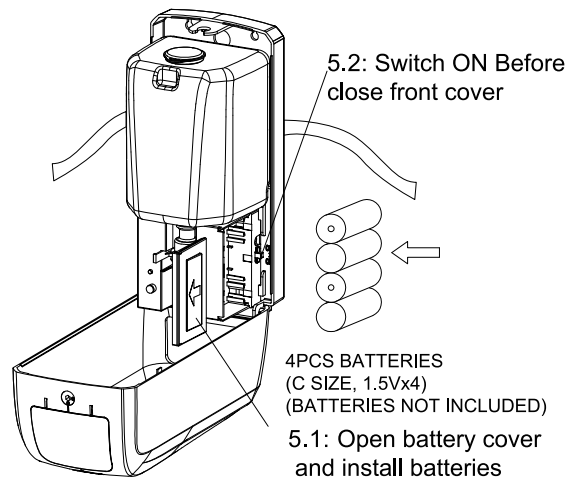


6. Install Batteries (not included)

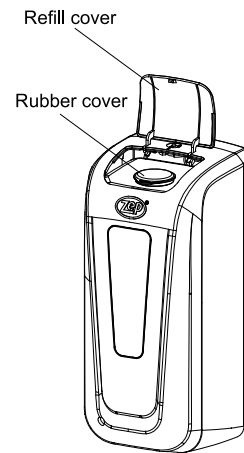

7. Fill gel sanitizer/liquid soap (to refill gel sanitizer/liquid soap, please repeat step 1 and step 2 to reset the spray count)

Use key lock front cover after fill liquid

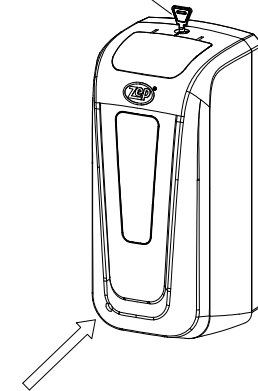

- Dual color LED:
1.Green is working and stand-by
2.Red slow flicker indicate sensor problem
3.Red fast flicker indicates time to refill liquid (repeat step 1 and step 2 after refill liquid)
- Sensing Distance:8-12cm

 
1. Please reference dispenser installation instructions.

Installation for Wall Mount Components


PART LIST:




Screw M4x10
(10pcs)




1PC

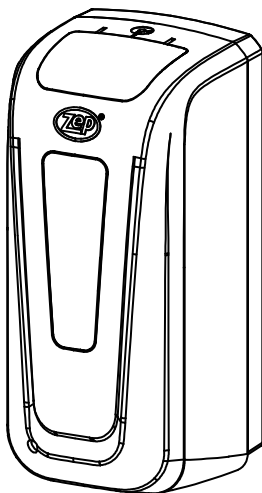

*.Recommended Installation Height

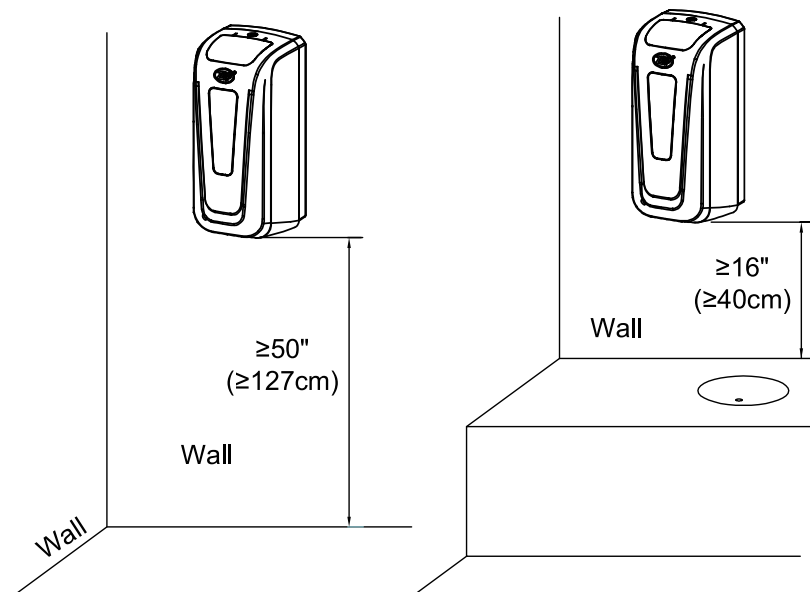


2.

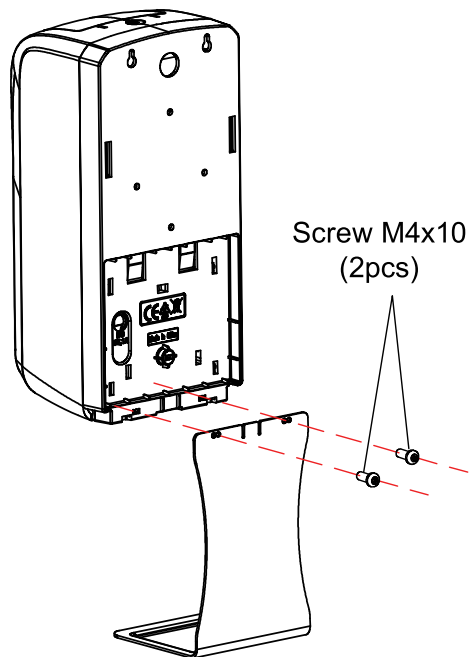

3.

Soap dispenser

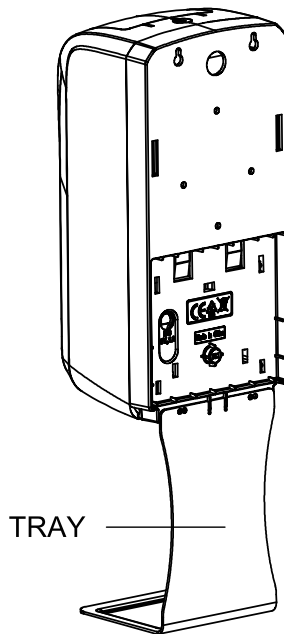

4. Fully Assembled

