

PRODUCT OPERATION


USING THE SOUTHSPA

If only connected to cold water, make sure that the temperature dial on the bidet attachment is turned as far as it can go towards “COLD” setting for best pressure adjustability.

To adjust water temperature (when both hot and cold water are connected), turn temperature dial slowly towards “HOT” until the desired temperature is reached.

Note: There may be a delay in the warm water reaching the bidet attachment as the cold water in your pipes clears and is replaced with hot water (similar to the delay when you turn your faucet on).

Tip: For a quick and easy way to get warm water to the bidet, run the “Nozzle Cleaning” function with the warm water turned on for a short time until the water heats up, then use as normal.

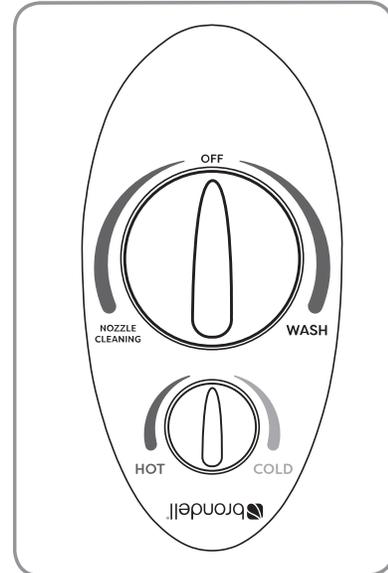

For the general bidet wash function, turn the dial towards the “Wash” position.

- The further the dial is turned, the higher the water pressure will be.
- To lower the water pressure, turn the dial back towards the center.

To clean the bidet nozzle, turn the control dial towards the “Nozzle Cleaning” position and water will wash over the nozzle.

⚠ WARNING: Risk of scalding. High water temperature can cause severe burns. Be sure to set the water temperature for your hot water heater at or below 120°F (49°C) and use extreme caution when mixing hot and cold water during use. Brondell is not liable for any misuse of product or failure to use caution when connecting to hot water.

NOZZLE POSITIONING

The nozzle can be easily adjusted by gently pulling the end of the nozzle forward or backwards. Once desired position is set, the nozzle will remain in that position until manually moved.