




Assembly Instructions

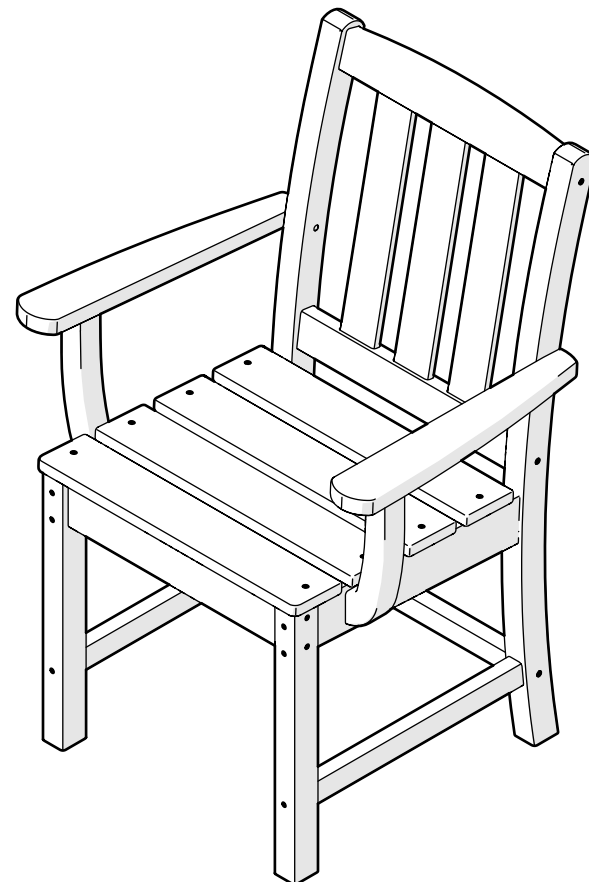

TXTLD230 Cape Cod Dining Arm Chair

..... **20-Year Warranty**

To view our full warranty, please visit
trexfurniture.com/warranty

..... **Share your space**

We love to see where our furniture
ends up — snap a pic and share
it with us on Facebook!
facebook.com/trexfurniture

..... **Having Trouble?**

If you have questions or concerns regarding
assembly instructions or missing parts,
please contact us at **(877) 907-TREX** (8739)
or email support@trexfurniture.com

..... **Cleaning Tips**

Keep your Trex Outdoor Furniture™
looking brand new:

For a quick clean:

Simply wipe down with soap and water.

 
For a deeper clean:

You'll need:

- » 1/3 bleach and 2/3 water solution
- » clean cloth
- » soft bristle brush


Wipe on solution with your cloth
and let it sit on the lumber for a few
minutes (this will not affect the color).
Then, loosen any dirt and debris that
may catch in surface grooves with a
soft bristle brush; hose down to rinse.

TOOLS




3/8" wrench
(not included)

PARTS

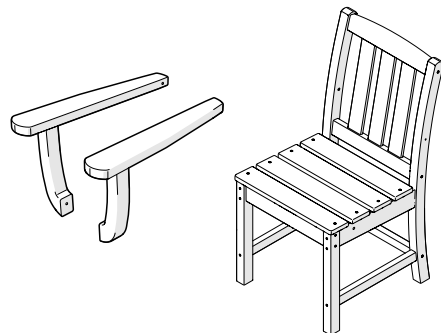

A x 2

 

2.5" Screw — HHW14X2.5


B x 2




Cap Dowel Screw — HD.25X2+P11420

1


Twist dowel screw into arm until
finger-tight, remove protective cap

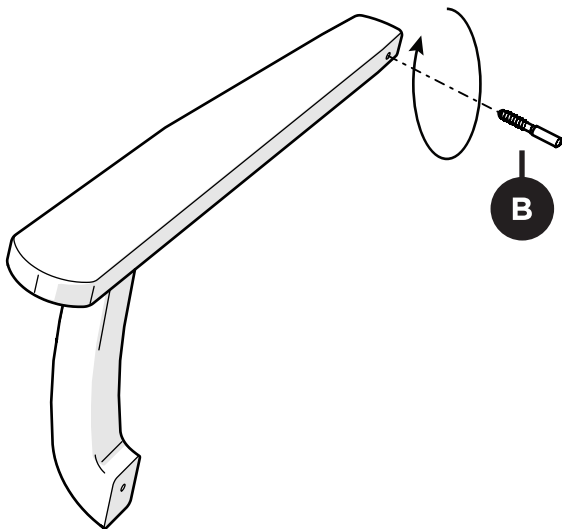


2

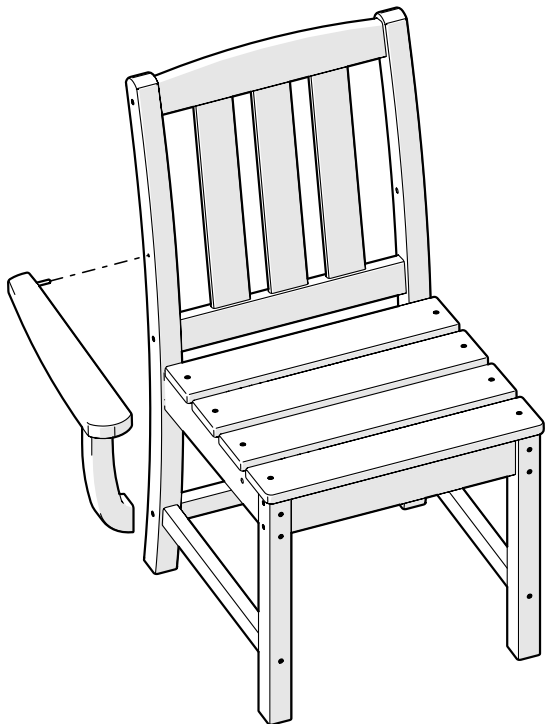


3

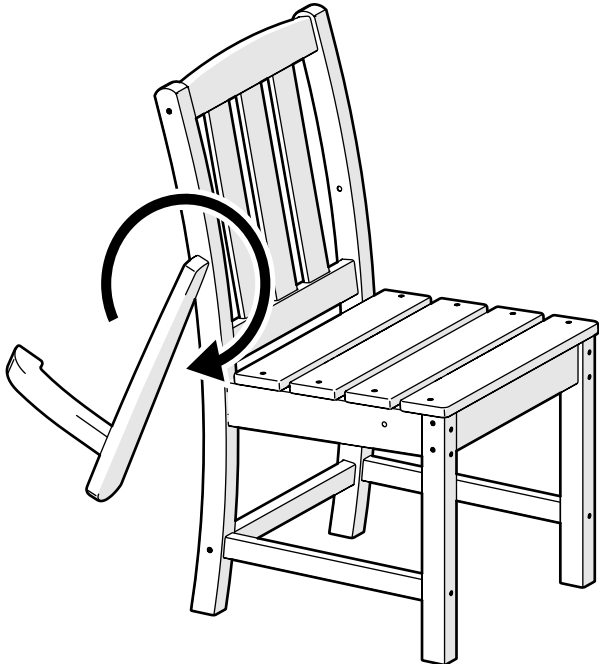


4

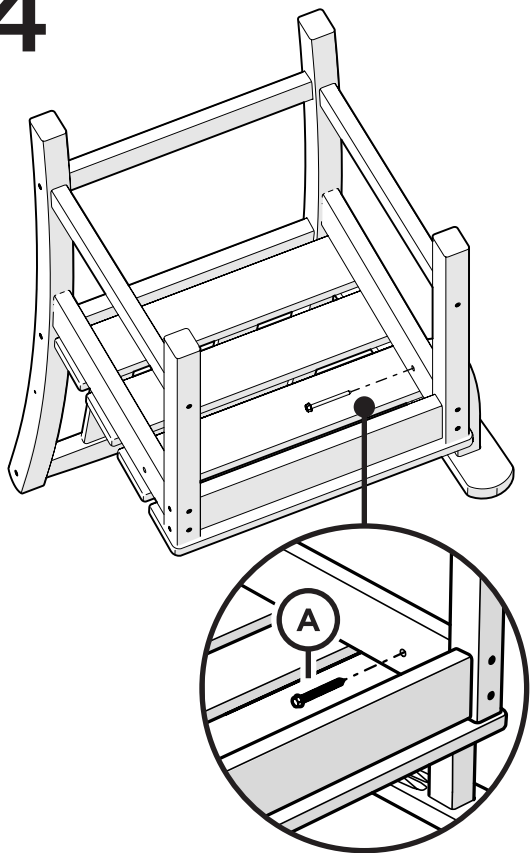

5

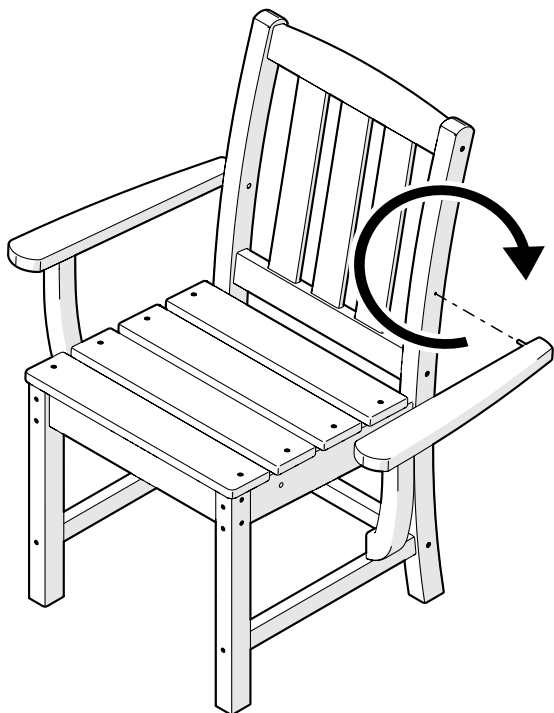


Repeat Steps 1 Thru 4
On Opposite Side

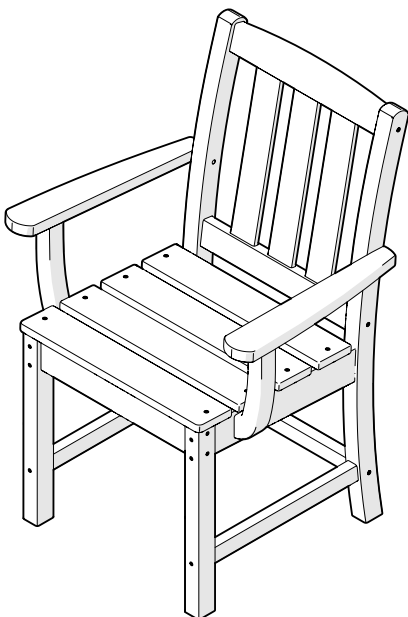




Assembly Instructions

TXLD Leg Kit

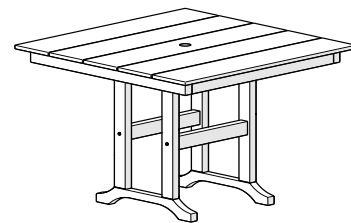


TXFDT37
Monterey Bay 37"
Dining Table

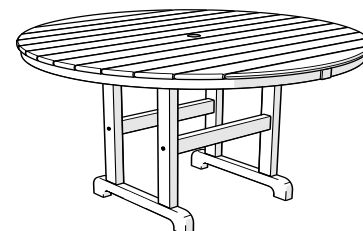

TXRT236
Monterey Bay
Round 36"
Counter Table

TXRT248
Monterey Bay
Round 48"
Counter Table

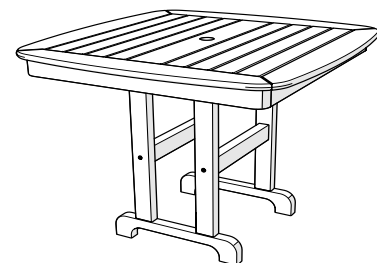

TXNCT37
Yacht Club 37"
Dining Table

TXNCT44
Yacht Club 44"
Dining Table

20-Year Warranty

To view our full warranty, please visit
trexfurniture.com/warranty

Share your space

We love to see where our furniture
ends up — snap a pic and share
it with us on Facebook!
facebook.com/trexfurniture

Having Trouble?

If you have questions or concerns regarding
assembly instructions or missing parts,
please contact us at **(877) 907-TREX** (8739)
or email support@trexfurniture.com

Cleaning Tips

Keep your Trex Outdoor Furniture™
looking brand new:

For a quick clean:

Simply wipe down with soap and water.


For a deeper clean:

You'll need:




- » 1/3 bleach and 2/3 water solution
- » clean cloth
- » soft bristle brush

Wipe on solution with your cloth
and let it sit on the lumber for a few
minutes (this will not affect the color).
Then, loosen any dirt and debris that
may catch in surface grooves with a
soft bristle brush; hose down to rinse.


TOOLS

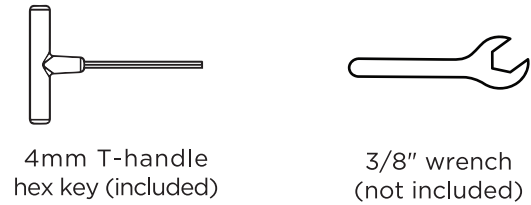

PARTS

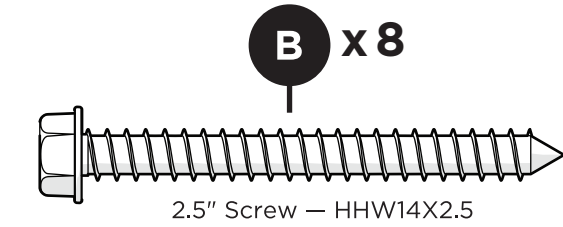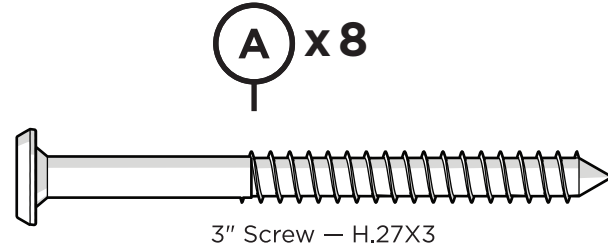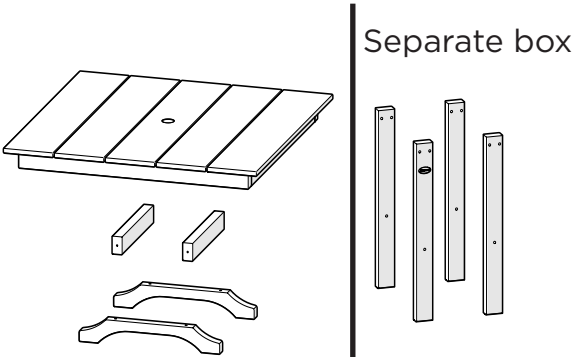


1

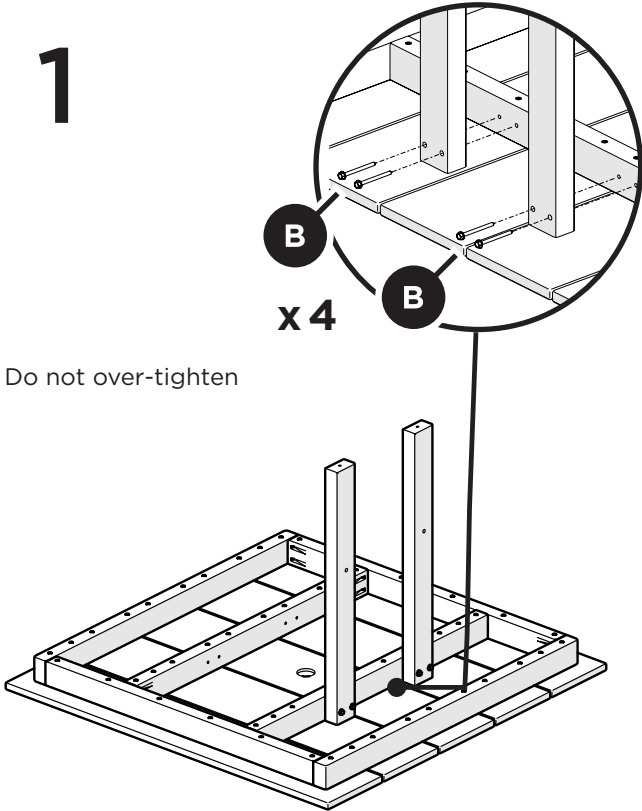


FDT37 shown for parts and assembly





2

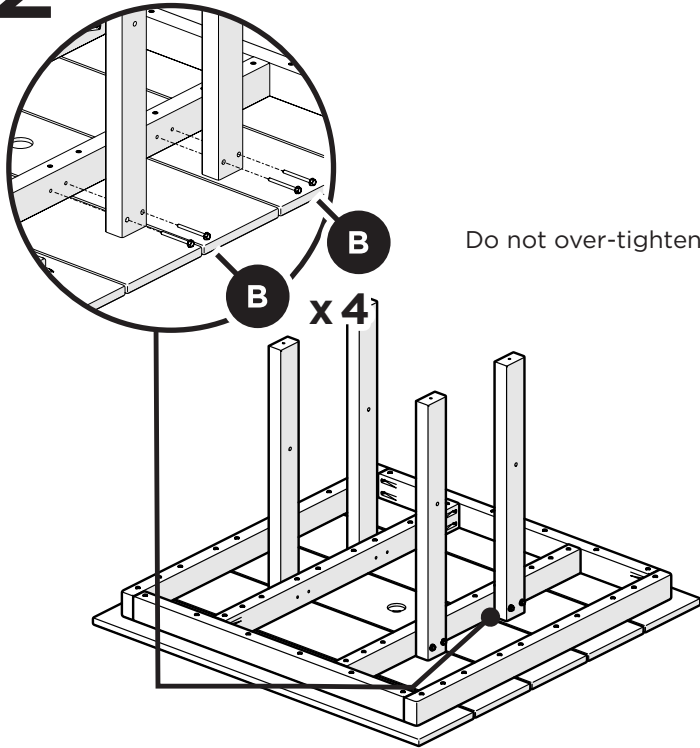

3

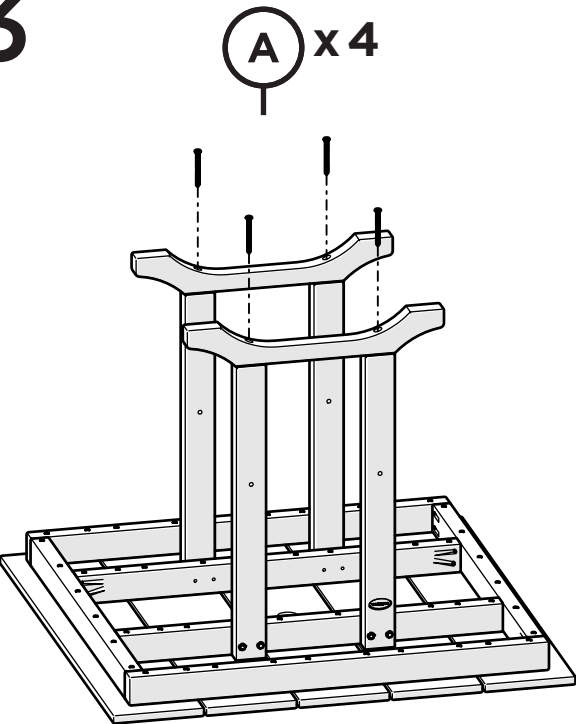

4

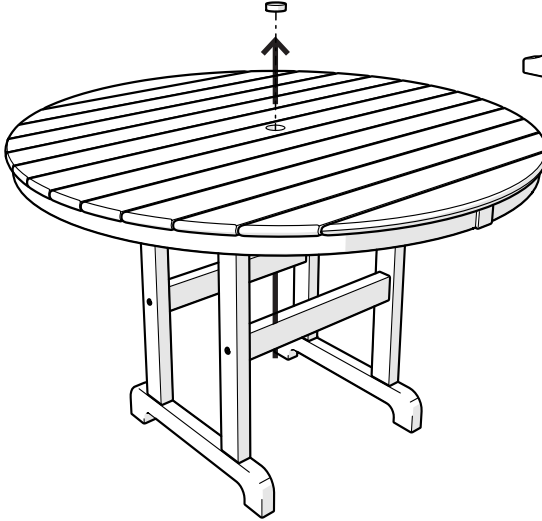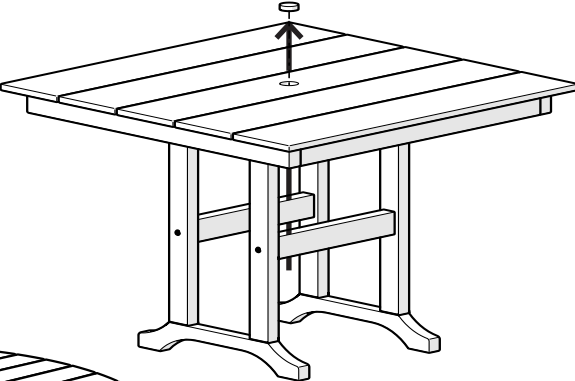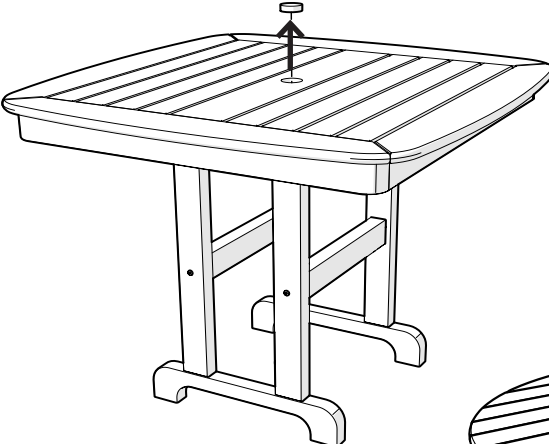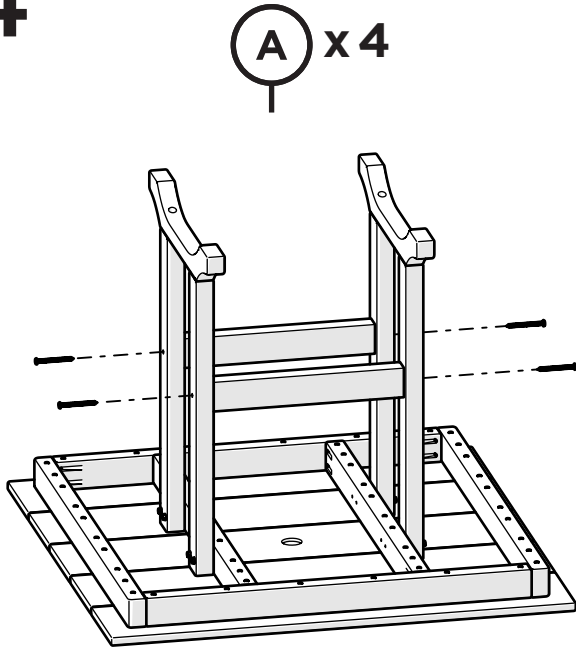

Removable
table plug