

# Installation Guide

Suit for Two handle centerset lavatory faucet

Thank you for selecting this product!

IMPORTANT NOTICES: For easy installation, please read all the instructions completely before beginning. Before installing this product, make sure that water line trash is cleared to avoid blockage.

WARNING: Assembly by a professional plumber is a required.

#### YOU MAY NEED



### INSTALLATION PROCEDURES



You should clean all the dirts from valve outlets. Turning off the water supply valves. This is usually found near the water meter. If you are replacing an existing faucet .remove the faucet from the sink and clean the sink surface thoroughly



Drill theeØ1-1/8 holes on the sink. Install the body into the holes.



Put the rubber washer and locking nut on, Wrench up the locking nut to lock firm the faucet on sink.



to water supply valves.



Thread lift rod into lift knob(1).

As shown, insert flange (3) with washer (4) through sink drain hole (5). Thread drain body (6) in position with ball rod (9) under from the opening facing back, tighten metal locknut (8) securely. thread drain tailpiece (7) into drain body.



As shown, place the drain stopper (10) into the drain rod into the ball rod opening through stopper hole and threaded it.

#### CAUTION: Maintenance

Insert lift rod(2) through lift rod strap(12) and secure with set screw(11).Place the ball rod(9) through one of the holes

on the lift rod strap.Secure it with the spring clip(13).



Turn the left handle counterclockwise to get the hot water. turn the right handle clockwise to get the cold water.

1. Replacement parts may be available at the store where you purchased your faucet.

2. Always turn off water and relieve pressure working before on your faucet.

#### **NOTES: Cleaning Instructions**

1. To keep the faucet clean you should clean the faucet frequently.

2. Clean the faucet with clear water or mild , then dry the faucet with soft cotton cloths.

- 3.Do not use any abrasive cleansers cloths, or paper towel.
- 4.Do not use any acid or abrasive detergent.







## TROUBLE-SHOOTING

If you've followed the instruction carefully and your faucet still does not

work properly, take these corrective steps.

Problem	Cause	Action
Leaks underneath handle.	Cartridge has come loose.	Tighten the cartridge.
Aerator leaks or has an inconsistent water flow pattern.	Aerator is dirty or worn out or misfitted.	Unscrew the aerator to clean or replace washer or replace the aerator
Water will not shut off completely.	Dirty or worn out washer in cartridge.	Remove handle and cartridge to check if the washer is damaged permanently or dirty. Re-install cartridge.