



ASSEMBLY INSTRUCTIONS

<<Before assembling, read all instructions>>

If you have any questions, please feel free to
contact us.
Email: lowesteam@animalife.com

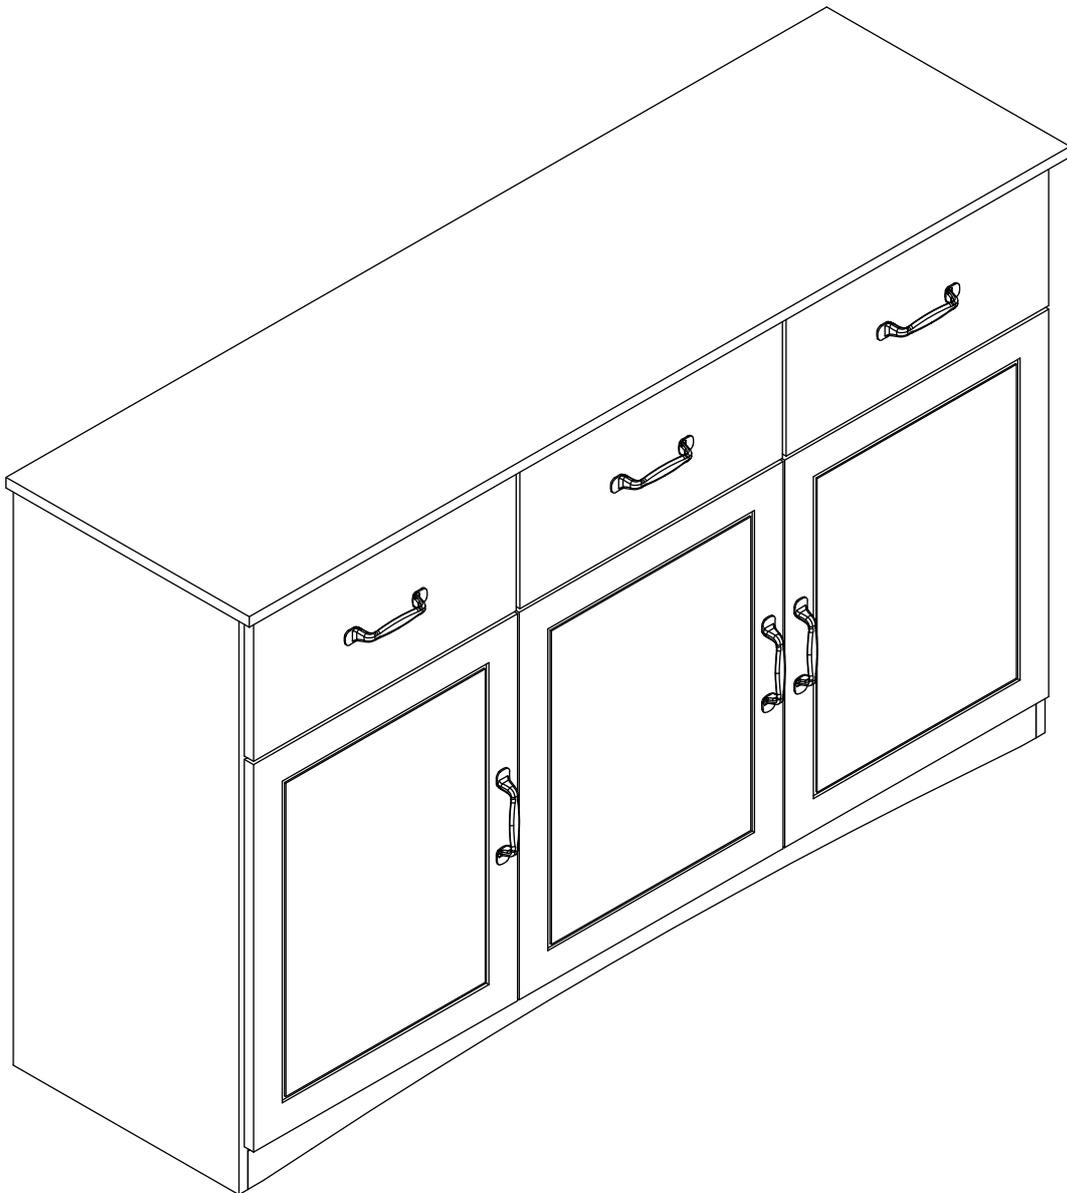


Exploded View

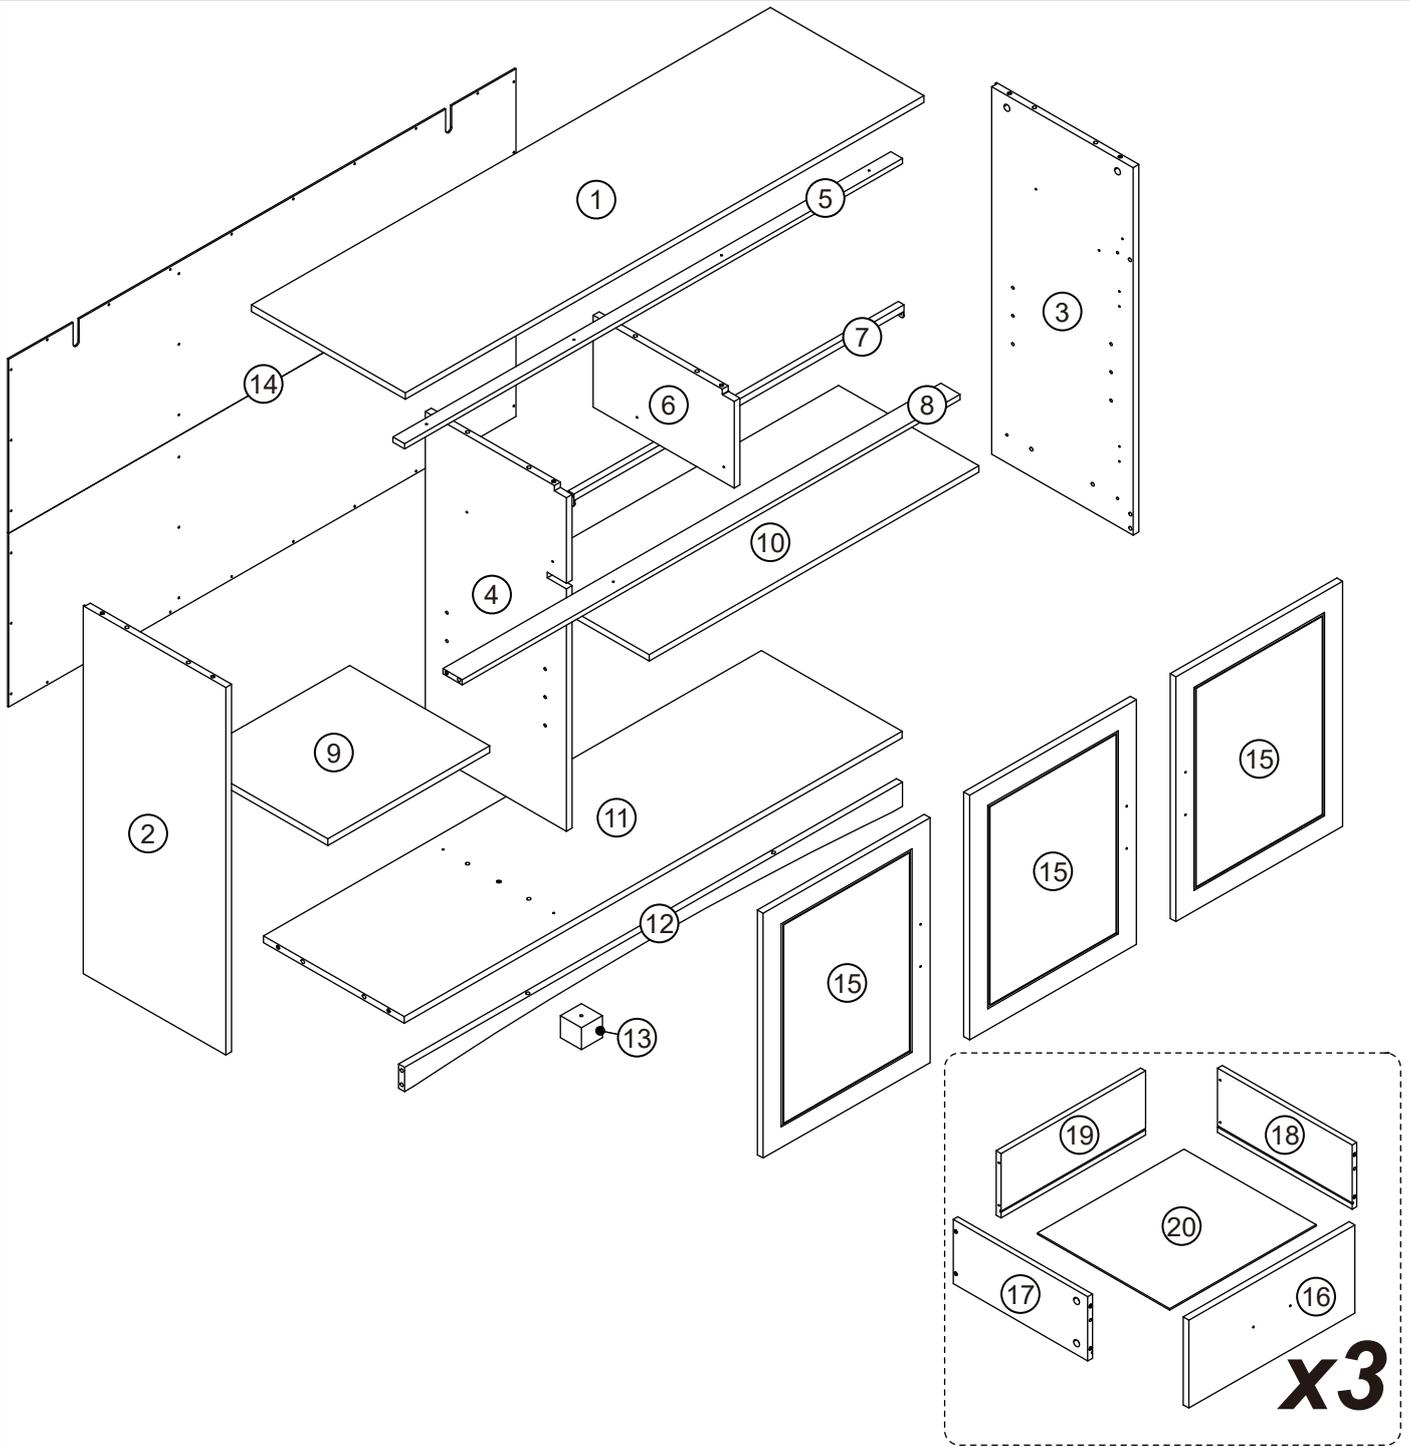


Fittings

 A x 26 M6 x 35 mm	 B x 26 φ15 x 9.5 mm	 C x 28 φ8 x 30 mm	 D x 5 φ4 x 35 mm	 E x 6
 F x 12 M4 x 12 mm	 G x 6	 H x 6 φ10 x 2 mm	 I x 28 φ3 x 12 mm	 J x 38 φ3.5 x 12 mm
 K x 12 M6 x 11 mm	 L x 8 55.3 x 36 mm	 M x 2	 N x 2	 O x 12 φ4 x 30 mm
 P x 4 φ4 x 20 mm	 CL x 3 350 mm	 CR x 3 350 mm	 DL x 3 350 mm	 DR x 3 350 mm


Step 1

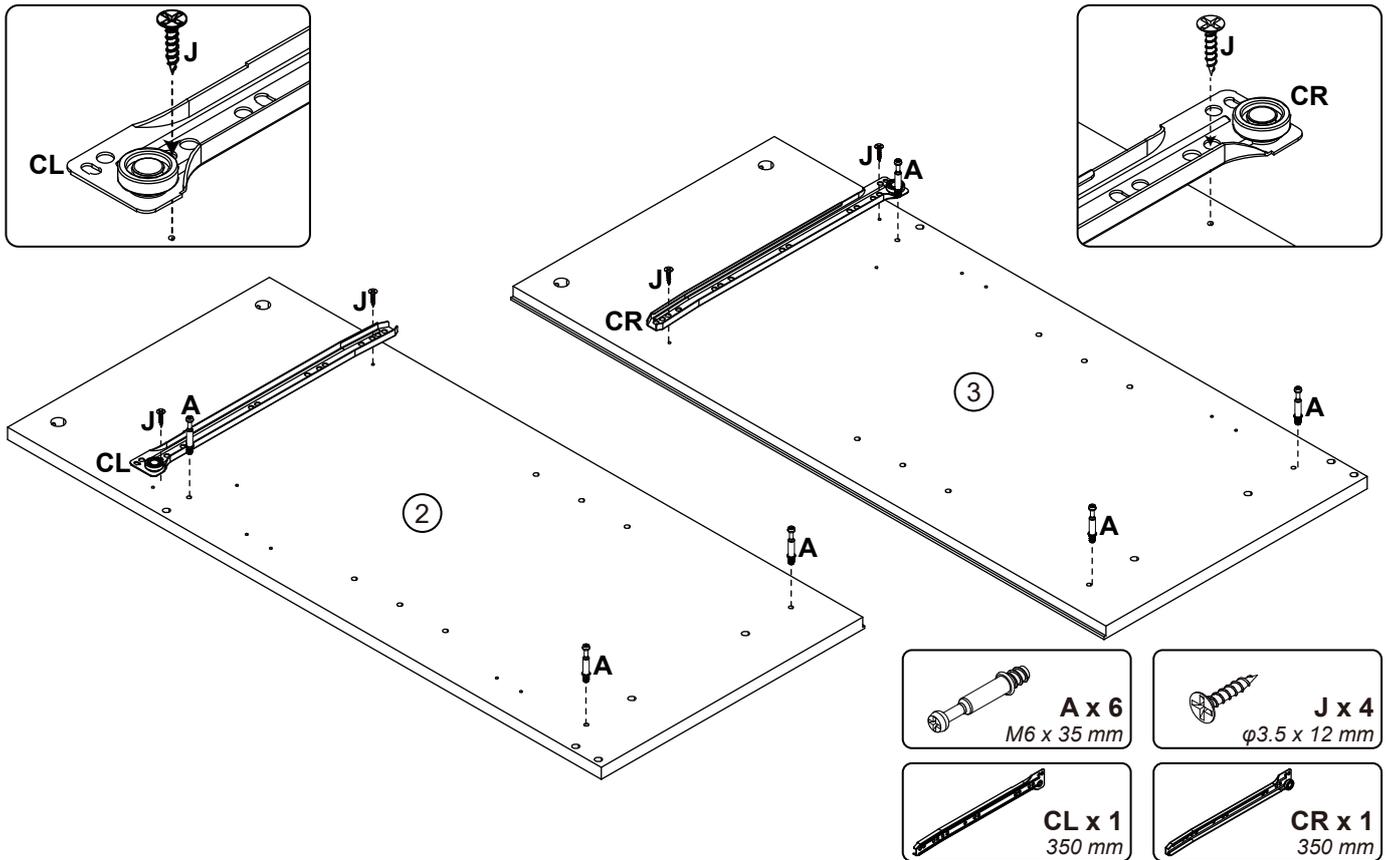


Step 2

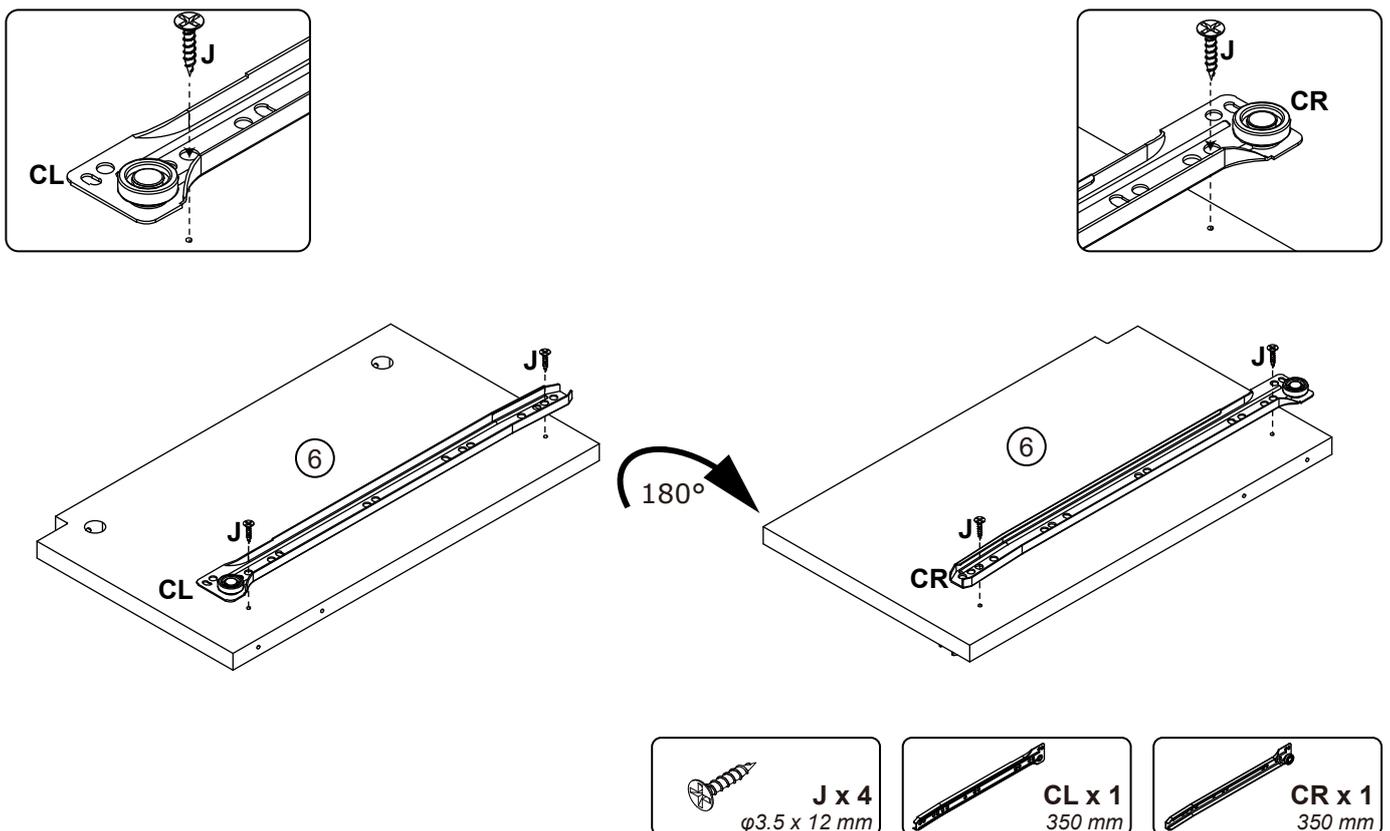



Step 3

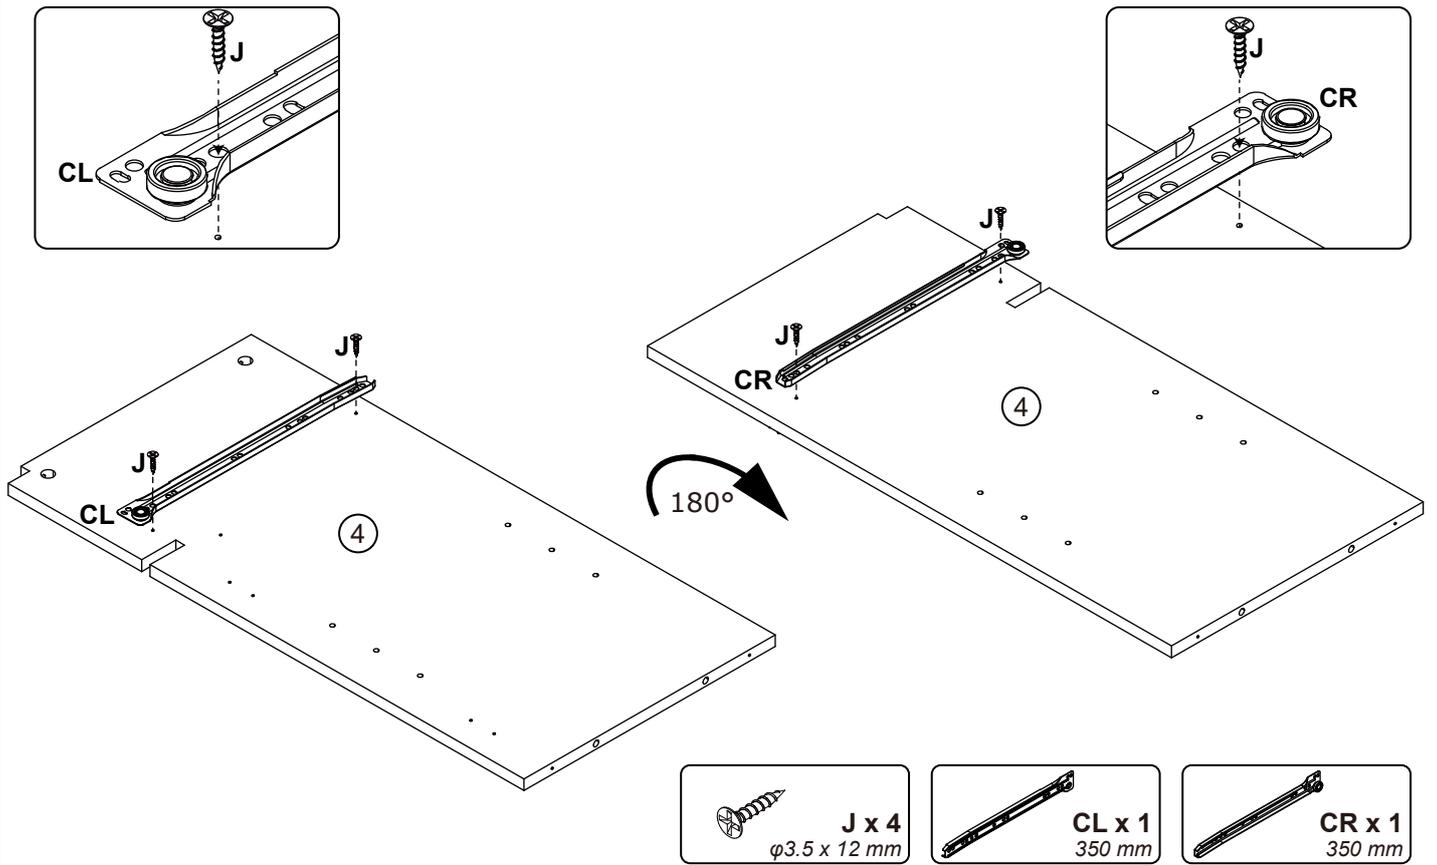




Step 4

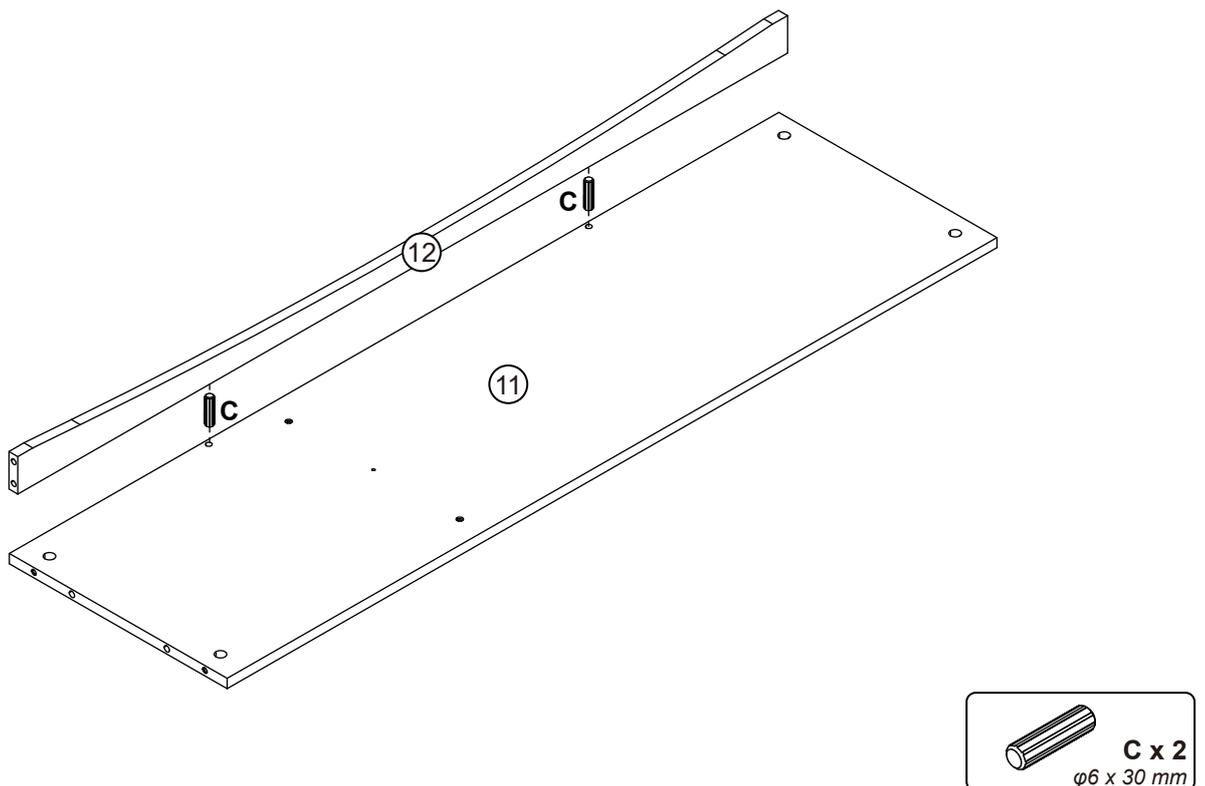




 

Step 5

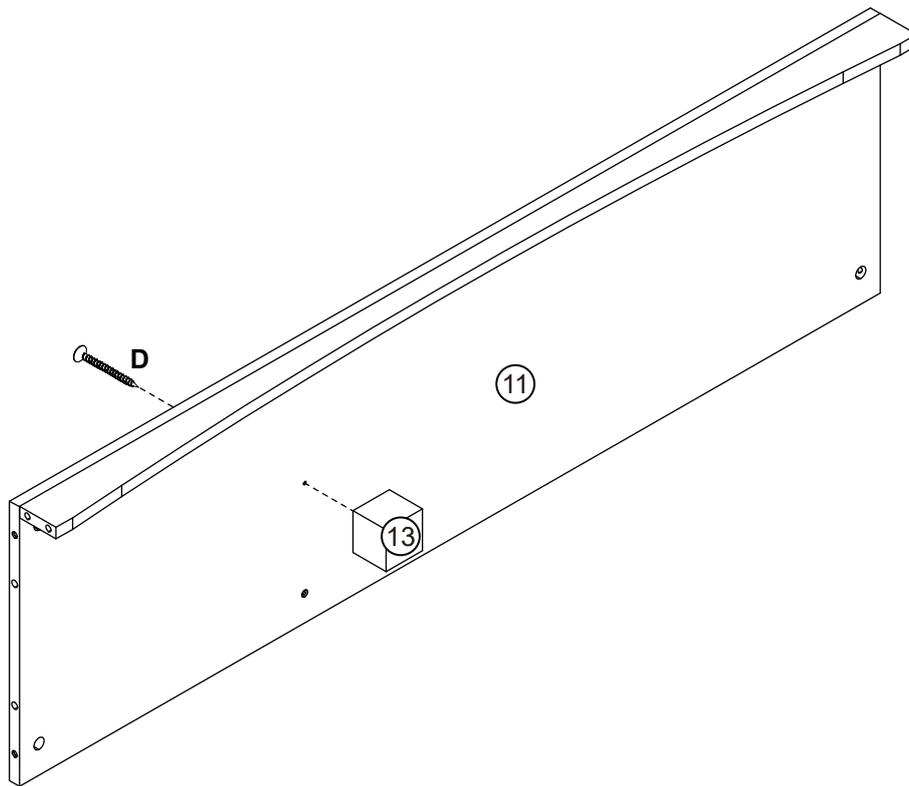


 
 

Step 6

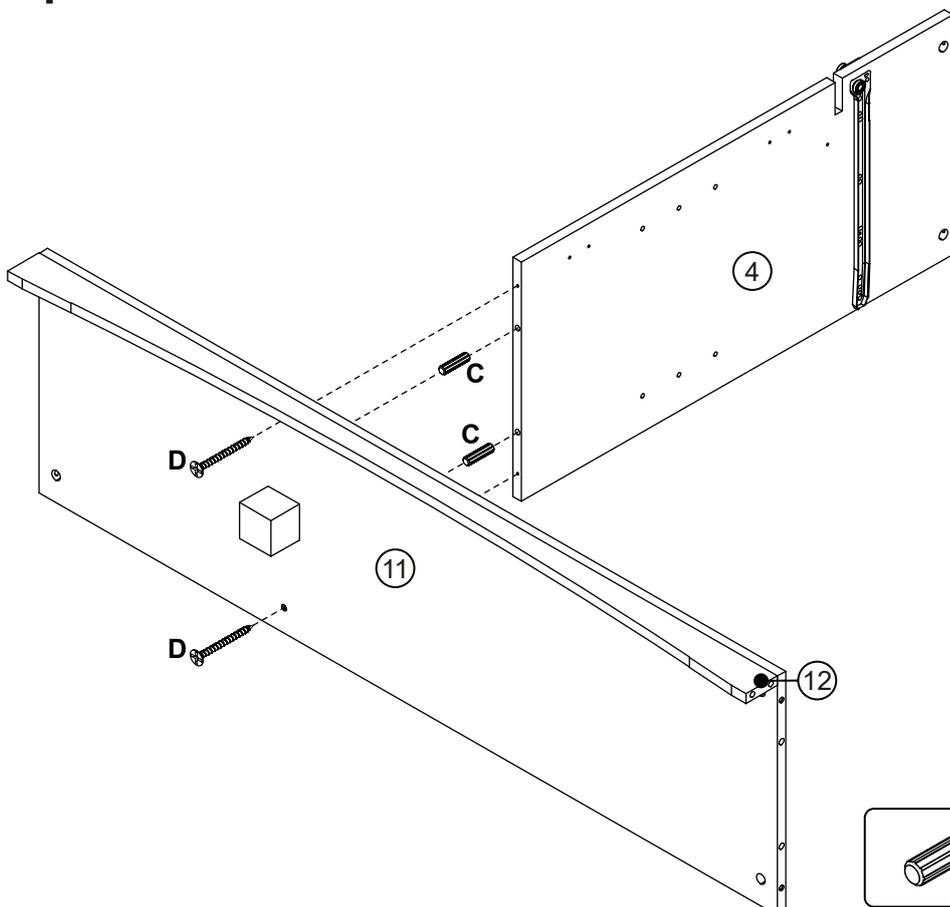

   
Step 7

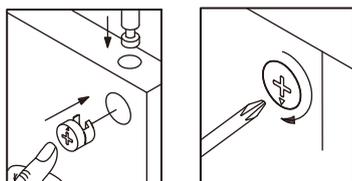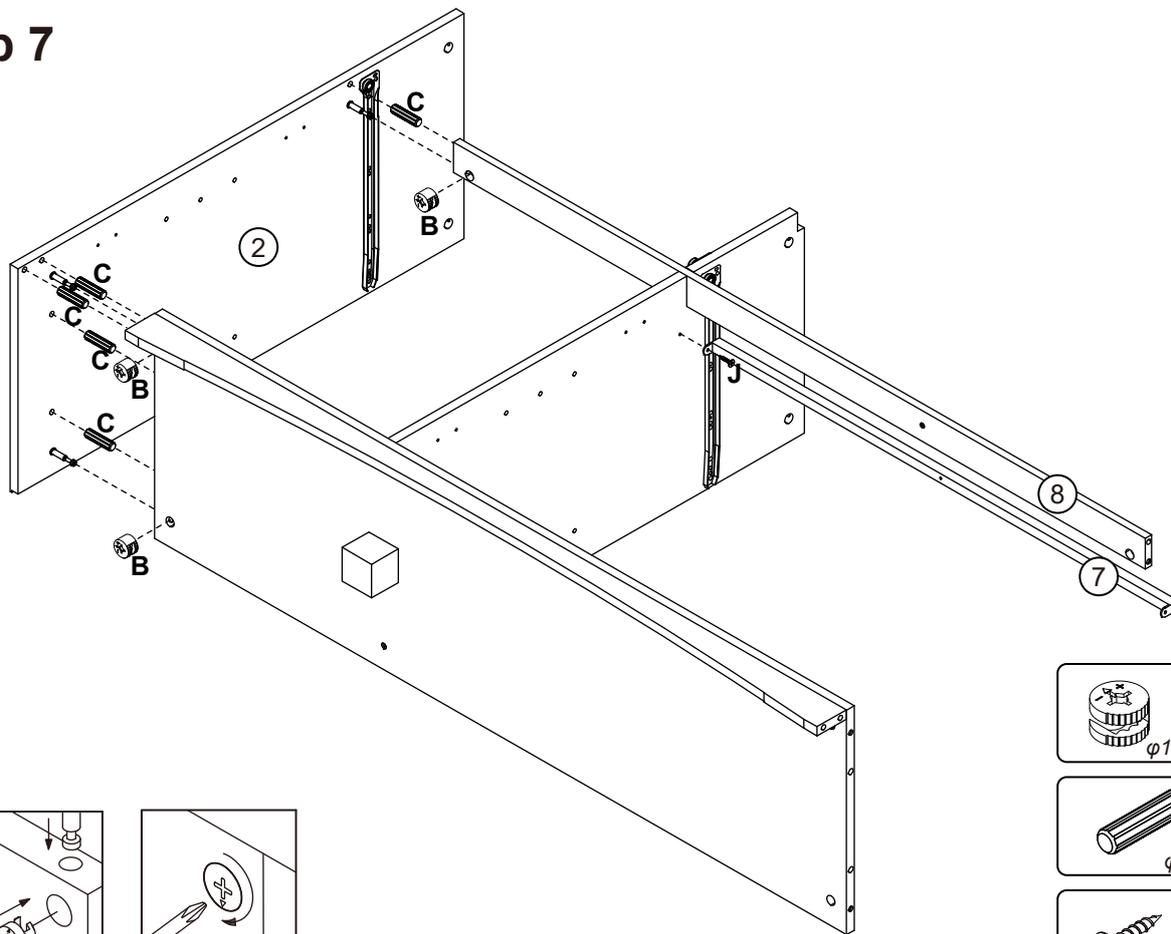

   

Step 8

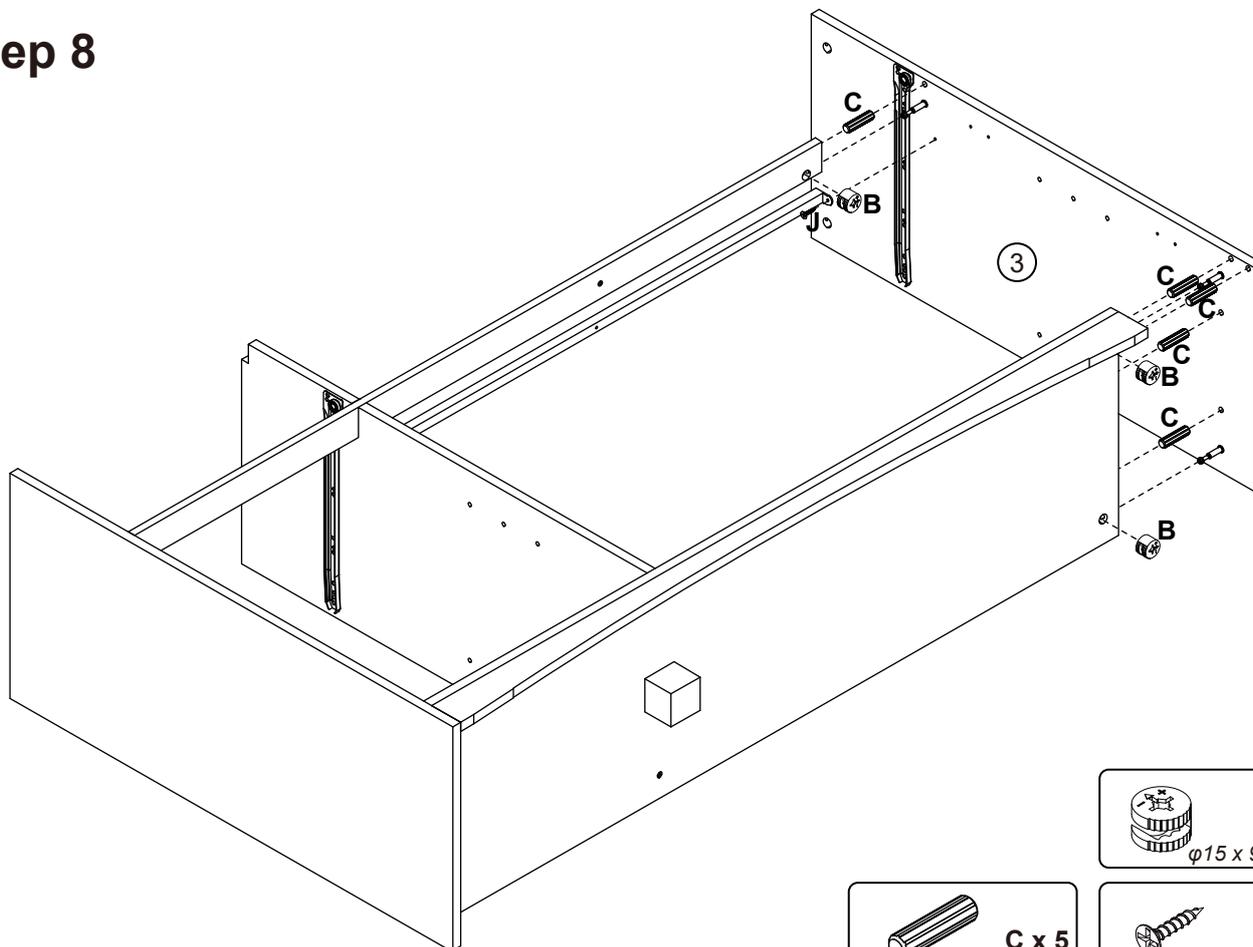



Step 9

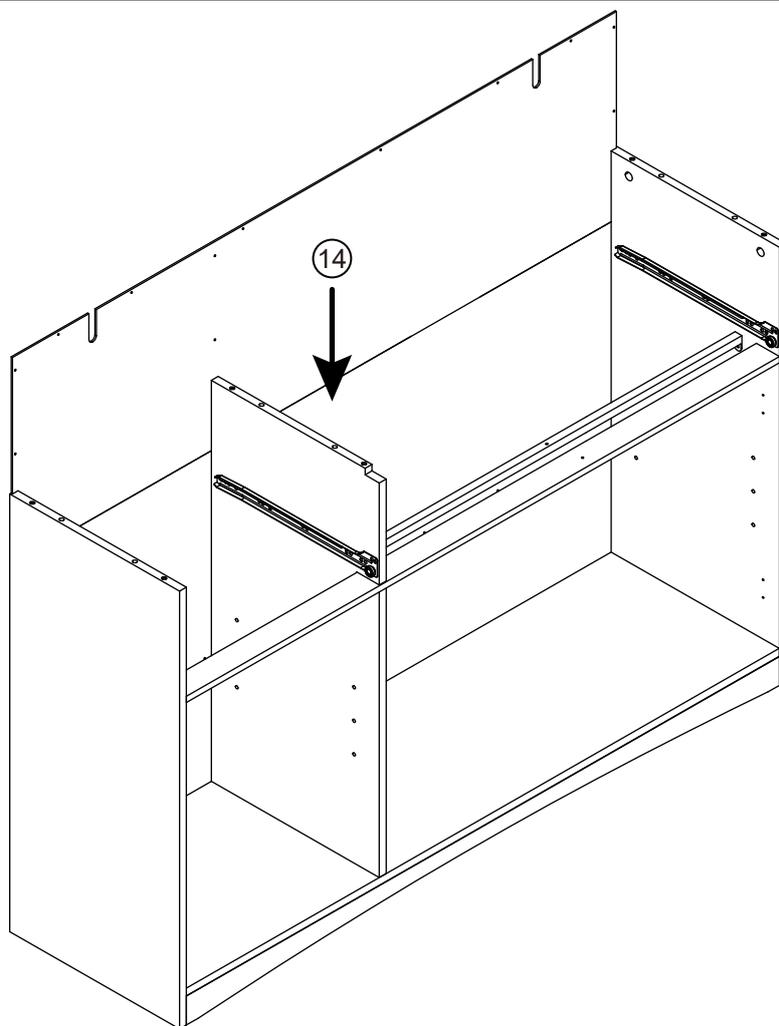

 

Step 10

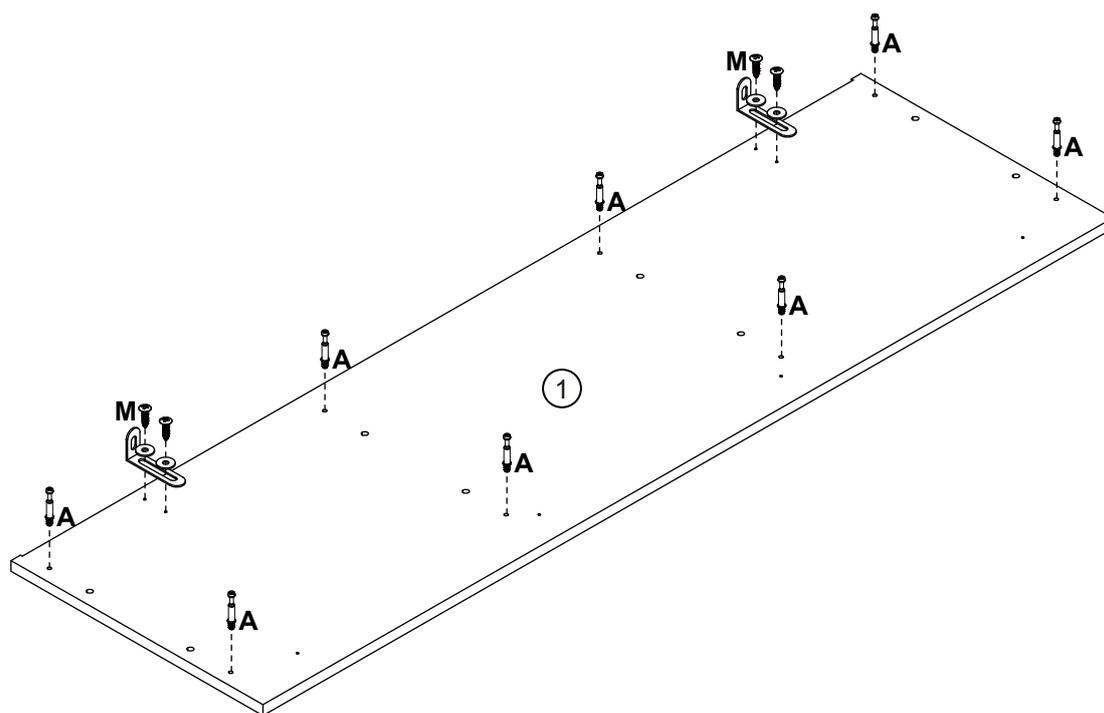

 
Step 11

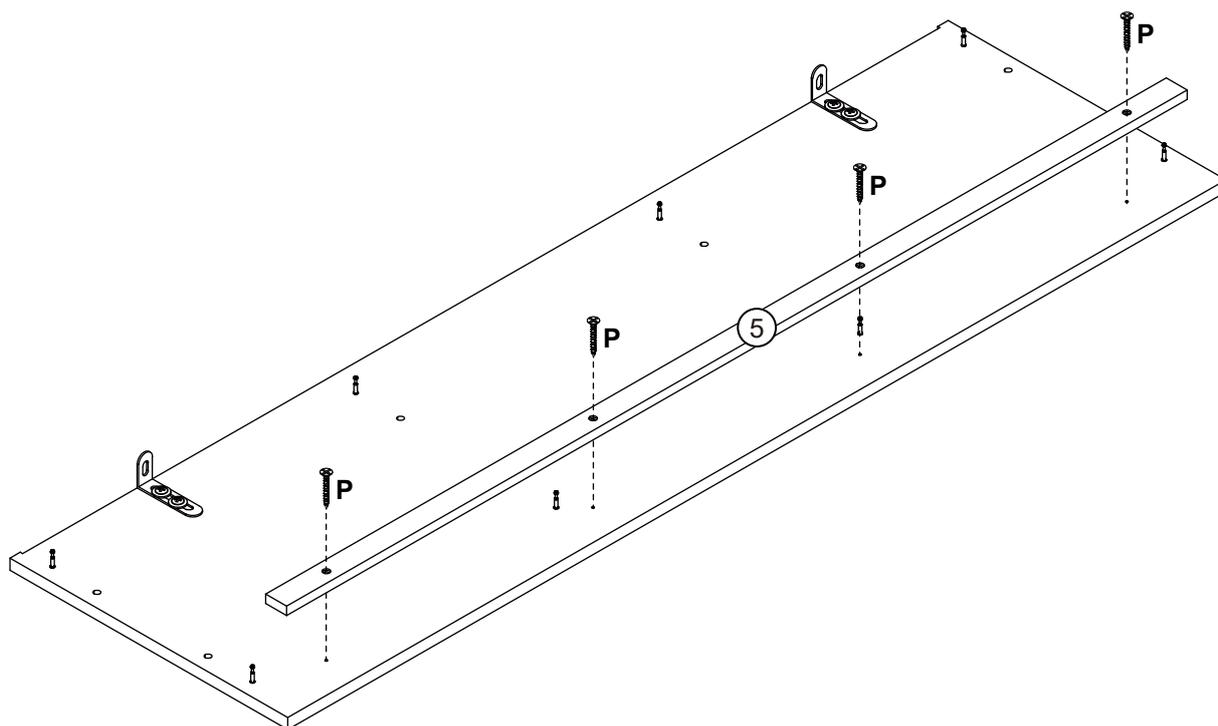

 
Step 12

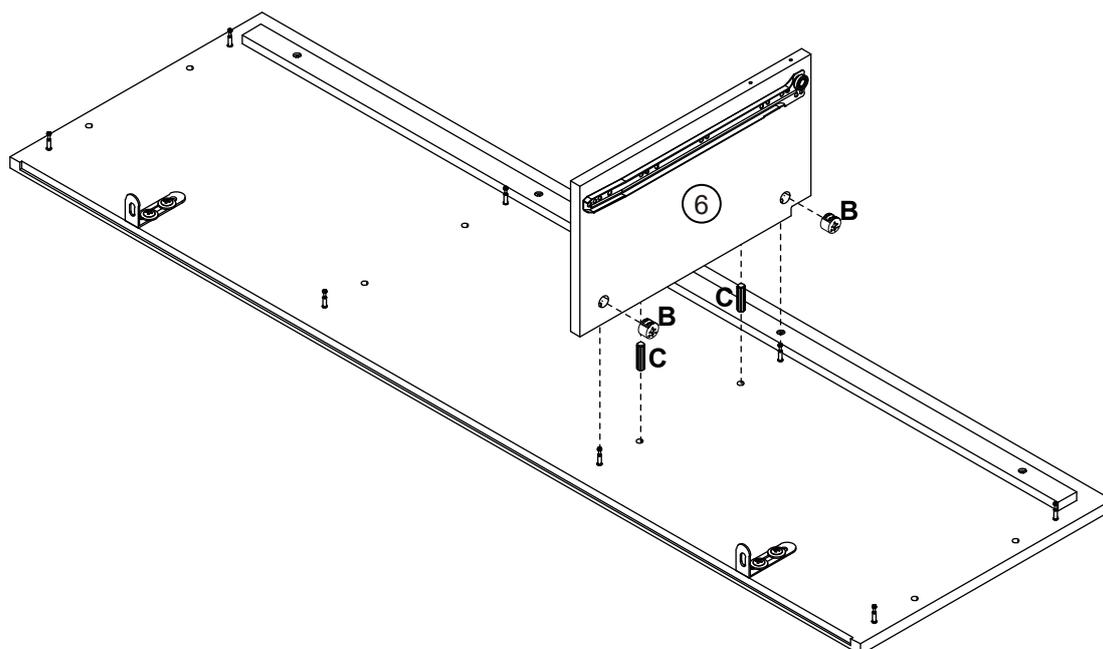








Step 13

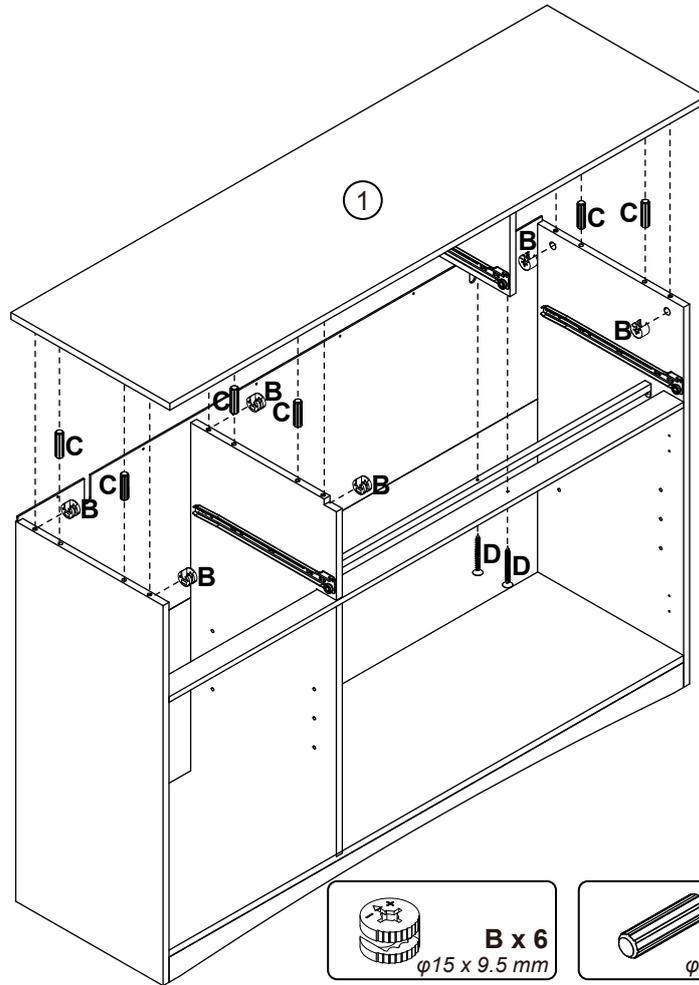



Step 14

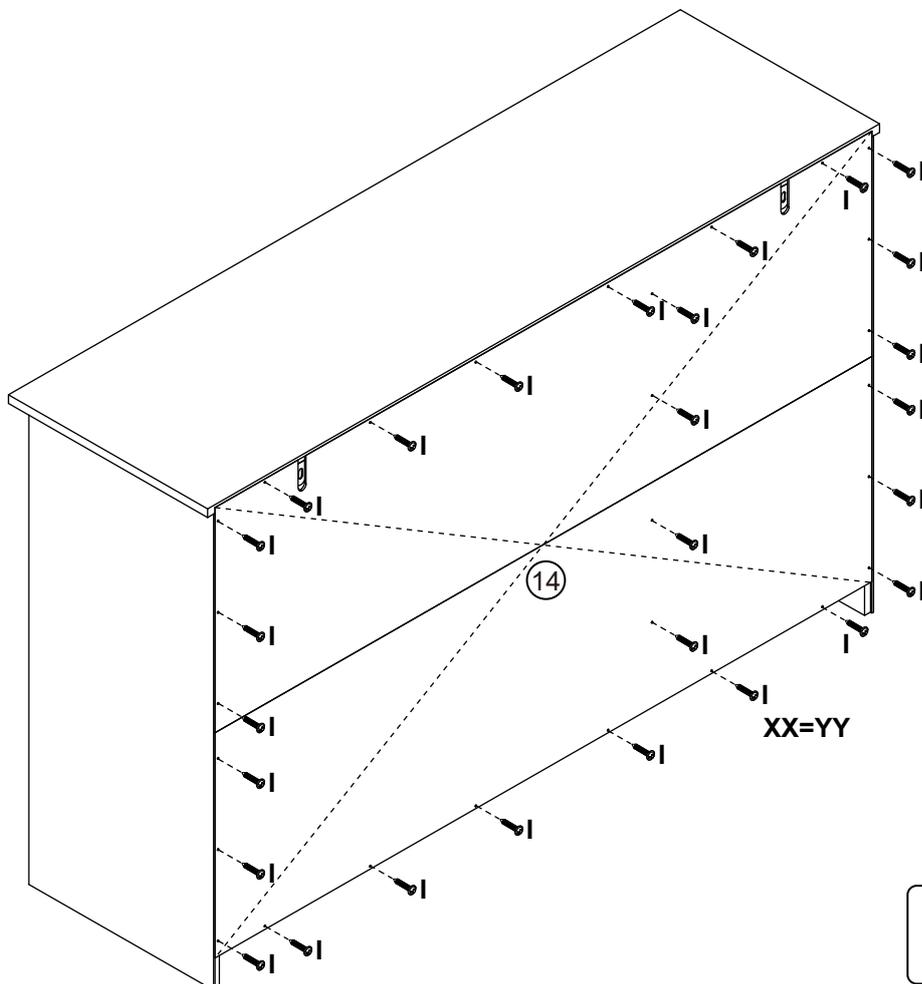

     

Step 15

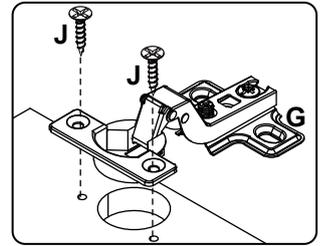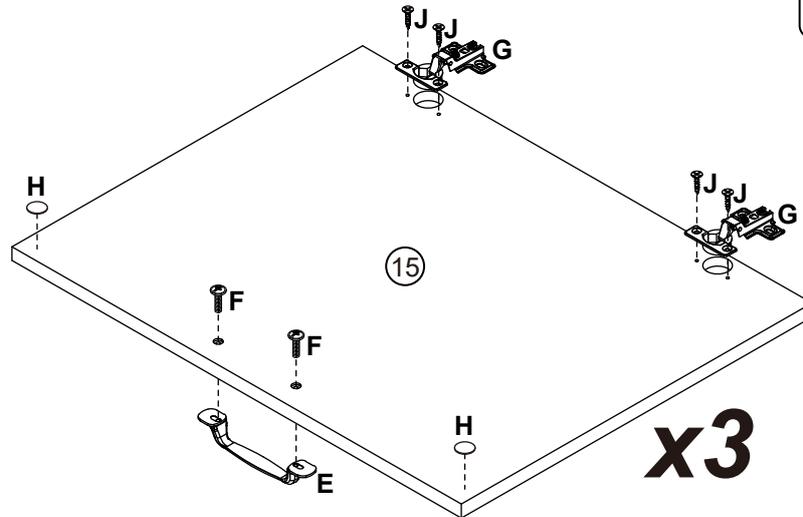



Step 16

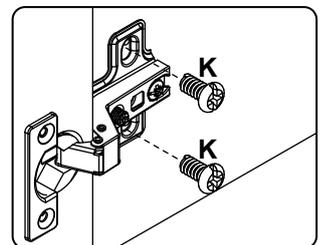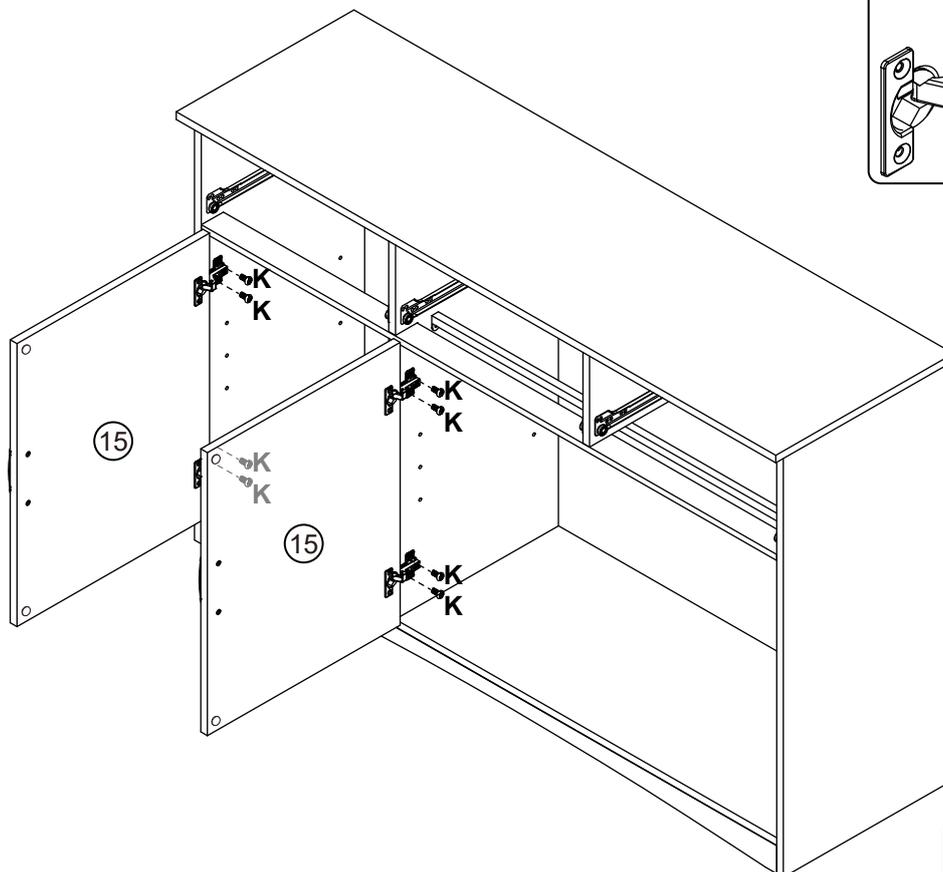

 
Step 17

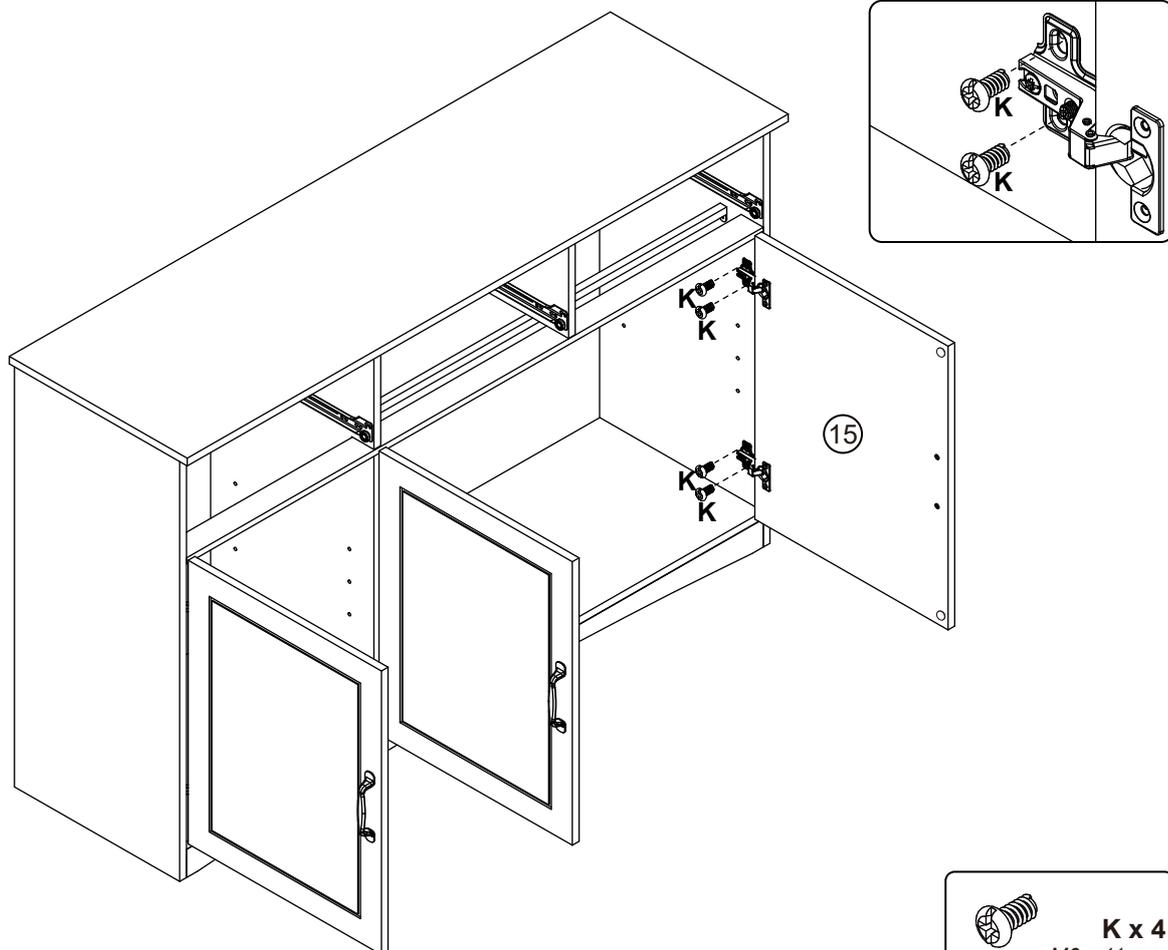

 
Step 18

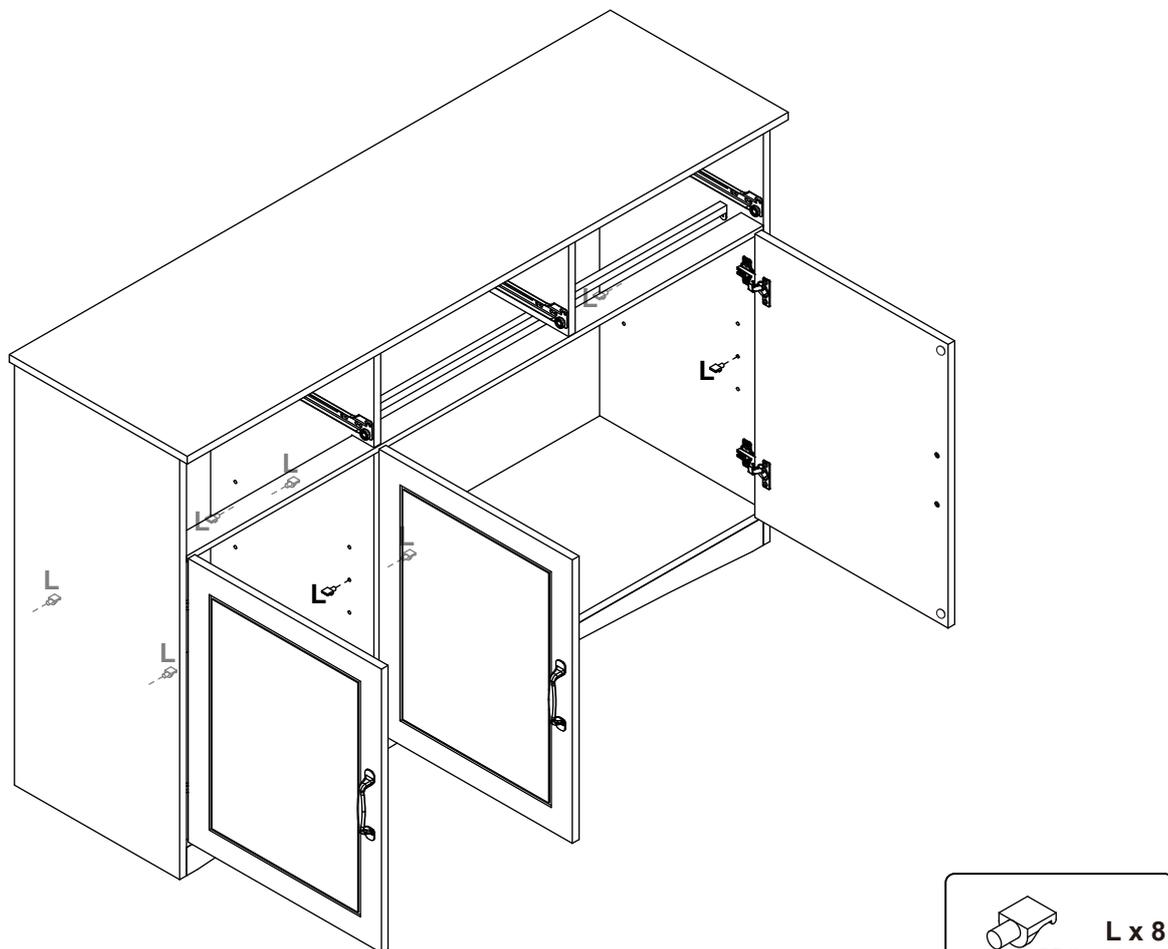




Step 19

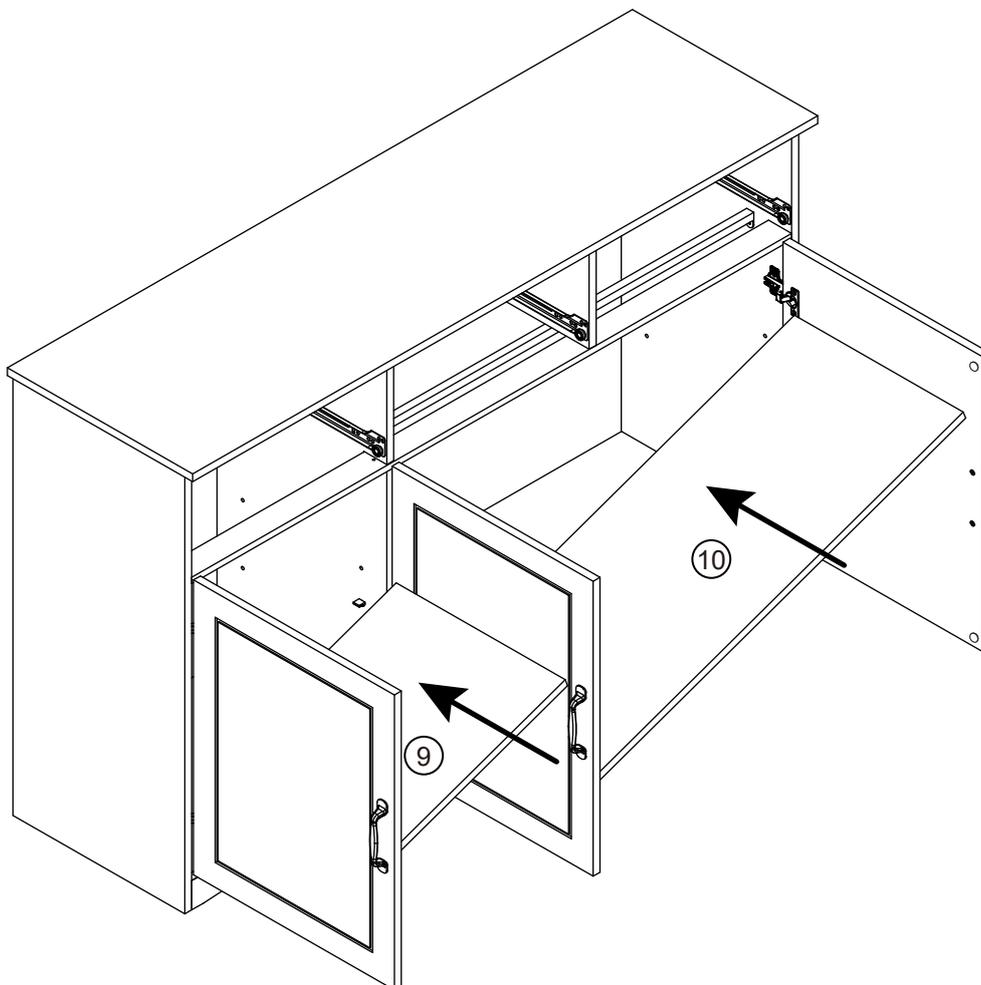



Step 20

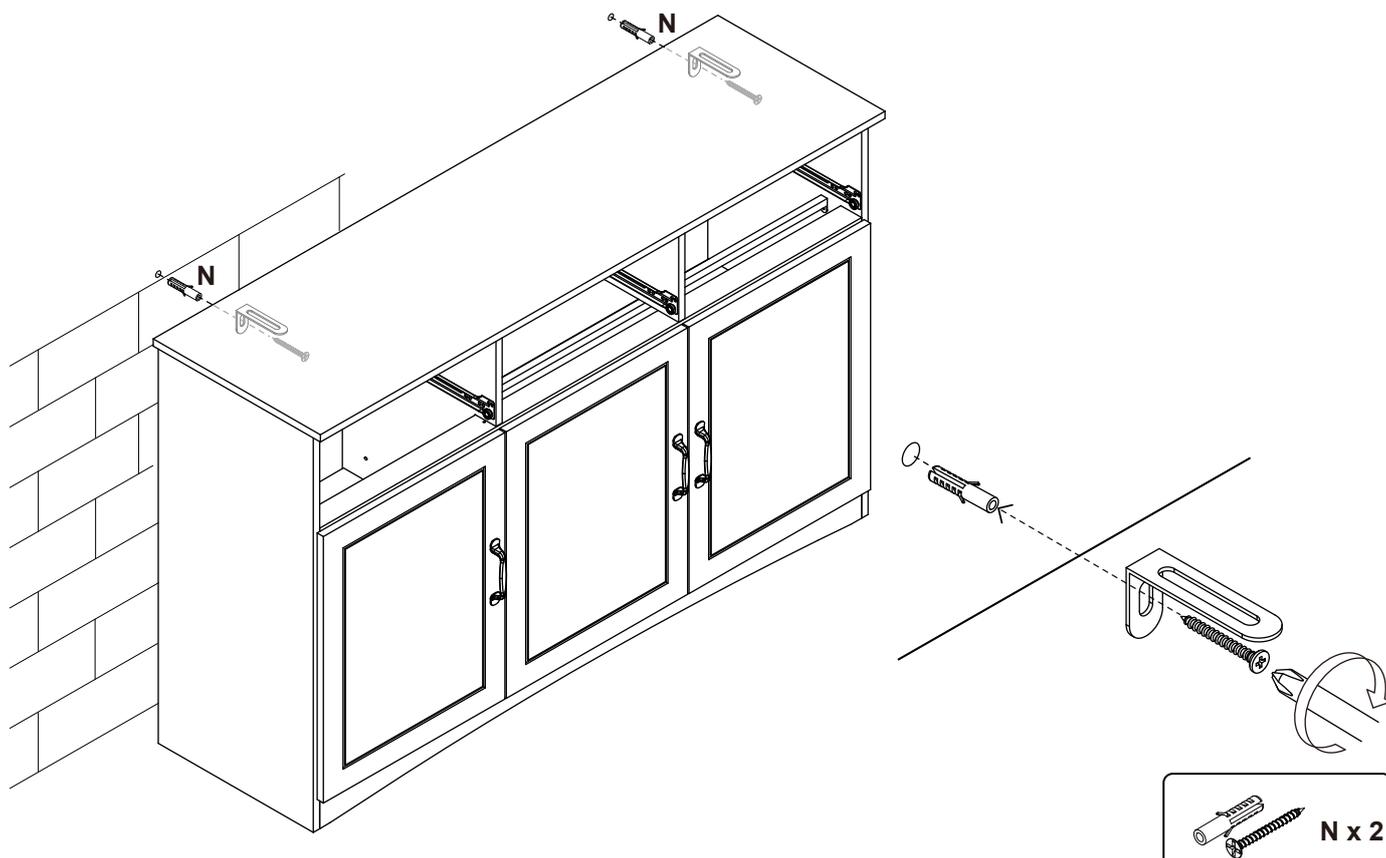

  
Step 21

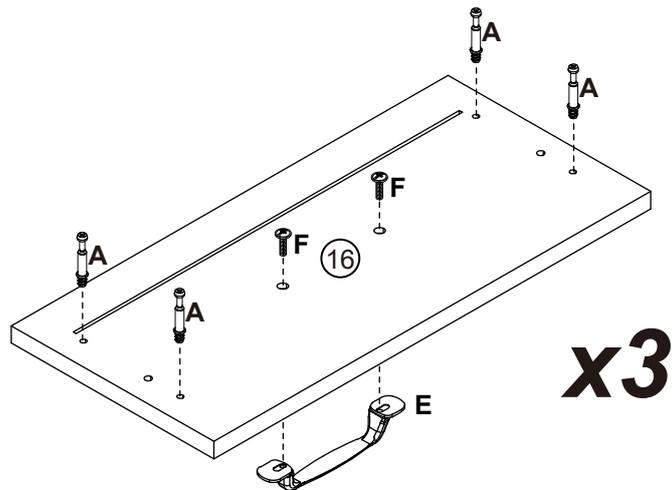

 

Step 22

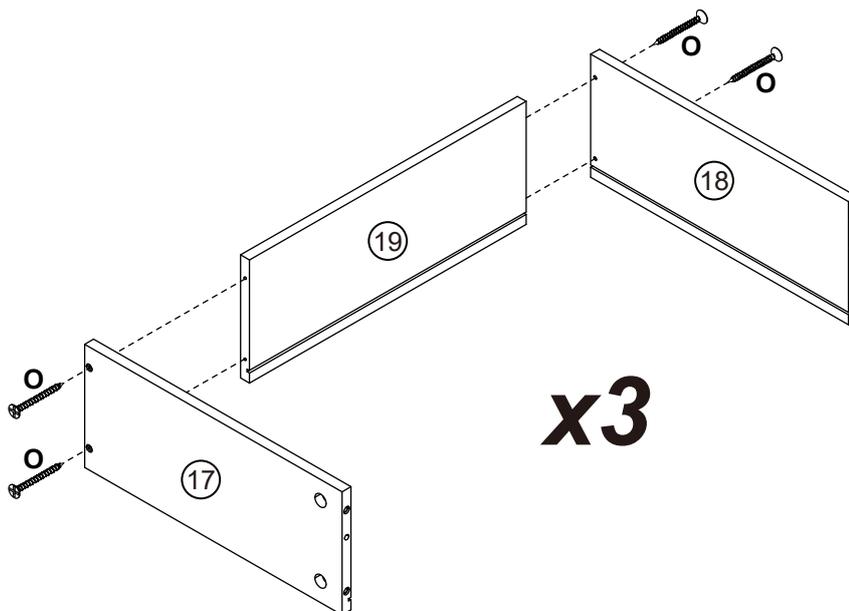

Step 23

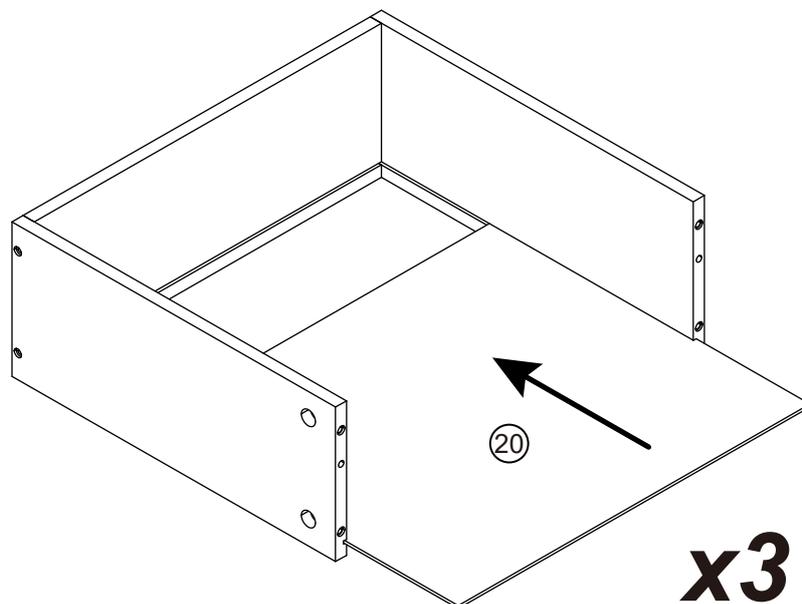

 Step 24


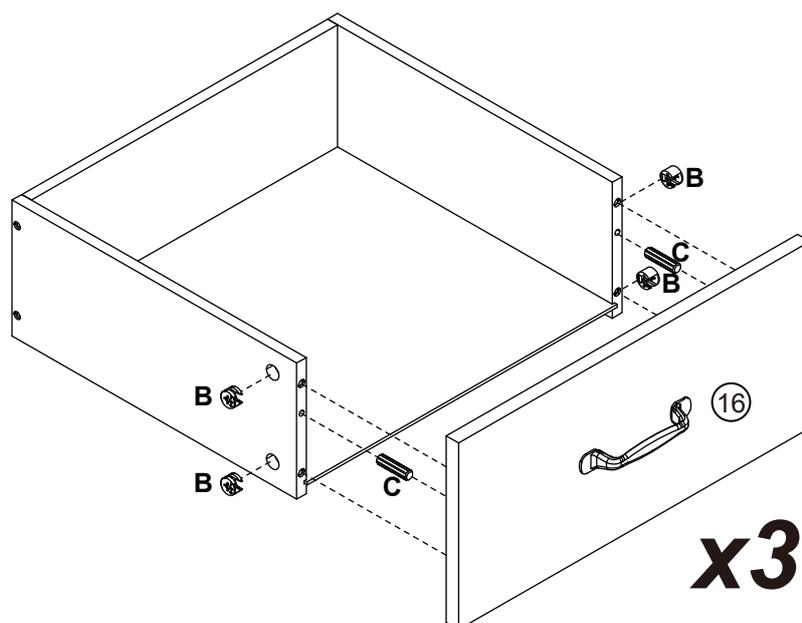


Step 27





Customer Attention:

To align doors and control gap in between doors, product doors may need adjusting during and after assembly. This can be done by adjusting appropriate screws. See below illustration.

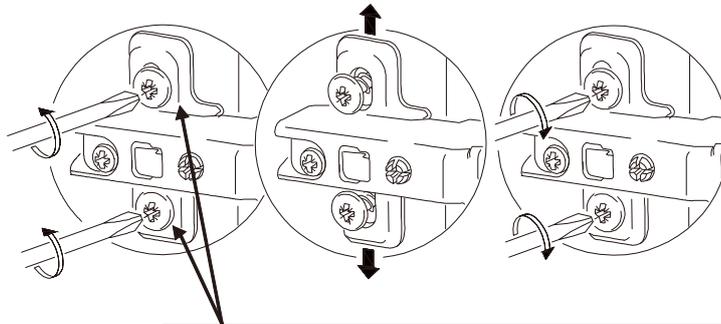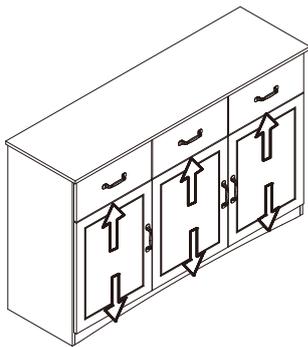



Vertical Door Adjustment:

Loosen both screws on all hinges and lift the door to the desired height. This allows an even space at the top and bottom between the door and frame.

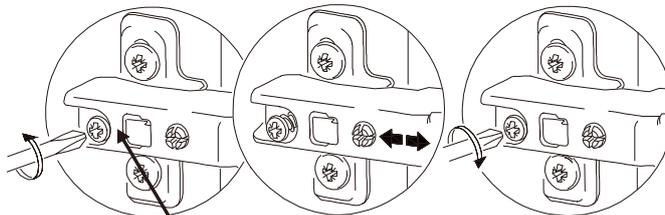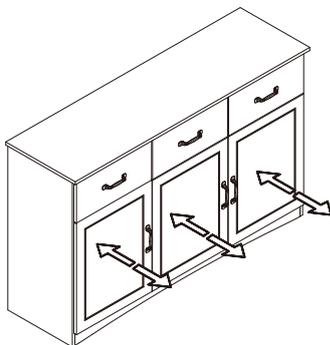

Lateral Door Adjustment:

If door is hinge bound, (rubbing on frame as you close or open door) loosening screw shown and move the door in appropriate direction. (In or out)

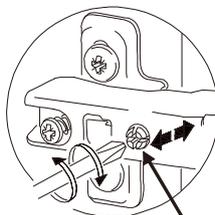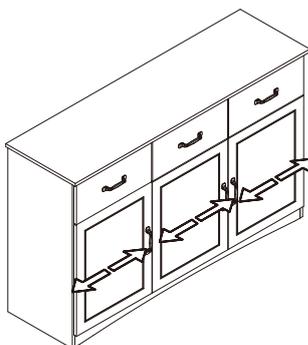

Horizontal Door Adjustment:

Rotate screw clockwise or anticlockwise. This will produce an even gap between doors and frame.