


## 4 Operation

### 4.1 Operation Instructions



#### WARNING

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

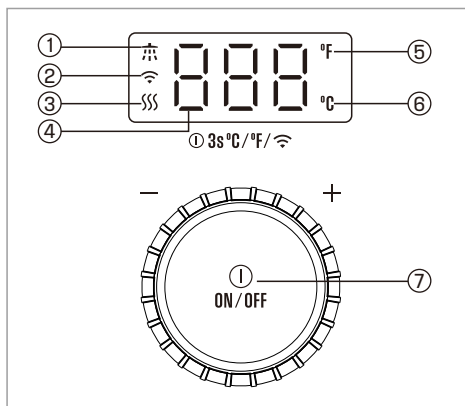

#### WARNING

Minors are not allowed to operate the water heater themselves unless accompanied by a guardian.

- |                       |              |
|-----------------------|--------------|
| ① Water flow signal   | ⑤ Fahrenheit |
| ② Water is heating up | ⑥ Celsius    |
| ③ Wifi icon           | ⑦ Knob       |
| ④ Outlet water temp   |              |

1. Turn on the circuit breaker to supply electrical power to the unit.
2. Open the water faucet for a few minutes until the water flow is continuous and all the air has been purged from the water pipes.
3. After the device is powered on, there will be a "beep" sound, and the appliance keeps standby.
4. Press "① ON/OFF" to start.
5. Turning the knob clockwise increases the output water temperature.  
Turning the knob counter clockwise decreases the output water temperature.  
Temperature range is 86 - 140 °F (30 - 60°C).
6. Press the knob for 3 seconds, the display will change from Fahrenheit to Celsius or vice versa.

- If the unit has been paused, you may initially get a short burst of very hot water when you turn it on again. Please run the water through for a few seconds to let the temperature settle down. Please check the hot water with your hand before taking a shower.
- If the unit is not used in winter drain out the water completely so that the heater does not freeze.
- Please clean the inlet filter and the shower periodically in order to keep a proper water flow.