


INSTALLATION MANUAL

STEP LADDER

W2660P468422
E210903

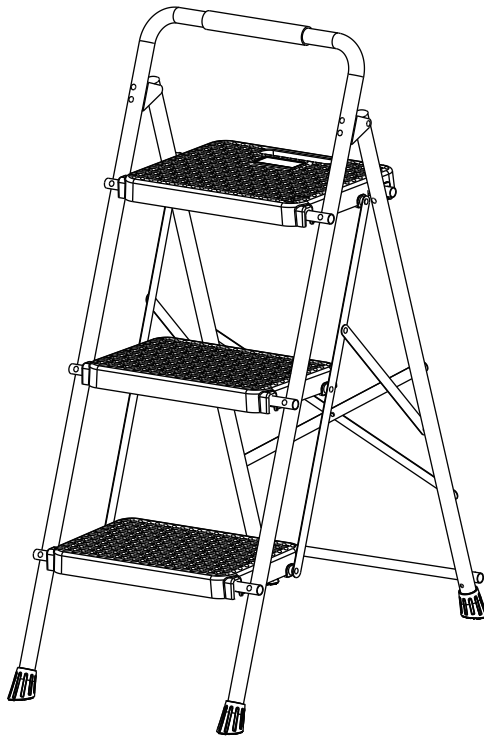

USE INSTRUCTION

INSPECTION

1. Inspect upon receipt and before each use, never climb a damaged, bent or broken step stool. All parts must be in good working order.
2. Make sure all rivets and joints, nuts and bolts are tight; steps, spreaders, and braces are secure; spreaders function properly.
3. Keep step stool clean, free from grease, oil, mud, snow, wet paint and other slippery material. Keep your shoes clean; leather soles should not be used.
4. Never make temporary repairs of damaged or missing parts.
5. Destroy step stool if broken, worn or if exposed to fire or chemical corrosion.

PROPER SET-UP

1. **DANGER METAL CONDUCTS ELECTRICITY!** Do not let step stools or any material come in contact with live electrical wires.
2. Make sure step stool is fully open and spreaders secure.
3. Place on firm surface and a secure footing. Do not use on slippery surfaces. Do not place on boxes, unstable bases or scaffolds to gain additional height. Do not place in front of door opening toward step stool.

PROPER CLIMBING AND USE


- 1.DO NOT USE STEP STOOLS if you tire easily,are subject to fainting spells, are using medicine or alcohol or are physically impaired.
- 2.To protect children, do not leave step stool set up and unattended.
- 3.Face to step stool when climbing up or down.Keep body centered between side rails.
4. Do not overreach, move step stool when needed.
- 5.Do not "walk" or "jog" step stool when standing on it.
- 6.Do not overload, Step stools are meant for one person. Do not use as brace, platform or plank.
- 7.Keep step stool close to work, avoid pushing or pulling off to the side of step stool.

PROPER CARE AND STORAGE

- 1.Store step stool in safe and dry place.
- 2.Properly secure and support step stool while in transit.
3. Never store materials on step stool.
- 4.Keep step stool clean and free of all foreign materials.


1.OPEN:

Hold the handrail and the other hand pushes the top step.

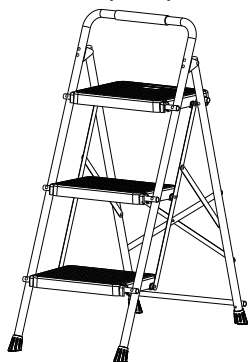


2.LOCK:

Make sure the top step locks the rod firmly.

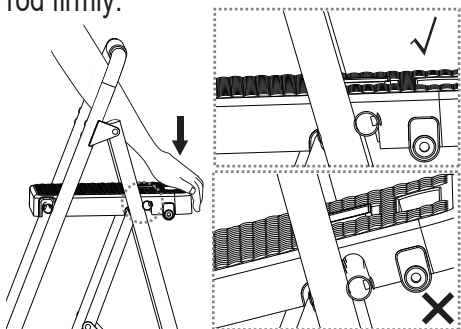


3.FOLD:

Hold the handrail and the other hand lifts the back of the top step.

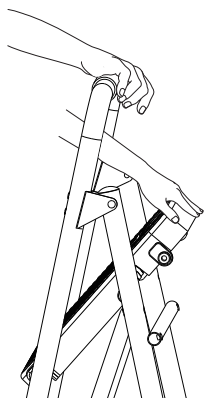


Cases and Solutions


Case
The ladder wobbles

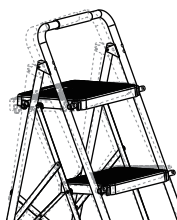


Solution
Rotate and push the four leg plugs tight, Keep it all in the right direction

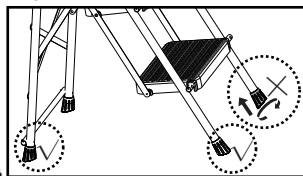

Case
The pedal is unlocked

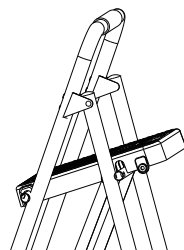

Solution
Press down on the front of the pedal with both your hands, Until the pedal is locked

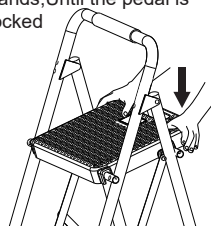

⚠ Warning

Make sure all four feet of the ladder are level and the pedals are locked before you step on the ladder.



⚠ Warning

Make sure you step on the middle of the pedal to avoid the risk of falling down.

