

ASSEMBLY INSTRUCTIONS

CORNER SOFA SET

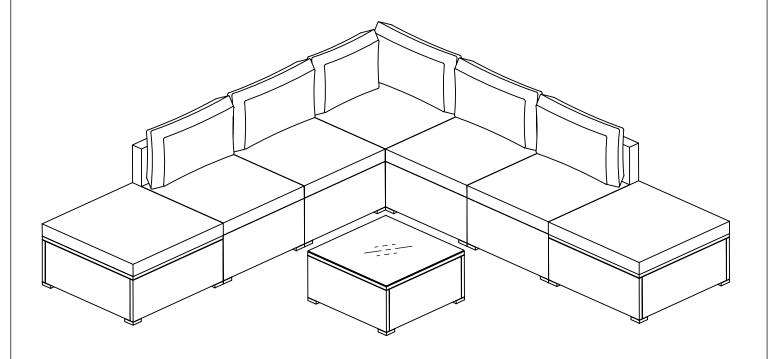

WF288771, WF288772, WF288773, WF288774 WF288775, WF288776, WF288777, WF288778

Page: 1/10

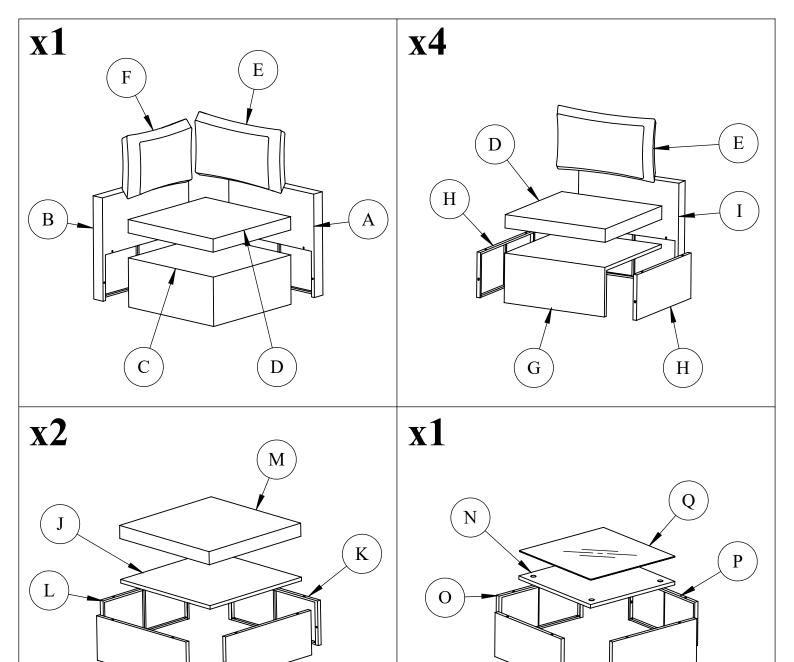

Note:

K

 
- 1. 50% Tighten before fixing all scews, Allen wrench is recommended instead of an electric drill.
- 2. Place the item on a flat ground to adjust and make sure it remains stable.
- 3. Tighten up all screw with tools gradually.
- 4. If screw are not aligned with holes furing assembly, please loosen all the other screws to 50% and continue the assembly process.
- 5. If the item is not stable, please loosen all screws, adjust it on a flat ground and tighten up all screws again.
- 6. Note: If one or some screws are fully tighten during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

CARTON CONTENT:

WF288771, WF288775




(B) x 1




 $\int \int x 2$



 (L) x 4



 (K) x 4



(M) x 2



(Q) x 1



HARDWARE

 
WF288772, WF288776



(I) x 4



 $\bigcirc x 1$



(H) x 8



(F) x 1



(E) x 1

WF288773, WF288777



 
(G) x 2



(A) x 1



(O) x 2



(P) x 2

 


(E) x 4


WF288774, WF288778



(G) x 2




 (N) x 1





 $\widehat{(H)}$ x 5


Part List:

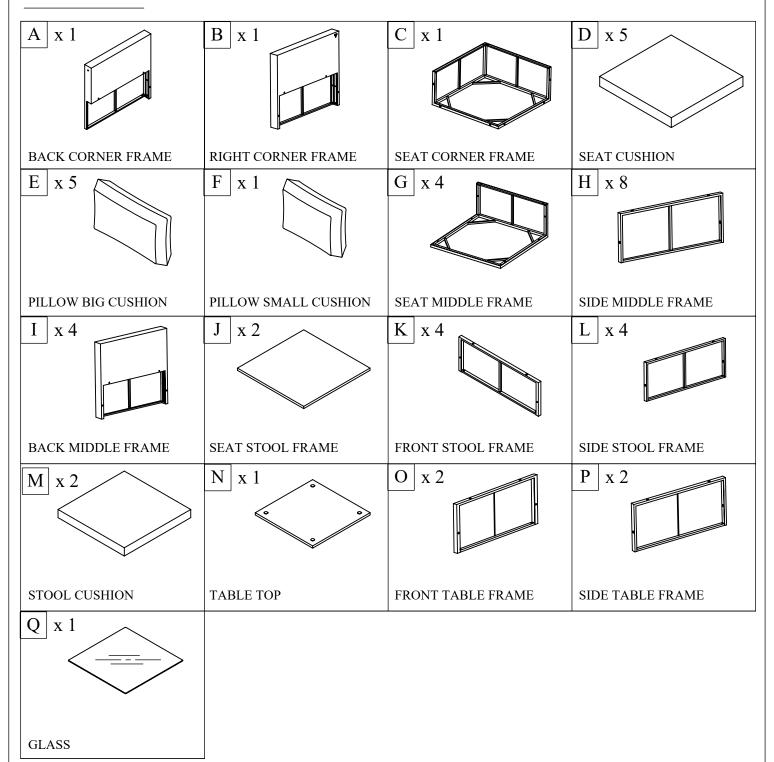


Hardware:

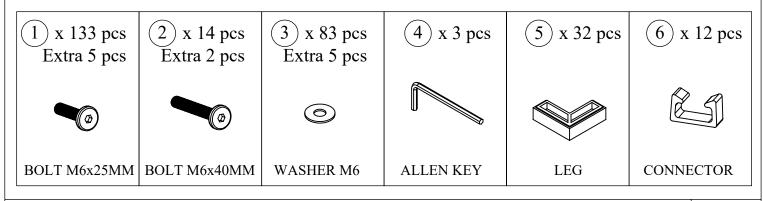


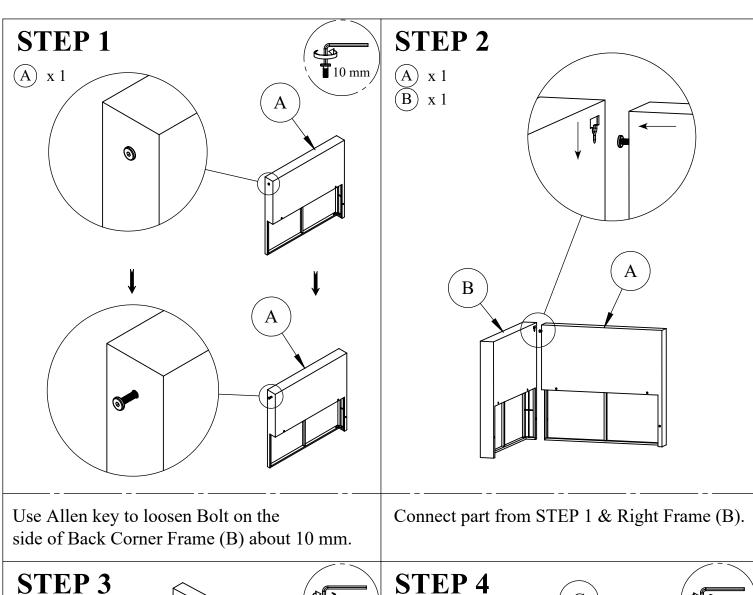

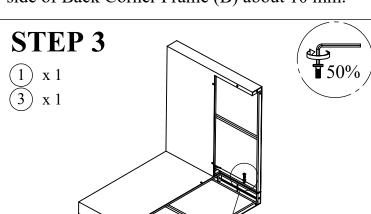

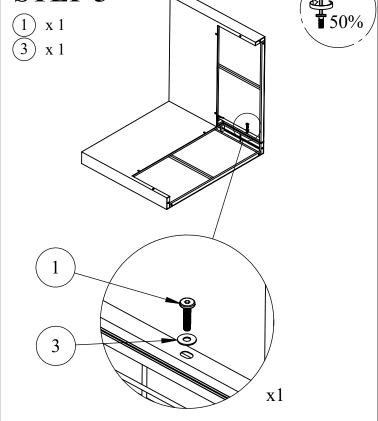


Connect part (A) & (B) with Bolt (1) & Washer (3).

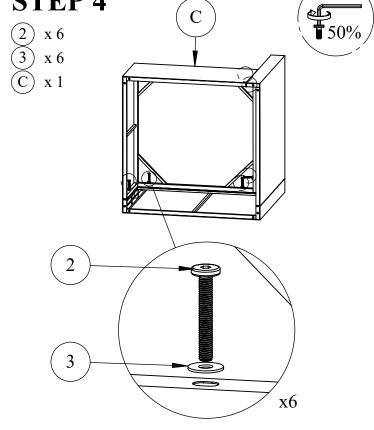

Connect part from STEP 3 & Seat Corner (C) with Bolt (2) & Washer (3).

Page: 5/10

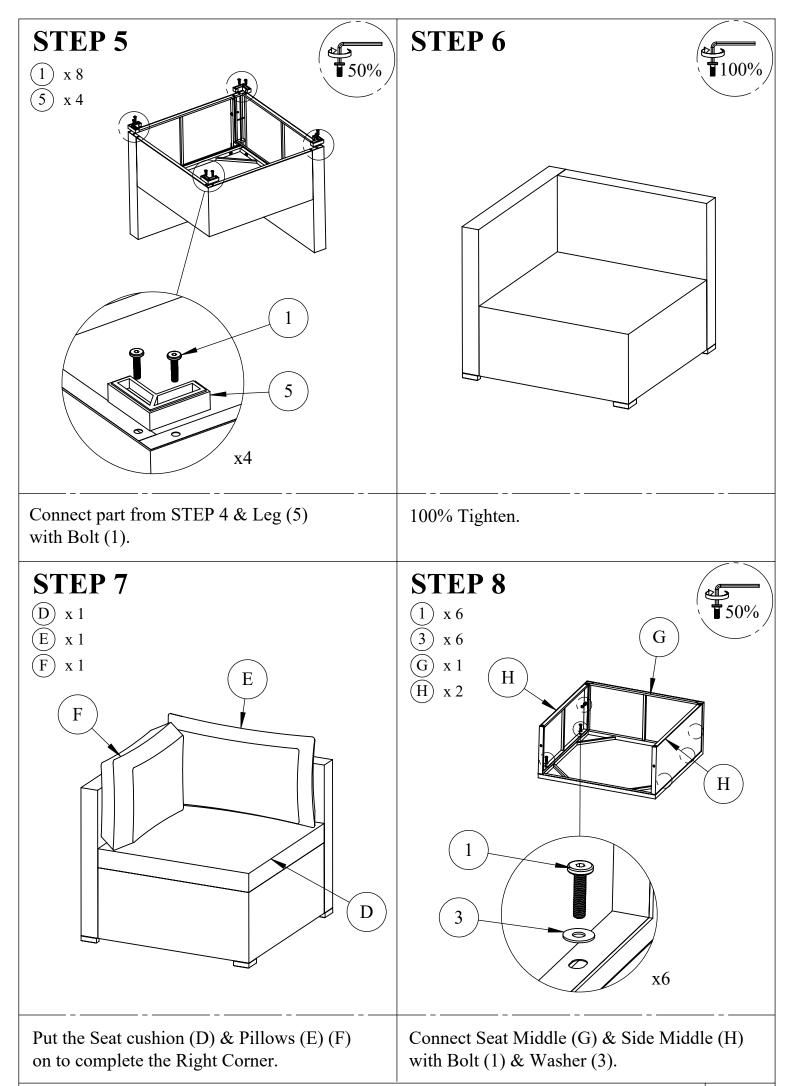

Page: 6/10

